WARNING

- ** WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN **
- * Switch off the main electrical supply from the main fuse box / circuit breaker before installation.
- * Inspect item carefully before attempting to install.
- * If there is any damages or obvious defects, do not install.
- * Item may not be returned once it has been installed.

CARE AND MAINTENANCE

- * To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- * To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.
- * Do not use any cleaners with chemical, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

NOTICE& IMPORTANT SAFETY INSTRUCTIONS


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation
- *The external flexible cable or cord of this lamp cannot be replaced

If the cord is damaged, the lamp shall be destroyed

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Wire Nut	W	3 X	G 1	Closable link/ cap		2X
В	Mounting Plate	- 	1 X	Н	Socket Assembly	**************************************	1 X
С	Mounting Screw Size:8/32*30mm	Į,	2 X	I	Roped Hook	©II D	3 X
D	Hanging Loop	8	1 X	J	Shade	000	1 X
E	Canopy		1 X	К	Finial	Ā	1 X
F	Canopy Nut		1 X	L	Bulb		4 X
G	Chain		1X		1/2		

Product Dimension: Ø24.5"*38"H

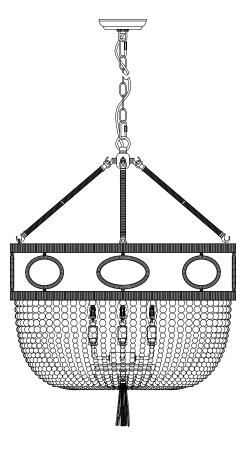


- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time:30 minutes

NOTE: PLEASUE USE TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED MAX 9-WATT, THERE ARE 4*4W LED BULBS IN THE BOX.

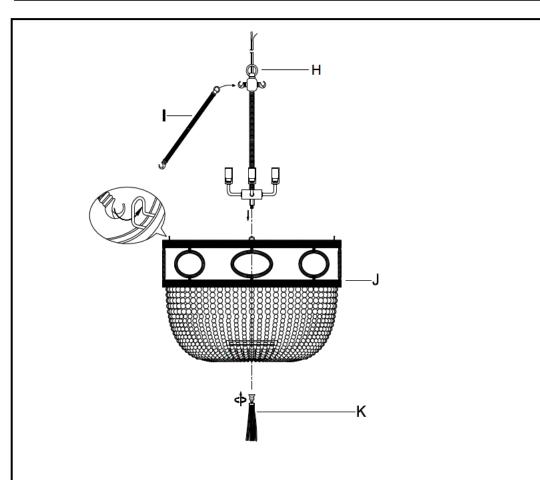


Step 1: Unpack all parts from cartons carefully.


Extend the bottom nipple of the Socket Assembly(H) through the washer of the Shade(J). Fix the Socket Assembly(H) in place by turning the Finial(K) clockwise till tight. Hook the top Socket Assembly(H) and Shade(J) with Roped Hook(I) as diagram.

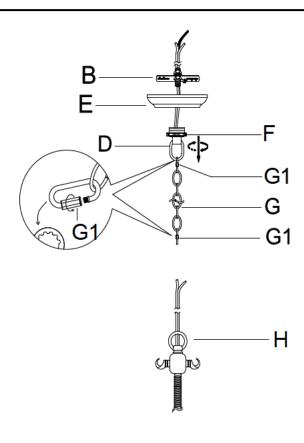

Step 2:Screw the Chain(G) to the Hanging Loop(D) and the loop of the Socket Assembly(H) with Closable link/cap (G1) as diagram.

 Weave the 2 wire power cord and bare ground wire through every other loop to the top of chain(G), Hanging Loop(D), Canopy(E) and Mounting Plate(B) as diagram. Slide the Canopy Nut(F) then Canopy(E) to the end of the Chain(G).

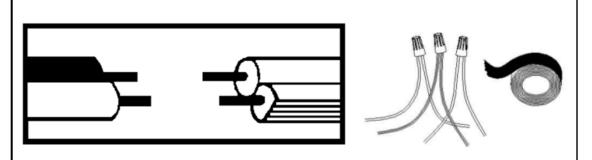




Connect fixture neutral wire (ribbed) to the outlet box neutral wire (usually white) using a wire nut. Connect fixture hot wire (smooth with markings) to the outlet box hot wire (usually black) using a wire nut. CAUTION: Do not reverse the hot and neutral connections


Grounding Instructions:

Wrap ground wire from outlet box around green ground screw(B) on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.

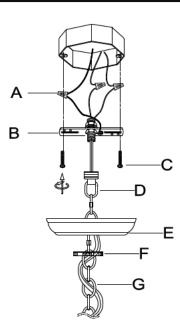

Step 4: Attach the Mounting Plate (B) onto the junction box by inserting two Mounting Screws (C) and turning clockwise till tight.

Slide the Canopy (E) upward along the chain(G) till the ceiling surface. Fix the Canopy(E) by rotating the Canopy Nut(F)clockwise to engage it with the threaded portion of the Hanging Loop (D) until secure. Do not over tighten this nut.

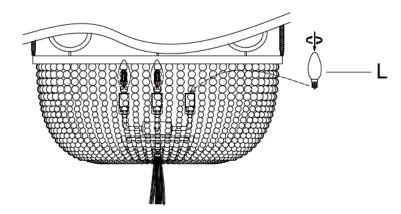

Step 5:Insert the bulb(L) into the socket.DO NOT EXCEED THE SPECIFIED WATTAGE.