



The background of the page is a repeating pattern of cuckoo clocks. Each clock is depicted as a small wooden house with a gabled roof, a window, and a door. A bird is perched on the roof, and a clock face is visible on the front. The pattern is rendered in a light gray color against a darker gray background.

Cuckoo Clock

Quick Start Guide

A little bit of history...

Who invented the cuckoo clock is still a mystery to this day. However, it's thought that the first ones were crafted in the Black Forest area of south-western Germany around the middle of the 18th century. They quickly became popular for the quality and beauty of their craftsmanship.

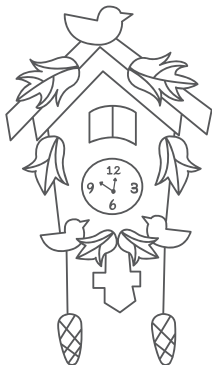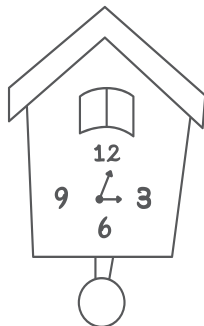

Product information

Width: 20cm / 7.8in

Height: 37cm / 14.5in

Depth: 9.5cm / 3.7in

This clock is made of PVC and **it is powered by 3 3C batteries (not included).**

Cuckoo!

This clock works 24 hours, but the cuckoo will only chime between **7am - 9pm**, so it won't disturb your sleep. This is an automatic setting and it can't be changed. If you wish to disable this function, simply remove the third battery.

Now, let's set it up!

1. Insert 3 3C batteries for the clock to be fully functional.
2. Place a magnetic bird in the window at the front of the clock.
3. Set the time to 7 o'clock.
4. Press 'RESET', then 'ADJUST' button.
5. Set the correct time.

That's it! Now you can adjust the volume, plug the pendulum to the bottom of the clock and enjoy your new Cuckoo!

IMPORTANT INFORMATION

By pressing 'RESET' button you set the time to **7 am**. Remember that while setting the correct time.



'Adjust' button



'Reset' button



Speaker



Volume switch



Frequently Asked Questions

How many batteries do I need?

To operate the clock, you only need 2 3C batteries. The third battery (on the left) operates the cuckoo mechanism. You may skip the 3rd battery if you wish to disable this function.

Where do I find the pendulum & the bird?

Look carefully through the box, the accessories might be packed within the side compartment.

My cuckoo clock is mute, what should I do?

Try adjusting the volume with the switch at the back of the clock.

How do I adjust the time?

Simply move the minute hand until you reach the correct time.

My cuckoo doesn't chime at the round hour, how can I fix that?

If you notice that problem, adjust the minute hand and point it towards 12.

Still looking for answers?

Contact our Customer Service!

Be worry-free! We got you covered.

Quality Time provides you 2-year manufacture warranty. You are now automatically registered under warranty. We warrant the clock against defects in materials & manufacture under ordinary consumer use for two years from the date of purchase.

Please keep your receipt or e-receipt for the warranty to be validated.*

**Terms & Conditions apply. Please, visit our website.*

**If you have any questions,
please let us know**