



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690LRP
LAF POWER RECLINER

ITEM :609690LRP

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

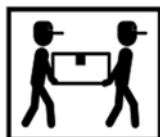

ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A BACK



1 PC

B BASE



1 PC

C PLUG-IN POWER SUPPLY



 
1 PC

D Y CABLE





1 PC

STEP 1

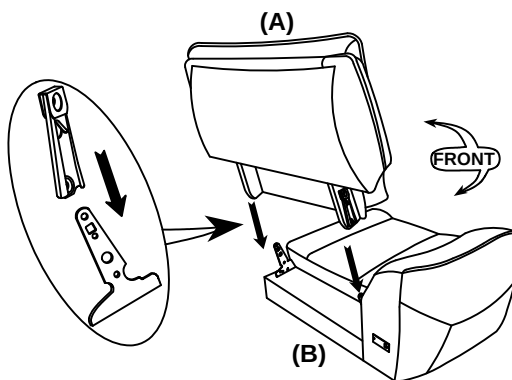


  STEP 2
COMPLETE

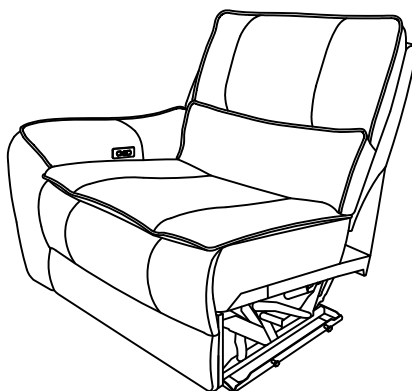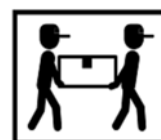


STEP 3

 
OPTION1:

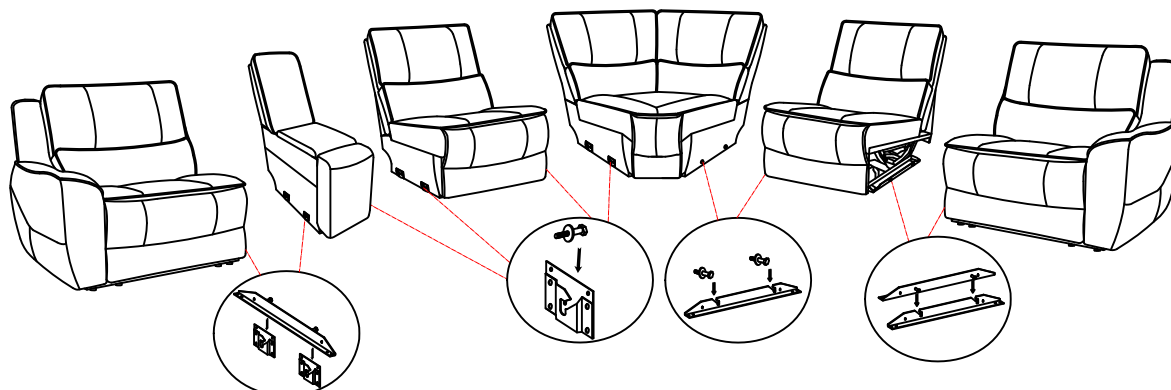


OPTION2:

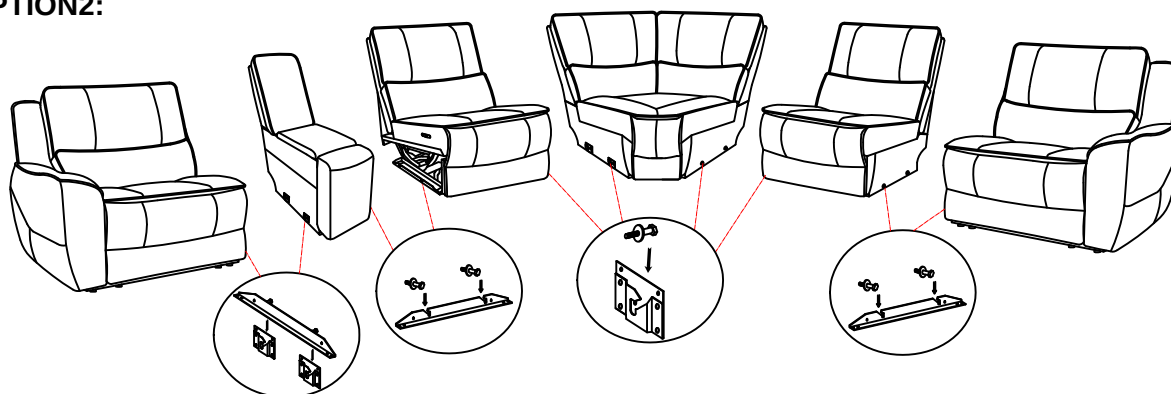 

 STEP 4

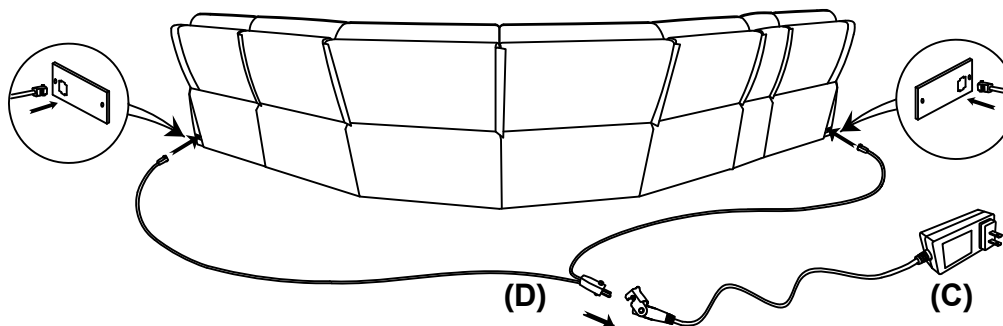

 
STEP 5

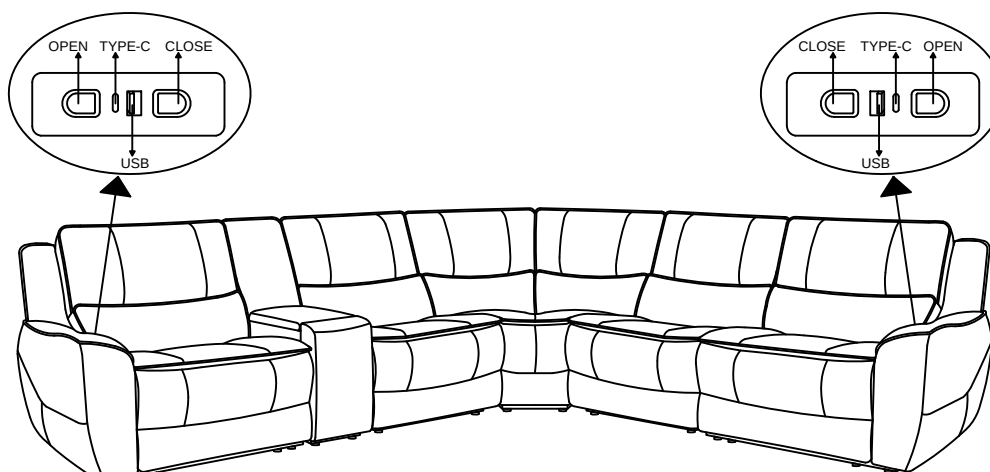


Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)

STEP 1

 
Open the marked battery door on the backup battery box.

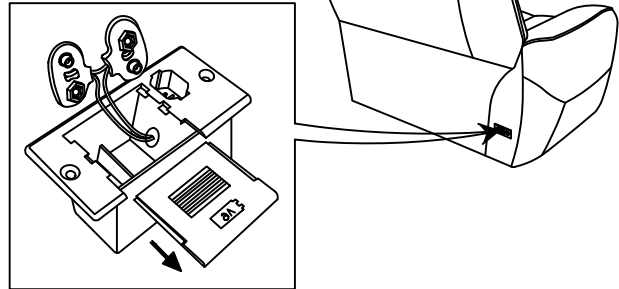**STEP 2**

 Install two 9V batteries in the backup battery box.(batteries are not included)

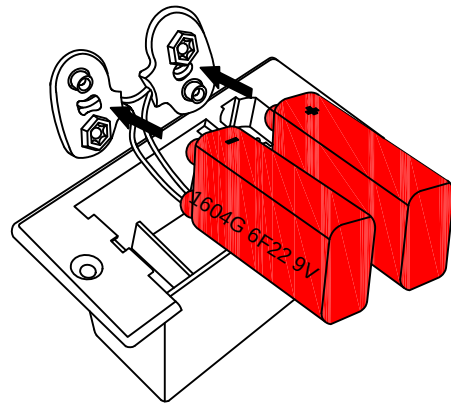
**STEP 3**


 
Push the batteries in.

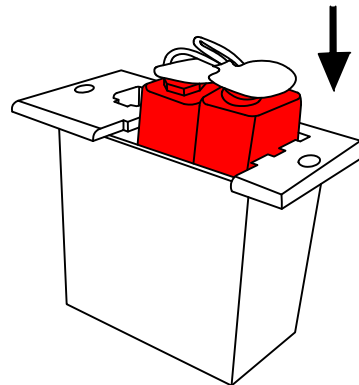**STEP 4**

Close the box door.

   Notice: Please don't keep the battery in the box when the power motion sofa is under daily use within power supply.

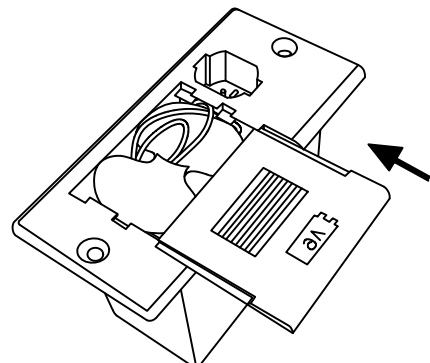

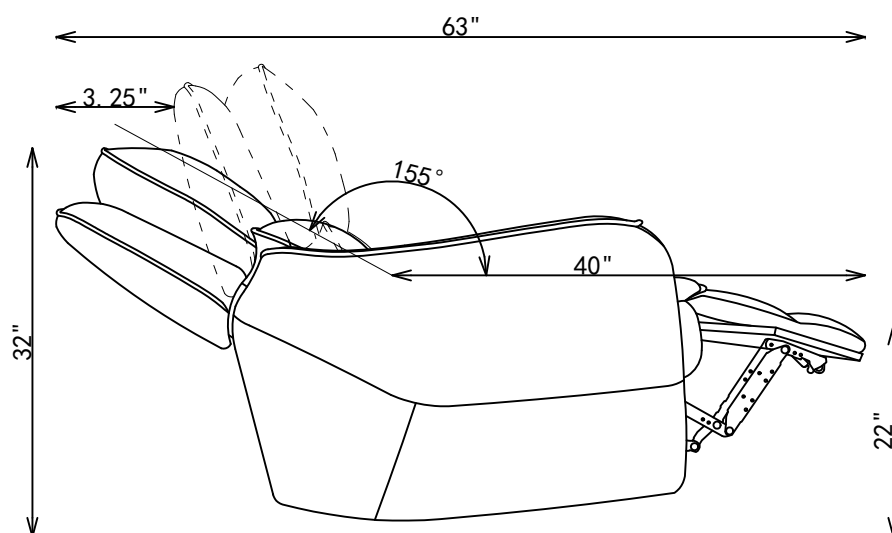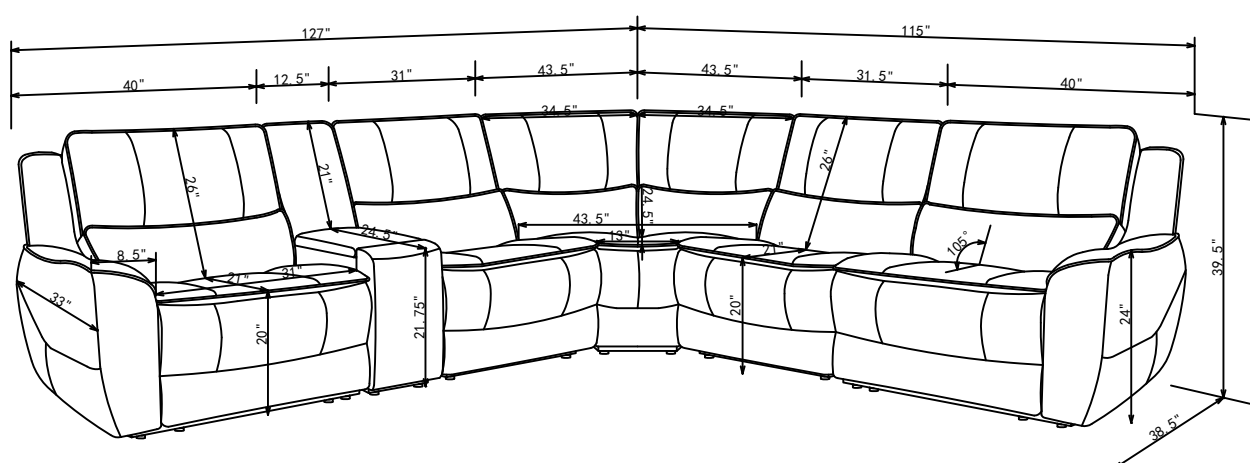

Note: Dimension tolerance +5%



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690CON
CONSOLE

ITEM :609690CON

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

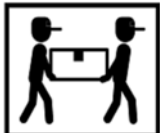

ASSEMBLY TIME

2 MINUTES

 
PARTS IDENTIFICATION

A BACK




1 PC

B BASE OF CONSOLE




1 PC

 
STEP 1

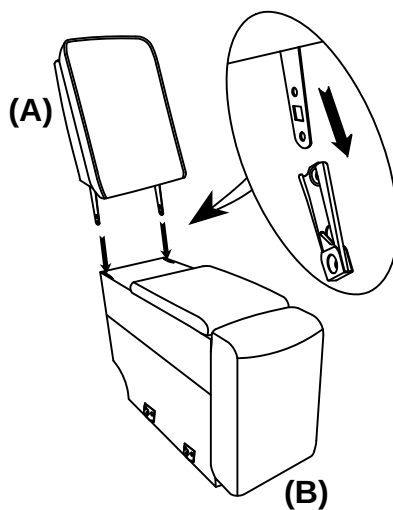


 
STEP 2

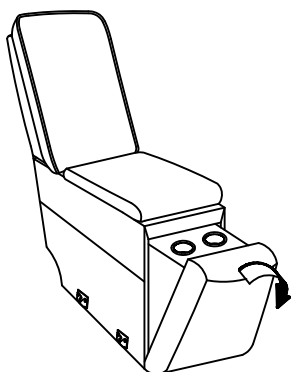

 STEP 3

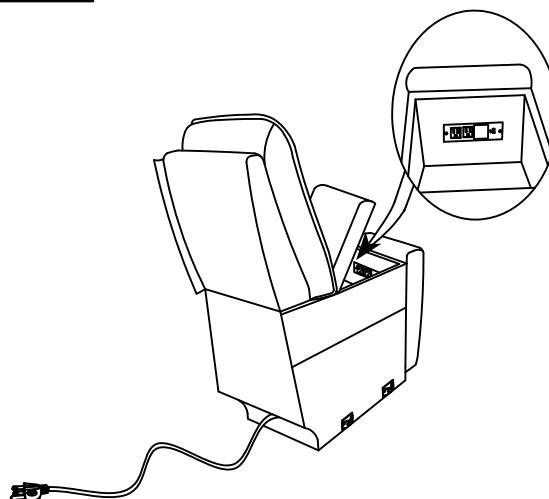


  STEP 4
COMPLETE

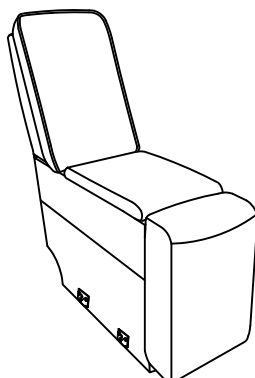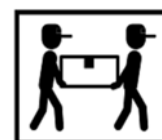


STEP 5

 
OPTION1:


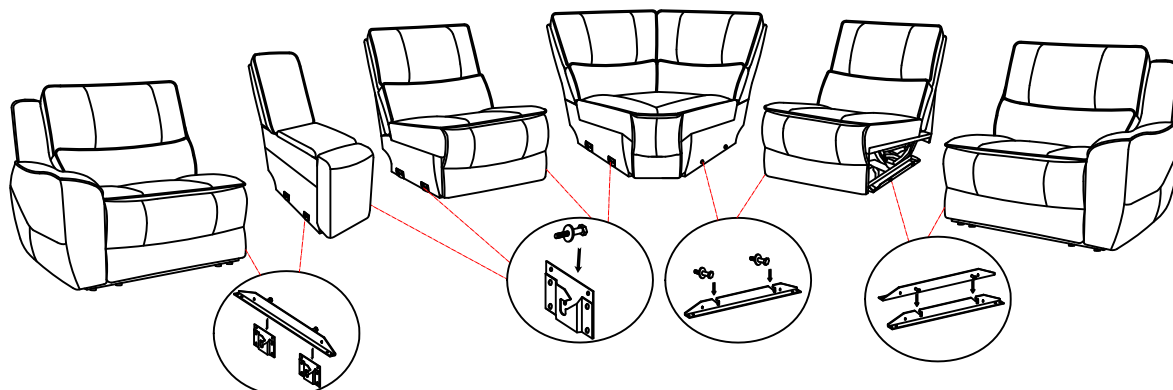


OPTION2:

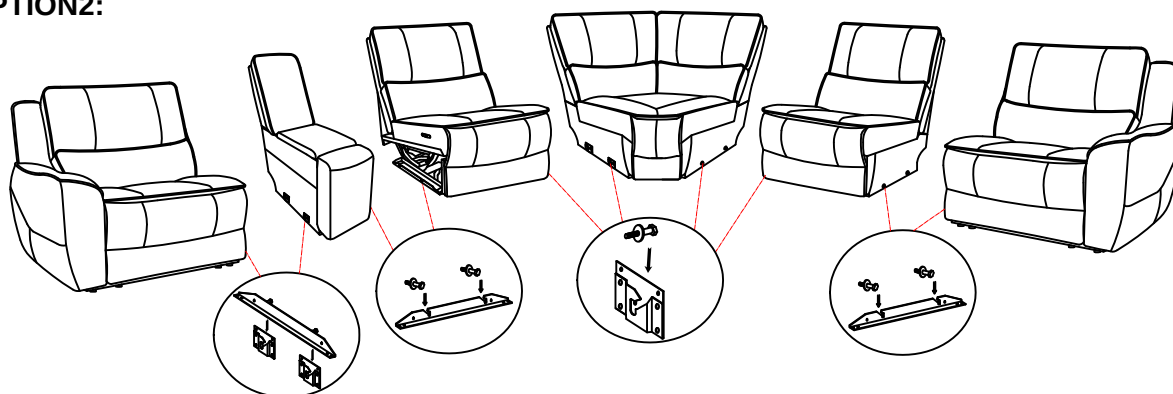 

   STEP 6

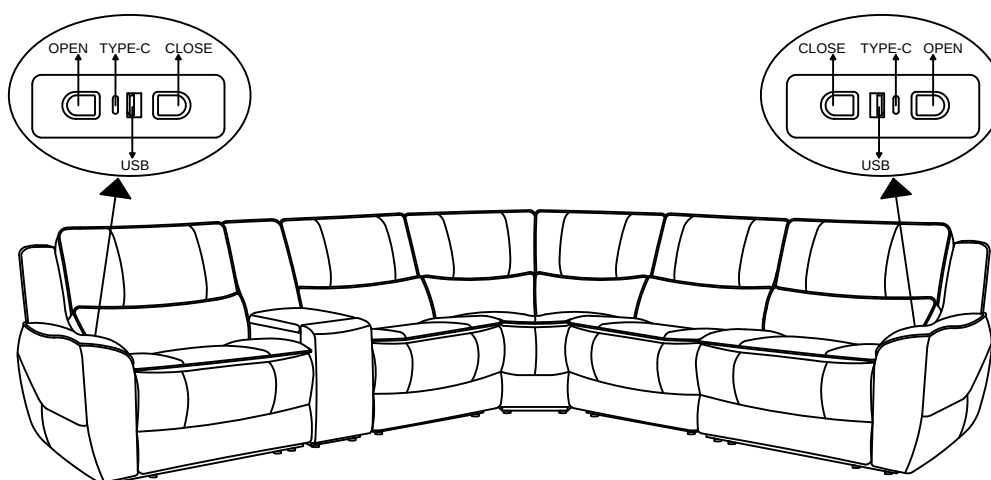

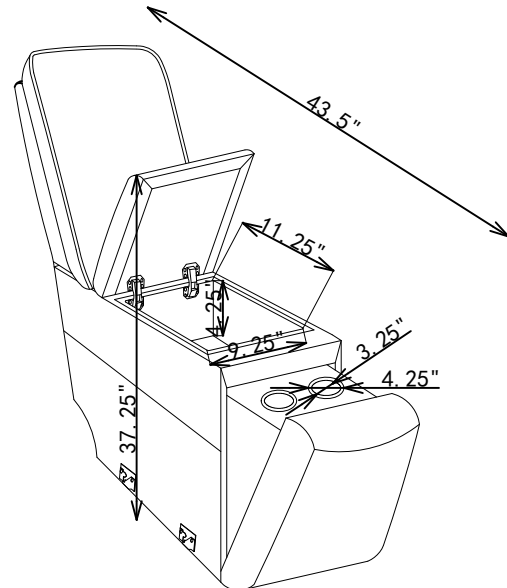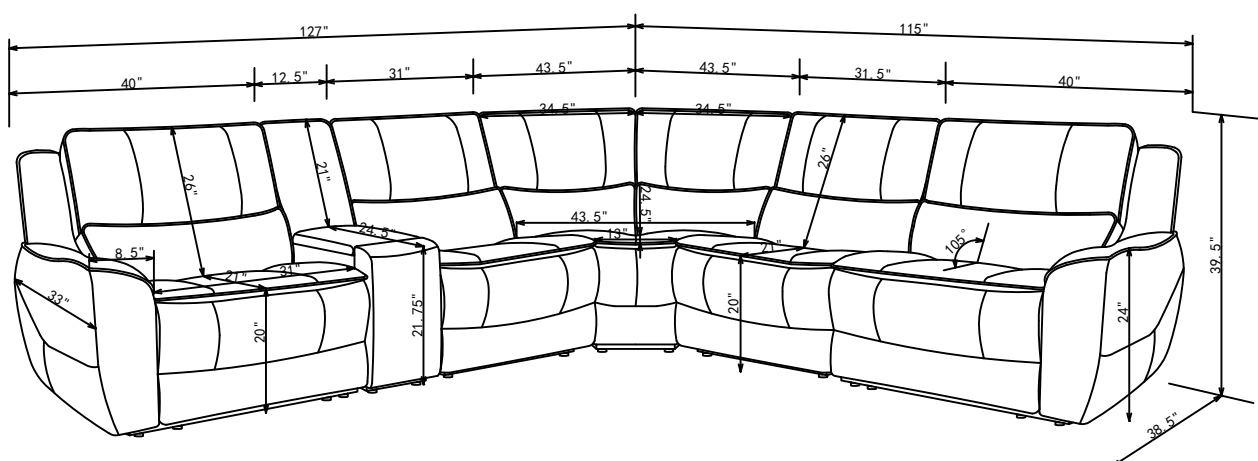

PAGE 5 OF 5



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690ARP
POWER ARMLESS RECLINER

ITEM :609690ARP

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

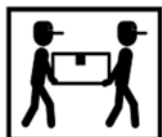

ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A BACK



1 PC

B BASE



 
1 PC

C PLUG-IN POWER SUPPLY




1 PC


STEP 1

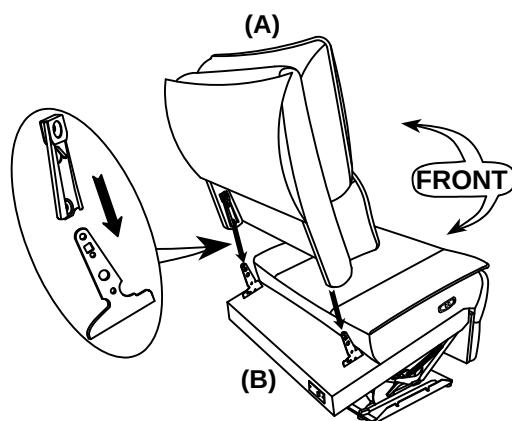

 STEP 2

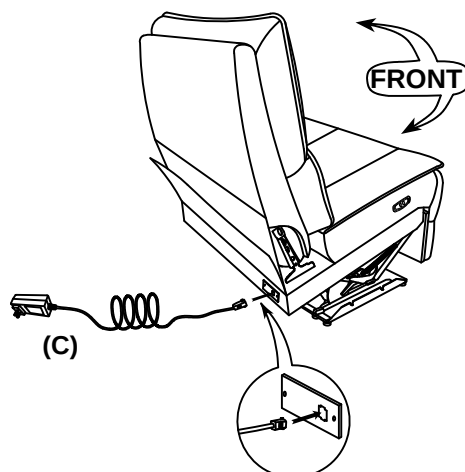


 STEP 3
COMPLETE

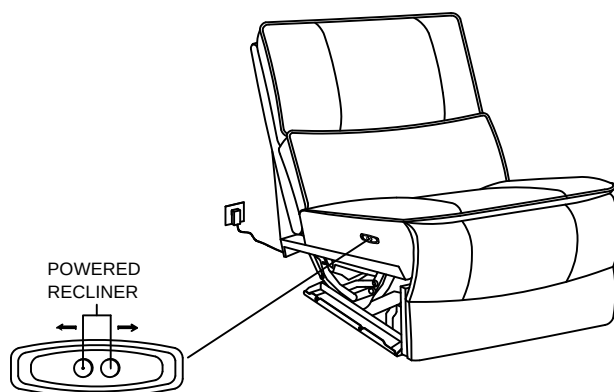


STEP 4

 
OPTION1:

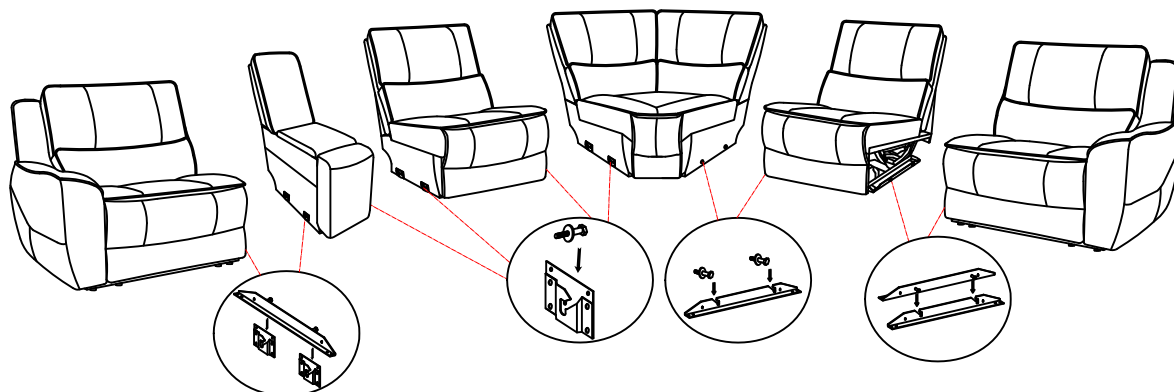

OPTION2:

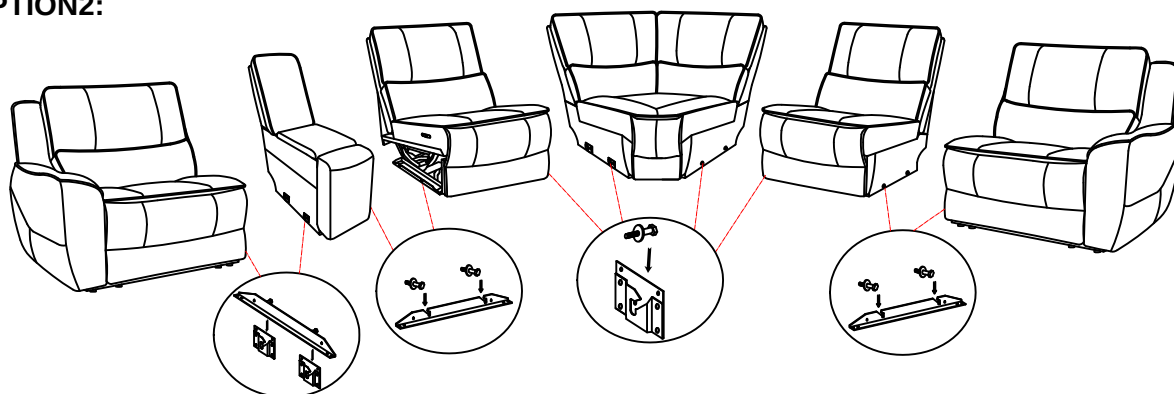 

 
STEP 5

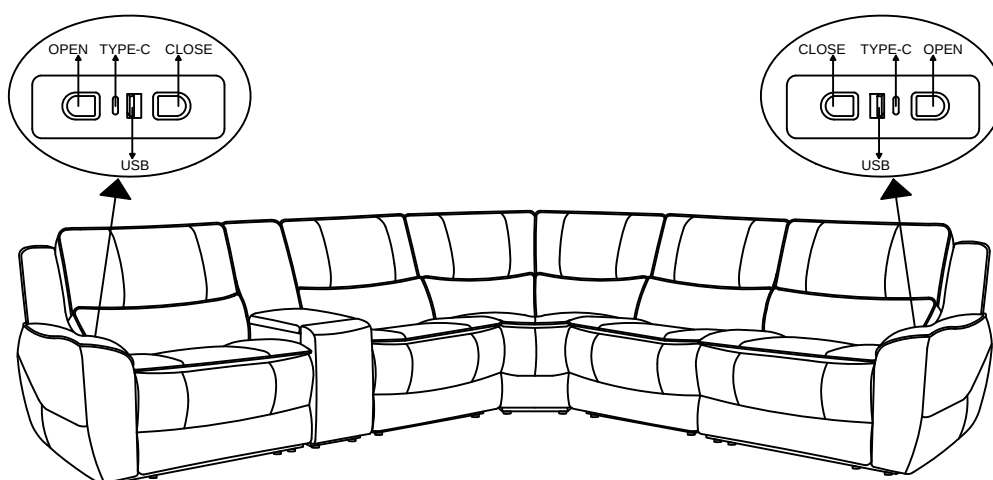

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

 Open the marked battery door on the backup battery box.

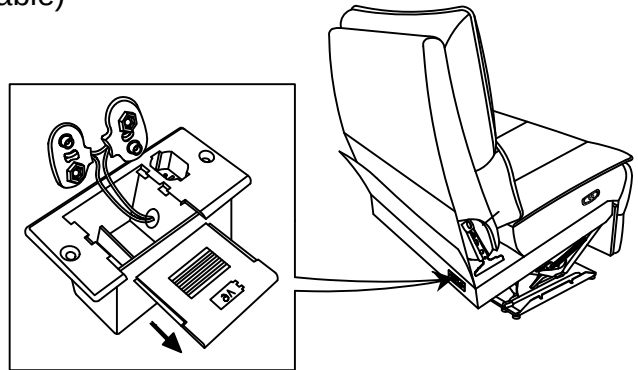


STEP 2

 Install two 9V batteries in the backup battery box.(batteries are not included)

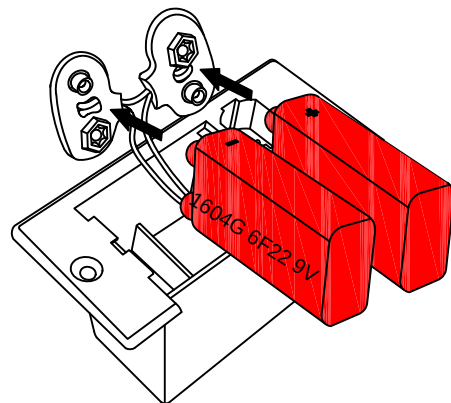

STEP 3

 
Push the batteries in.


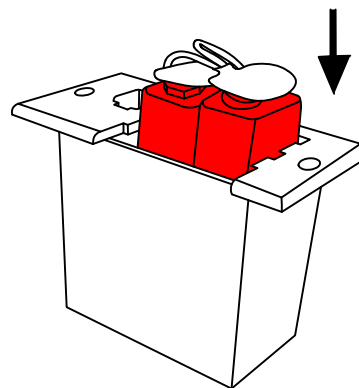


STEP 4

Close the box door.

   Notice: Please don't keep the battery in the box when the power motion sofa is under daily use within power supply.

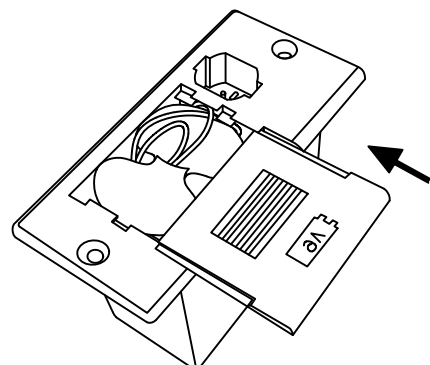

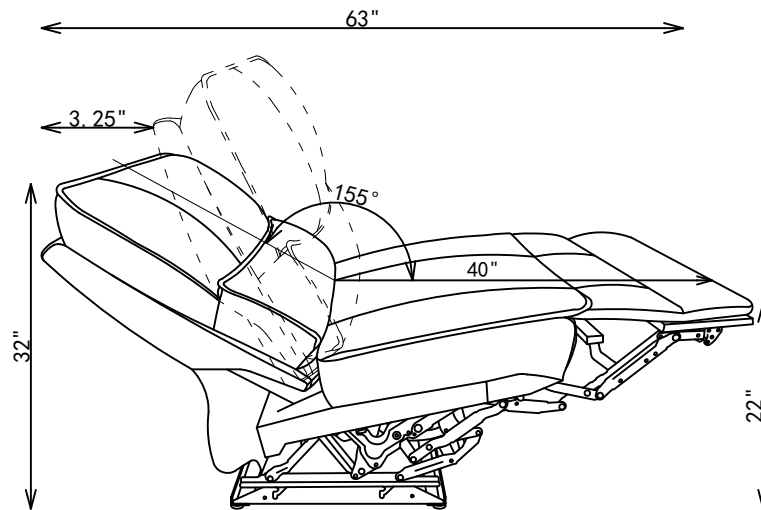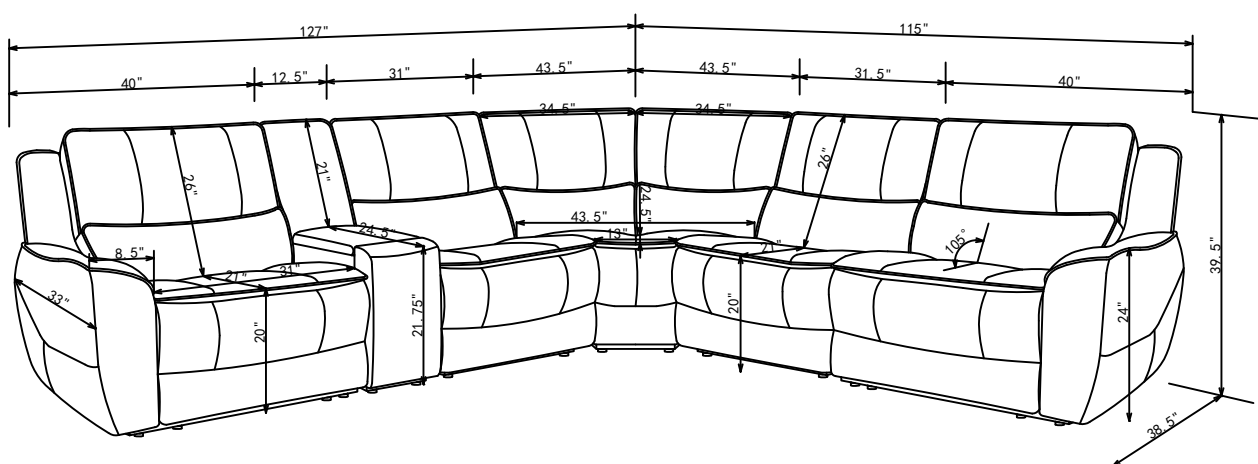

Note: Dimension tolerance +5%



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690WDG
WEDGE

ITEM :609690WDG

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A LEFT BACK



1 PC

B RIGHT BACK



1 PC


C BASE OF WEDGE





1 PC

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	QTY
1	THREADED RODS $\frac{5}{16}$ " * 100mm		4PCS
2	HEXAGON NUTS $\frac{5}{16}$ " * 13.5mm		4PCS
3	LOCK WASHER $\frac{5}{16}$ " * 13mm		4PCS+1PC SPARE
4	FLAT WASHER $\frac{5}{16}$ " * 19mm		4PCS+1PC SPARE
5	WRENCH $\frac{5}{16}$ "		1PC

 STEP 1

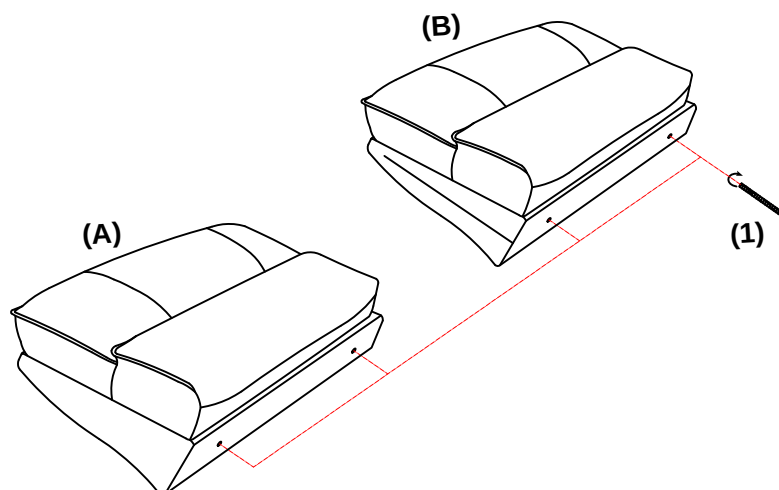


  STEP 2
COMPLETE

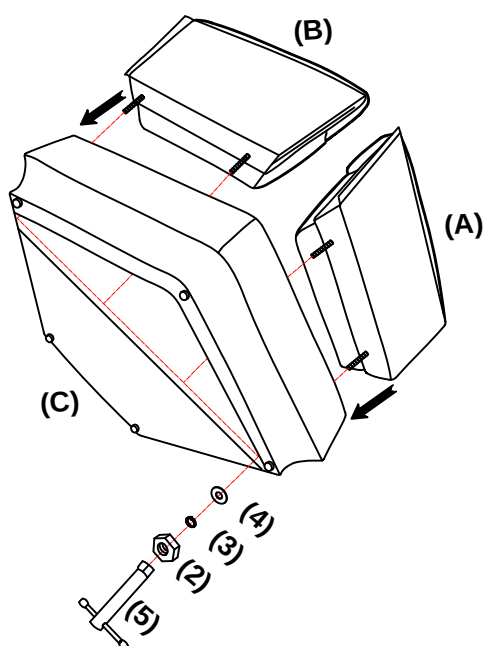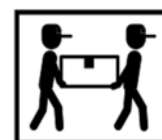


STEP 3

 
OPTION1:


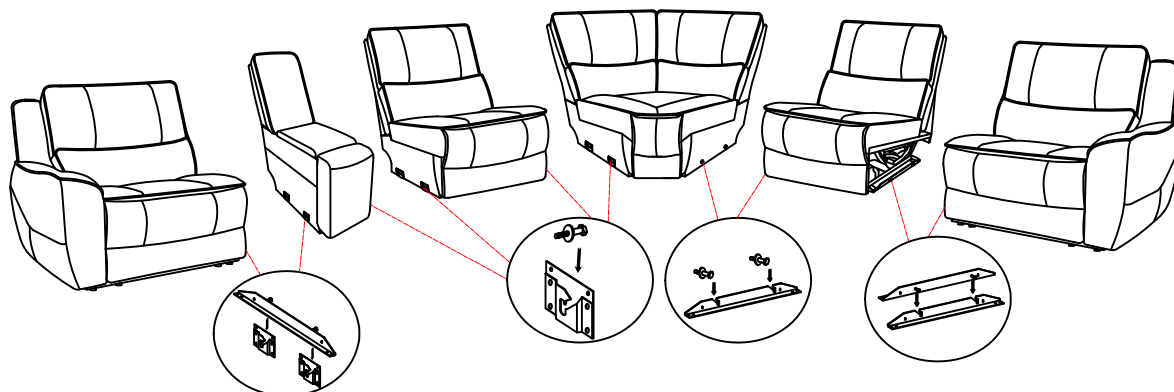


OPTION2:

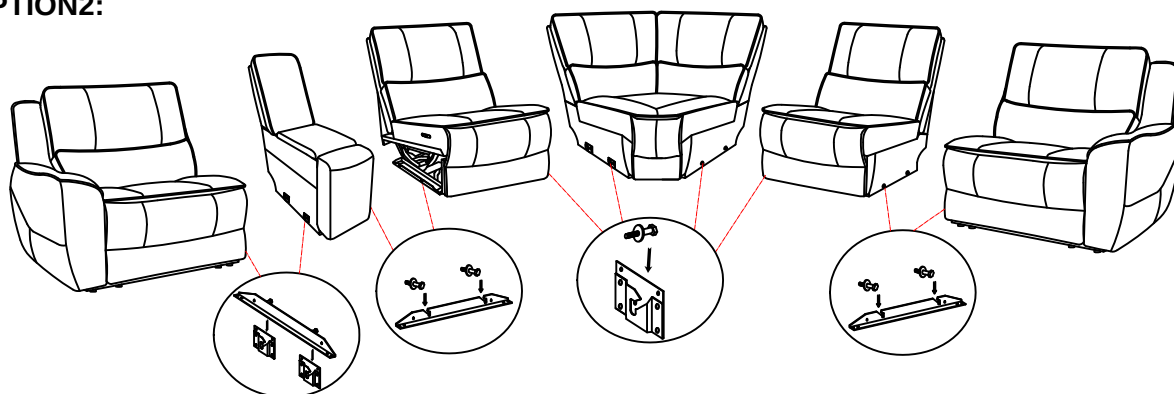 

   STEP 4

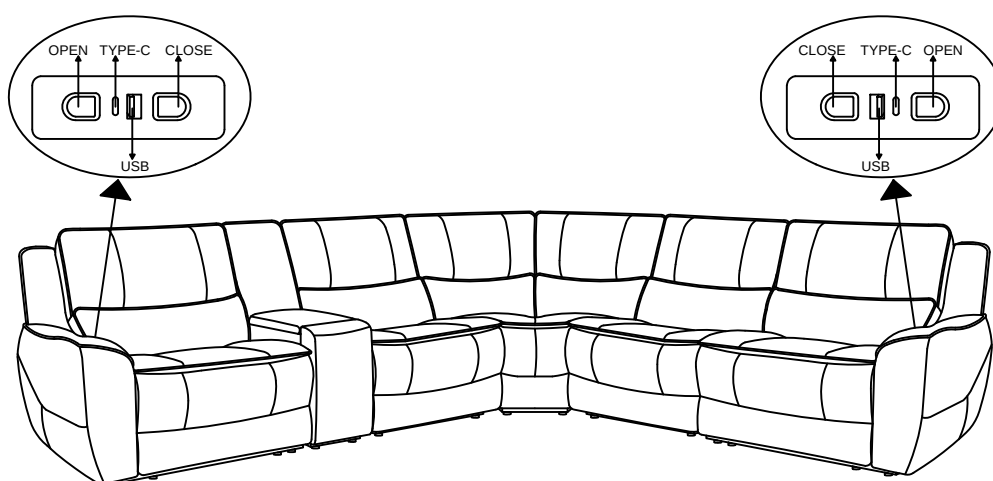

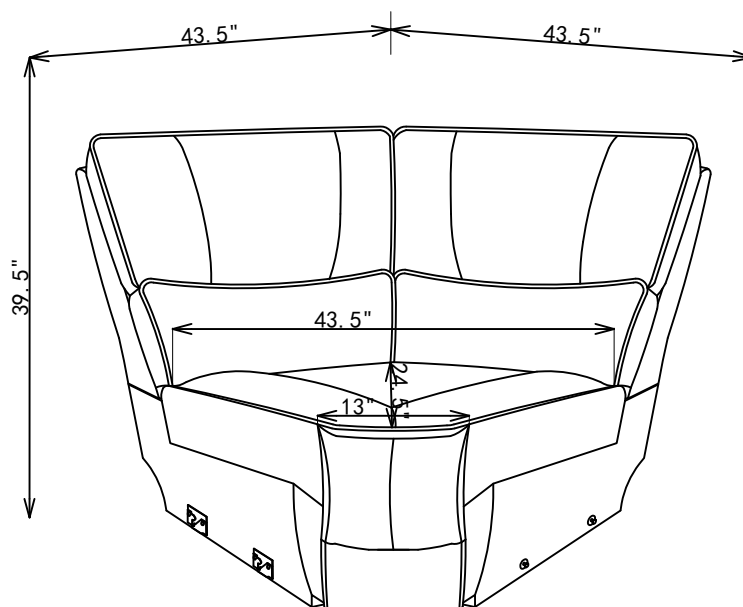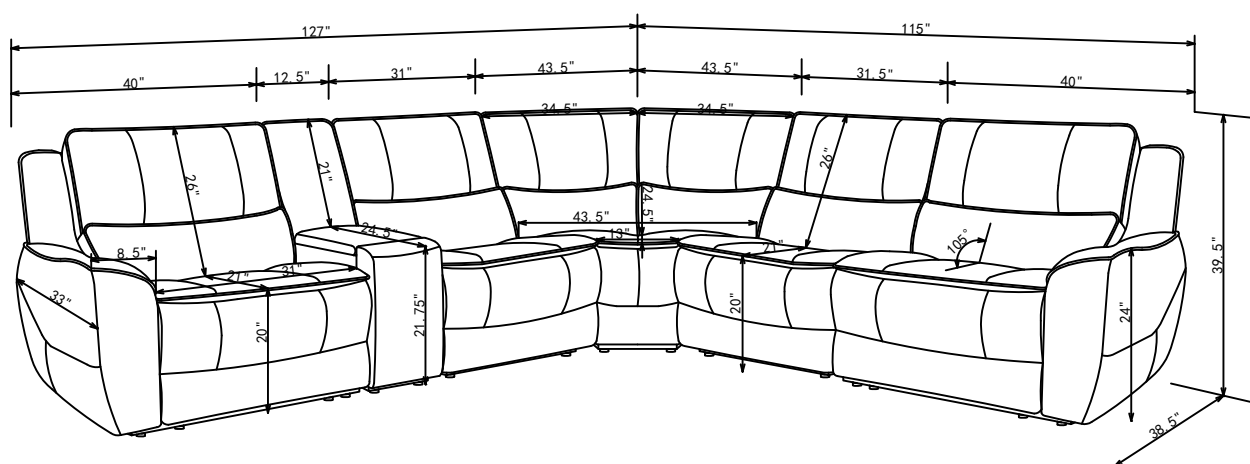

Note: Dimension tolerance +5%



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690AC
ARMLESS CHAIR

ITEM :609690AC

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A BACK



 
1 PC

B BASE OF ARMLESS CHAIR




1 PC

STEP 1

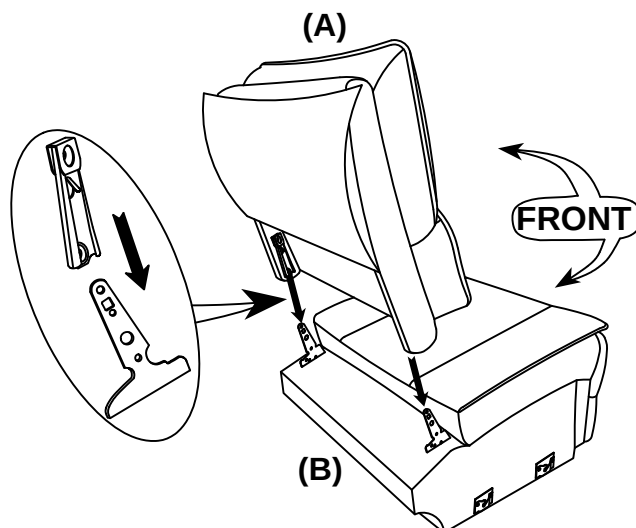


 STEP 2
COMPLETE

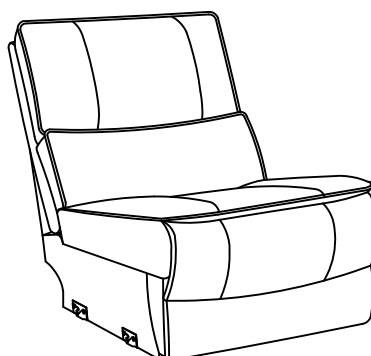


STEP 3

 
OPTION1:


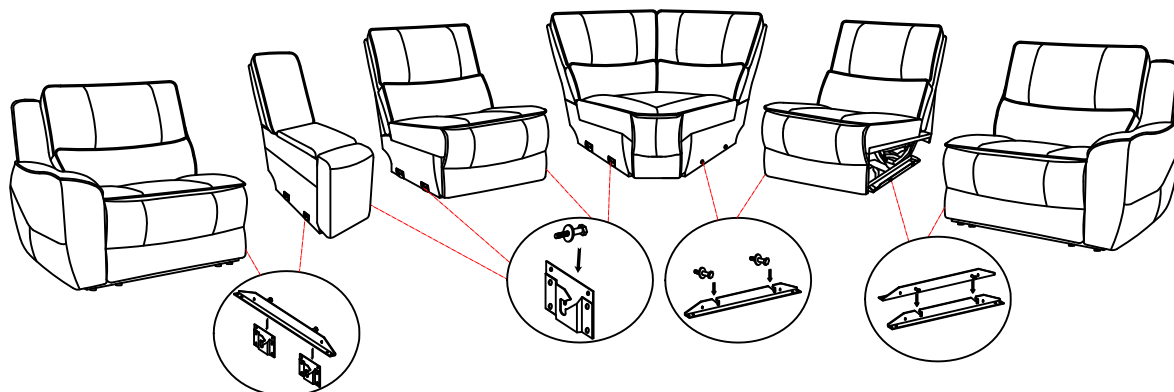


OPTION2:

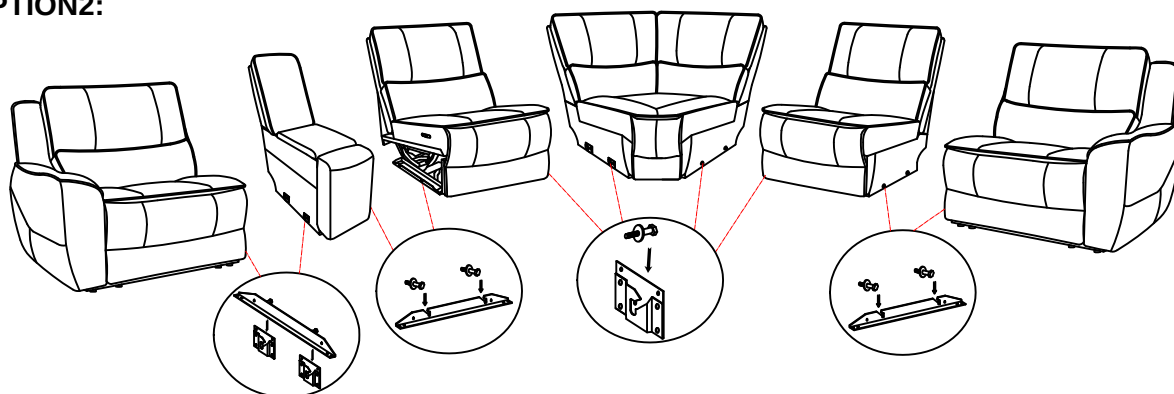 

   STEP 4

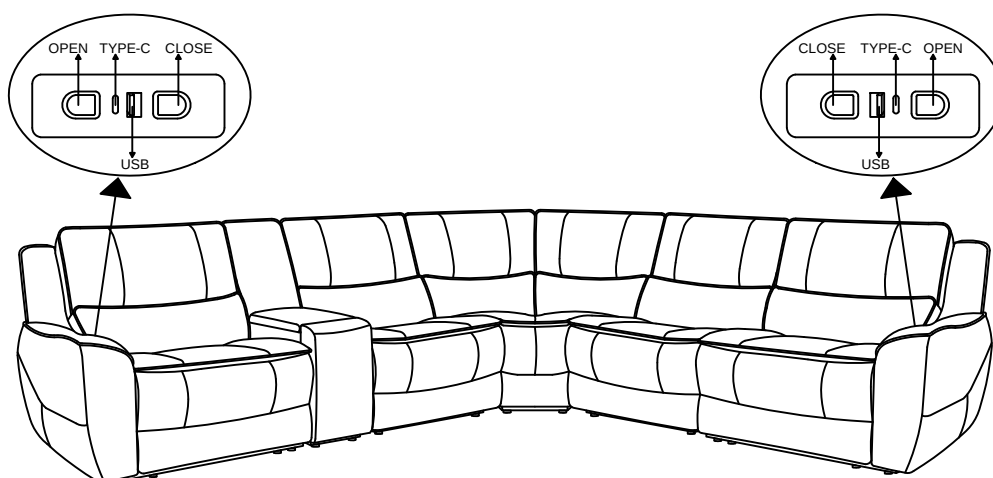

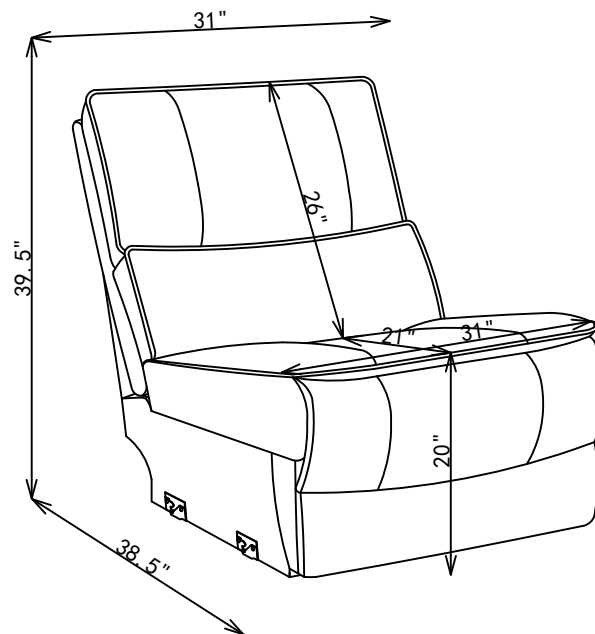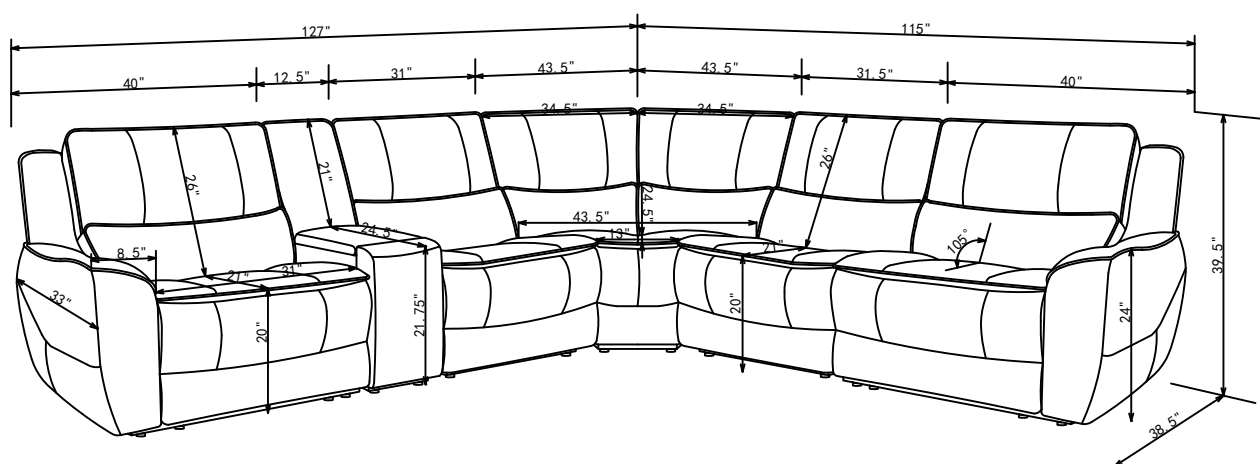

Note: Dimension tolerance +5%



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690RRP
RAF POWER RECLINER

ITEM :609690RRP

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

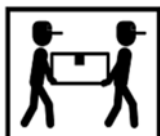

ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A BACK



 
1 PC

B BASE





1 PC

STEP 1

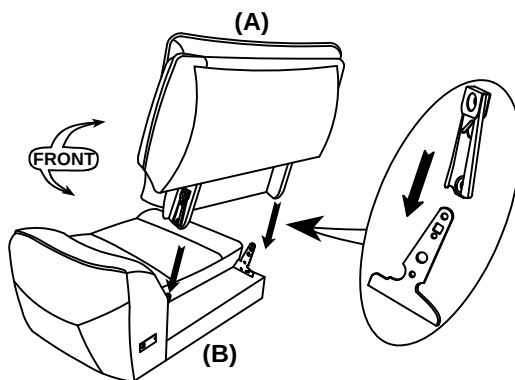


  STEP 2
COMPLETE

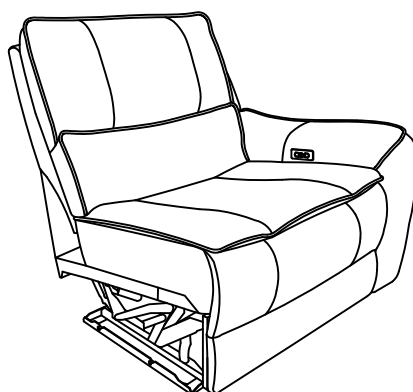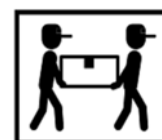


STEP 3

 
OPTION1:

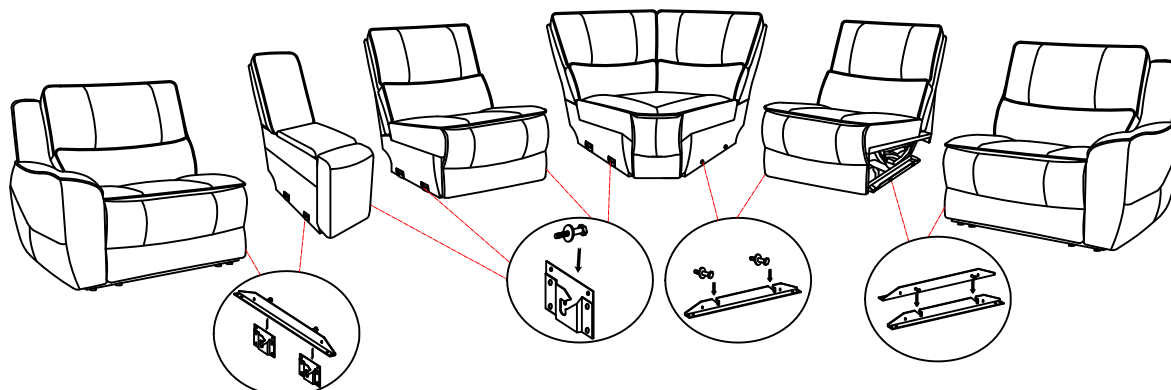


OPTION2:

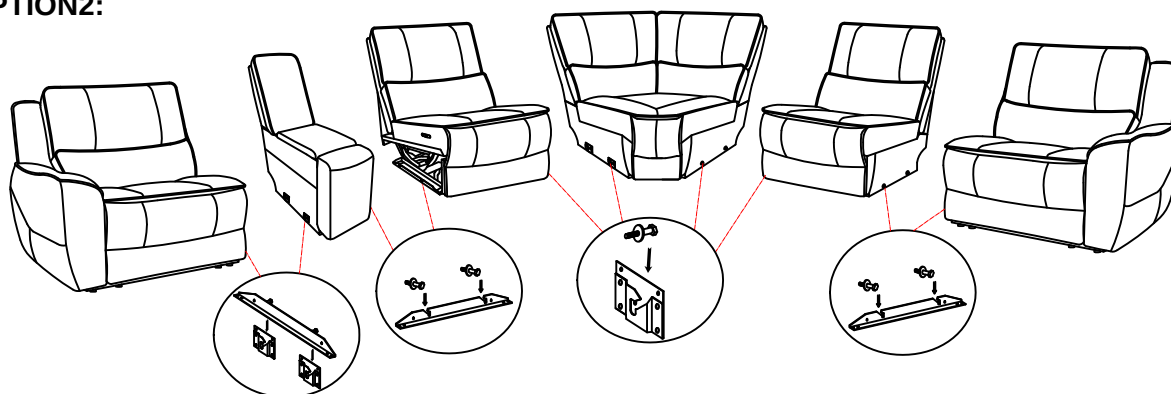 

 STEP 4

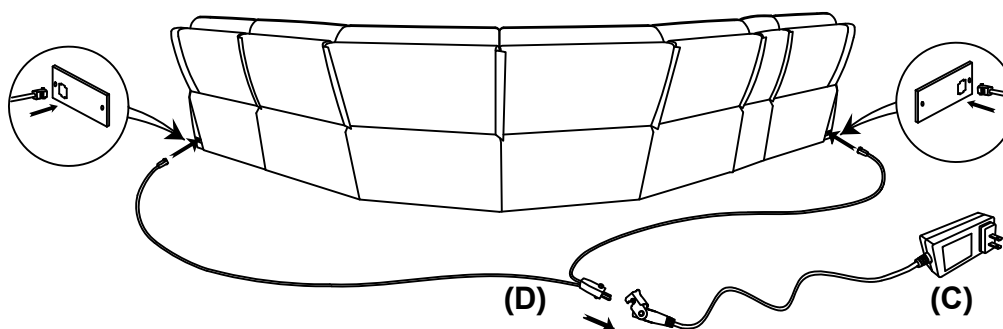

 
STEP 5

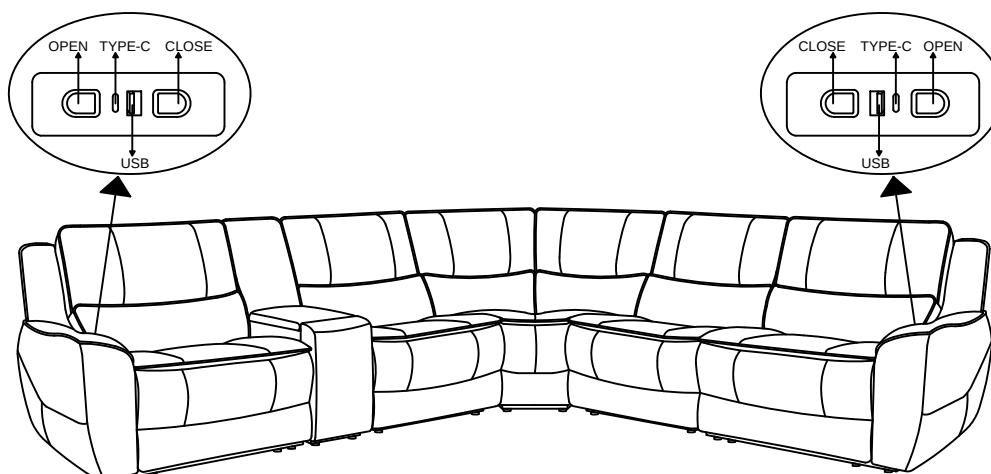


Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)

STEP 1

 
Open the marked battery door on the backup battery box.

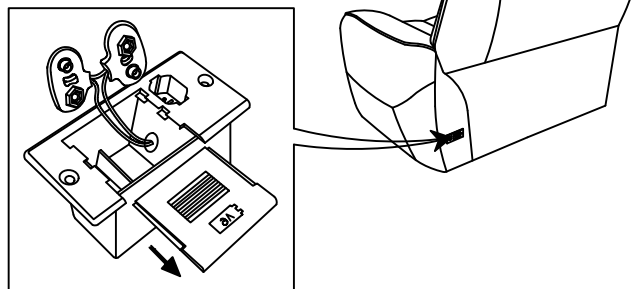**STEP 2**

 Install two 9V batteries in the backup battery box.(batteries are not included)

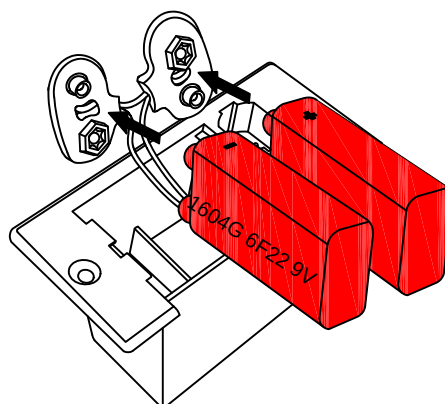
**STEP 3**


 
Push the batteries in.

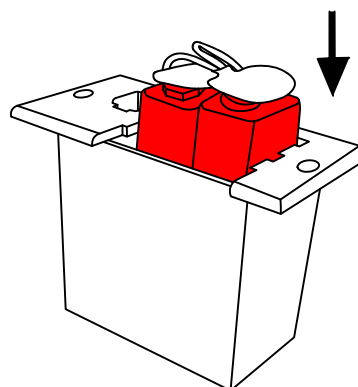**STEP 4**

Close the box door.

   Notice: Please don't keep the battery in the box when the power motion sofa is under daily use within power supply.

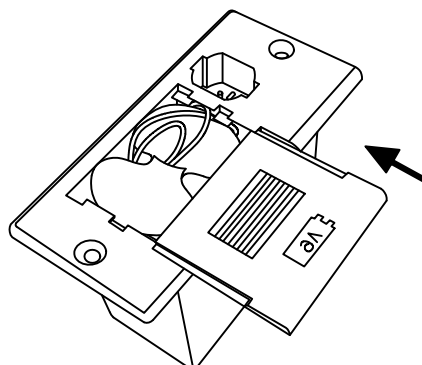

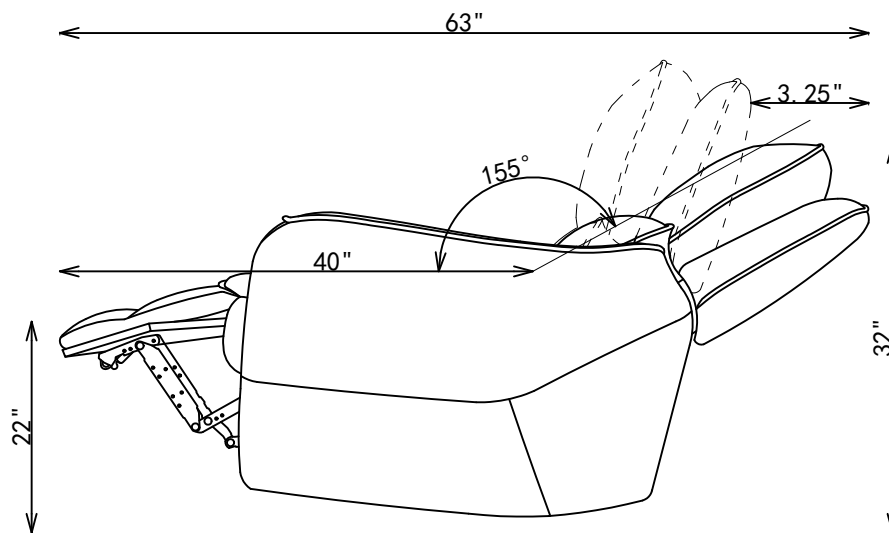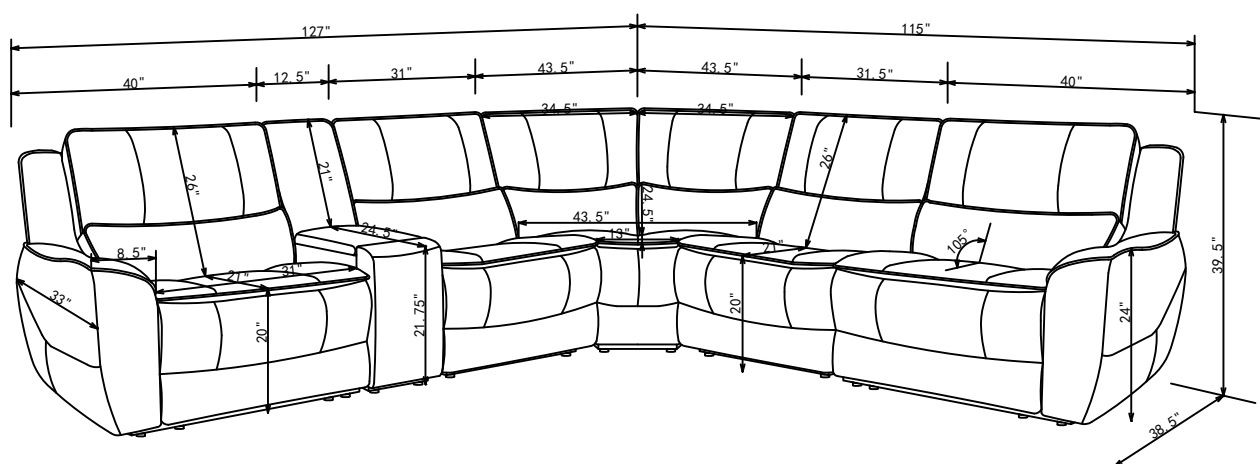

Note: Dimension tolerance +5%