

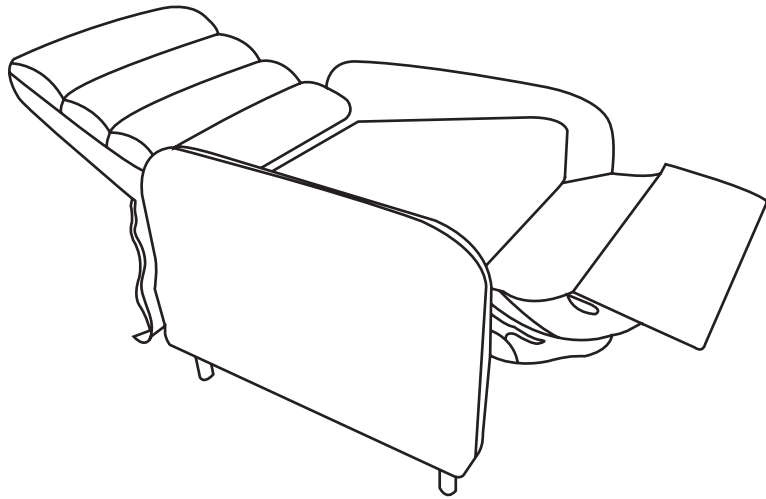


- 3** To recline, simply lean and push back to the desired position.  
To close, lean forward while pushing your feet against the foot rest.

Model: \_\_\_\_\_  
Lot No: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_

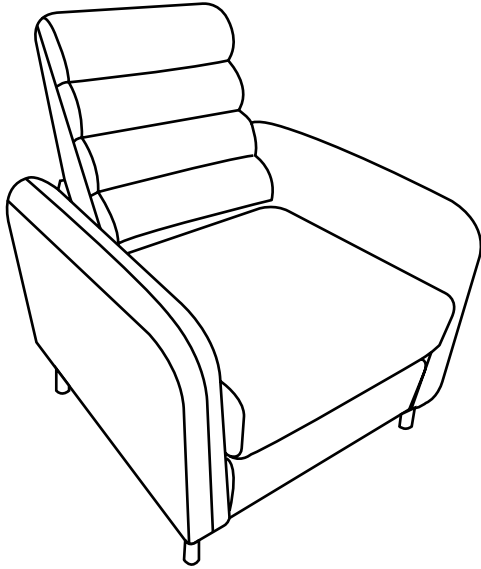

## PUSHBACK RECLINER

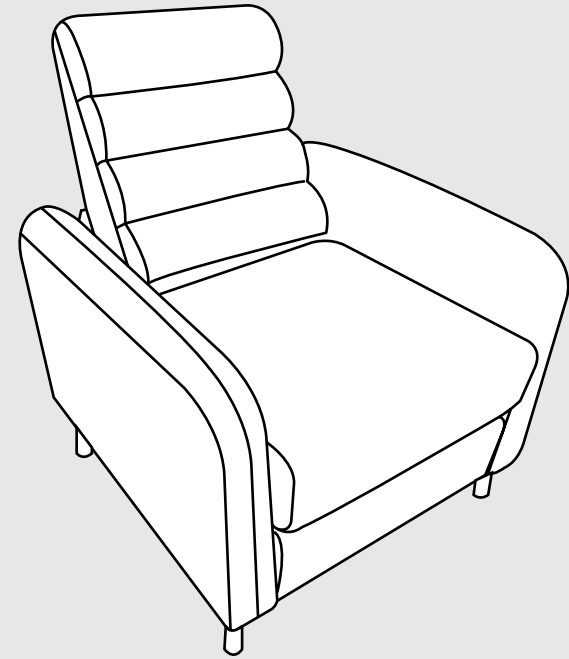

### ADULT ASSEMBLY REQUIRED


If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.




**WARNING:** This product may contain small components, please ensure they are kept away from small children.

## PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

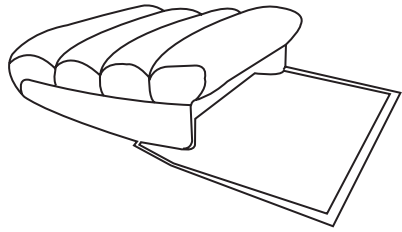


A. Backrest  
1x

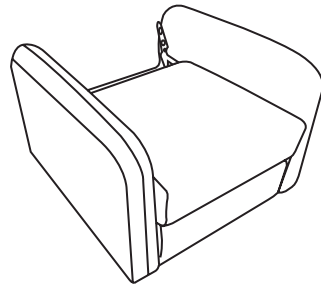


B. Seat Deck  
1x

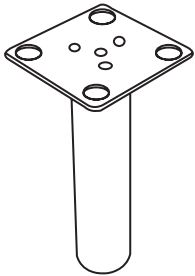

C. Leg  
4x

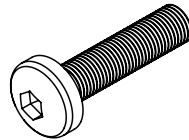

D. Bolt  
16x

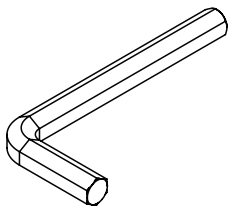


E. Allen Key  
1x

## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Legs (C) to Seat Deck (B) using Bolt (D). Tighten using provided Allen Key (E).

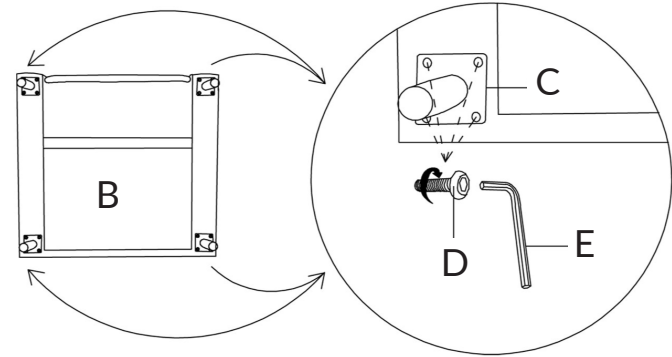

- 2 Attach Backrest (A) to Seat Deck (B) by sliding the brackets on the Backrest (A) into the glides on the Seat Deck (B).

