 


Assembly Instructions

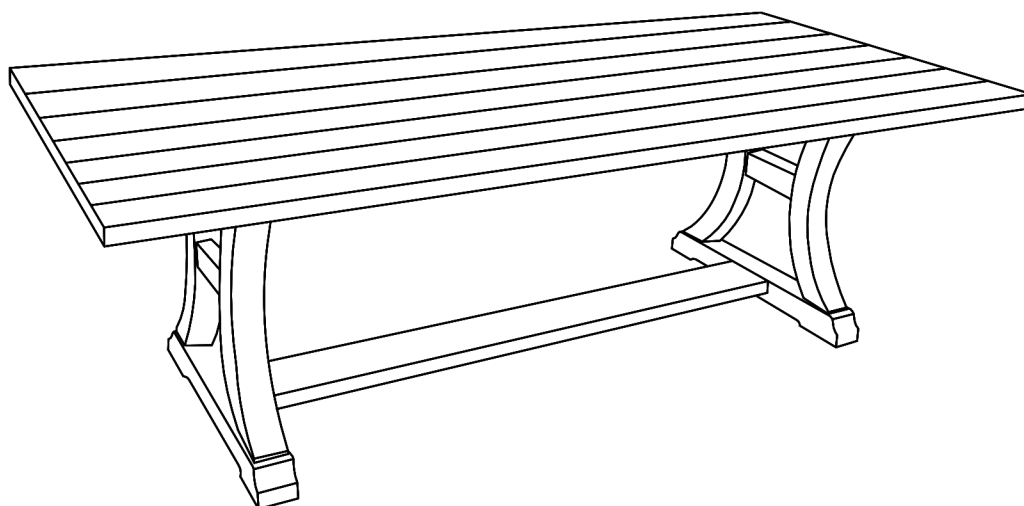

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Wrench



(Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

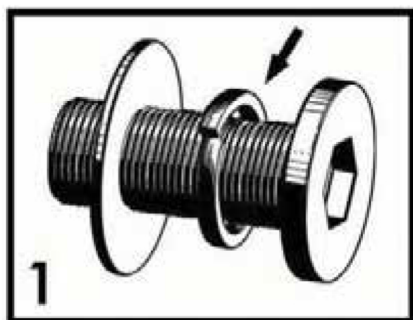

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

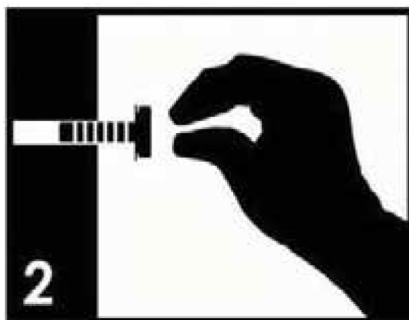

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

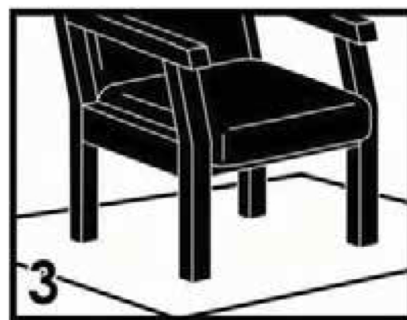

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

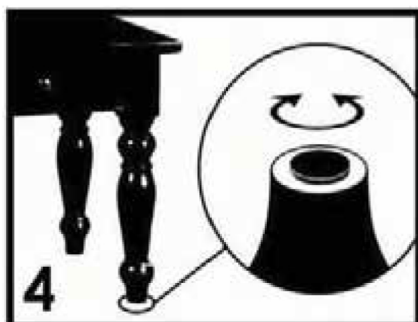

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

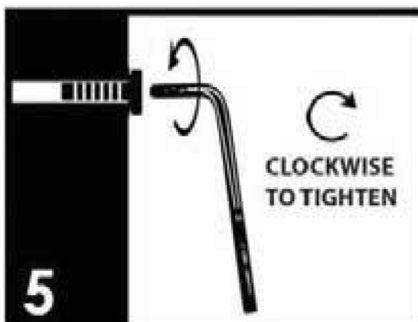

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

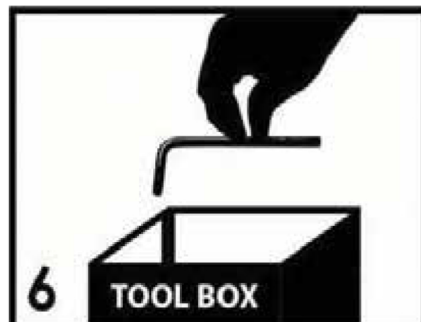

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List

	#1 x 1pc Table Top
	#2 x 2pcs Leg
	#3 x 1pc Leg Support Rail

 Hardware List

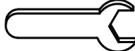
	#A x 12pcs Flat Washer
	#B x 12pcs Lock Washer
	#C x 12pcs Bolt 5/16"x1-3/4"
	#D x 1pc Allen Wrench M5
	#E x 4pcs Bolt 5/16"x3-3/4"
	#F x 4pcs Half Moon Screw Nut
	#G x 4pcs Hex Nut
	#H x 1pc Wrench



#1

 1. Insert 2 bolts (#E) into the holes along the top of the legs (#2), turn right to tighten.

#E x 4pcs
#F x 4pcs
#G x 4pcs

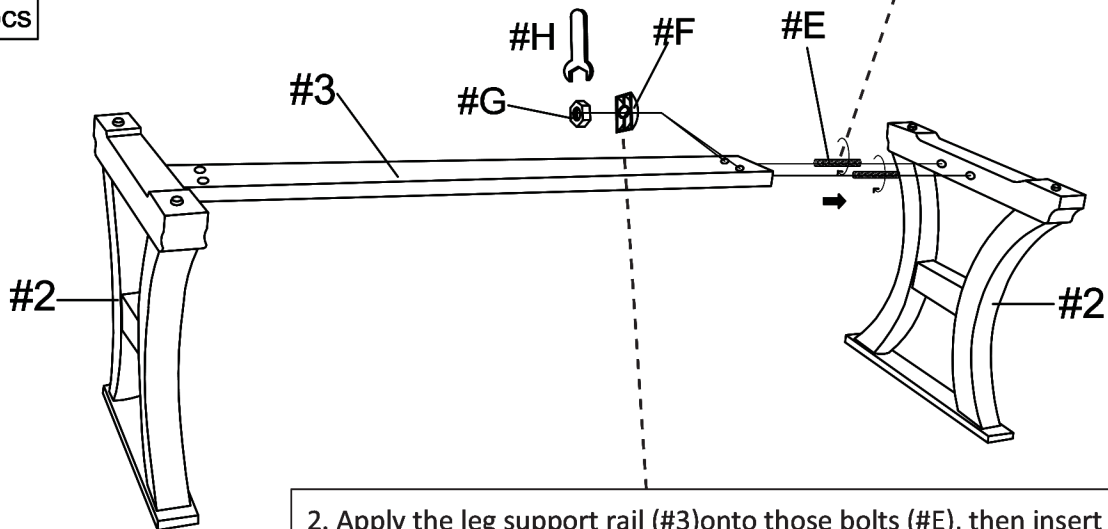

2. Apply the leg support rail (#3) onto those bolts (#E), then insert a half moon nut (#F) and a hex nut (#G) in that order onto the end of the bolts from within the rail. Secure using the wrench (#H).






#2

   2. Place the table top (#1) face down onto a protected surface. Align the legs (#2) face down to the holes along the table top. Then insert 6 bolt assemblies into each leg and secure using the Allen wrench.

#A x 12pcs
#B x 12pcs
#C x 12pcs


1. Prepare 12 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#C) then a flat washer (#A) onto that same bolt (#C).

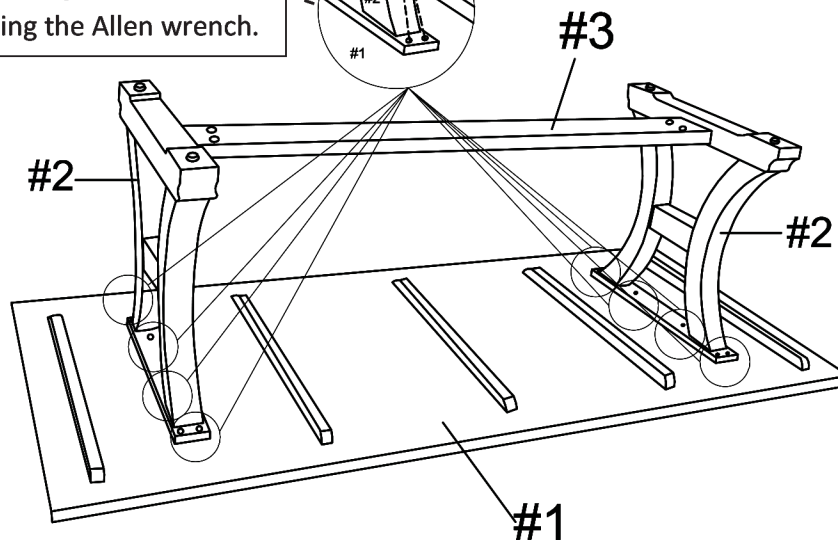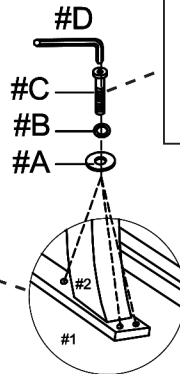

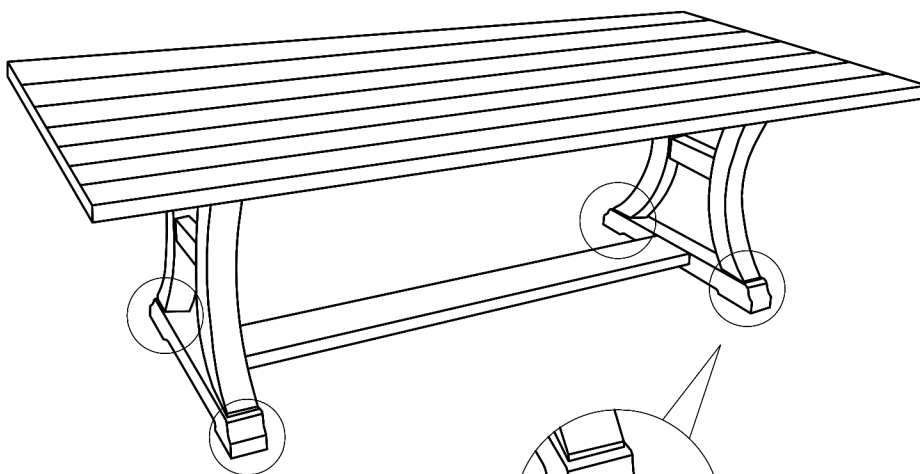


Adjust the leveler according to the ground level. To lower or to raise the legs, you need to turn the leveler clockwise or counterclockwise, respectively.

 Level

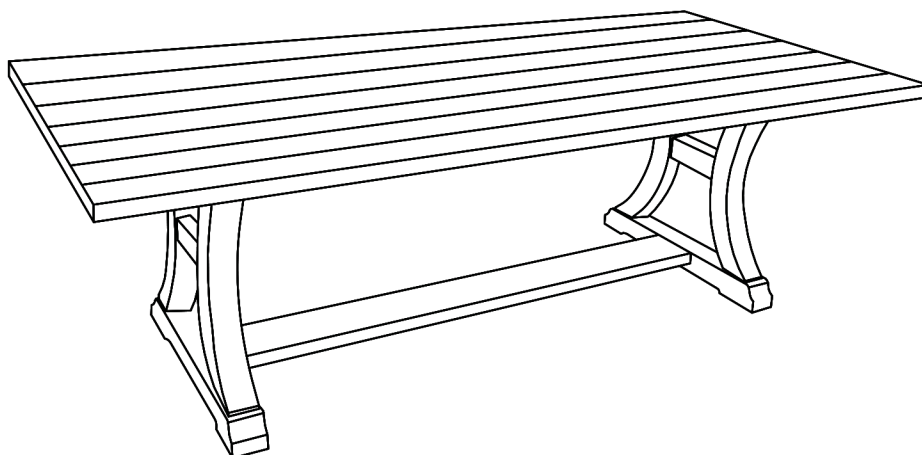


Assembly Instructions

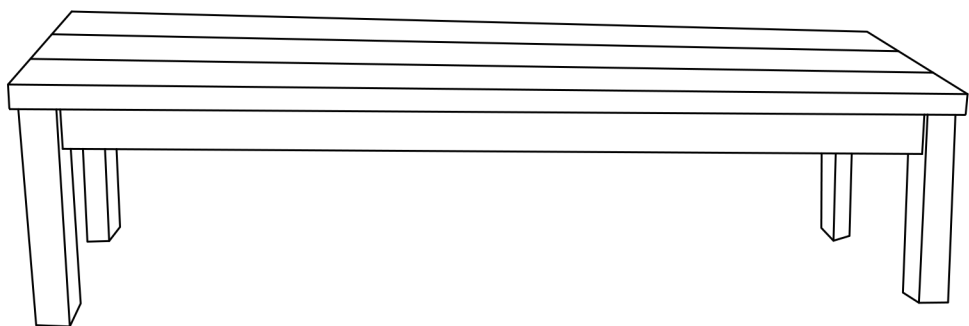 

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

 Allen Wrench




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

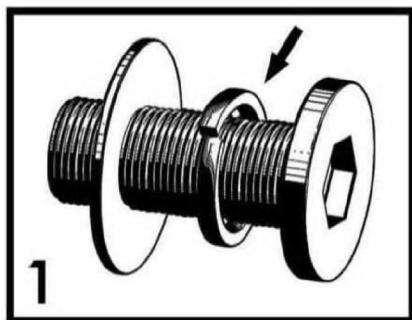

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

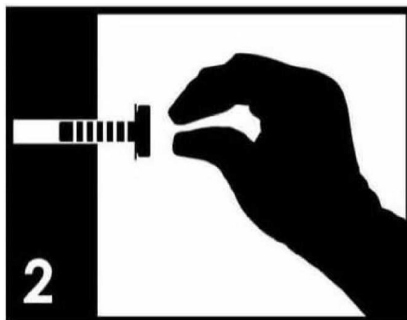

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

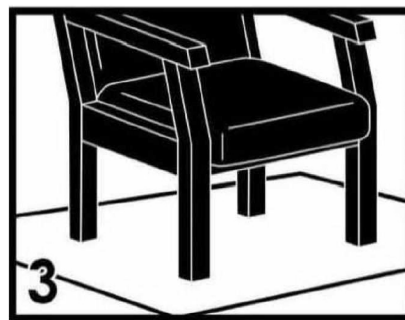

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

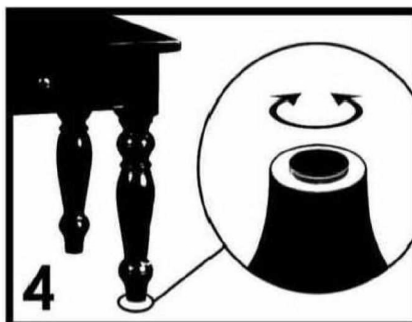

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

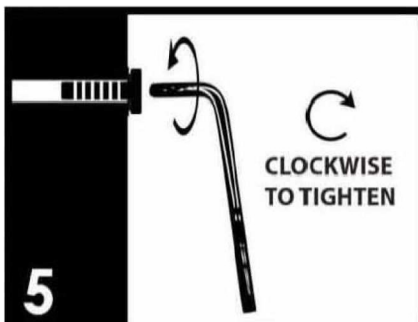

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

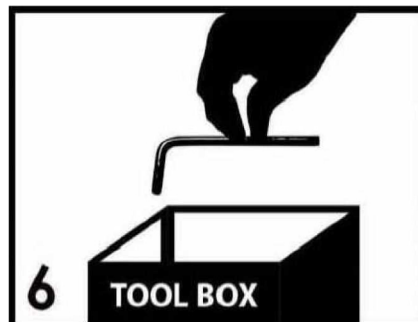


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

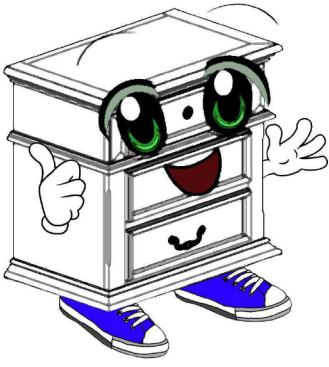


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Seat

 

#2 x 4pcs
Leg

Hardware List



#A x 8pcs
Flat Washer



#B x 8pcs
Lock Washer



#C x 8pcs
Bolt 5/16" x 2-1/4"

 


#D x 1pc
Allen Wrench M5




Prepare 8 bolts assembly by inserting lock washer (#B), then flat washer (#A) onto bolts (#C).
Align legs (#2) to the holes of the bench top (#1), then secure with bolts (#C).


#A x 8pcs
#B x 8pcs
#C x 8pcs

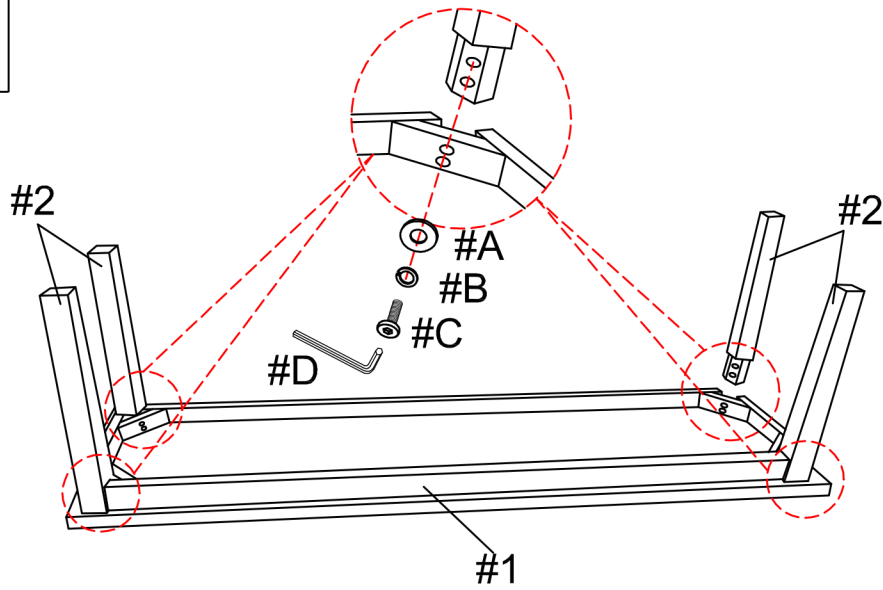

Assembly Completed

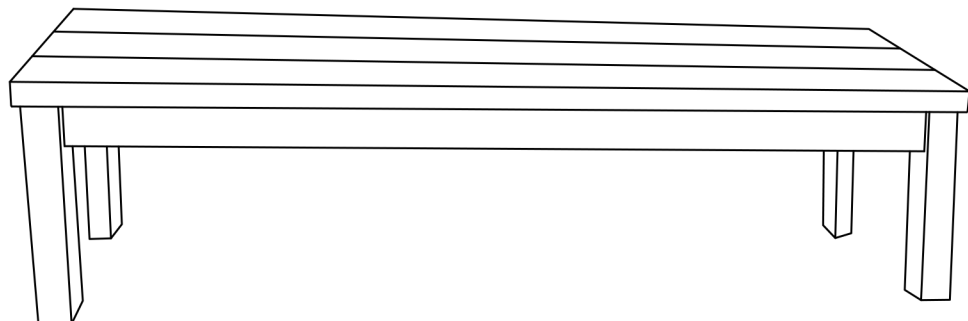 

ASSEMBLY INSTRUCTIONS

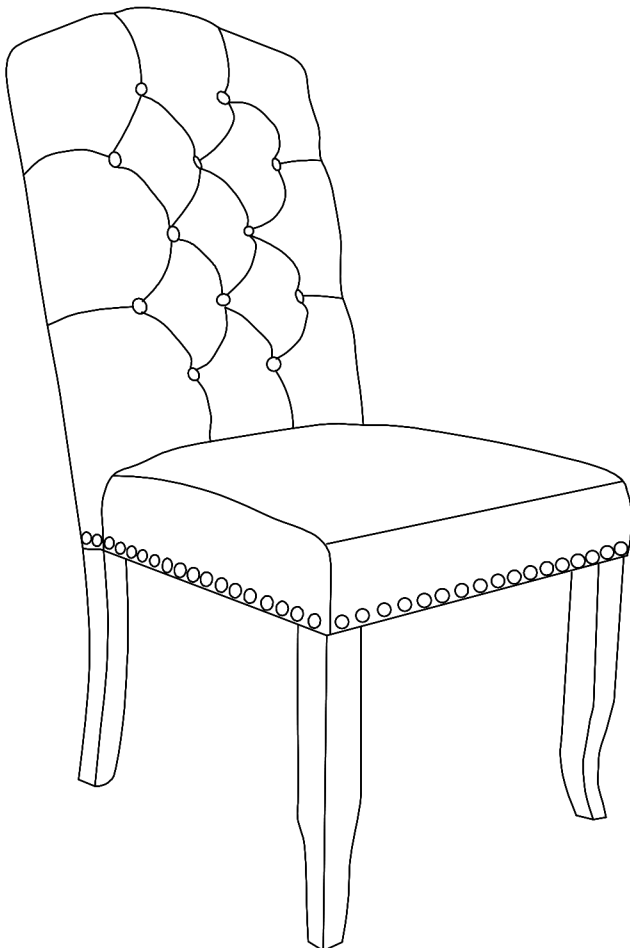 

TOOLS REQUIRED



Allen Wrench

(Included)



2 - Persons
Recommended

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

 
PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

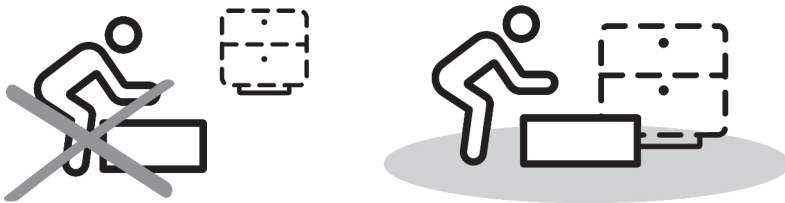


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

 Make sure you have enough space to move around during the assembly.

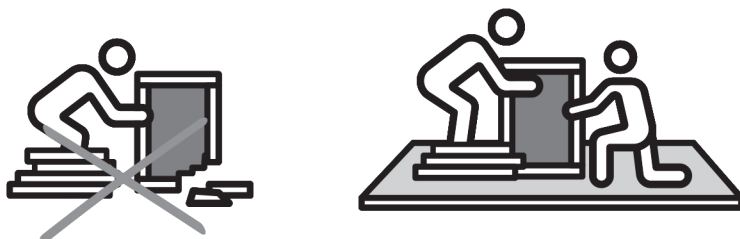

Avoid Scratches

 Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

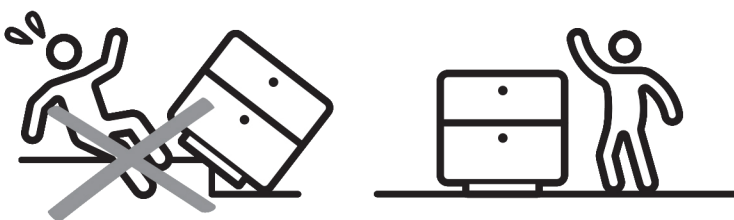

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

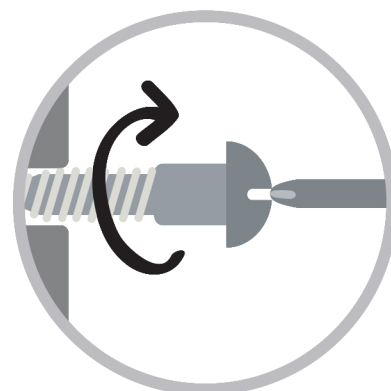


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

 Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

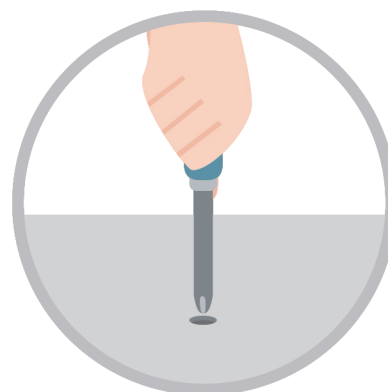


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CHAIR




 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

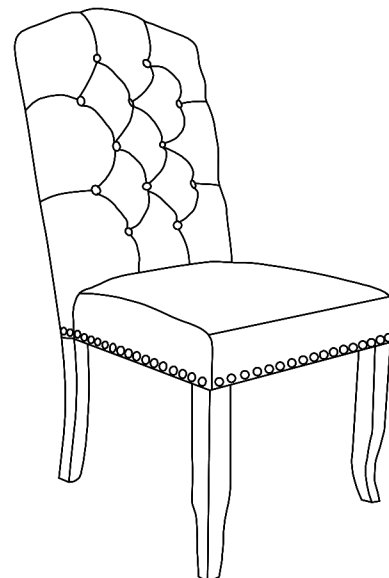

PARTS

#1 1pc x2

 


Chair Back

#2 1pc x2



 Chair Seat

#3 2pcs x2



Leg

HARDWARE

#A 2pcs x2



Bolt Ø5/16"x2"

#B 4pcs x2



Bolt Ø5/16"x2-1/2"

#C 4pcs x2



Bolt Ø5/16"x3-1/2"

#D 10pcs x2



Lock Washer Ø5/16"

#E 10pcs x2



 
Flat Washer Ø5/16"

#F 1pc x2




Dowel Ø10 x 30mm

#G 1pc x2



Allen Wrench 5mm

 Exploded View

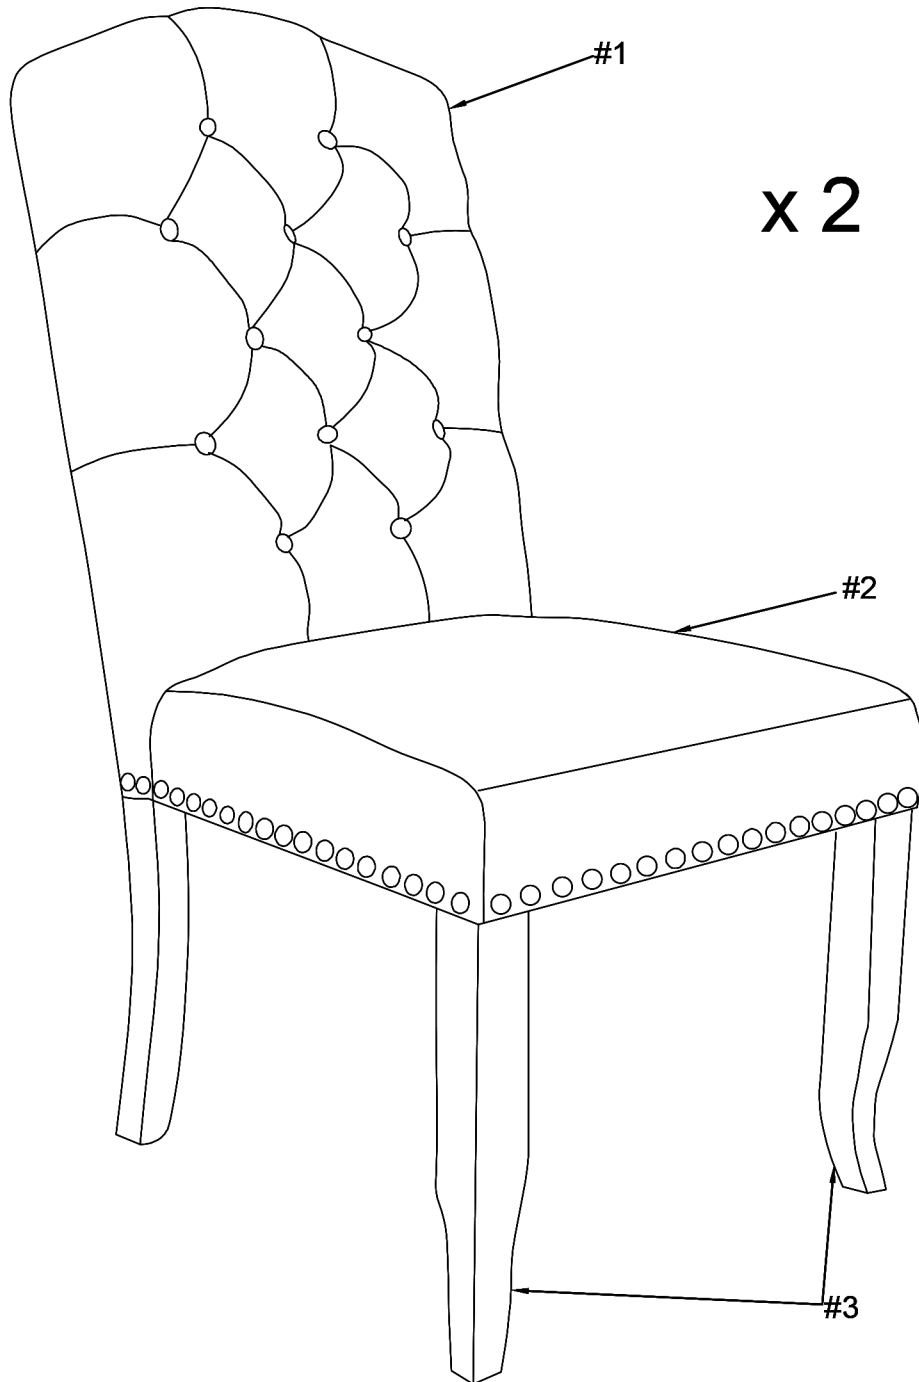

ASSEMBLY INSTRUCTIONS

1

Part #2 x1pc

 
Part #3 x2pcs

Hardware #B x4pcs

Hardware #D x4pcs

Hardware #E x4pcs

Align front legs (#3) to the seat (#2), then secure by using bolts (#B) with washers (#D,E).

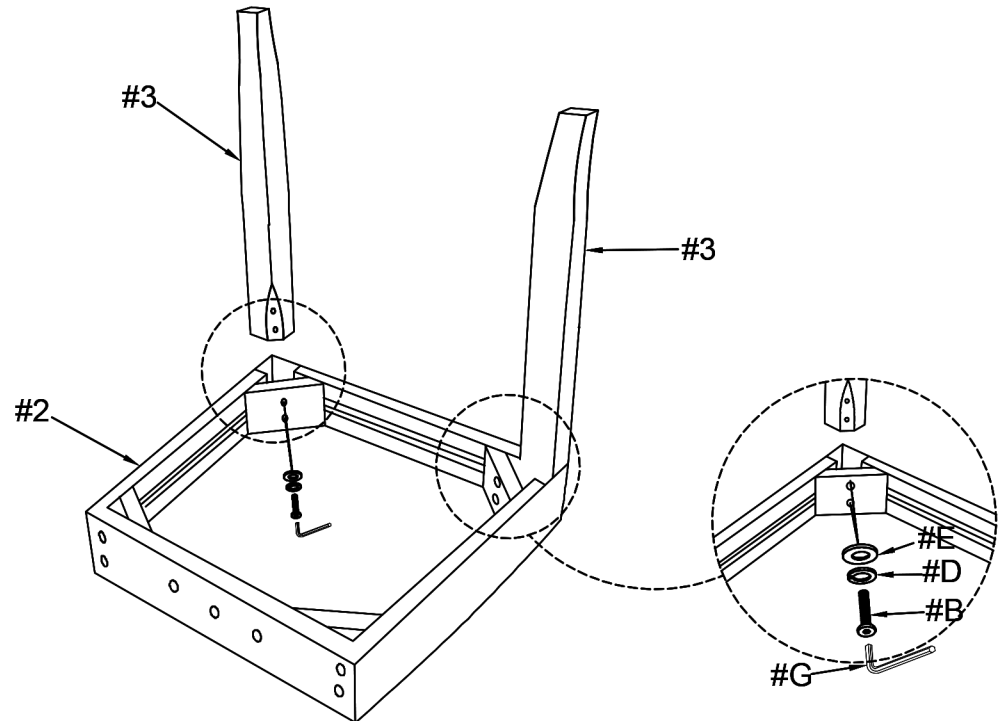

2

Part #1 x1pc

 
Hardware #A x2pcs

Hardware #D x2pcs

Hardware #E x2pcs

Hardware #F x1pc

Insert dowel (#F) to middle hole of seat (#2), then align seat (#2) to chair back (#1). Secure by using bolts (#A) with washers (#D,E).

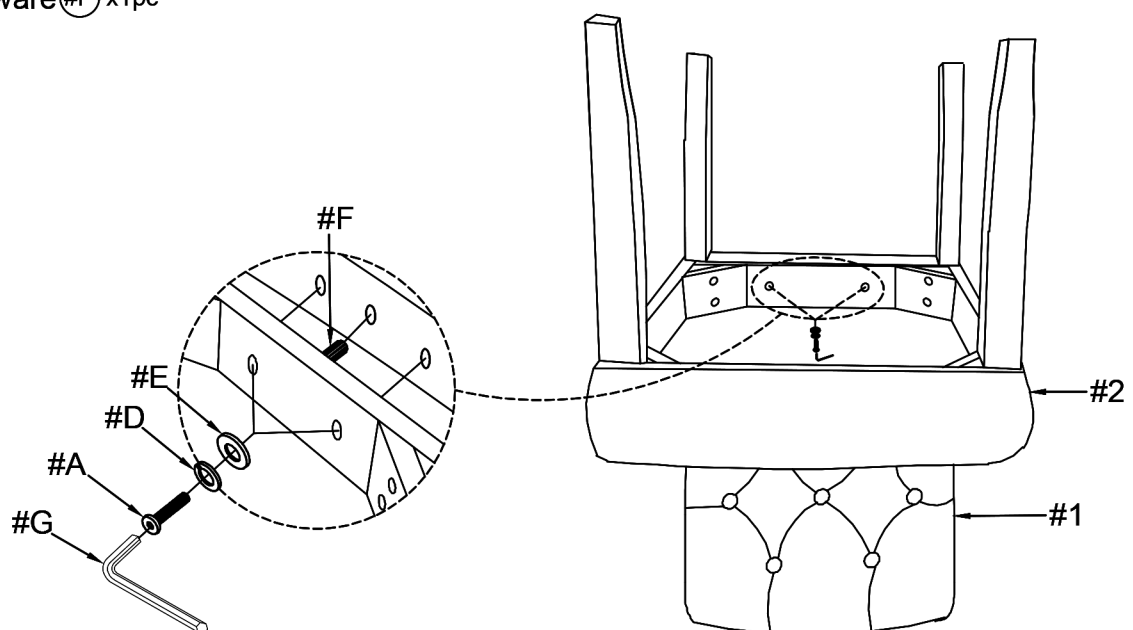

ASSEMBLY INSTRUCTIONS

 
3

Hardware **#C** x4pcs


Hardware **#D** x4pcs

Hardware **#E** x4pcs

Secure corner holes of the seat (#2) to chair back (#1) by using bolts (#C) with washers (#D,E).

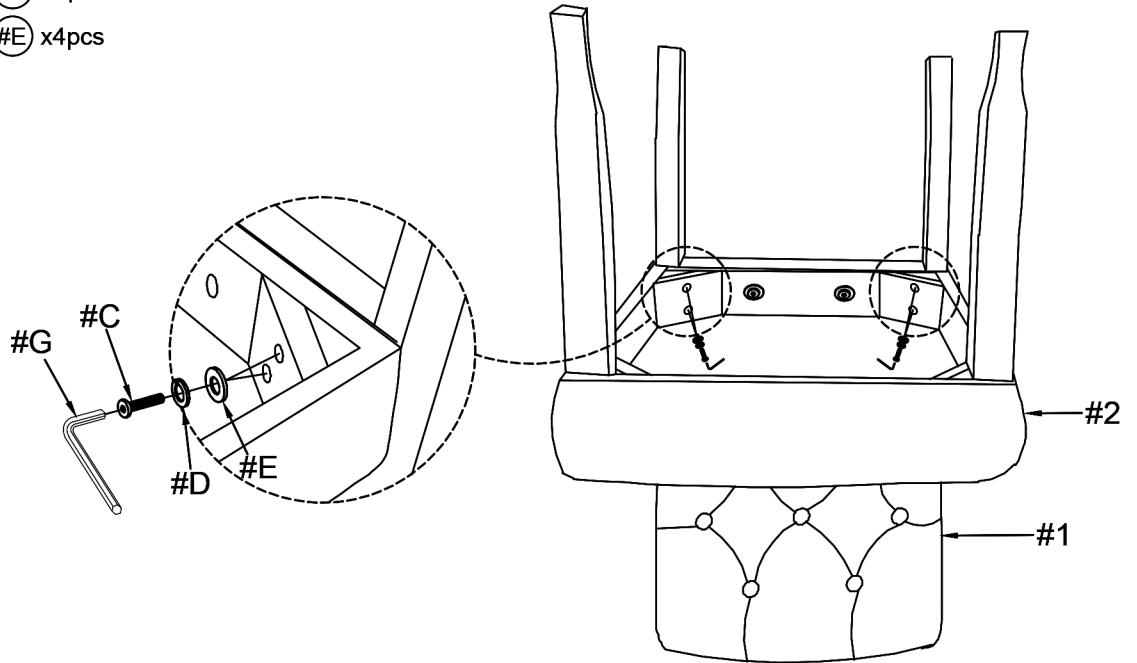

4

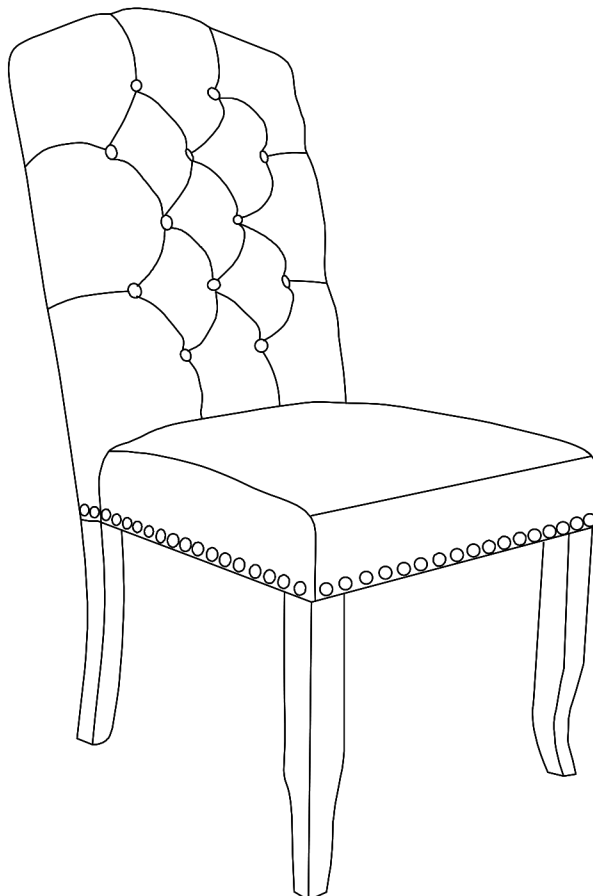 

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.