




- 3** From under the Seat Body (A), attach the Backrest (B) to the Seat Body (A) using Washer (H), Lock Washer (G) and Nut (I). Tighten using provided T Wrench (K).

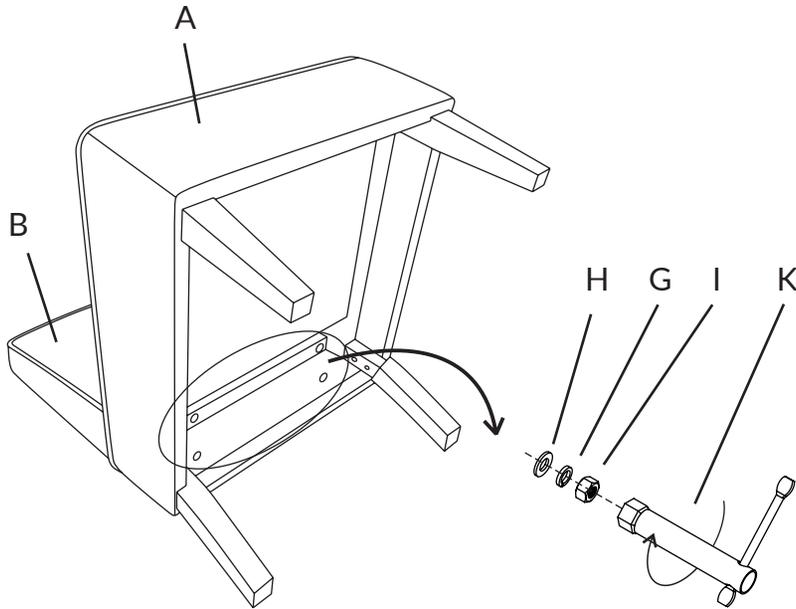

- 4** Enjoy your new Parker Accent Chair.

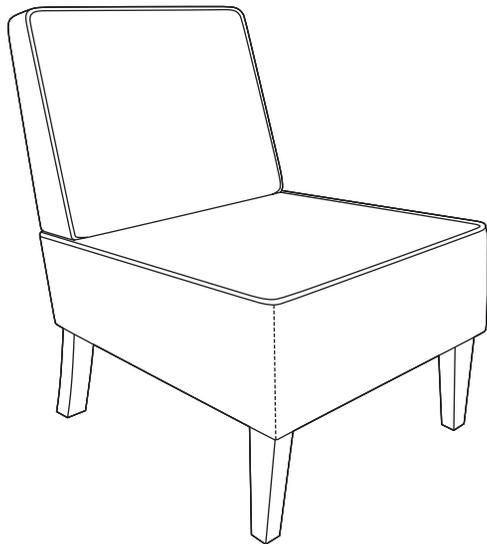

ACCENT CHAIR

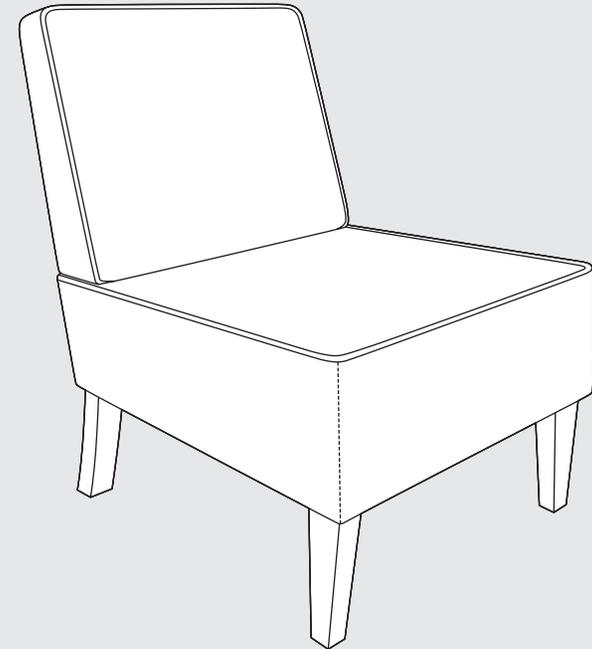

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.


Customer Service




WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

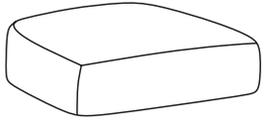


A. Seat Body
1x

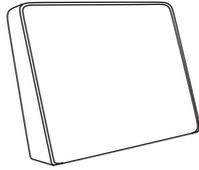

B. Backrest
1x



 C. Back Legs
2x



D. Front Legs
2x



E. Full Threaded Stud
4x



 
F. Bolt
8x




G. Lock Washer
12x



H. Washer
12x



I. Nut
4x

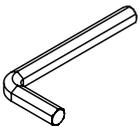

J. Allen Key
1x




K. T Wrench
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Back Legs (C) and Front Legs (D) to Seat Body (A) using Bolt (F), Lock Washer (G) and Washer (H). Tighten using provided Allen Key (J).

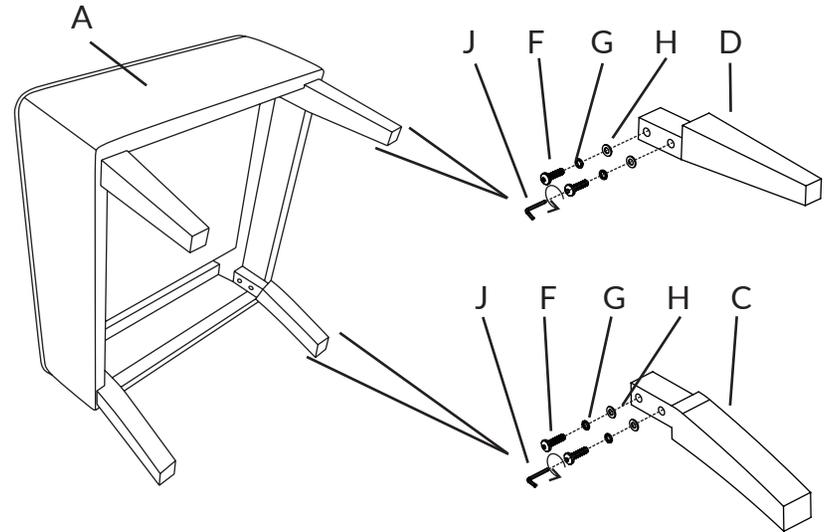

- 2 Hand thread the Full Threaded Stud (E) into the bottom of Backrest (B). Insert Backrest (B) into Seat Body (A).

