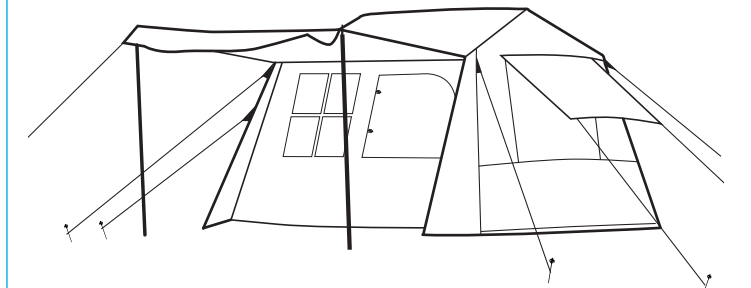
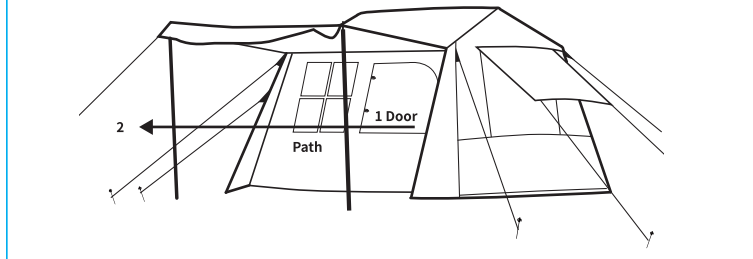
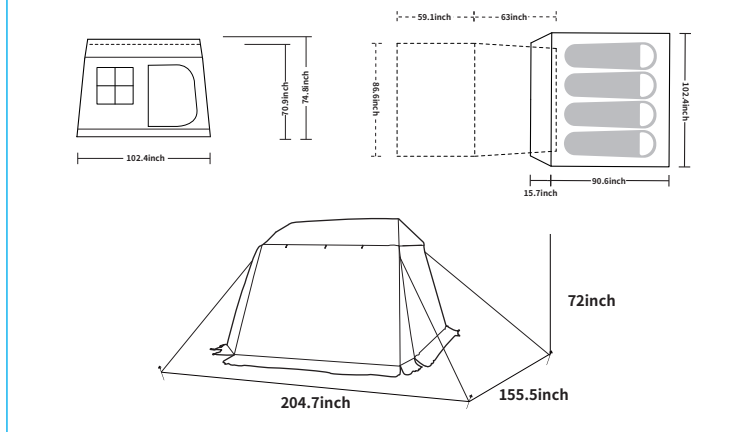
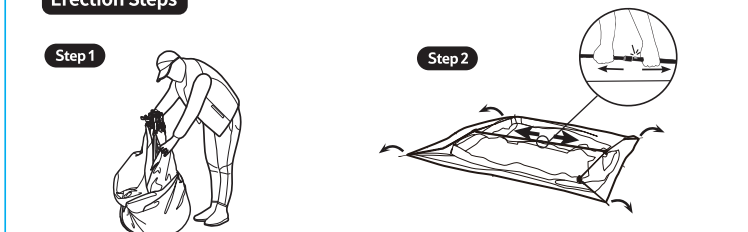
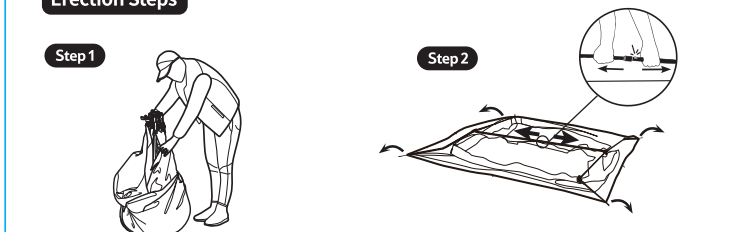
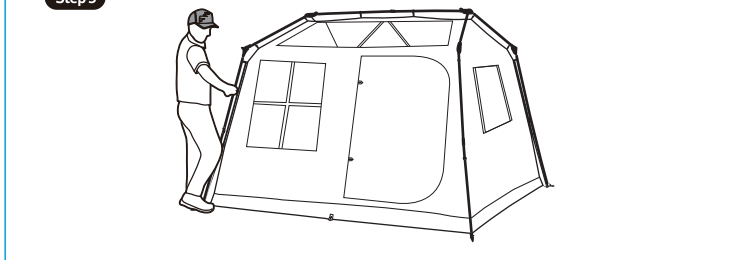
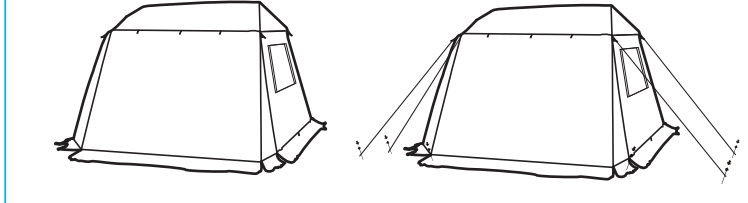
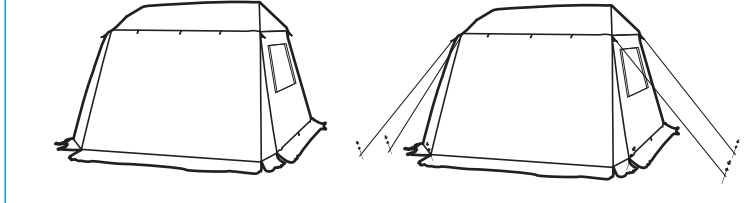
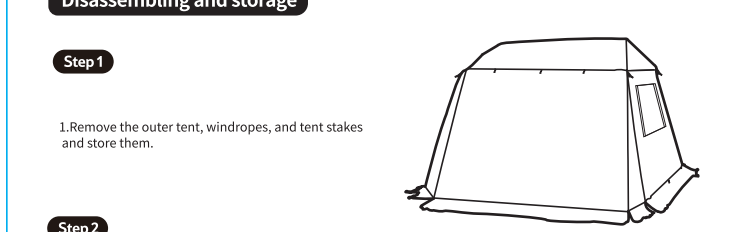
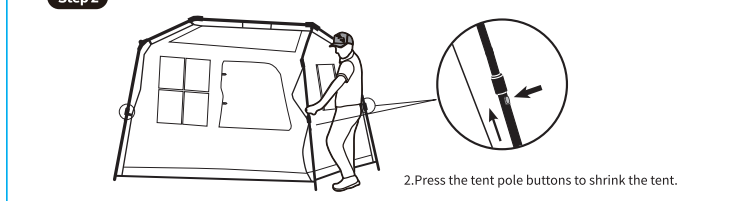
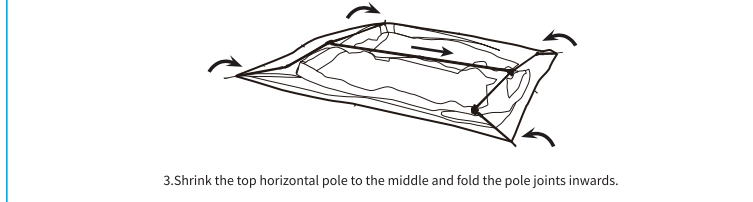
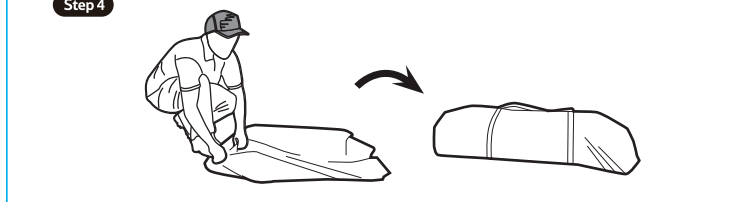


尺寸:297x300mm

Automatic Tent Installation instructions 	Cautions 1. The tent is to provide temporary shelter in the outdoor environment, and is not suitable for long-term use. If being continuously exposed to the sun, ultraviolet light will damage the material or make it discolored. 2. Tents can help withstand moderate weather changes, but extreme weather (such as heavy rain, strong winds, snowstorms, etc.) may completely destroy the tent, so please pay attention to the weather condition in advance to arrange camping activities reasonably. 3. Tents have a normal life span, so reasonable use and maintenance can extend the service life, and vice versa. 4. The tent fabric is not fireproof or flame retardant. Please set the tent away from sparks and heat sources such as campfires that are difficult to control. Maintenance / Repair 1. Cleaning solution : To avoid damaging the waterproof performance of the tent, please do not use the washing machine to clean the tent. For partial cleaning, it is recommended to wipe with soft wool or rag with room temperature water. After cleaning, please dry it in a dry and ventilated place and then store it. 2. Stain cleaning : It is recommended to use neutral detergents to clean stains. For paint, gasoline, or stains, do not use organic solvents. 3. Hole repair : find the location of the hole and spread the part of tent flat, clean the hole area to be repaired thoroughly and repair with nylon repair patches or waterproof adhesive according to the size of the hole. 4. Zipper maintenance : find the specific spot first, use the brush to clean the dust, and apply the lubricant on the cleaned zipper. After applying the lubricant, test to verify whether the zipper is smooth. 5. Maintenance of the tent stand : check whether the fasteners and pole heads are firm before use, maintain after use to prevent deformation or rust, wipe clean in time, keep the tent pole dry in storage. 6. Repair of broken stand : find the location of the broken stand and make sure the broken part can be completely repaired. Prepare suitable repair materials, make sure the repaired stand has good strength, reassemble the stand, and then test it to make sure it can be used normally. Tent ventilation 1. Keep the ventilation opening unblocked : when staying in the tent , keep the tent ventilation opening unblocked. 2. Please do not use open fire and camping gas stove products inside the tent . When using camping gas stove products in the tent with flame retardant, do not be close to the tent walls and pay attention to ventilation. For pleasant camping activities, please be aware of the following. 1. Choice of setting up place : Please do not set up your tent in the canyon river bank, under the trees, water accumulating areas and other places where there are safety hazards to prevent the danger of water accumulation or falling tree branches caused by bad weather. 2. Problems faced on different surfaces and weather conditions : on muddy or sandy surfaces, tents tend to be unstable, and the stands or pegs tend to slide, affecting the stability of the tent. When setting up on rocky or hard surface, care needs to be taken to avoid scratching the bottom of the tent. When setting up on snowy ground, pay attention to the excessive accumulation of snow over the tent's load-bearing weight will crush the tent, and need to clear the snow on the tent in time. 3. Main wind direction : pay attention to the wind direction of the building, try to build the side with the smaller windward side downwind, and pull the wind rope on the ground when the tent is fully built. It is recommended to use it in fine weather.	4. Pull the windproof rope : Please follow the construction steps to insert the end of the non-adjustable buckle of the windproof rope into the wind rope point, pull out the other end of the loop rope to cover the ground pegs, fix the ground and tighten the wind rope. 5. Consequences of storing wet tent : storing tent when not dried will lead to mold and odor and easy to damage the tent, please dry and store in time after use. The way of escape in case of fire  1. Confirm the exit: when entering the tent , be sure to understand the structure and layout of the interior of the tent, as well as the location of the exit. In the event of an emergency, immediately identify and find the nearest exit (1: door). 2. Escape along the safe path : in the event of a fire, personnel should escape quickly along the safe path (2) and should not scurry or move in the opposite direction inside the tent. Materials: Outer tent: 100% polyester (no fire resistance) Inner tent: 100% polyester (no fire resistance) Bottom/ground fabric: 100% polyester (no fire resistance) Tent pole material: Iron. Package weight: Total weight – 30lbs . Spread size: 102.4x90.6x70.9inch;storage size:38.6x9.8x9.8inch. Class B (Performance Level 2) It has passed the inspection and certification of relevant quality inspection institutions, and meets the requirements of the GB/Z 27735-2022 standard for anti-mosquito ventilation, tent outlets, tents and pole bags (equipped), and employees can use it with confidence under the conditions.
--- Inner tent size --- Outer tent size --- Build size (minimum erection use)  Packing List Tent Stakes ×16 Poles x 2 Storage Bag × 1 Guylines × 8 Outer Tent×1 Inner Tent×1 Extended Awning×1	Erection Steps Step 1  1. Unpack the tent, erect and hold the middle automatic tent pole, and spread the four corners. Step 2  2. Pull the middle bar until it is locked, and the joints of the tent pole are folded outwards to open. Step 3  3. Lift the tent poles in turn, and extend the poles until the joint buttons are locked. Step 4  4. Put on the outer tent. Step 5  5. Tighten the wind ropes and stake the tent down to complete the setup.	Disassembling and storage Step 1  1.Remove the outer tent, windropes, and tent stakes and store them. Step 2  2.Press the tent pole buttons to shrink the tent. Step 3  3.Shrink the top horizontal pole to the middle and fold the pole joints inwards. Step 4  4. After folding the tent, put the tent and other accessories into the storage bag.