


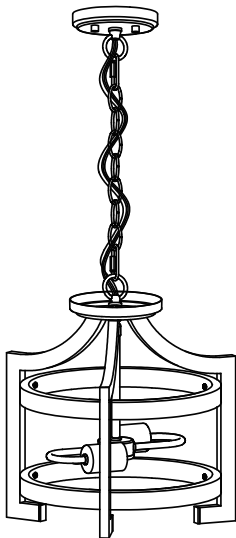

Ceiling Light

[Instruction Manual]



Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

WARNING:

Read all of these installation instructions before installing the fixture. These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed by a qualified electrician in accordance with these instructions, current local electrical code or the current National Electric Code (NEC).

1. This product must be installed by a person familiar with the construction and operation of the product and the hazards involved, and in accordance with current electrical codes and/or the current National Electric Code (NEC).
2. To reduce the possibility of electric shock, fixture must be grounded.
3. Do not attempt to open the LED light engine.
4. Do not look directly into fixture.
5. Fixture is equipped with 120 VOLT Driver ONLY.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position.

Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fixture will be installed.

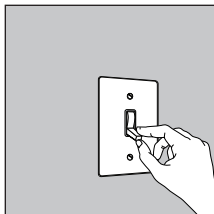


FIG. 1
WALL SWITCH

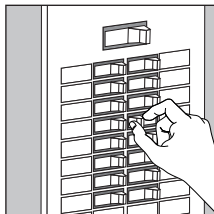


FIG. 2
BREAKER PANEL


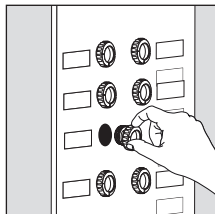


FIG. 3
FUSE BOX


METHOD 1

Note: Please rotate the **Black Bracket** to 180 degrees, then put the two **Iron Rings** in, and fix with **Iron Ring Screws**.

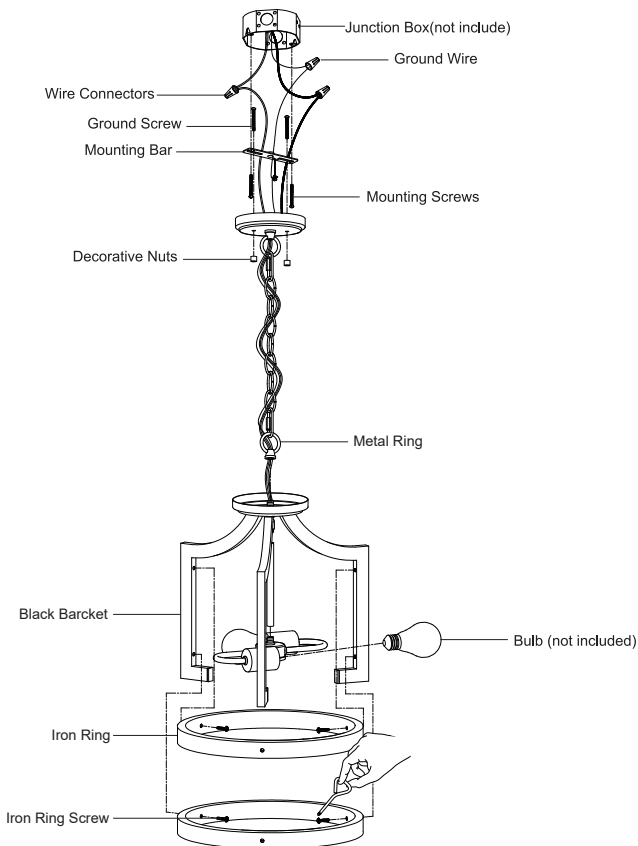


METHOD 2

Note: please remove the **Metal Ring** when using installation **METHOD 2**
Only one set of **Mounting Bar**, **Mounting Screws** and **Decorative Nuts**, please remove them in installation **METHOD 1** when using them in installation **METHOD 2**.

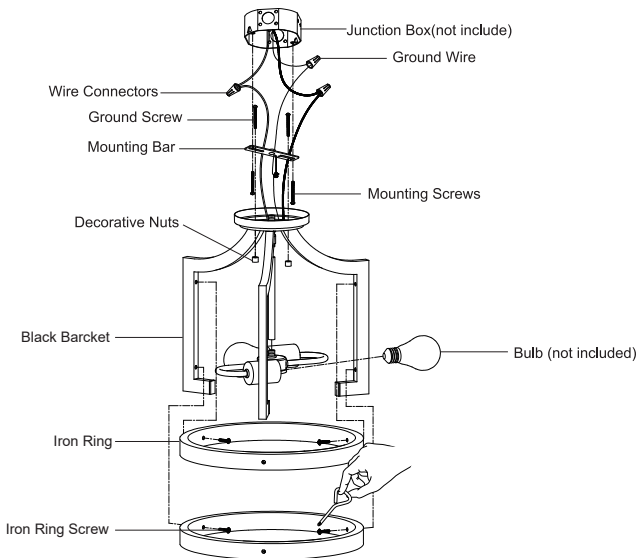

Parts List

 

Wire Connector
X 3



Iron Ring Screw
X 6



Screwdriver
X 1

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: Incandescent Bulb 60W
- Socket Type: Standard Medium E26

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.



Made in China