


FIRE PIT TABLE

INSTRUCTION MANUAL

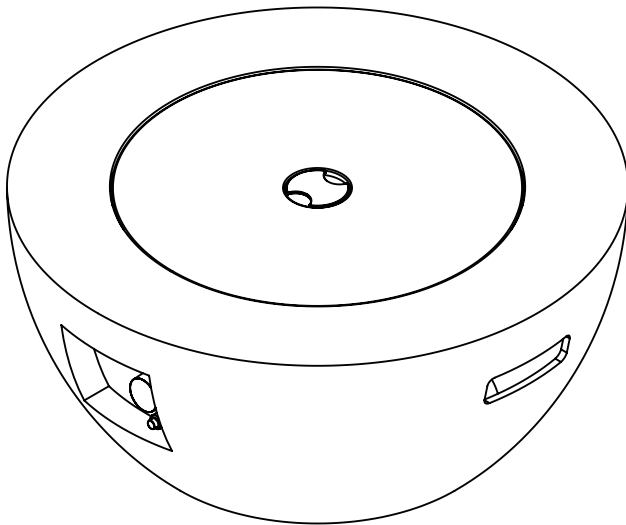

FOR YOUR SAFETY!

Read the instruction manual before assembling and using.

CONTACT FIRST!

If you have any questions that are not covered in this manual or need help, please contact your local dealer or our customer service.

GENERAL INFORMATION

In case of any issue, call your local dealer first! DO NOT RETURN the furniture. This product has been made to high-quality standards. If you have questions regarding assembly, operation, or need parts that are not addressed in this manual, consult your dealer or call our direct customer service hotline. We appreciate your trust and your purchase in supporting your home decorating plan. To help expedite our service, please have these assembly instructions readily available along with your original order receipt. For warranty terms and conditions, please read through the Warranty Card included in the packaging box.

PRE ASSEMBLY TIPS & ADVICE

After unpacking, please check if the parts show any damage. In addition, please check if all parts and hardware are in position before assembly. If any parts are damaged or missing, please DO NOT assemble the furniture and contact your local dealer for assistance. If you do not have the parts or hardware list, please contact your dealer to send them to you immediately.



Do not use the furniture unless it is **COMPLETELY** assembled and all parts are securely fastened and tightened.

We certainly understand that building ready-to-assemble furniture can be a challenging experience for some individuals. To help avoid confusion, we have provided some tips that may speed up the process.

- ✓ Assembling near the area of the intended location is highly recommended.
- ✓ Make sure you have enough space to move around during the assembly.
- ✓ Use cardboard, blankets, or a carpeted area while assembling furniture to prevent scratches.
- ✓ Make sure the furniture rests on a flat and level surface, with each leg evenly touching the floor.



Some parts may contain sharp edges. Wear protective gloves (not included) if necessary.



Turn clockwise to tighten, and tighten only when the step is complete or when instructed to do so.



After two weeks, check and tighten any loose hardware, and repeat the process every one to two months thereafter or as necessary.



Always have at least two people help with transporting and assembling the product to avoid potential injury and/or damage.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND CAUSE THE FURNITURE TO BECOME WOBBLY, IMPACTING ITS ABILITY TO SUPPORT THE INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

CLEANING AND MAINTENANCE

To enjoy the outstanding performance from your fire pit, make sure you perform the following activities on a regular basis:

1. Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
2. While cleaning the fire pit, make sure to keep the area around the burner dry at all times. DO NOT submerge the control valve assembly. If the gas control is submerged in water, DO NOT use it. It must be replaced.
3. Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean. Signs of possible blockage include:
 - (1). Gas odor with extreme yellow tipping of flame.
 - (2). Fire pit does NOT reach the desired temperature.
 - (3). Fire pit flame is excessively uneven.
 - (4). Fire pit makes popping noises.
 - (5). Spiders and insects can nest in burner or orifice. This dangerous condition can damage fire pit and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away small particles.
4. Carbon deposits may create a fire hazard. Clean burner with warm soapy water if any carbon deposits develop.
5. Cover your fire pit with an outdoor weather cover when not in use to protect it from the elements.




WARNING



- Always allow fire pit to cool COMPLETELY before you cover the fire pit with an outdoor weather cover or you attempt to service or perform maintenance.

Storage

1. Clean your appliance before storing it.
2. Store it in a cool, dry place, either outdoors or indoors, but make sure to disconnect and remove the LP cylinder from the appliance.
3. A cover is highly recommended to protect your appliance (purchase separately from any online shop).
4. Perform a Leak Test before using the appliance after it has been stored.

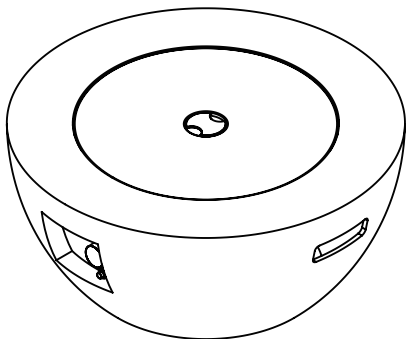

ANS Z21.97 • CSA 2.41-2017
Outdoor Decorative Gas Appliances



WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

INSTALLER: Leave this manual with the appliance.
CONSUMER: Retain this manual for future reference.



WARNING

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.



WARNING

For Outdoor Use Only.



DANGER

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you.
Never use this appliance in an enclosed space such as a camper, tent, car or home.



WARNING

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



DANGER

FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, leave the area immediately.
- After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

IMPORTANT SAFETY INFORMATION

1. The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54; National Fuel Gas Code; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, CSA B149.2, as applicable.
2. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).
3. The appliance area must be kept clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
4. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water.
5. **Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.**
Young children should be carefully supervised when they are in the area of the appliance.
6. **Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.**
7. **Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.**
8. **Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners, and circulating air passageways of the appliance are kept clean.**
9. **CAUTION:** The propane gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 inches water column.
10. **DO NOT** burn solid fuels in this appliance.
11. This outdoor gas appliance is for Outdoor Use ONLY.
12. This outdoor gas appliance is not intended to be installed in or on recreational vehicles and/or boats.
13. This outdoor appliance is not for use on wood decks or other flammable surface.
14. Before each use of this gas appliance, open the door and/or the propane Tank Drawer and inspect the hose. If there is evidence of excessive abrasion or wear or if the hose is damaged, the hose assembly must be replaced prior to the appliance being put into operation. Use only the replacement hose assembly specified in this manual.
15. Make sure to leak test.
16. Before each use of this gas appliance, inspect the burner. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only the replacement burner specified in this manual.
17. Make sure to properly locate the gas hose including locating the hose out of pathways where people may trip over it or in areas where the hose may be subject to accidental damage.
18. Keep the fuel supply hose away from any heated surface.
19. Never use this appliance closer than 10 feet from anything flammable, including houses or overhead tree branches.
20. Never use gasoline, kerosene, or any other liquid fuel to start a fire.
21. Always maintain a safe distance from the fire.
22. Always supervise children around the fire.
23. Never leave a fire unattended.
24. The appliance is hot during and after use, always allow ample cooling time before touching or moving.


IMPORTANT SAFETY INFORMATION ABOUT PROPANE GAS

1. The propane supply cylinder to be used must be constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for propane cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable.
2. The propane supply cylinder to be used must have a listed overfilling prevention device.
3. The propane supply cylinder to be used must have a cylinder connection device compatible with the connection for the appliance.
4. A self-contained propane cylinder for use with this appliance must have a capacity of 20 lbs cylinder (Height approximately 18 in., Tank Body approximately 12 in. diameter, Base approximately 8 in. diameter).
5. The cylinder supply system must be arranged for vapor withdrawal.
6. The cylinder used must include a collar to protect the cylinder valve.
7. This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed space.
8. When this appliance is not in use, the gas must be turned off at the supply cylinder.
9. Storage of this appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.
10. Cylinders must be stored outdoors in a well-ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed areas.
11. This appliance is certified by CSA (Canadian Standards Association) to ANS Z21.97 • CSA 2.41-2017, Outdoor Decorative Gas Appliances.



WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to: www.P65Warning.ca.gov.

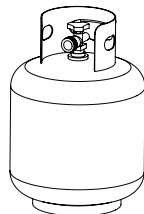

Standard 20 lb. tank

SPECIFICATIONS

Rated Heat Input (Liquid Propane & Natural Gas)	50,000 BTU/hr
Propane Regulator Pressure	11 inches water column
Natural Gas Inlet Pressure	7 inches water column
Clearance to combustible surfaces	Sides: 24in. (610mm), Top: 72in. (1829mm)

ASSEMBLY INSTRUCTIONS


Parts List

Part No.	A1	B1	C1	D1
Images				
Qty.	1	1	1	1

Hardware List

Key	E1	F1
Images		
Qty.	1	4

Exploded View

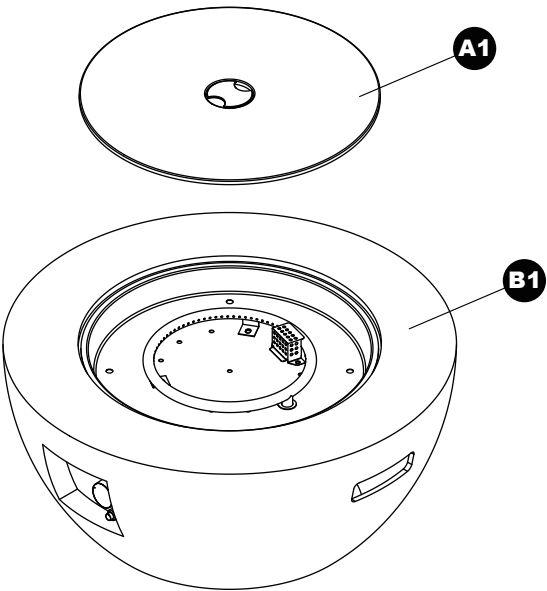


1



CAUTION

Note: Do not tighten screws before final assembly.

With the help of another person, carefully side place the fire pit (B1) on a non-abrasive flat surface to prevent scratching, check the four corners at the bottom of fire pit, then line up the foot glider (F1) with the screw hole and screw clockwise.

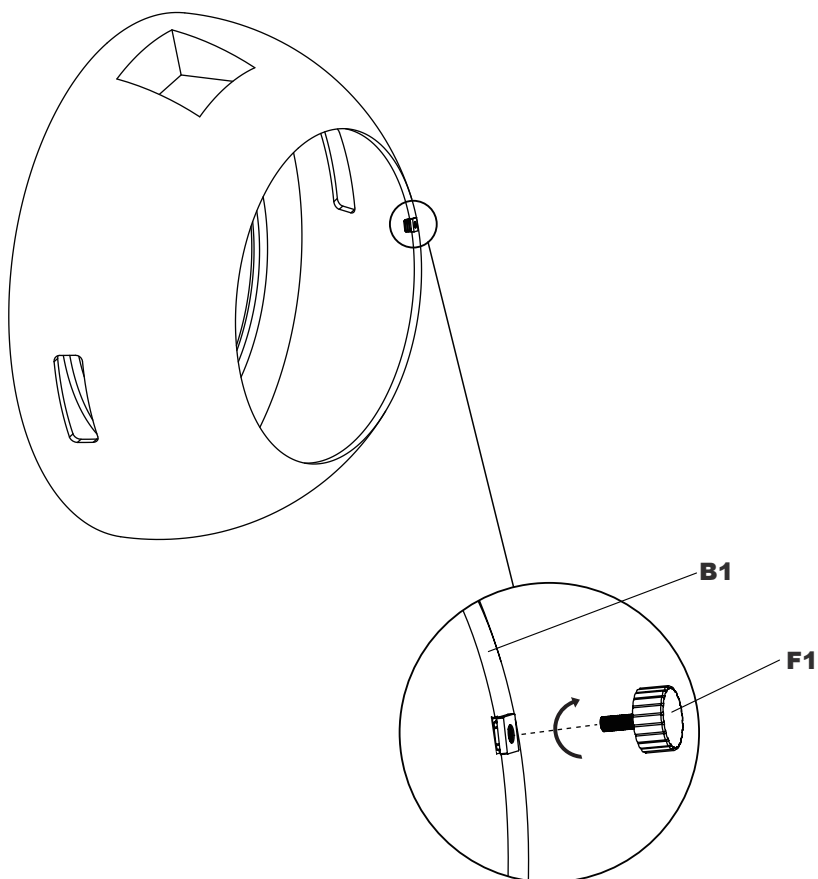

2




CAUTION

Note: leave the pilot box uncovered by the lava rock.

Warning: keep children away during assembly, as this item contains lava rock, which are small pieces and can be swallowed by children.

Open the box of lava rocks, put the lava rocks (C1) into the fire bowl of the fire table (B1). A gas fire pit requires 13.2 lbs lava rocks.

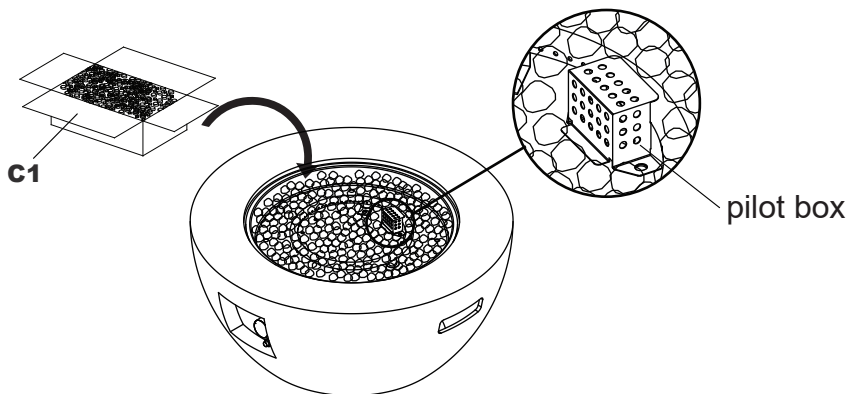

CAUTION

Please be advised that this fire pit is equipped with natural lava rock that may crackle or pop the first time it is used. The lava rock has been pre-heat treated to release any natural inherent moisture. However, in rare cases on first time use, the lava rock may pop or burst causing small pieces of hot rock to potentially be a projectile. These hot pieces could cause injury or property damage. As a precaution, please follow these instructions the first time the fire pit is used:

1. On first use, do not stand over or near the fire pit once lit.
2. Light the fire pit and let it run on high for 20 minutes.
3. Once lit, do not go within 12 feet of the fire pit for at least the first 20 minutes on the first use to ensure any residual moisture trapped in the rocks gets released.
4. After the first heating cycle there is little further concern. It is rare that any crackling will happen on the first use, this is simply a precaution.
5. Keep lava rock covered and dry while not in use to prevent additional moisture from getting in the rocks.
6. If lava rocks are exposed to moisture after first use, run the burner on low to gradually warm and dry the rocks before repeating steps 1 through 3.

3





CAUTION

Note: fire pit and gas tank must have the minimum distance of 40 inches.

Warning: make sure to properly locate the gas hose by keeping it out of pathways where people may trip over it or in an area where the hose may be subject to accidental damage.

Connect the regulator, screw the black handle clockwise to tighten, turn the black handle counterclockwise to remove. The hose must not turn upside. The knob on the control panel is turned all the way to the "OFF" position when the fireplace is NOT in use.

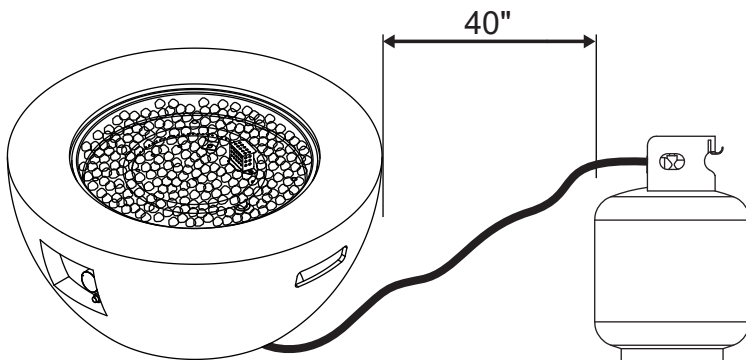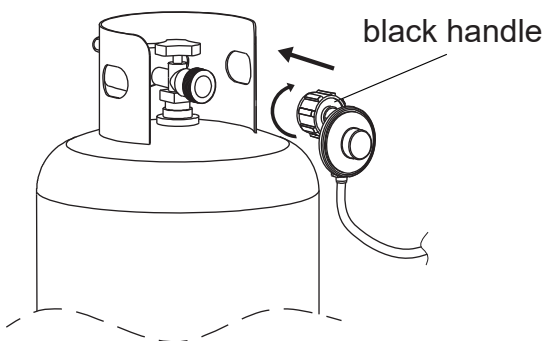


4



CAUTION

Warning: Allow 30 minutes after use for fire pit to cool down before placing the lid to prevent scalding.

Once the firepit has cooled completely after use, carefully place the lid (A1) onto the fire bowl and use the weather cover (D1) to protect your fire pit from the elements.

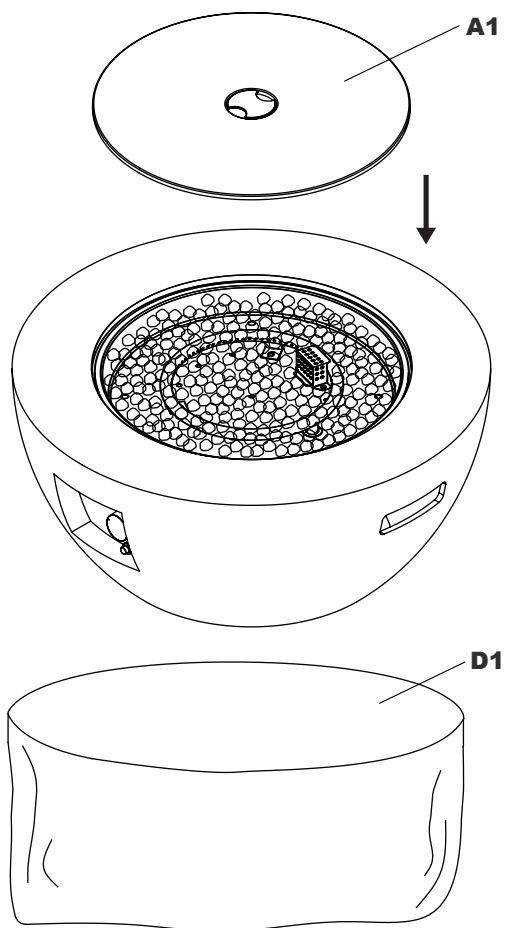

ASSEMBLY COMPLETED

- ✓ Please ensure the furniture is placed on a flat, level surface.
- ✓ If the product wobbles or feels loose, double-check that all bolts and nuts are properly tightened and secured.

NATURAL GAS CONVERSION



WARNING: Natural gas conversion must be performed only by natural gas provider or a service company.


1



CAUTION


Note: The propane tank shall be shut off prior to disconnecting the propane hose, before proceeding with the conversion.

Disconnect the propane hose from the gas valve.

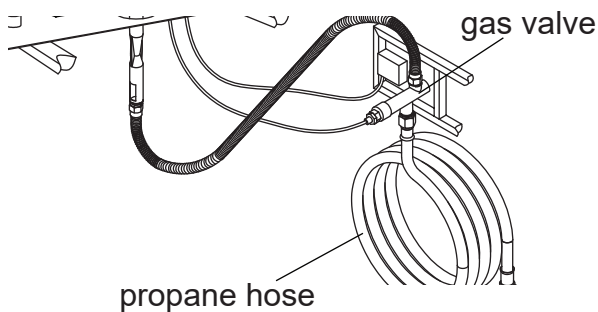


2

Unscrew and disconnect the propane orifice from the bellows. Propane orifice (2.21 mm diameter size) is painted with red mark.

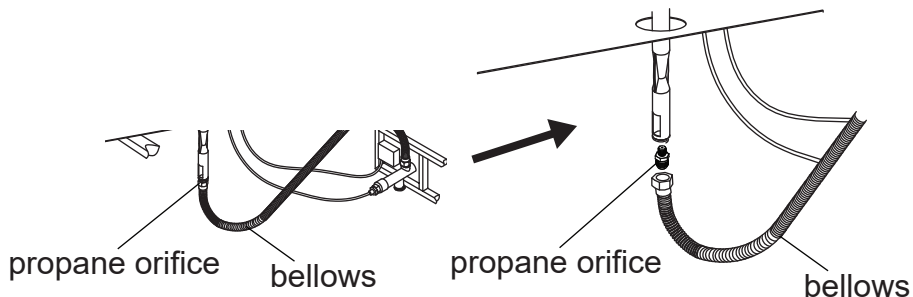

3

Replace the propane orifice with the natural gas orifice and screw the natural gas orifice to the bellows tightly. Then connect and tighten the natural gas orifice to the inlet tube. The Natural gas orifice (4.18 mm diameter size) is painted with a black mark.

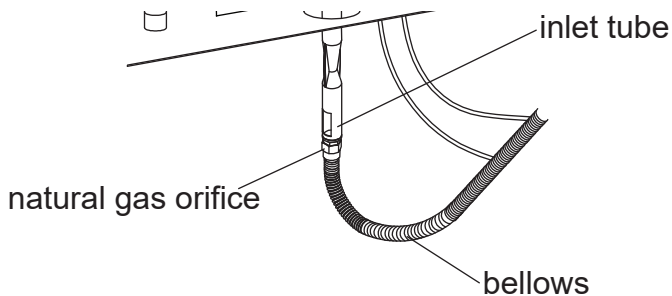

4

Connect the natural gas hose to the gas valve by screwing clockwise tightly (See Figure 1). Plug the natural gas fixture into the natural gas supply system (See Figure 2). The conversion kit should be CSA certified. Below are several suggested CSA certified conversion kits for your reference.

The natural gas orifice is included in the package. Please follow the instructions for gas conversion.

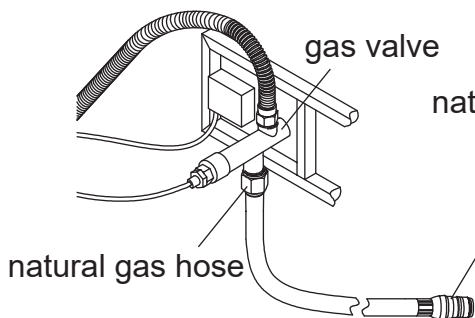


Figure 1

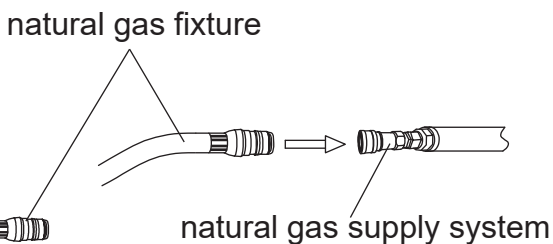
 


Figure 2

Stick and cover the conversion label onto the propane rating plate.

conversion label

⚠ CAUTION: This appliance has been converted to use natural gas. Propane orifice dia 2.21 mm, natural gas orifice dia 4.18 mm. Rated Heat Input: 50,000 BTU/hr (14.65 kW). Type Gas: Natural gas. Manifold Pressure: 7 inches water column (1.74 kPa). This appliance was converted on _____ (day-month-year) to _____ by _____ (insert gas type, e.g. Natural or Propane) gas with Kit No. _____ by _____ (name and address of organization making this conversion), which accepts the responsibility that this conversion has been properly made. Minimum Clearance From Unit To Combustible Construction: 72" (182.9cm) from the top, 24" (61cm) from all sides and back. For Outdoor Use Only. If Stored Indoors, Detach and Leave Cylinder Outdoors. The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use. Potential hazard of placing the cylinder too close to the appliance.		⚠ DANGER 
⚠ WARNING: Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance. Complies with ANSI Z21.97-2017 • CSA 2.41-2017, Outdoor Decorative Gas Appliance Standards. Cover must be removed when burner is in operation. Removal of this marking will void compliance with standard ANSI Z21.97-2017 • CSA 2.41-2017. Do not connect to a remote gas supply. ⚠ WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life. ⚠ WARNING: Placing the cylinder too close to the appliance might cause the fire hazard or property loss or even life hazard. • The instruction manual contains important information necessary for the proper assembly and safe use of the appliance. • Read and follow all warnings and instructions before assembling and using the appliance. • Follow all warnings and instructions when using the appliance. • If instructions or parts are missing, contact us via email at adicatedservice@hotmail.com.		CARBON MONOXIDE HAZARD This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

propane rating plate



WARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the Authority Having Jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

BATTERY




WARNING

Note: Please observe proper polarity and use the correct battery type when installing or replacing the battery. Improper installation could result in ignition failure.

Please remove the battery if consumed or if product is to be left unused for a long period of time.

Make sure the control knob is in the "OFF" position. Unscrew the push button cap on the ignitor module located on the control panel to access the battery compartment. The ignitor module requires one AAA size battery. BATTERY IS NOT INCLUDED.

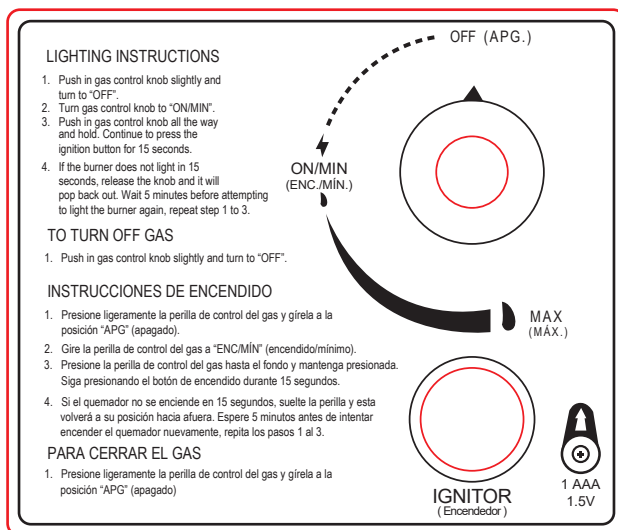


LEAK TEST

To prevent fire or explosion hazard when testing for a leak:

1. Always perform the leak test as described below before lighting this appliance or each time the cylinder is connected for use.
2. Do not smoke or allow other sources of ignition in the area while conducting a leak test.
3. Conduct the leak test outdoors in a well-ventilated area.
4. Do not use matches, lighters or a flame to check for leaks.
5. Do not use this appliance until any and all leaks are corrected. If you are unable to stop a leak, disconnect the propane supply and call a gas appliance service shop or your local propane gas supplier.

To perform a leak test:


1. Make 2~3 oz. of leak solution by mixing one part liquid dishwasher detergent and three parts water. Noted: make sure control knob is "OFF".
2. Apply several drops of solution where the cylinder attaches to regulator, (See Figure 3), inspect the solution at the connection looking for bubbles. If NO bubbles appear, the connection is secure. If bubbles appear, the connection has the leak, disconnect the regulator, reconnect, perform another leak check. If you continue to see bubbles after several attempts, cylinder valve is defective and should be returned to cylinder's supplier.
3. Apply several drops of solution where natural gas fixture attaches to natural gas supply system connection (See Figure 4), If NO bubbles appear, the connections are secure. If bubbles appear, the connection has the leak, disconnect, reconnect, perform another leak check. If you continue to see bubbles after several attempts, the conversion hose is defective and should replace with a new one.
4. Apply several drops of solution where gas valve attaches to bellows, (See Figure 5), where gas valve attaches to regulator hose, (See Figure 6), and where inlet tube attaches to bellows, (See Figure 7). If NO bubbles appear, the connections are secure. If bubbles appear, the connection has the leak, disconnect, reconnect, perform another leak check. If you continue to see bubbles after several attempts, both parts are defective and should replace with the new ones.

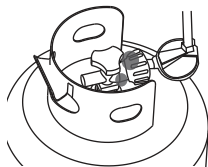


cylinder / regulator connection (Figure 3)




natural gas fixture / natural gas supply system connection (Figure 4)

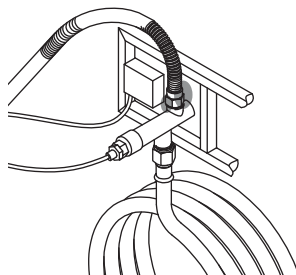

gas valve / bellows connection (Figure 5)

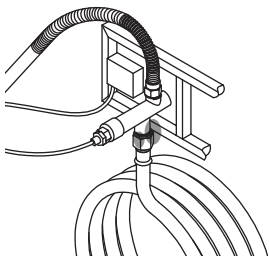

gas valve / regulator hose connection (Figure 6)

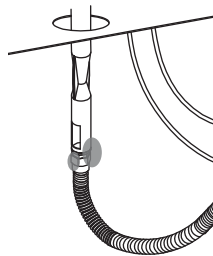

inlet tube / bellows connection (Figure 7)

LIGHTING INSTRUCTIONS


1. Push in gas control knob slightly and turn to "OFF".
2. Turn gas control knob to "ON/MIN".
3. Push in gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.
4. If the burner does not light in 15 seconds, release the knob and it will pop back out. Wait 5 minutes before attempting to light the burner again and repeat step 1 to 3.

Observe Flame Height When Lit:

The burner will display blue and yellow flames. These flames should be a blue /

yellow color between 1~2 in. height. These flames should not be yellow or produce thick smoke.

This would indicate an obstruction of airflow through the burners. The flames should be blue with straight yellow tops.

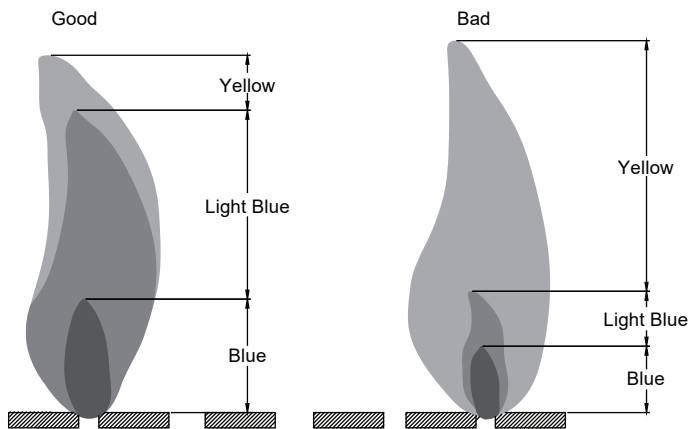


TO TURN OFF GAS



CAUTION

Warning: For your safety, read and follow the Lighting Instructions in this manual and in the Rating Plate on the appliance. IMPROPER LIGHTING PROCEDURES COULD RESULT IN A FIRE HAZARD OR EXPLOSION HAZARD OR PROPERTY DAMAGE, INJURY OR LOSS OF LIFE.

Push in gas control knob slightly and turn to "OFF".

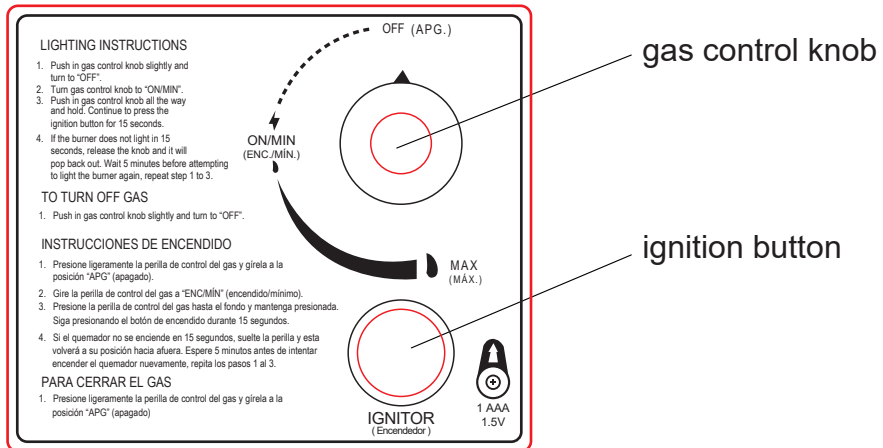

REPLACEMENT PARTS LIST

	NO	DESCRIPTION
	A	Firepit round lid, 530mm x 9mm
	B	Firepit body
	C	Firepit lava rock (black), 6.6 lbs x 2
	D	Weather cover
	E	Firepit orifice nature gas for 50000 BTU
		Firepit thermocouple, 350 mm/14 in
		Firepit electrode 3" tip, wire 350 mm for 40000, 50000 BTU
		Firepit regulator, 180 degree, 3048 mm/120 in
		Firepit gas valve
		Firepit pulse ignition
		Firepit control knob ET, large #6
		Firepit foot leveler 01, 36X42mm