



Combination Key Lock Box With Door Hanger and Wall Mount

WARNING: Avoid leaving lock box door open and unattended; it will allow unauthorized individuals to reprogram it, gaining full access to the lock box and contents.

Parts of the Lock Box



Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.

Opening the key storage compartment door

1. Open shutter door to reveal the dials and the release button.
2. Rotate dials to the current combination (if the lock is new, the combination is set at the factory to 0-0-0-0).
3. Press down on the release button to open the door.
4. Pull the door fully open.
5. Add or remove keys.
6. Close compartment door.
7. Scramble the combination dials to lock the door and conceal your combination (A).
8. Close the shutter door (B).

To set a new combination

The initial combination is set at the factory to 0-0-0-0

1. Open the compartment door (see instructions above).
2. Push the reset lever left and down. The lever remains in this position.
3. Rotate dials to your desired combination
4. Push the reset lever up and right to get it back to the original position.
5. Close the key storage compartment door.
6. Scramble the combination dials to lock the door and conceal your combination (A).
7. Close the shutter door (B).

To hang shackle model

1. Open the compartment door (see instructions above).
2. Push the shackle release lever to the left to open shackle.
3. Pull the shackle up and out of the lock.
4. Place shackle around door knob or other object.
5. Close shackle to lock.
6. Close the compartment door.
7. Scramble the combination dials to lock the door and conceal your combination (A).
8. Close the shutter door (B).

Reminder

(A) The release button will open the lock

(B) Keep the shutter door close to increase weather resistance and to conceal the dials from view.

Ouverture de la porte du compartiment de stockage des clés

1. Ouvrez la porte à persiennes pour révéler les cadrans et le bouton de libération.
2. Tournez les cadrans jusqu'à la combinaison actuelle (si la serrure est neuve, la combinaison est réglée en usine sur 0-0-0-0).
3. Appuyez sur le bouton de libération pour ouvrir la porte.
4. Tirez complètement la porte vers l'extérieur.
5. Ajoutez ou retirez des clés.
6. Fermez la porte du compartiment.
7. Mélangez les cadrans de combinaison pour verrouiller la porte et dissimuler votre combinaison (A).
8. Fermez la porte à persiennes (B).

Pour définir une nouvelle combinaison

La combinaison initiale est réglée en usine sur 0-0-0-0.

1. Ouvrez la porte du compartiment (voir les instructions ci-dessus).
2. Poussez le levier de réinitialisation vers la gauche et vers le bas. Le levier reste dans cette position.
3. Tournez les cadrans jusqu'à la combinaison souhaitée.
4. Poussez le levier de réinitialisation vers le haut et vers la droite pour le ramener à sa position d'origine.
5. Fermez la porte du compartiment de stockage des clés.
6. Mélangez les cadrans de combinaison pour verrouiller la porte et dissimuler votre combinaison (A).
7. Fermez la porte à persiennes (B).

Pour suspendre le modèle à arceau

1. Ouvrez la porte du compartiment (voir les instructions ci-dessus).
2. Poussez le levier de libération du cadenas vers la gauche pour ouvrir le cadenas.
3. Tirez le cadenas vers le haut et hors de la serrure.
4. Placez le cadenas autour de la poignée de porte ou d'un autre objet.
5. Fermez le cadenas pour verrouiller.
6. Refermez la porte du compartiment.
7. Mélangez les cadrans de combinaison pour verrouiller la porte et dissimuler votre combinaison (A).
8. Fermez la porte à persiennes (B).

Rappel

(A) Le bouton de libération ouvrira la serrure.

(B) Maintenez la porte à persiennes fermée pour augmenter la résistance aux intempéries et dissimuler les cadrans à la vue.



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767

BC767