


Use instruction

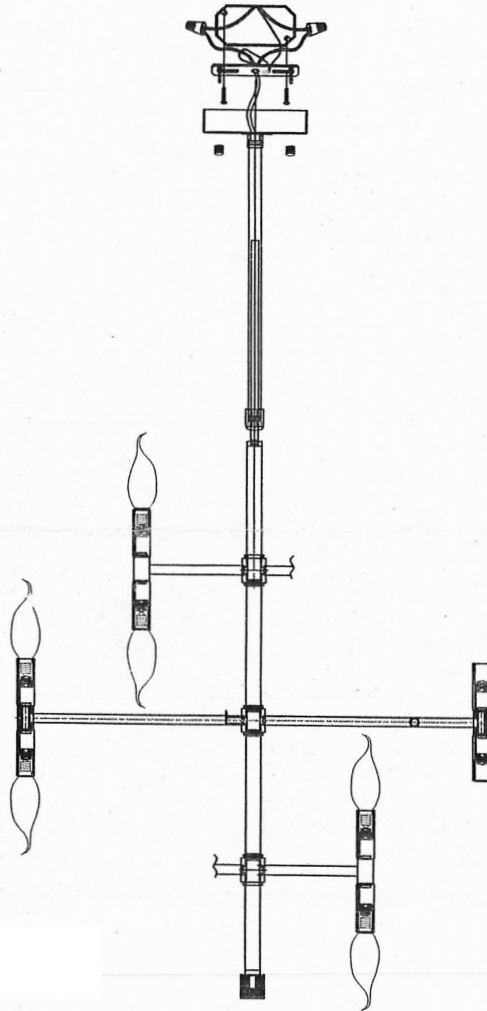

NOTE:

1:This lighting only can be use in room.
2:Do not turn switch on before
Assembly.

3:If you want change bulb,please turn
switch off,and after the bulb is cold.

Voltage:110V

Bulb:E26