

CARE AND MAINTENANCE

Important Safety Instructions

WARNING: This chair is designed exclusively for outdoor use and is not a toy. While intended for normal outdoor conditions, the manufacturer recommends storing and/or covering the product during severe weather.

WARNING: Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times.

Follow the instructions for the product's material to ensure it stays in the best

- Rinse thoroughly with clean water to remove dirt and grime.
- For stubborn stains, use a soft sponge with mild soapy water, then dry with a cloth.
- Avoid improper use and sharp objects to prevent scratches or damage.

Warranty

1 YEAR FRAME AND 1 FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

Freight and packaging charges for shipping to/from our service center are the customer's responsibility.

This warranty excludes:

- Commercial use, hardware, acts of nature, fire, freezing, and abusive use.
- Purchased parts.

We reserve the right to substitute with similar merchandise if the model is discontinued.