 


Instruction Manual

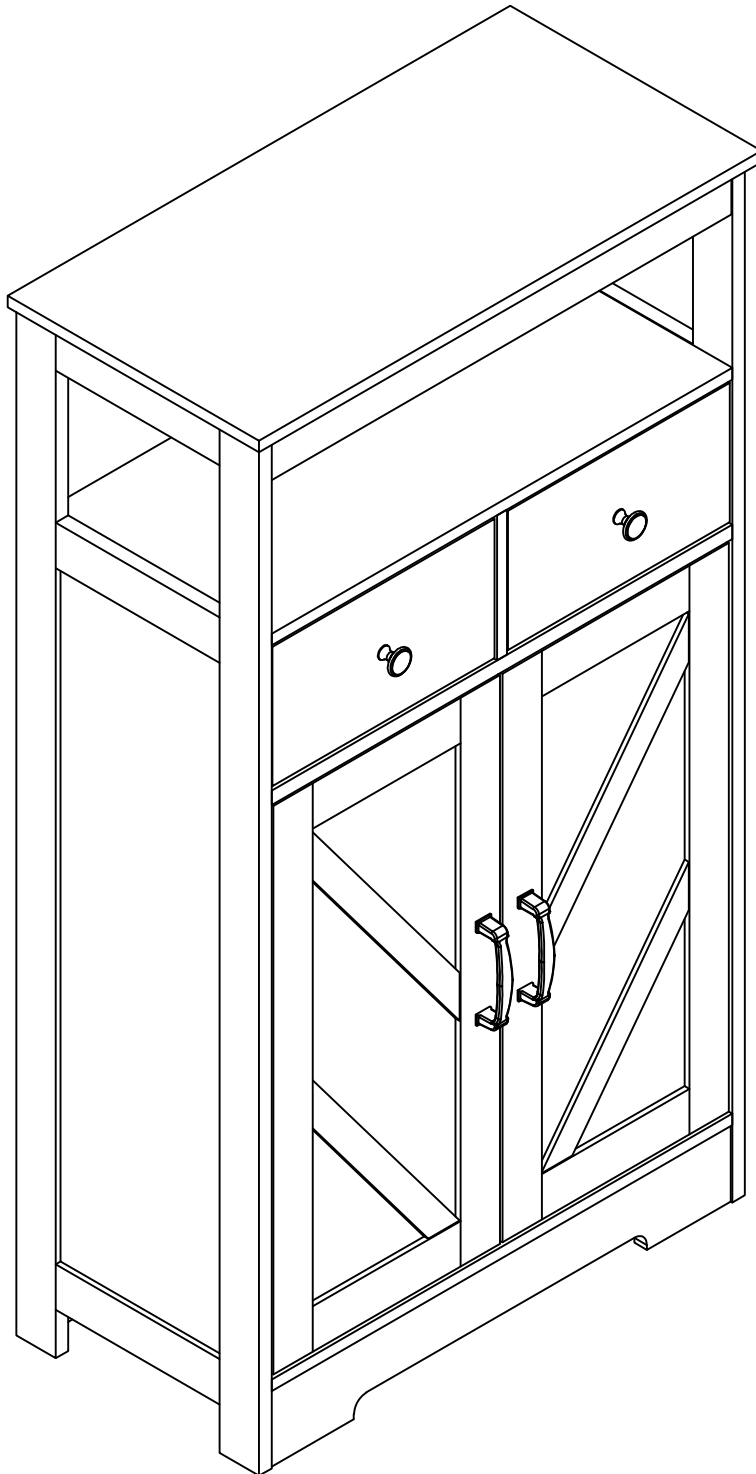

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.







3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

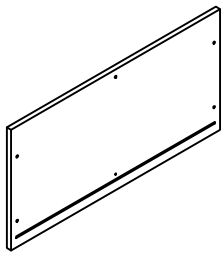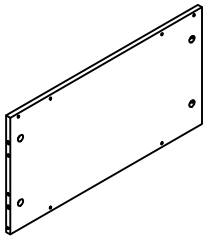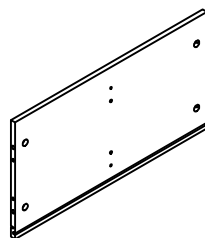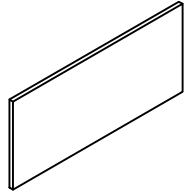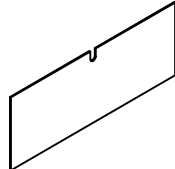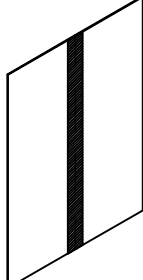A 	B 	C 		
Top Panel	Bottom Panel	Fixed Shelf Panel		
	1 PC	1 PC		
D 	E 	F 	G 	H 
Partition Panel	Front Top Rail	Front Center Rail	Front Foot Board	Rear Foot Board
1 PC	1 PC	1 PC	1 PC	1 PC
I 	J 			K 
Adjustable Shelf	Upper Back Panel			
1 PC	1 PC			
L 	M 	N 	O 	U 
Left Panel	Right Panel	Left Door	Right Door	Plastic Drawer Slide Set (Hole Pitch 224mm)
1 PC	1 PC	1 PC	1 PC	3 PCS
				V 
				Plastic Drawer Slide Set (Hole Pitch 192mm)
				1 PC
P 	Q 	R 	S 	T 
Drawer Front Panel	Drawer Left Panel	Drawer Right Panel	Drawer Back Panel	Drawer Bottom Panel
2 PCS	2 PCS	2 PCS	2 PCS	2 PCS

      
HARDWARE LIST
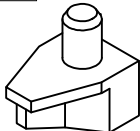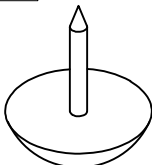
#1  M5*18mm Round Screw 4PCS (Extra 1)	#2  Ø6*30mm Wood Dowel 11PCS (Extra 2)	#3  Ø3.5*30mm Screw 9PCS (Extra 2)	#4  Ø6*35mm Cam-bolt 35PCS (Extra 3)	#5  Ø15*9mm Cam-lock 35PCS (Extra 3)
#6  Handle 2 PCS	#7  M4*20mm Round Head Bolt 6 PCS(Extra 1)	#8  Back Bracket 12 PCS (Extra 2)	#9  Ø3.5*15mm Screw 14 PCS (Extra 2)	#10  Ø3*12mm Screw 10 PCS(Extra 2)
#11  16*11*Ø5mm Shelf Holder 4 PCS (Extra 1)	#12  70*17*13mm Double Door Magnet 1 PC	#13  30*22*1mm Door Small Plate 2 PCS	#14  Handle 2 PCS	#15  Nail Pad 4PCS (Extra 1)
#16  Beauty Stickers 35 PCS (Extra 2)	#17  Safety Strap Kit 1 SET			

 
2-Person Assembly

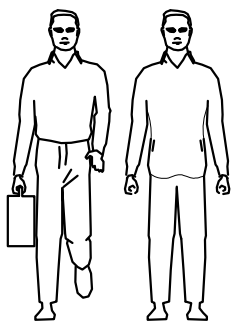


ASSEMBLY OVERVIEW

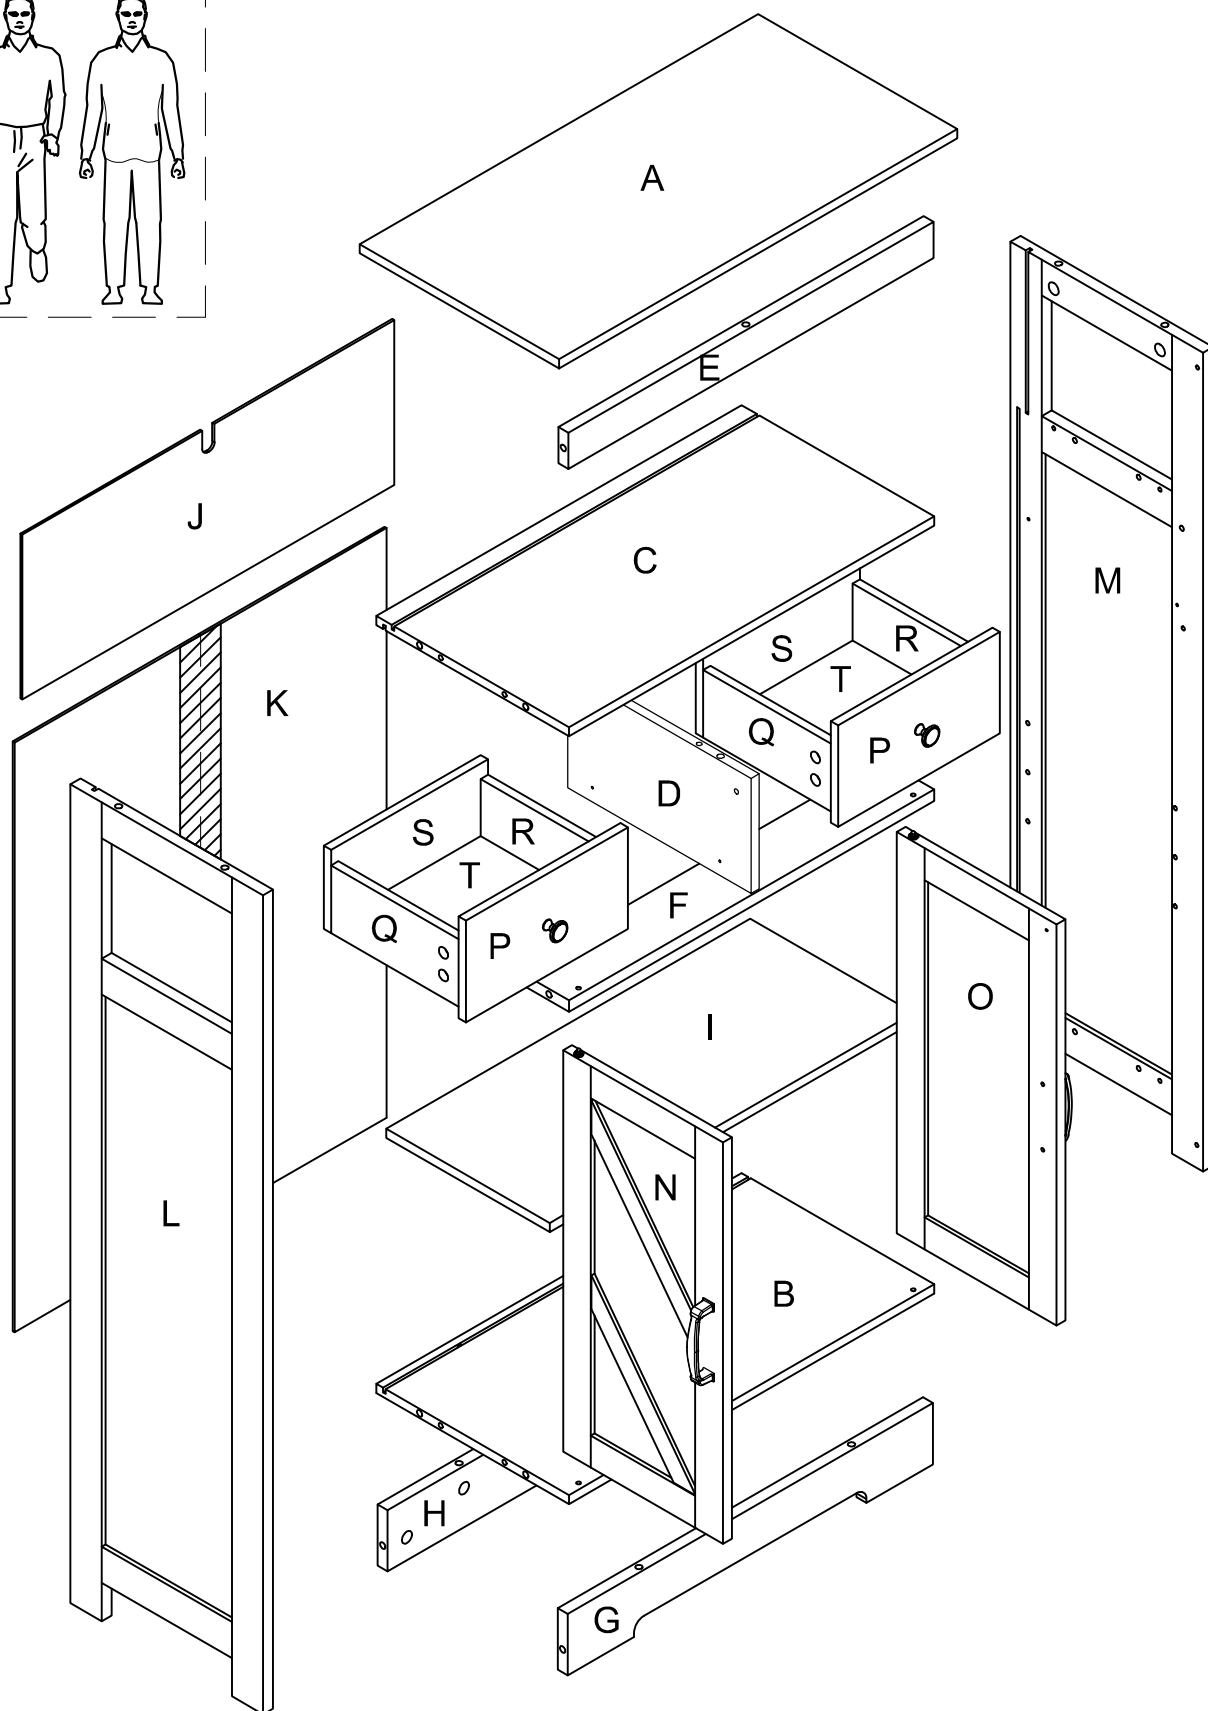 

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT

 


CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

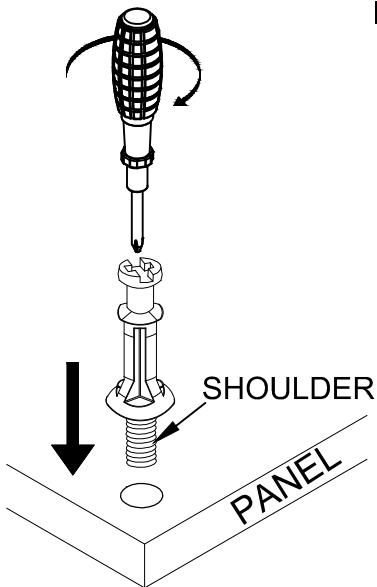 

 Place Cam-bolt on pre-drilled hole and screw in vertically

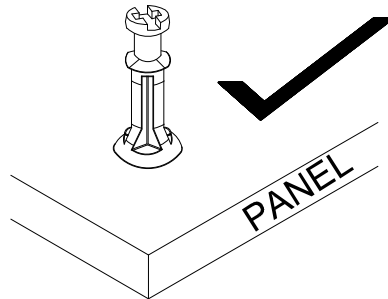

 
Shoulder is flushed (on the same level) with the panel.

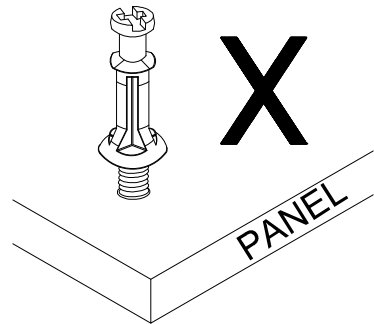

Shoulder is above the panel.


Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

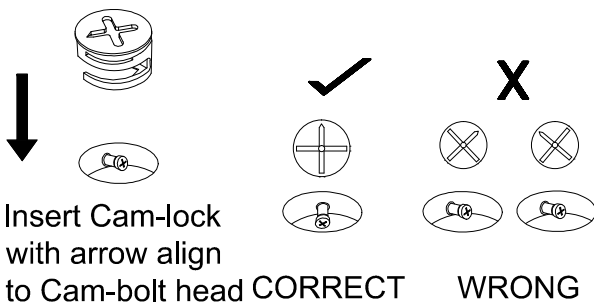




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK


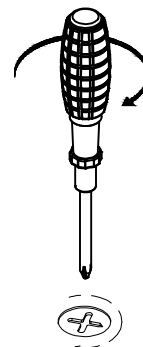


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

   Step 1.

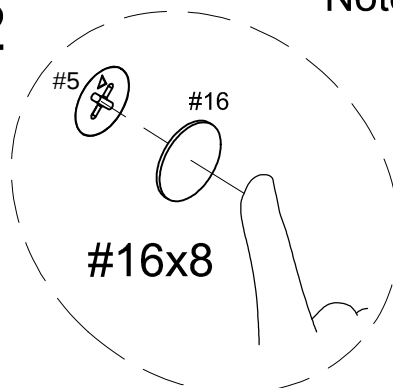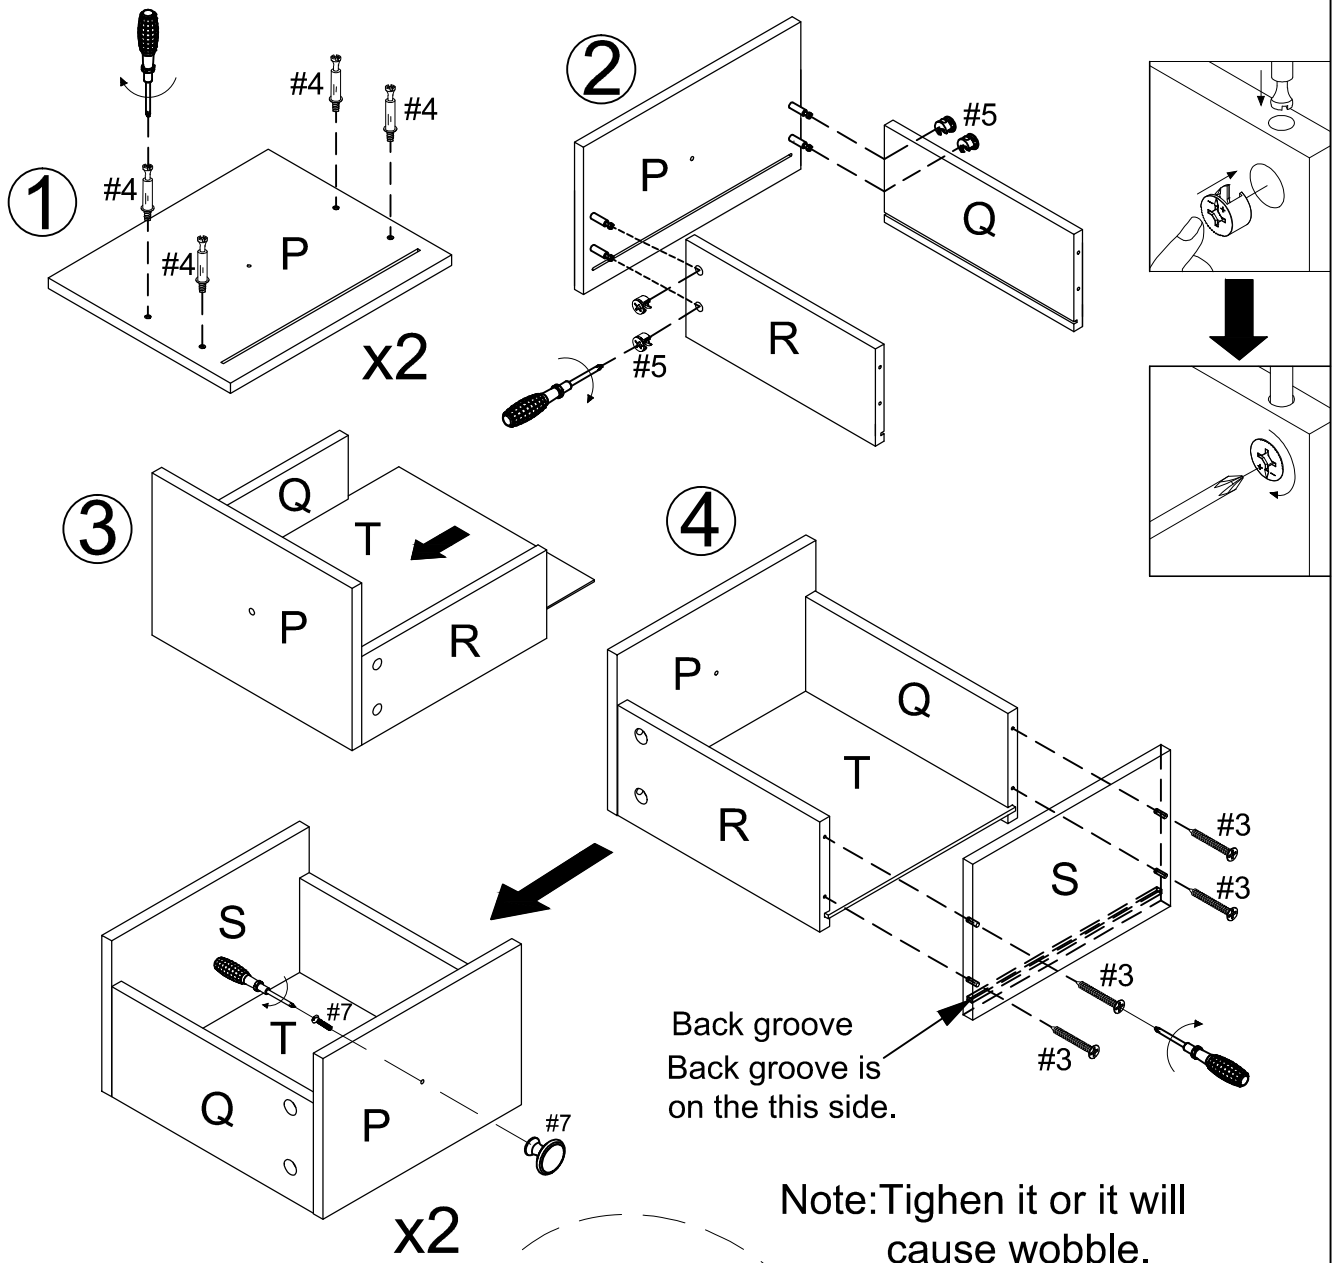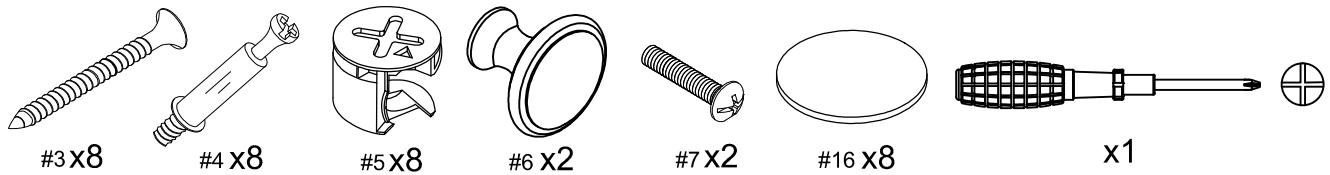

  
Step 2.

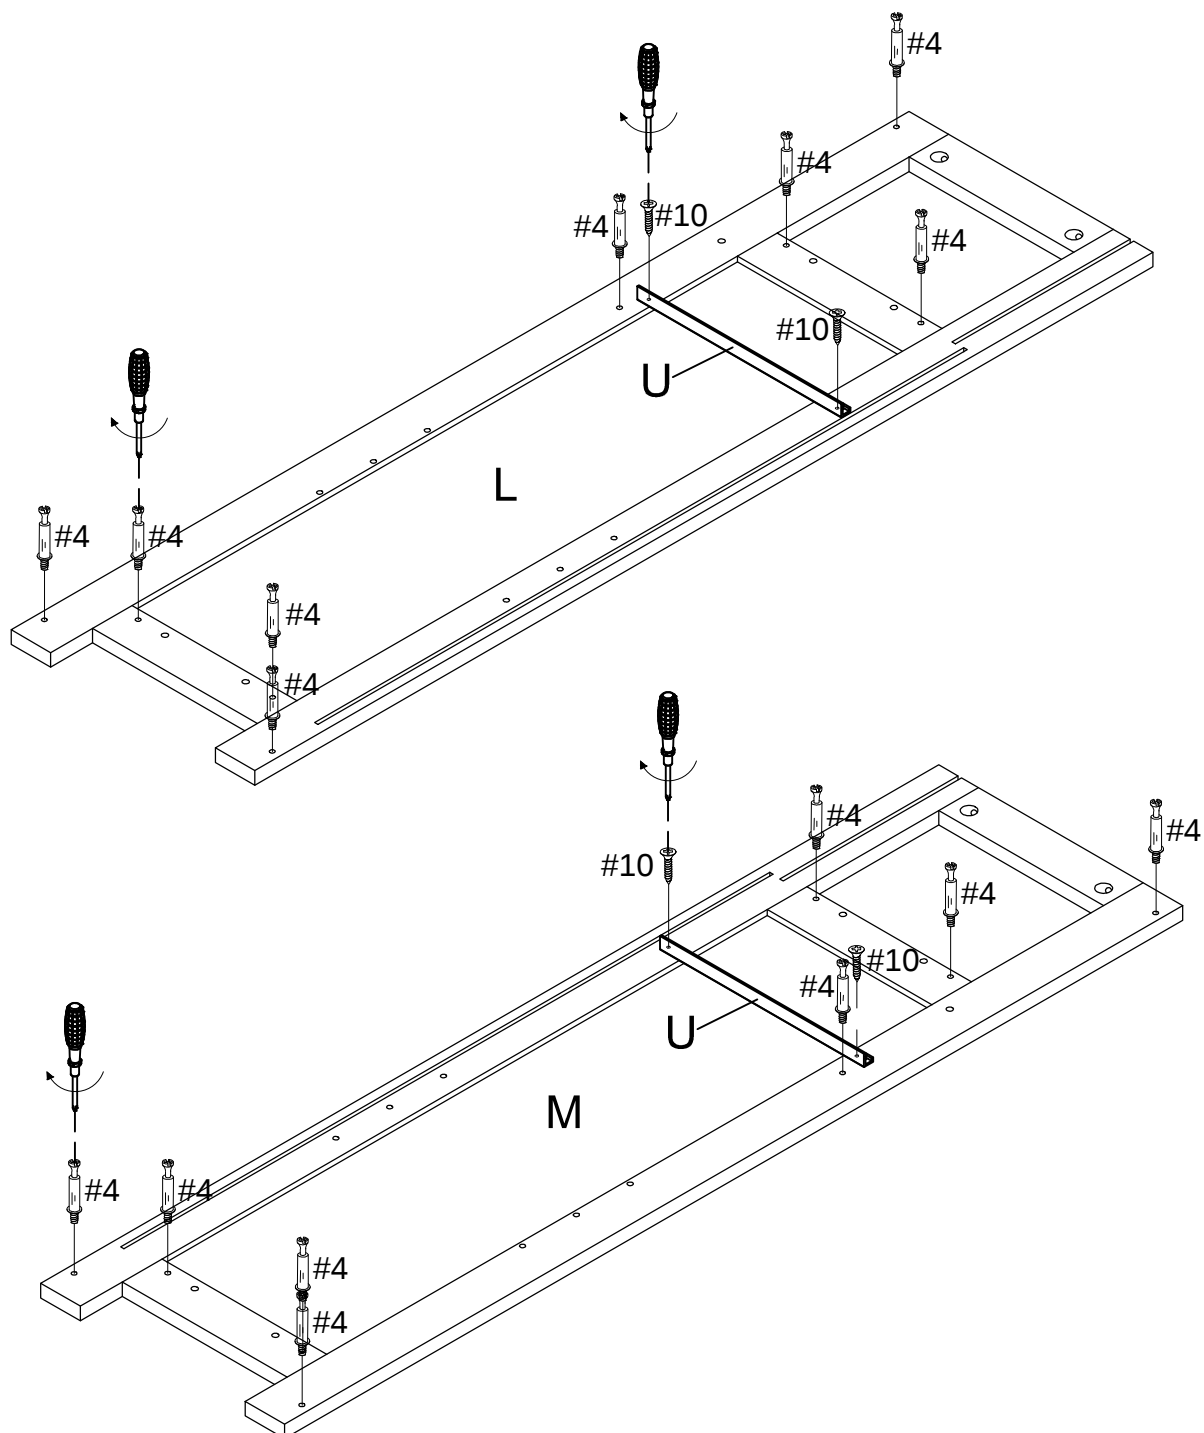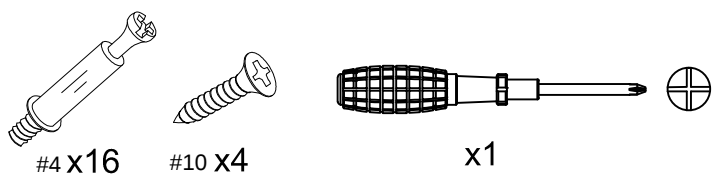


Step 3.




#10 x4

 


x1

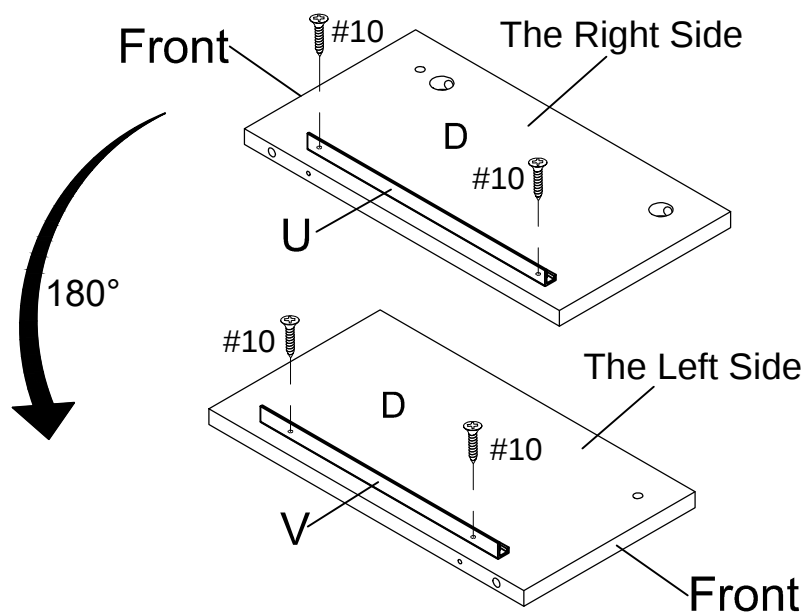 

 
Step 4.

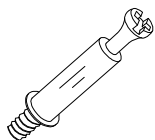



#4 x2

 

x1


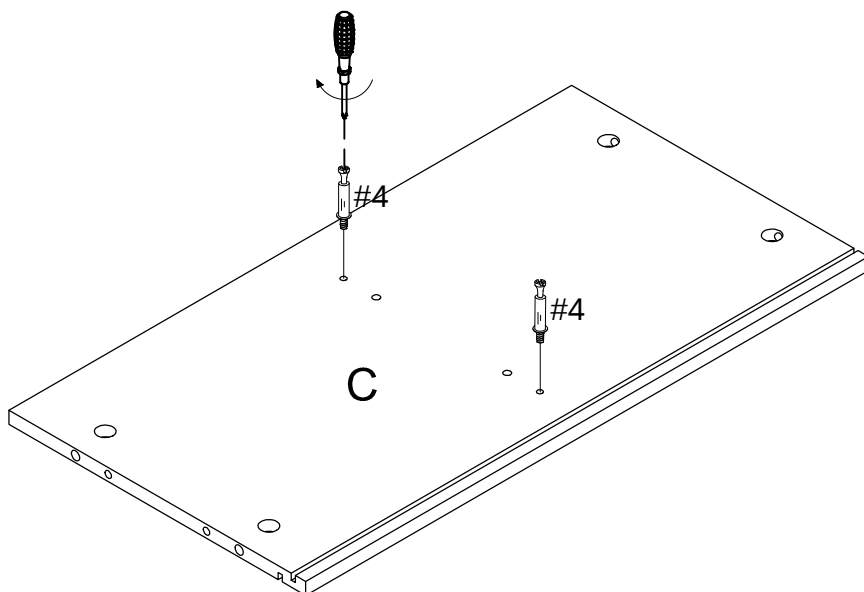 


  Step 5.

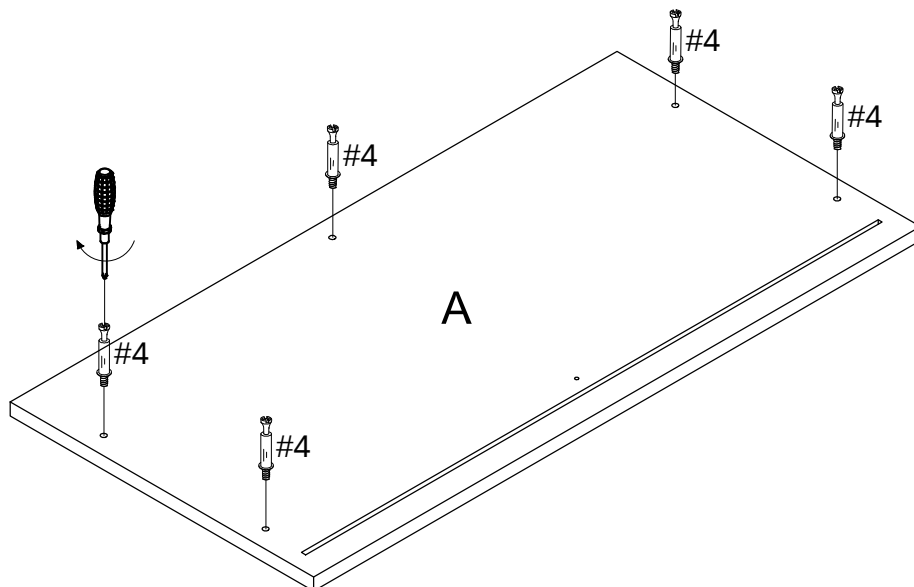
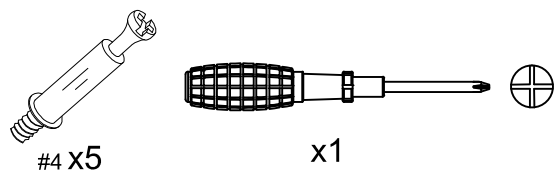


Step 6.





#17	(#17-A)	(#17-C)
Safety Strap Kit	72*24*1.5mm Angel Iron	Ø3.5*12mm Short Screw
1 SET	1 PC	1 PC

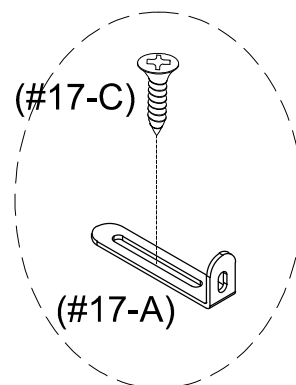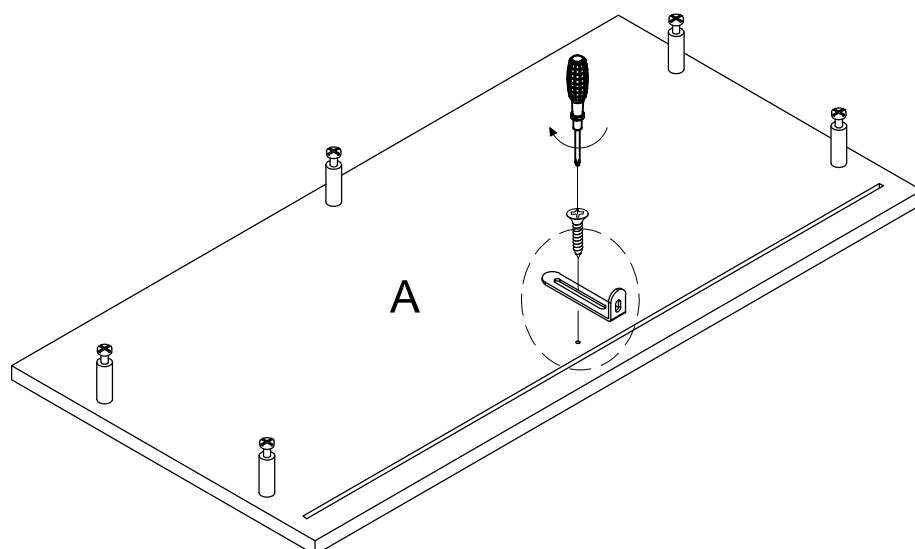  

 
 
Step 7.

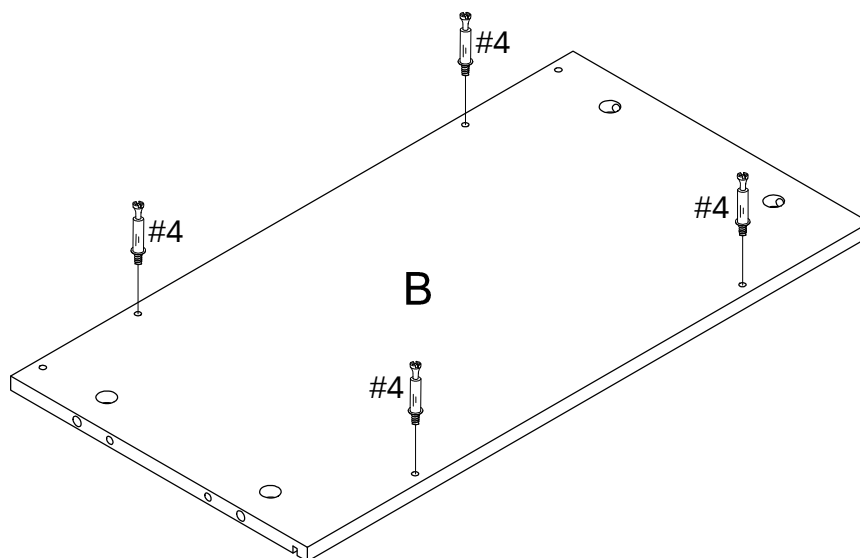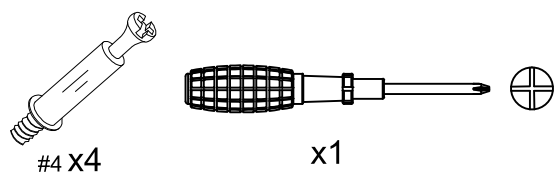

   
 
Step 8.

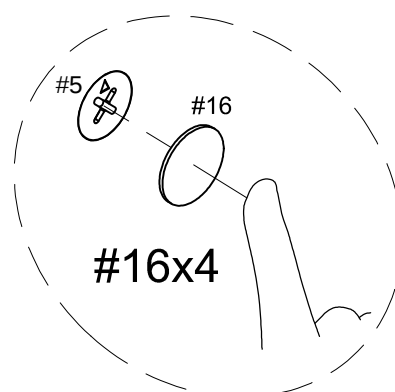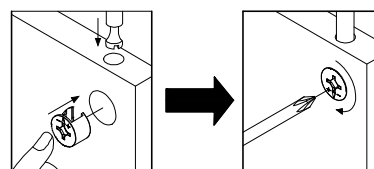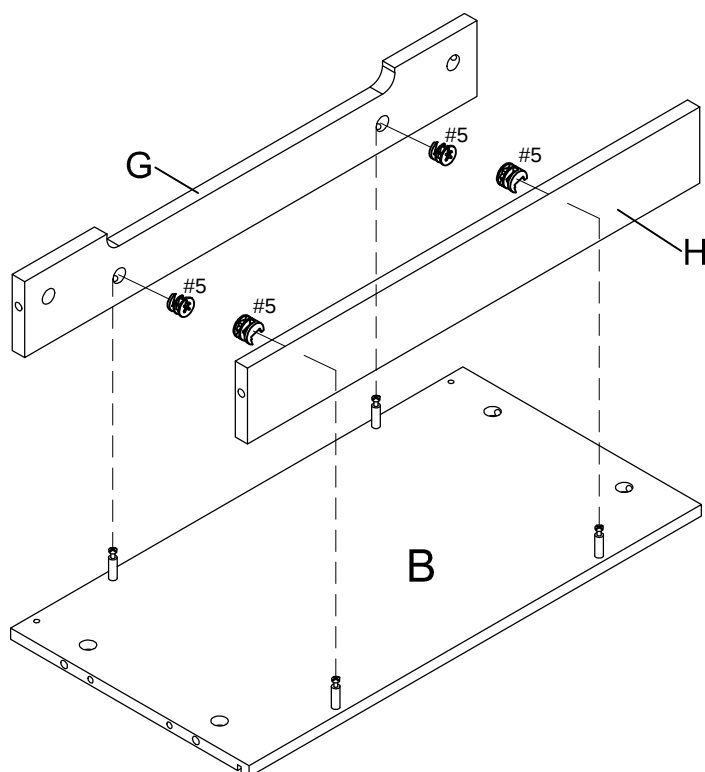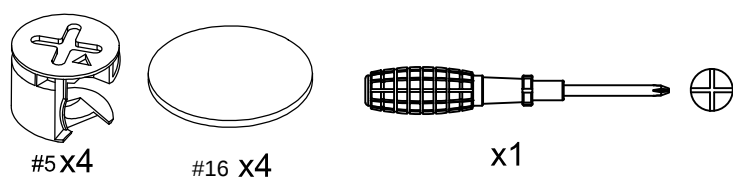

 
 
Step 9.

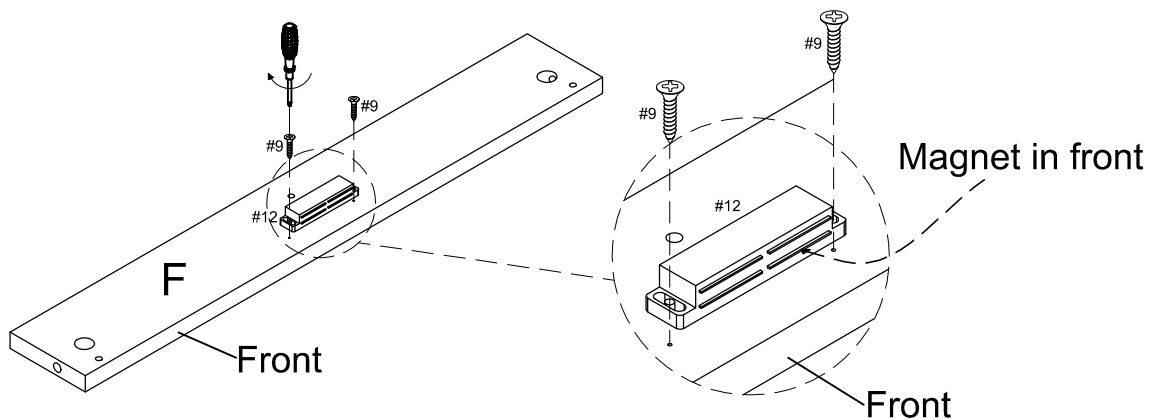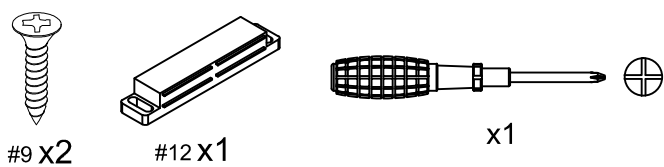

  
Step 10.

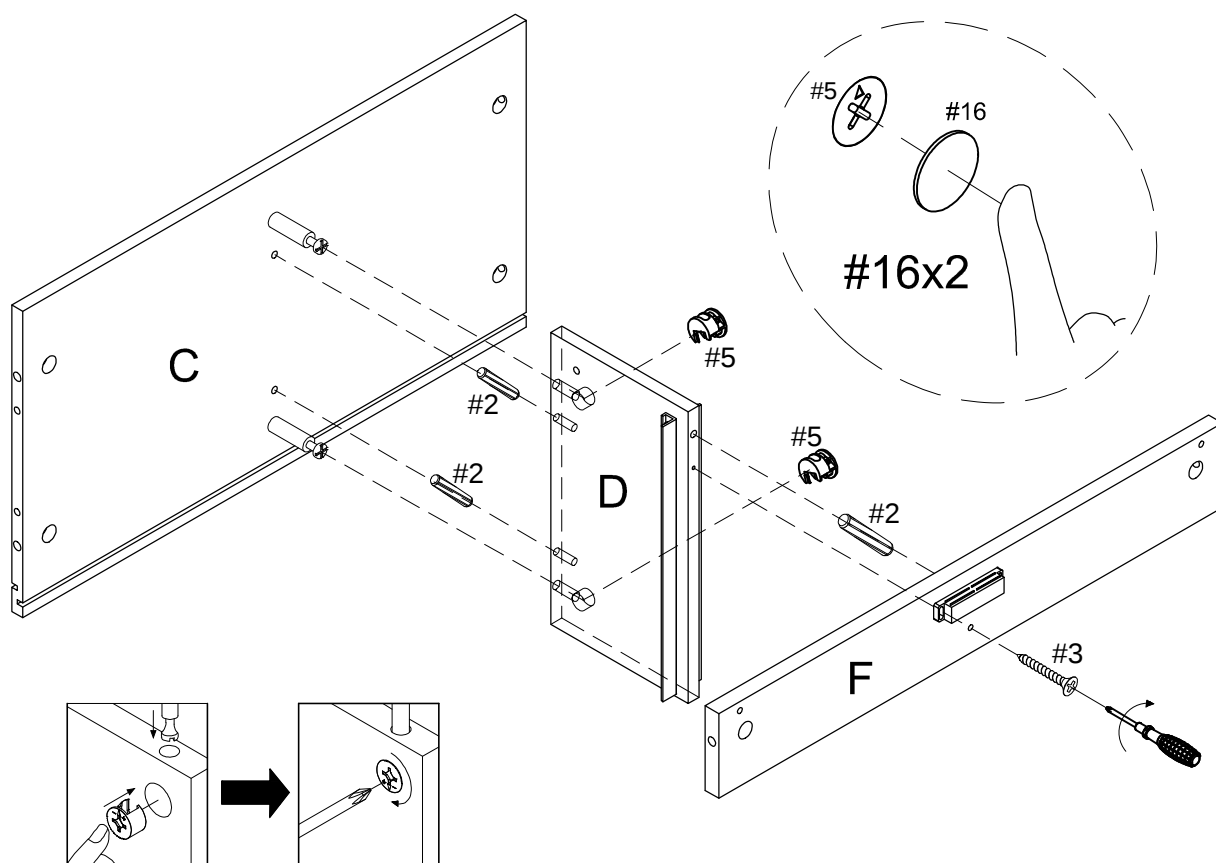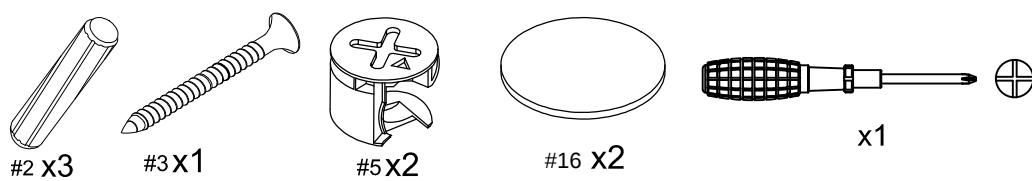

 
 
Step 11.

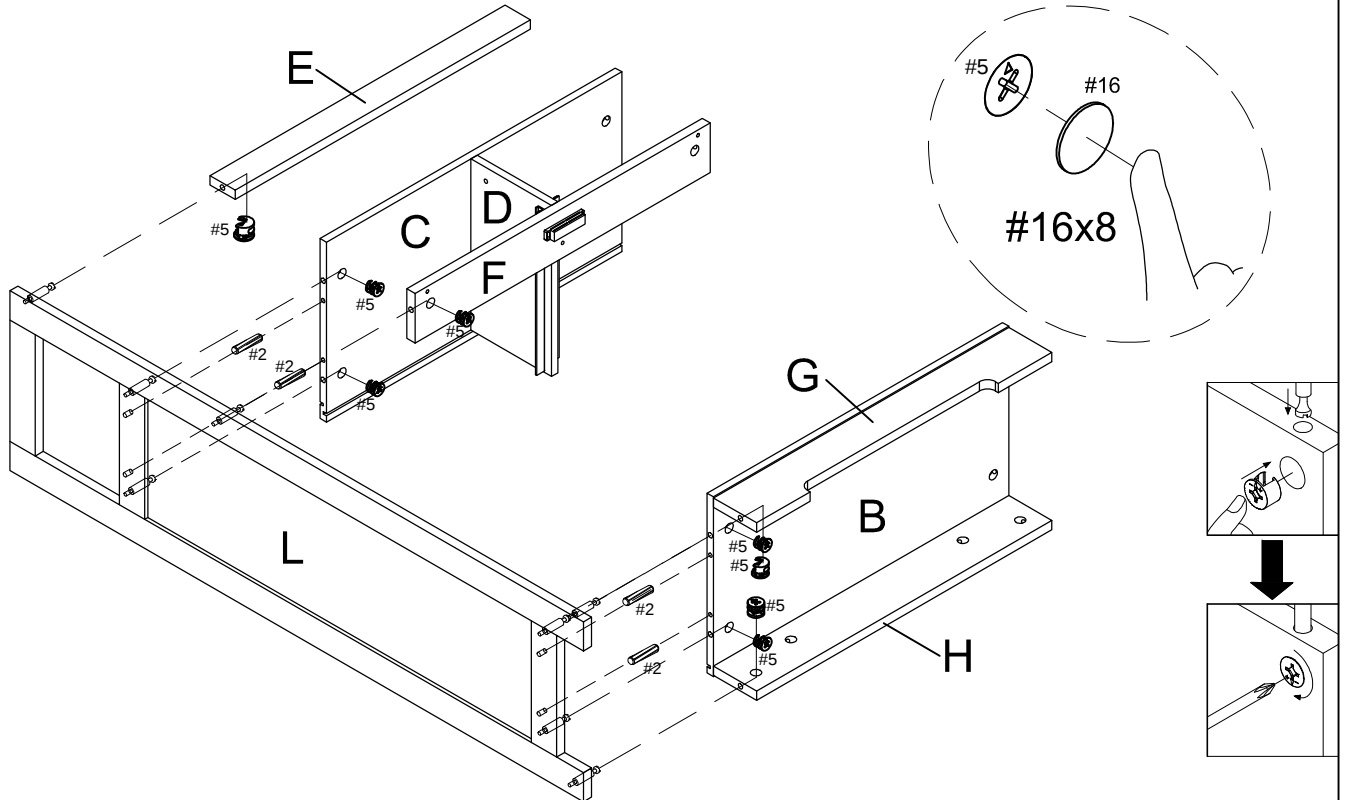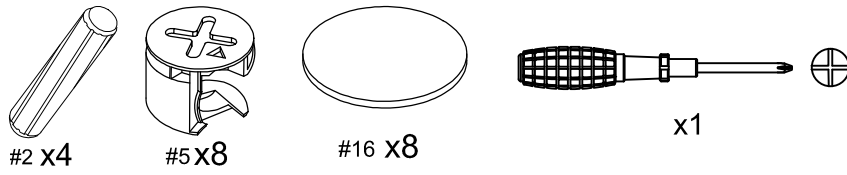




 
Step 12.

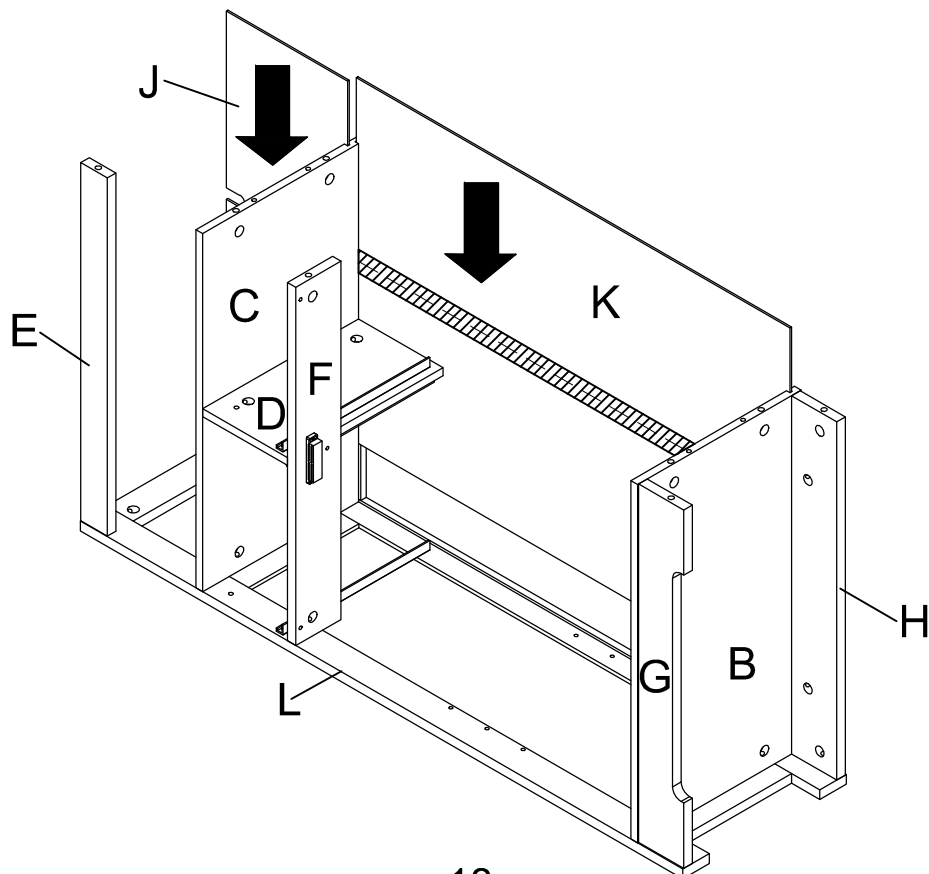

  
Step 13.

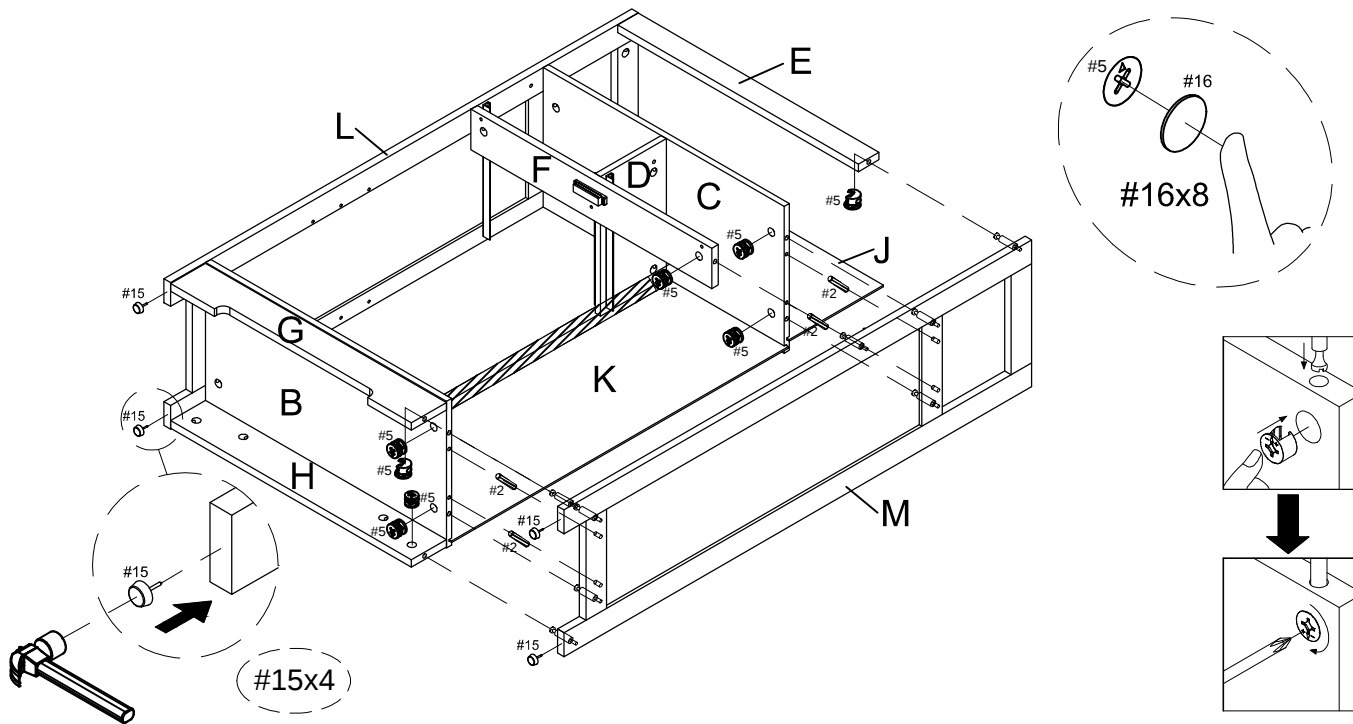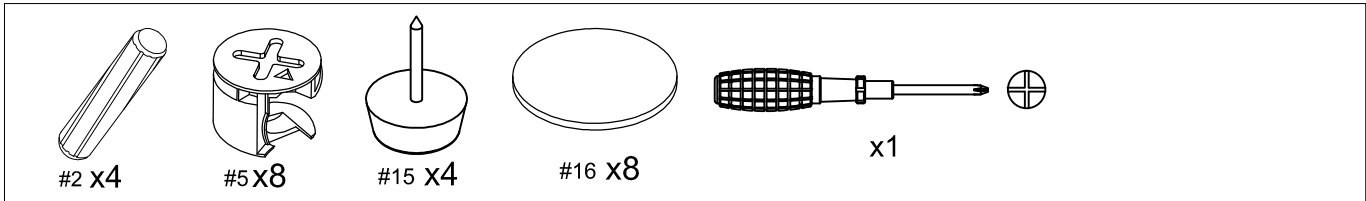

    
Step 14.

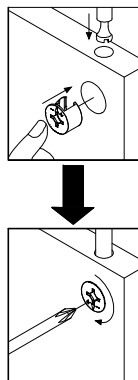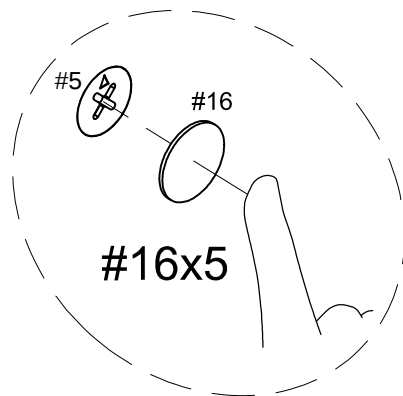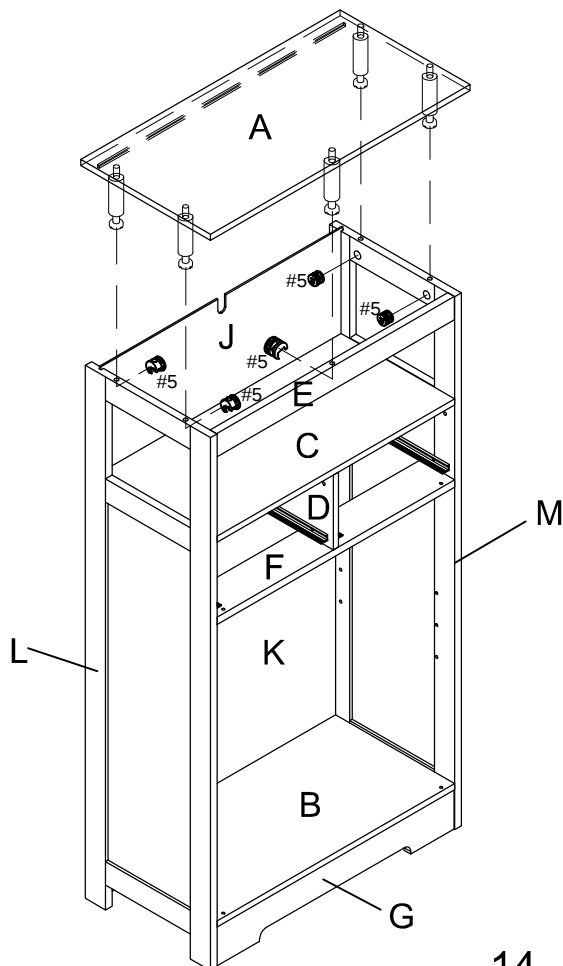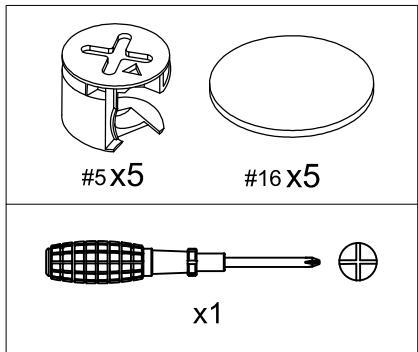

 
Step 15.

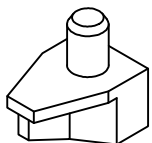

#11 x4

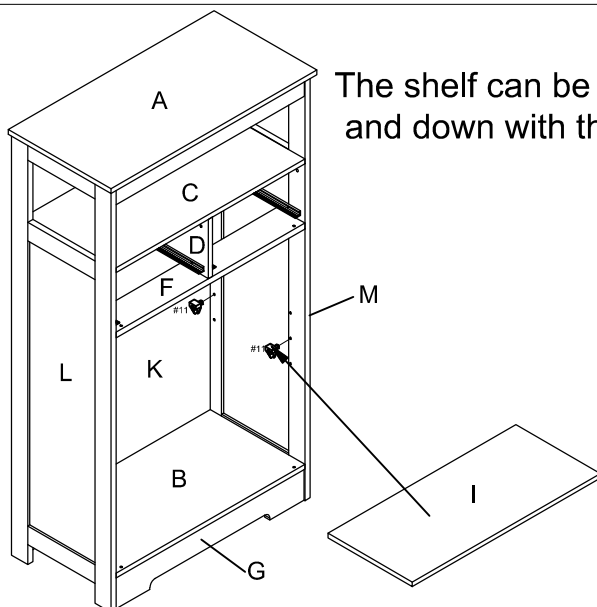 

 
The shelf can be adjusted up and down with three heights.

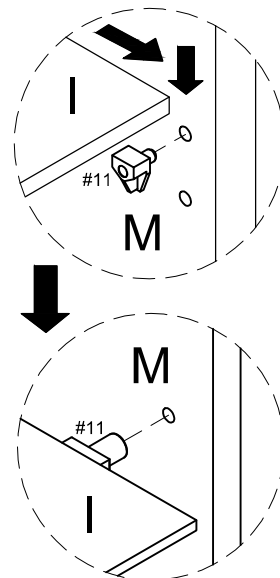


Step 16.





#10 x2

 



#13 x2

 






x1

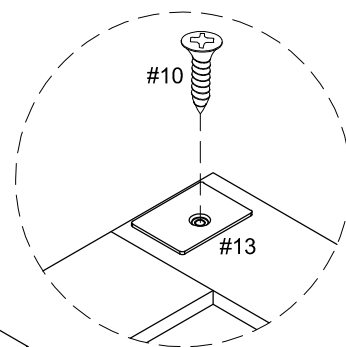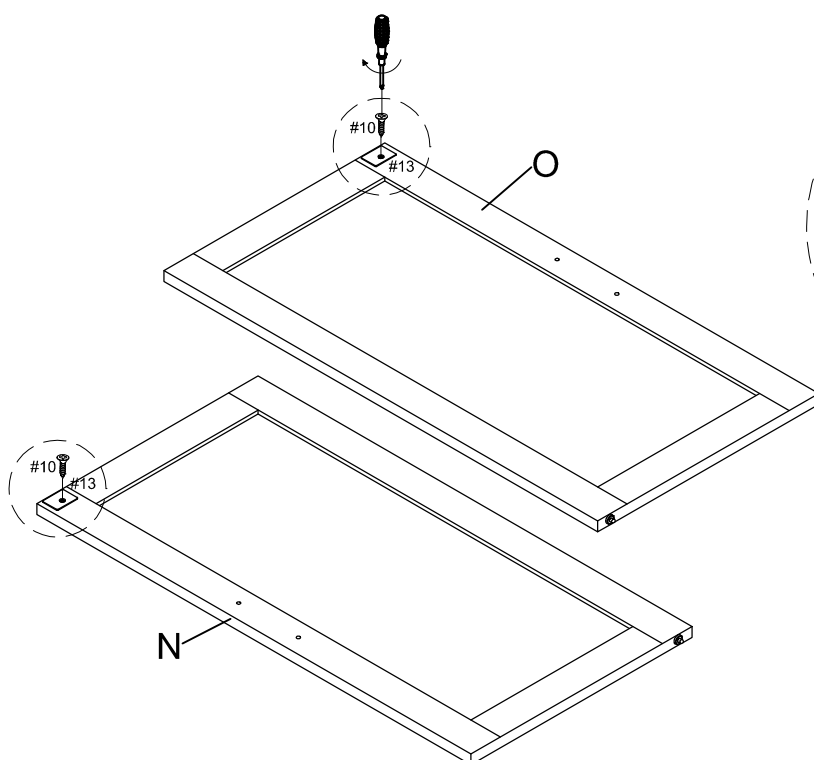  

  
Step 17.

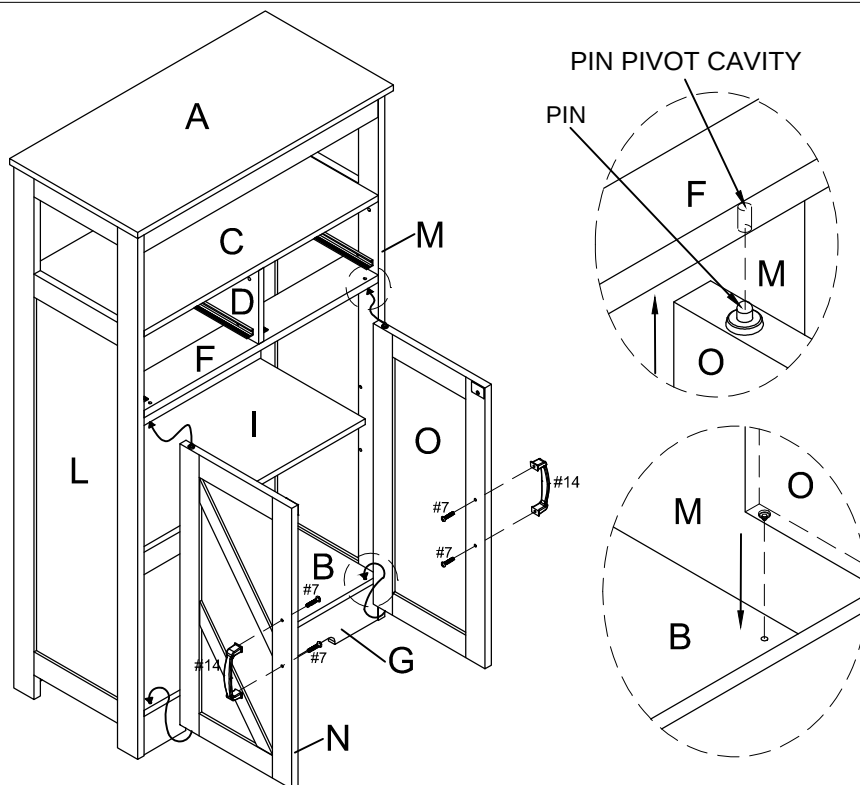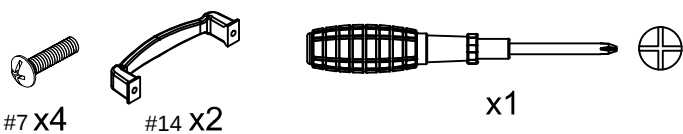

     
Step 18.

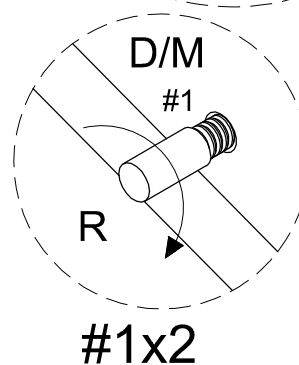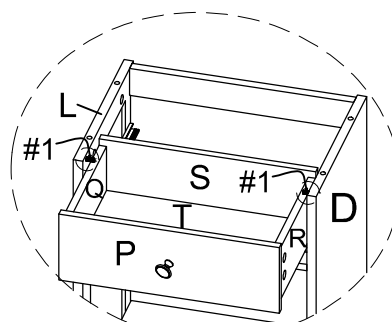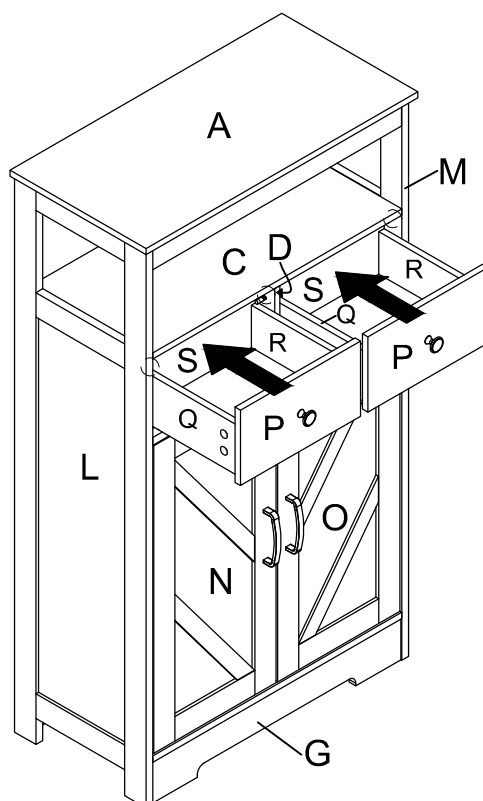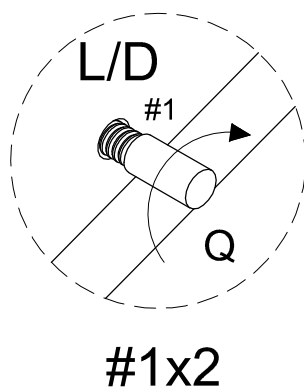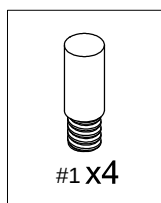

 
Step 19.




#8 x12

 



#9 x12

 


x1

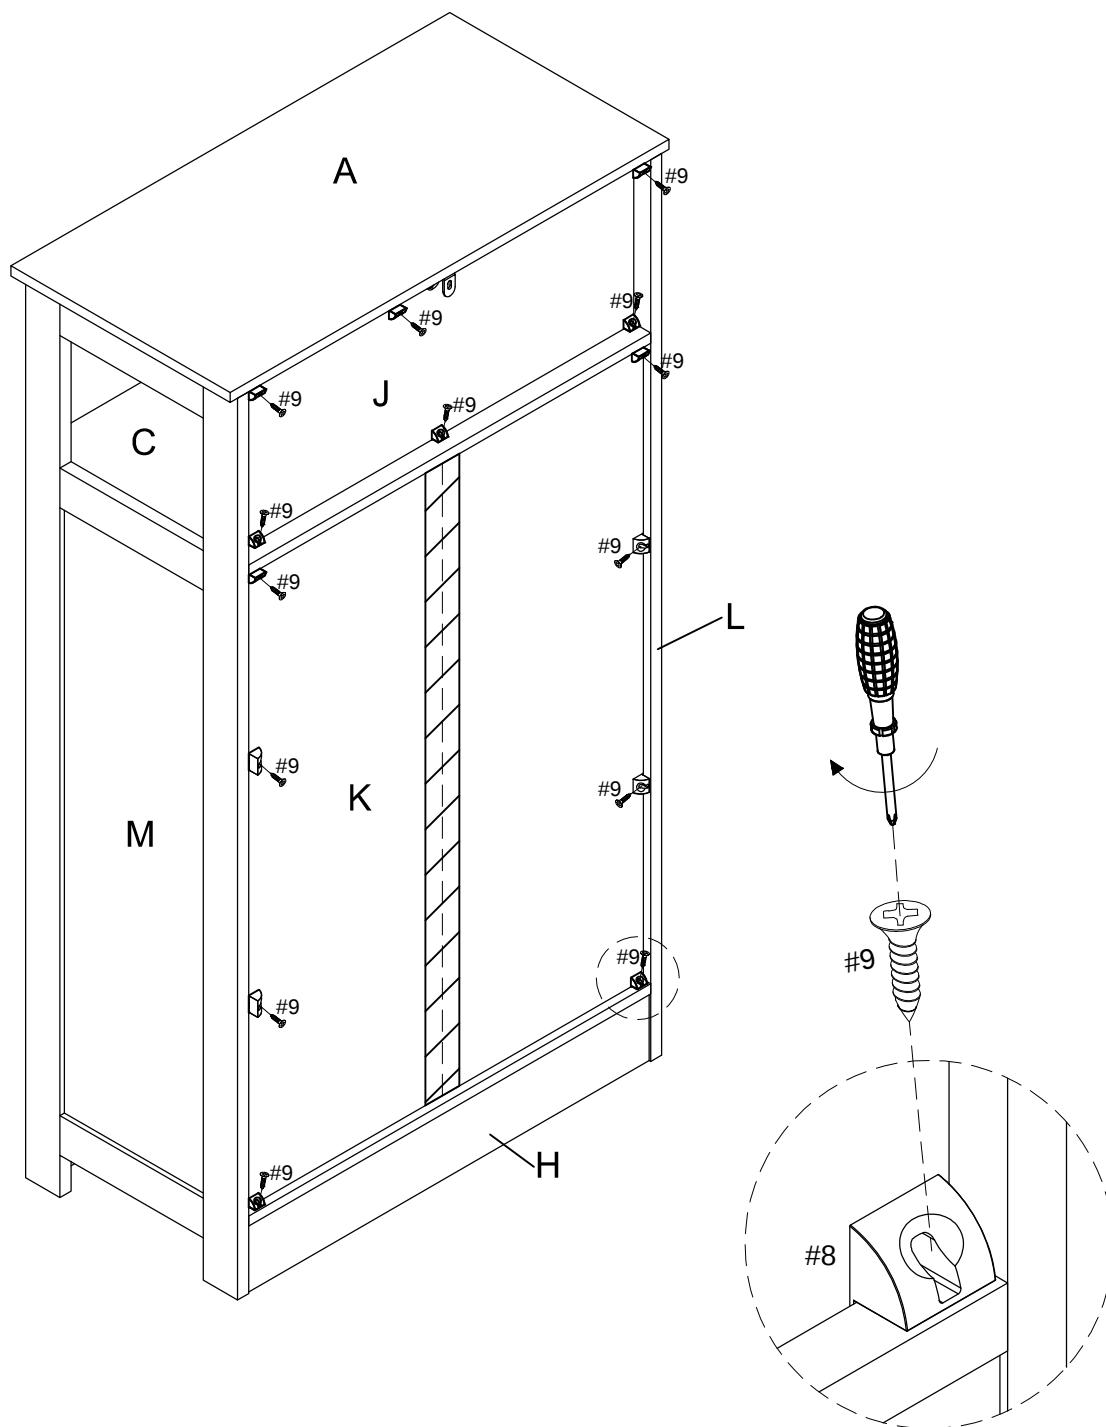 

  Step 20.
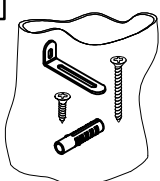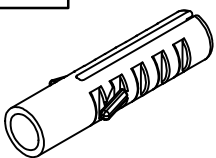
#17 	#17-B 	#17-D 
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Ø4*40mm Long Screw 1 PC

 Safety strap kit (#17) must be installed to prevent tipping, damage and/or injury.

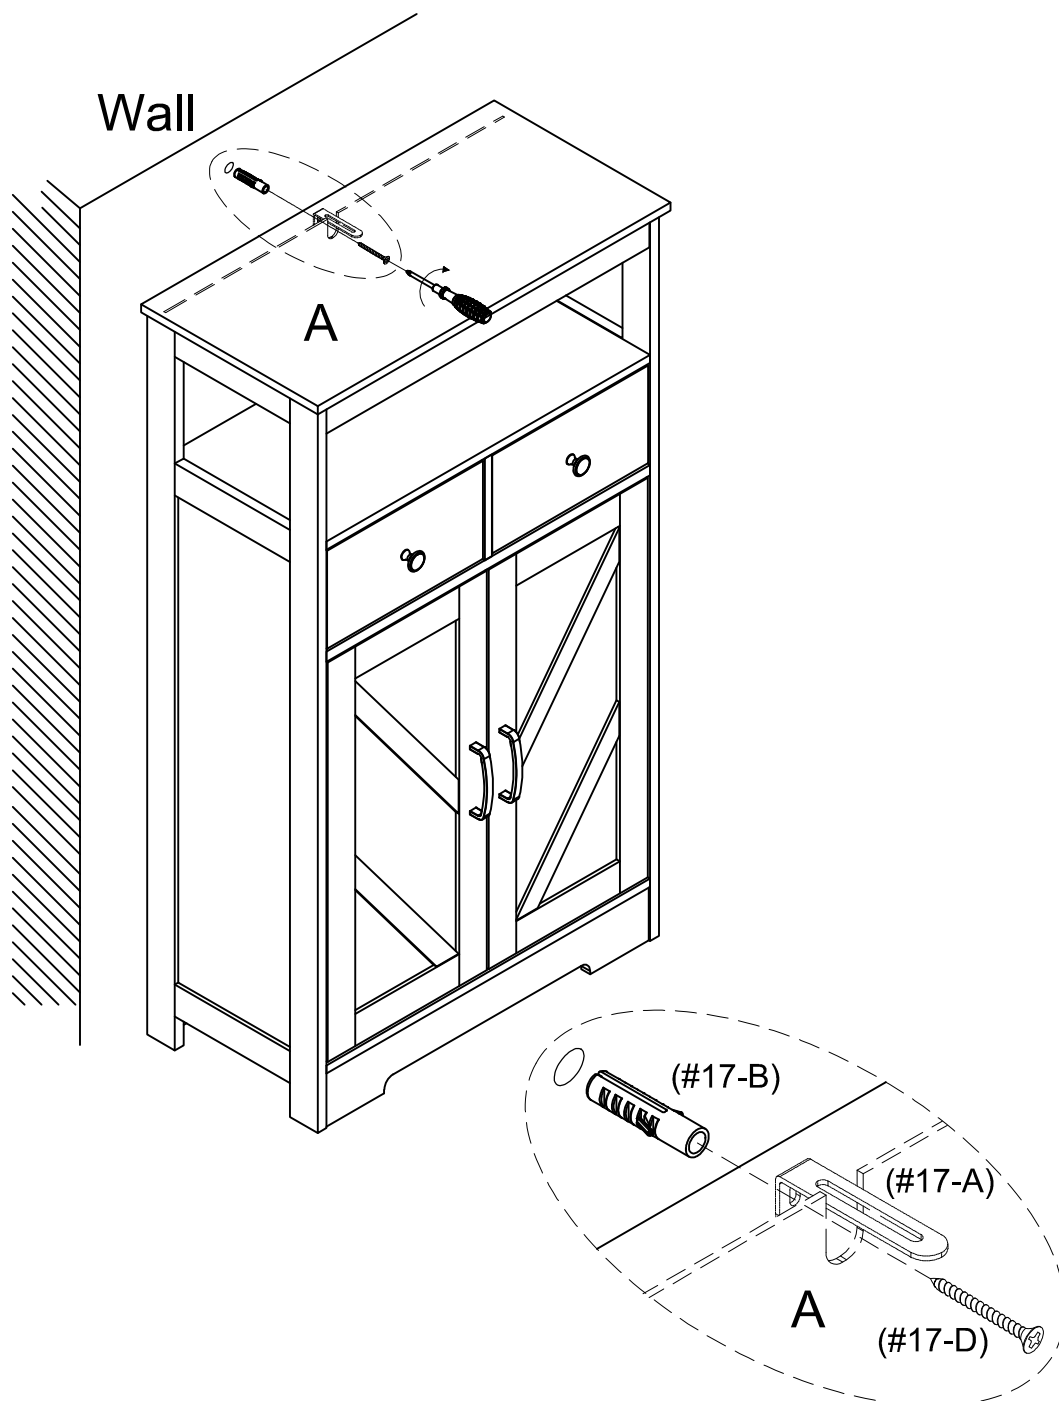

The assembly of the cabinet is complete.