 


SHADOW BUSTER Dartboard Illuminator

TOOLS REQUIRED

- Pencil or marker
- Phillips screwdriver
- Power drill with a 1/16" (0.0625 inch) drill bit
- 4 AA batteries (not included)
- 4 mounting screws (included)

 
 
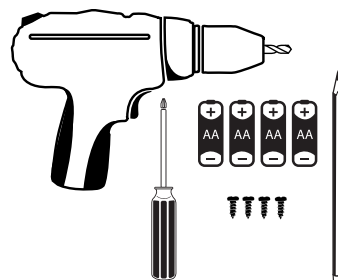 


UNPACKING THE SHADOW BUSTER

Save the original box, all packing material, and the receipt after unpacking the Shadow Buster. These items will be necessary if you need to return the product for service. The Shadow Buster unit may have a clear protective film attached to prevent scratching during shipping. To remove, simply lift an edge, slowly peel off, and discard.

MOUNTING (PHYSICAL INSTALLATION)

The Shadow Buster mounts easily on top of most flat-topped wooden dartboard cabinets by securing to the top center of the cabinet using four screws through the light's metal hinges. Align the Shadow Buster as you would like it to be secured with the light pods facing downward. Mark the locations of the screw holes with a pencil or a marker on the cabinet (Figure A). Pre-drilling pilot holes is necessary when using the provided screws (Figure B). It can be helpful to mark the drill bit with a piece of tape at the desired depth in order to avoid accidentally drilling too far. Drill a pilot hole for each screw. Tighten the screws fully into the pre-drilled holes to attach the hinges onto the cabinet securely (Figure C). Once mounted, adjust the light heads to align the perfect illumination onto your dartboard.

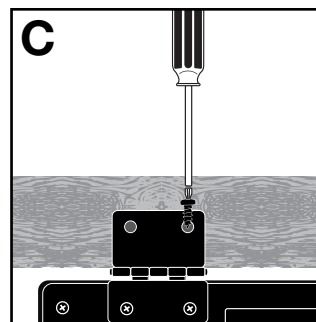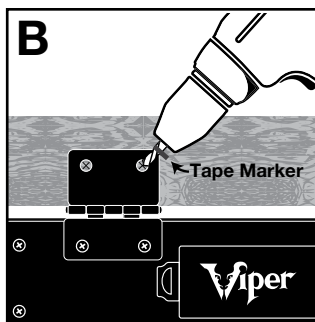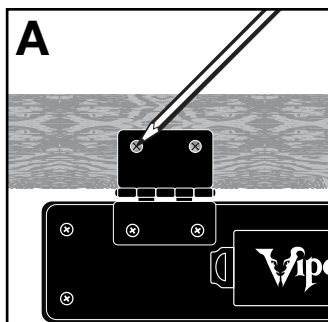

POWER INSTALLATION

The light is powered by 4 AA batteries (not included). Open the two battery covers at the top and insert 4 AA batteries following the + and - guides. A 5-volt 1000 mA adapter with positive outer may be used instead of batteries (Not included). A compatible adapter is available from GLD Products (Item #42-9987).



CAUTION: The power adapter is not a battery charging device.
Do not plug in the power adapter when the light is turned on.
Remove all the batteries before plugging in the power supply.

SHADOW BUSTER

Dartboard Illuminator, cont'd

OPERATION INSTRUCTIONS

 
 
The Shadow Buster's hinges allow it to be flipped up to rest on top of the cabinet when not in use.

Slide the power switch to turn the light on and off

Adjust the repositionable light pods to your preference.


Tighten the screws on either side of the light pods to lock the pod in place.

Insert optional power adapter into the adapter jack.

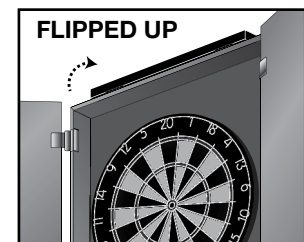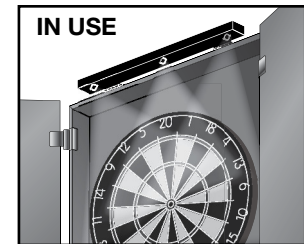

SAFETY PRECAUTIONS

 1. The Shadow Buster is not intended for children under the age of 12.
2. The Shadow Buster must only be used with the recommended power adapter or 4 AA batteries.
3. The Shadow Buster is not a toy.

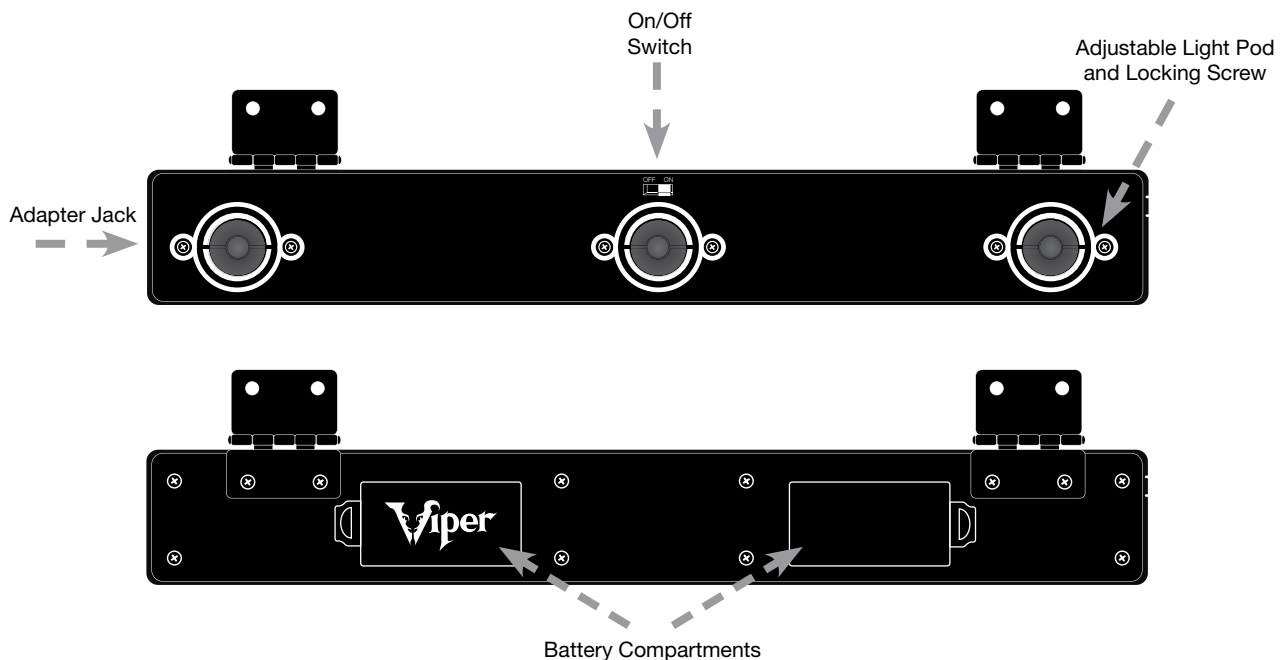

Please call or consult the GLD website, gldproducts.com, to order the 5V 1000ma Positive Outer Power Adapter, #42-9987.

WARRANTY: Great Lakes Dart Mfg, Inc. warrants this product to be free of defects in material and workmanship for a period of 90 days by the original purchaser of the unit. This warranty covers manufacturers defects only, not normal wear and tear. This warranty does not apply to products damaged through accidents, misuse, or neglect. Your warranty is void if service is attempted by anyone other than the manufacturer or authorized agent. Great Lakes Dart Mfg., Inc. reserves the right to make an inspection and determination of all warranty claims. For questions concerning products of Great Lakes Dart Mfg., Inc., please call our Customer Service Representatives at 1-800-225-7593.