 
 


 
 
 
 

 


 

 

 
USER MANUAL

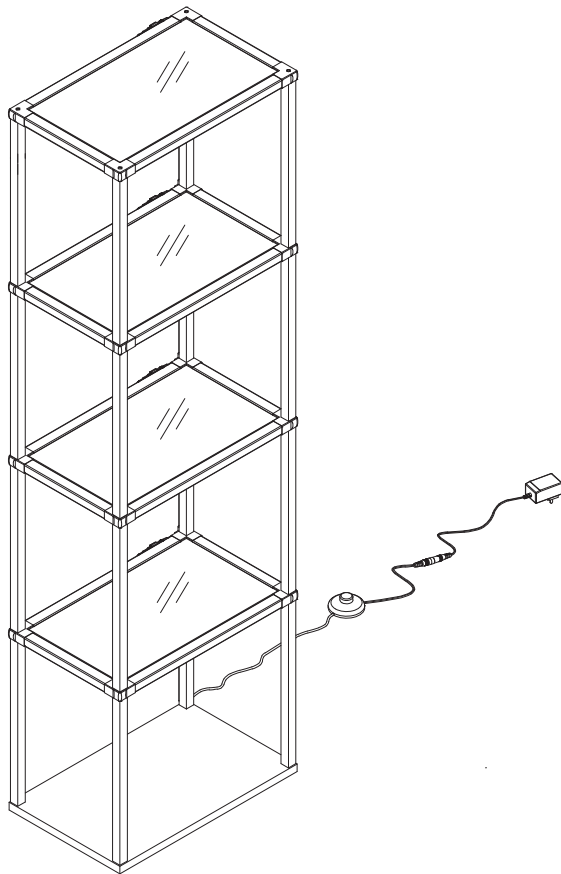

Disassemble Diagram

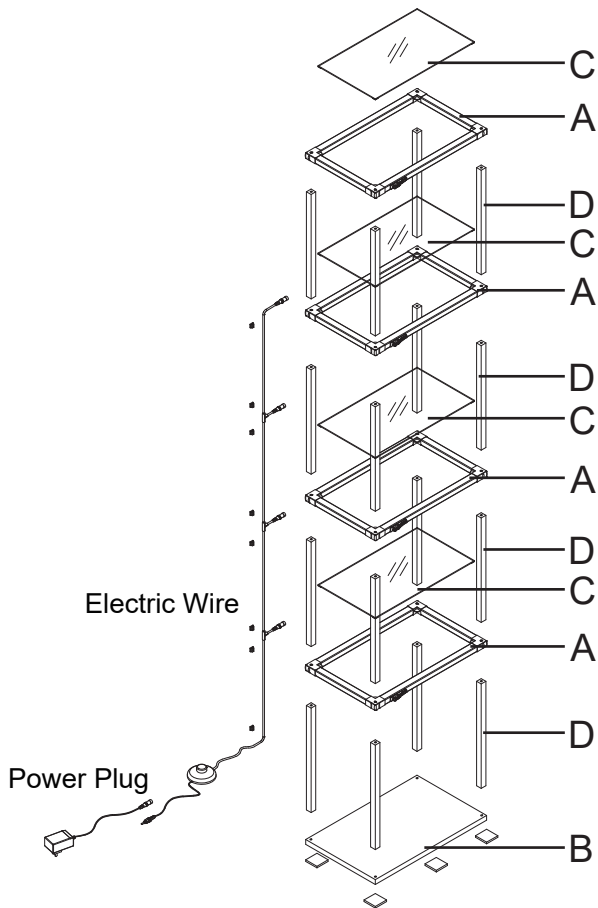


 


Product Lists


<p>A x4</p> 	<p>B x1</p> 	<p>C x4</p> 	<p>D x16</p> 
<p>x1</p>  <p>Electric Wire</p>	<p>x1</p>  <p>Power Plug</p>	<p>x1</p>  <p>Remote control</p>	<p>x8</p>  <p>Clip</p>
<p>x5</p>  <p>Rubber Mat</p> <p>1Spare</p>	<p>x1</p>  <p>Wrench</p>	<p>x1</p>  <p>Torque</p>	<p>1 x9</p>  <p>M6*35</p> <p>1Spare</p>
<p>2 x14</p>  <p>M6*58</p> <p>2 Spares</p>			

Installation Steps


1


x1	
① x4	
D x4	
B x1	

Pay attention to the counterbore facing downwards.

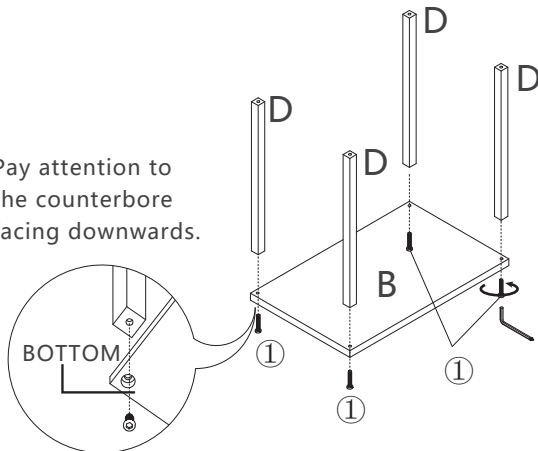

2


 
② x4	
---------	---

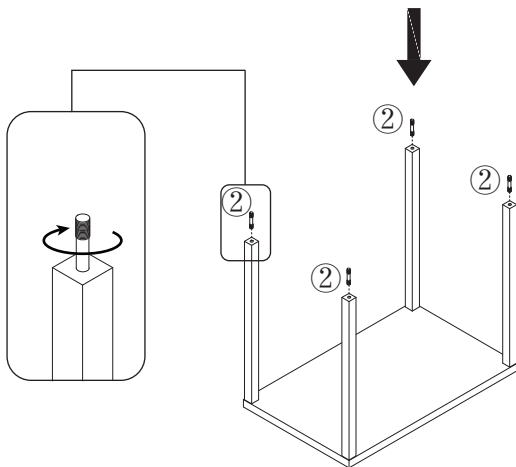 


Installation Steps

3

Pay attention to inserting part D into the groove of part A.

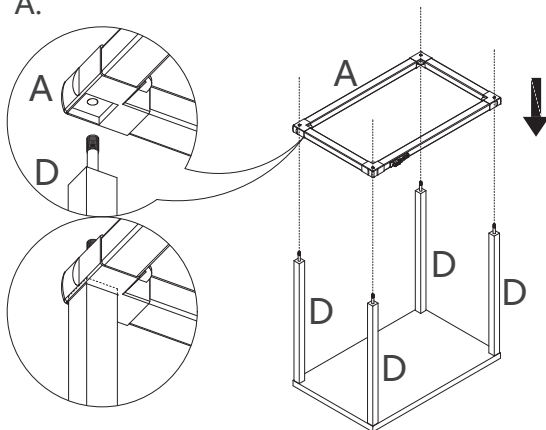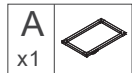


4

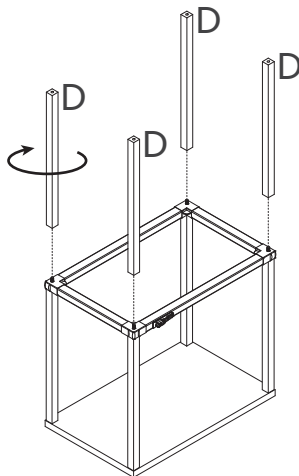 

Installation Steps

5


D
x4

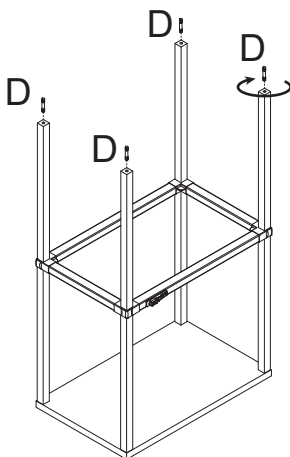

6



Pay attention to inserting part D into the groove of part A.

A
x1


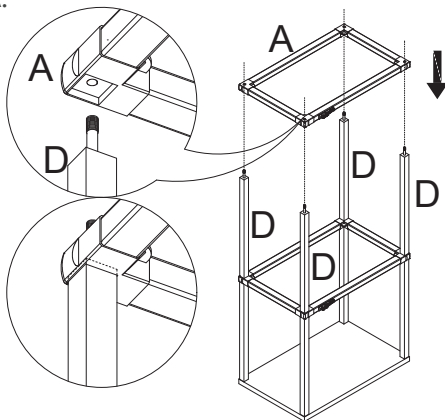


Installation Steps

7

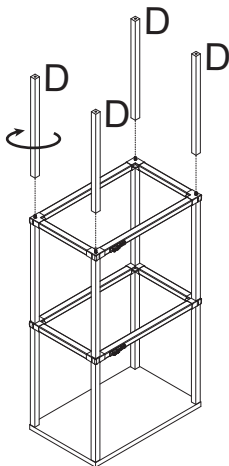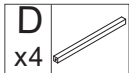





8

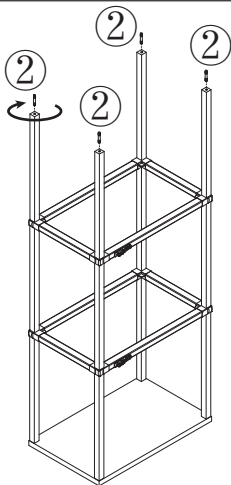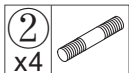

Installation Steps


9

Pay attention to inserting part D into the groove of part A.

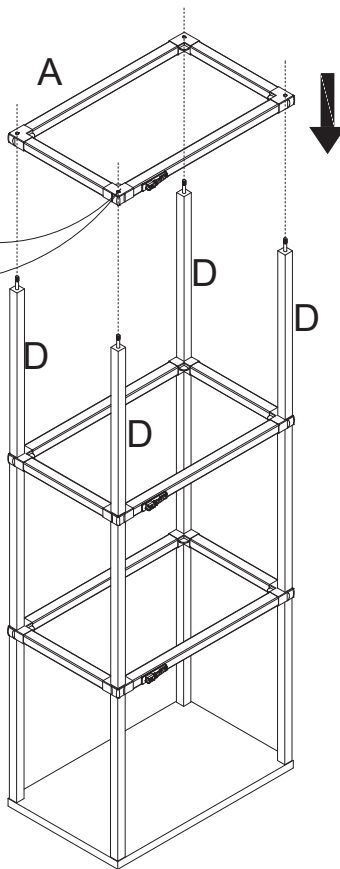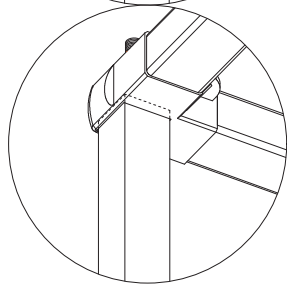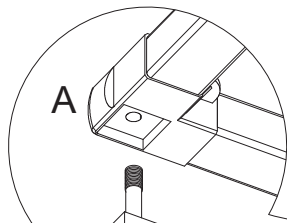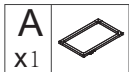

Installation Steps

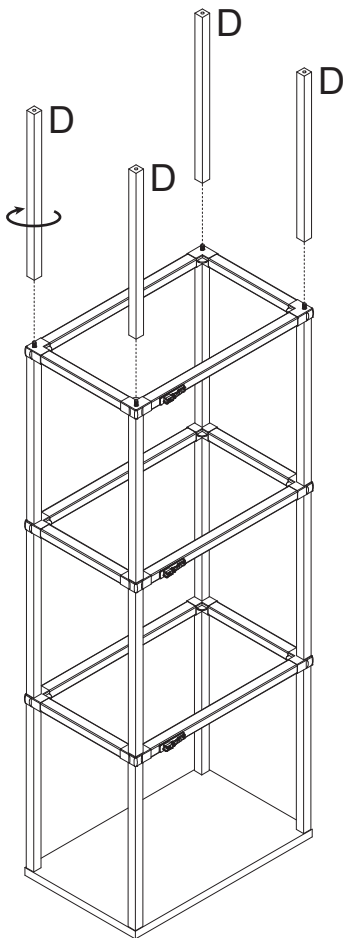


10






Installation Steps

11


Pay attention to inserting part D into the groove of part A.

A	
x1	
①	
x4	
x1	

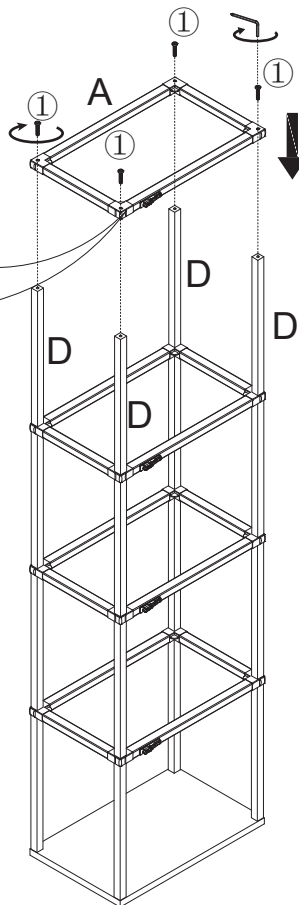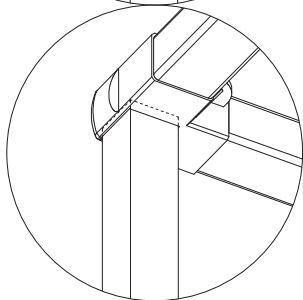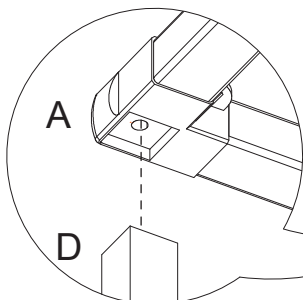


Installation Steps

12

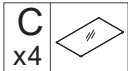






The smooth surface of the glass is facing upwards.

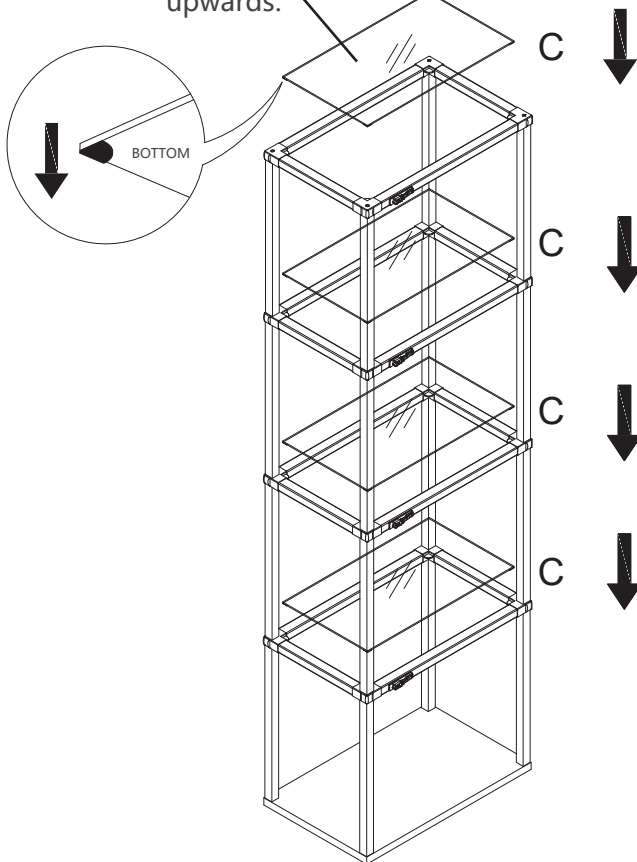

Installation Steps

13




x1

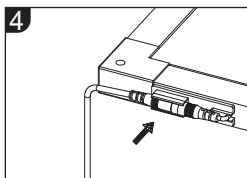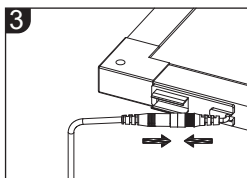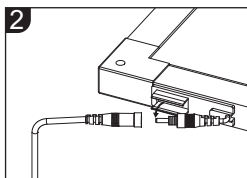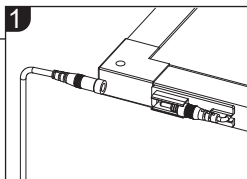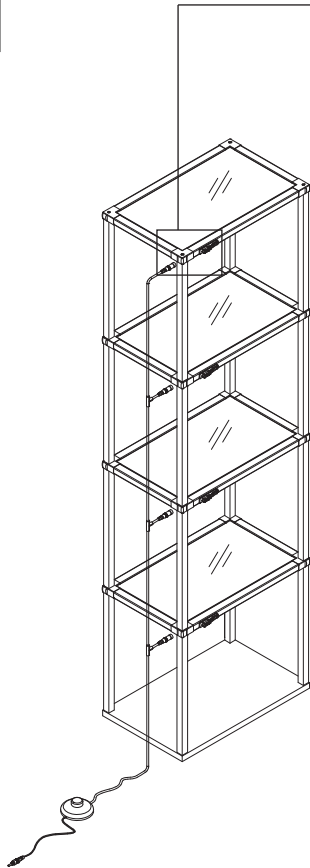

Installation Steps

14





x1

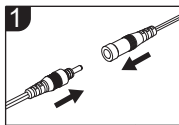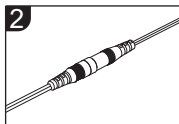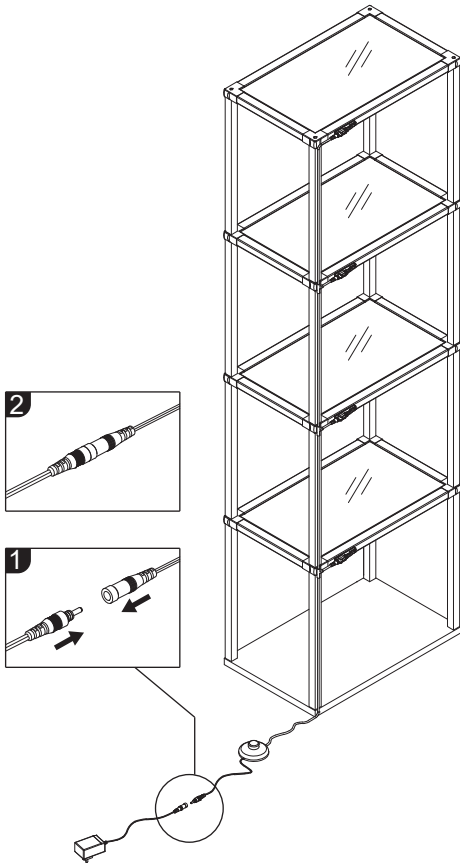

Installation Steps

15

x8

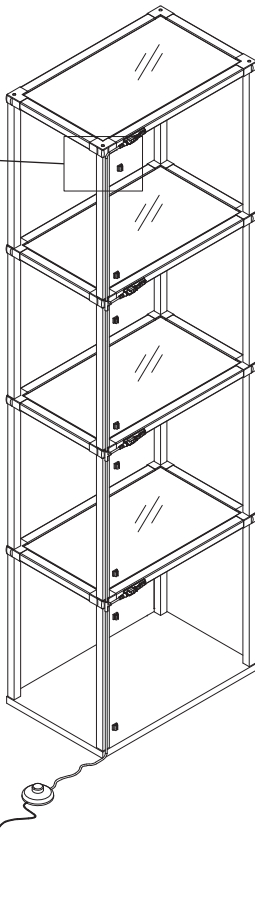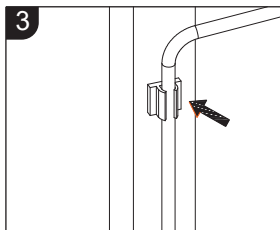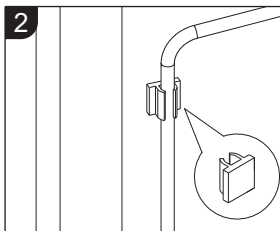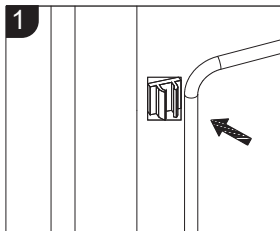


Installation Steps

16

x4










Rubber Mat

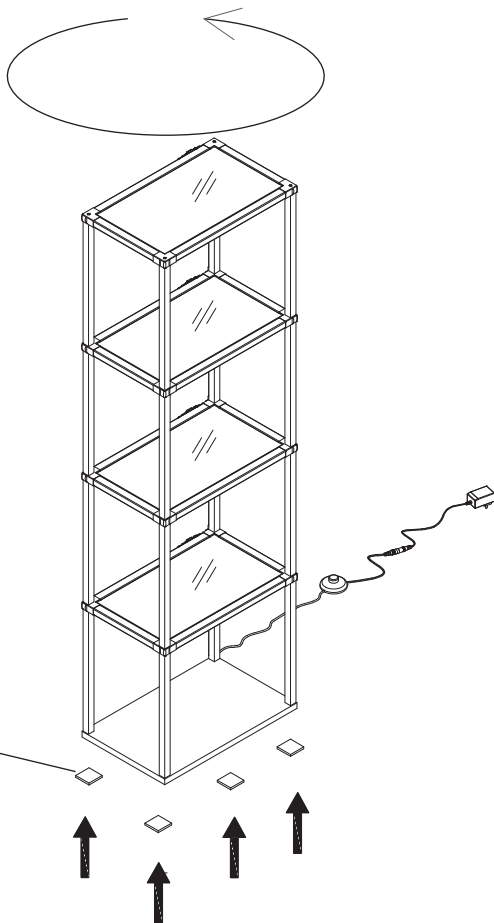

Installation Steps


17

"The screw can be inserted into the wall to ensure steady installation torque (please refer to the picture)."

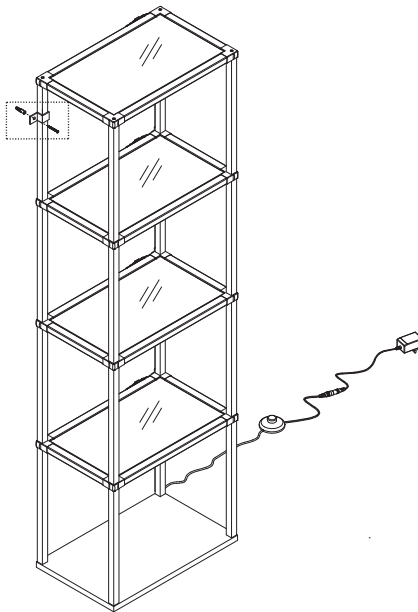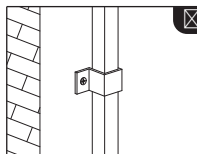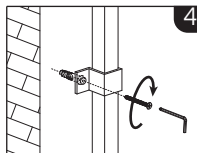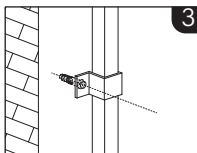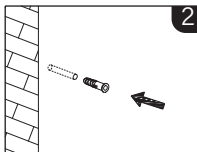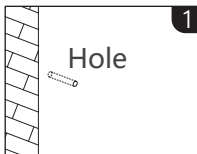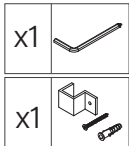

Instructions for use:


There are two control methods; foot switch or remote control.

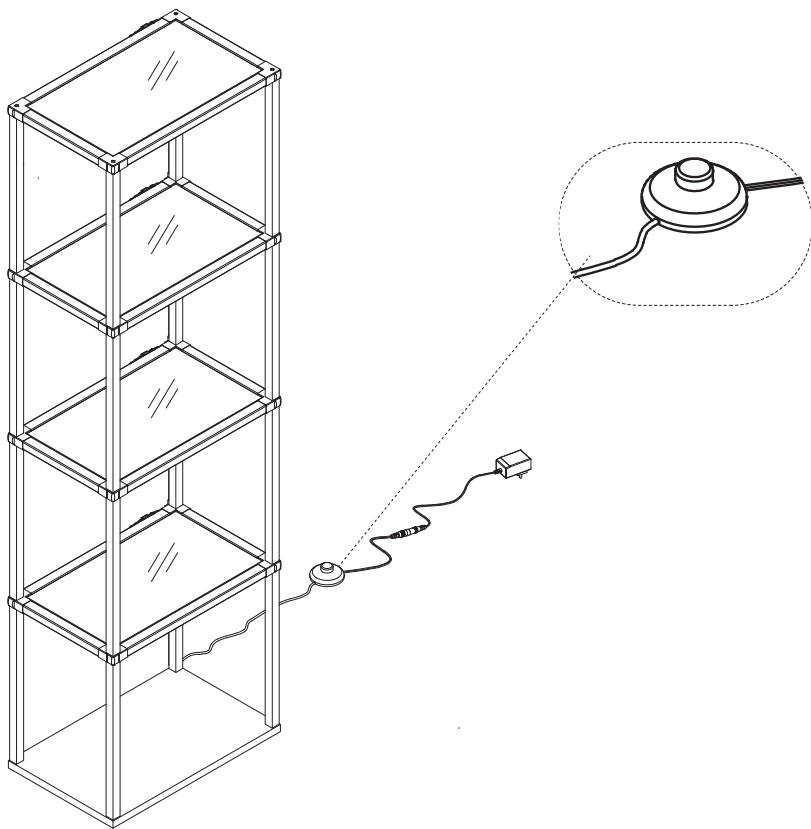

Short pedal (three color temperature switching -off in sequence, long pedal!stepless adjust the brightness at the current color temperature

Installation Steps

18

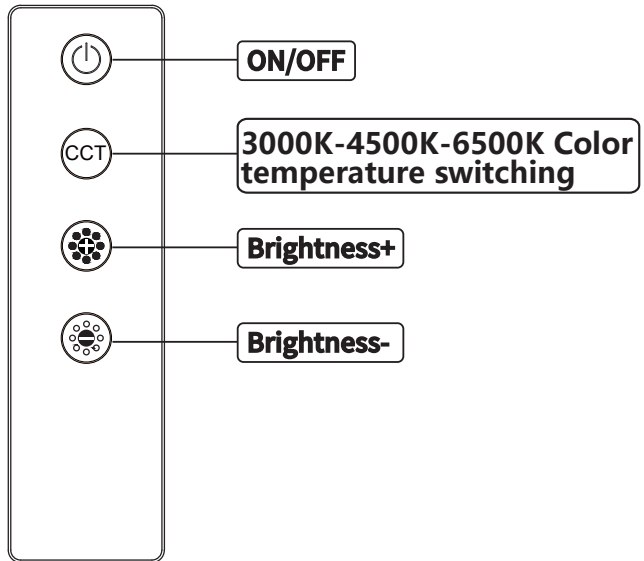

Functional key instructions: From top to bottom

Power button: Short press to turn on/off

CCT: Short press to adjust in the sequence of 3000K-4500K-6500K.

Brightness increase button: Supports both short press and long press for adjusting brightness.

Brightness decrease button: Supports both short press and long press for adjusting brightness.

Specification

Model: PFL-026

Power: 18W

Dimmable:(10%-100% Dimmable)

Color temperature: 3000K-4500K-6500K (3 Levels Adjustable)

Lifespan: 30000Hrs

Remote Distance: Within 8m/26.2ft

Input Voltage: AC120V/60HZ

Adapter Voltage: DC24V 0.75A

Note: The remote control comes with AAA batteries x 2

Pairing procedure:

1. Unplug the floor lamp.
2. Press and hold the "+" button on the remote control.
3. Plug in the power cord.
4. If the LED flashes, pairing is successful.

Product Care

- Please read the user manual before using it. For indoor use only, as it is not waterproof. Do not use this product in humid environments or at extreme temperatures.
- Recommended for indoor use only. It is not waterproof, so avoid using it in humid environments or at high temperatures.
- Turn off the power when cleaning or when the product is not in use.
- Do not use it beyond the recommended voltage; the proper voltage for the US is AC120V, 60Hz.
- Discontinue use immediately if any defects are found in the product.

Guarantee

Our standing floor lamp comes with a 12 month warranty. If you have any questions or need assistance, please contact Customer Service with your order number and product model number. We will provide you with further information regarding returns or exchanges.

WARRANTY POLICIES

- Our floor lamp is backed by 12 Months warranty for the product quality reasons
- The postage for the return or replacement of goods without quality problems should be paid by users and the postage for the re-delivery should be covered by the seller. Relevant invoices and gifts, if having should be sent back together. For questions, assistance, or support, please get in touch with the Customer Service by e-mail with your order number and product model number. We will send you the future information about the return or the exchange

NON-WARRANTY PROVISIONS

1. Unauthorized repair, misuse, collision, negligence, abuse, accident, alteration, or tear-up or alteration of label or false-proof mark;
2. Alteration, replacement, or tear-up of the product's original serial number label and other similar phenomena;
3. No product serial number, nonconformity between the product model and serial number on the warranty voucher and the real product;
4. Expiration of the product warranty;
5. Product appearance damages due to abnormal usage;
6. Outer package and the attached gifts, out-of-scope service or additional configurations or gifts promised or provided by sales personnel;
7. Improper storage, for instance, functional damages caused by long-term exposure to abnormal humidity or temperature;
8. Damages caused by failure to follow the operating instructions, man-made abuse or misuse, unauthorized modification, force majeure

