 


ASSEMBLY INSTRUCTION

DINING CHAIR

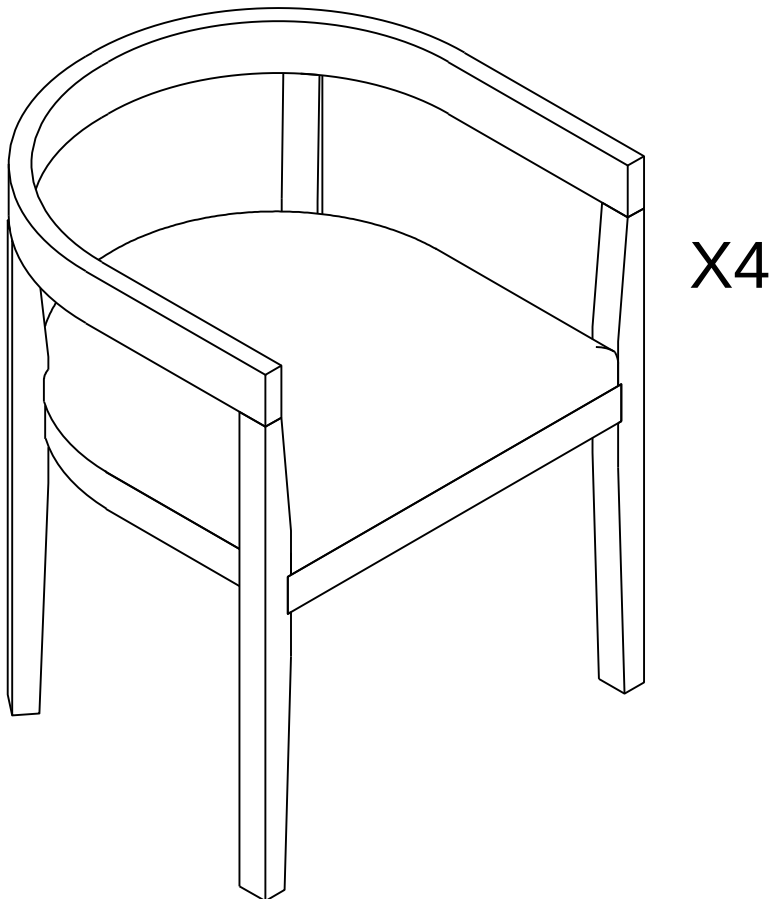 


N715P466152







IMPORTANT NOTE:

- 1: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**
- 2: BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- 3: DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET - UP.**


Detail View

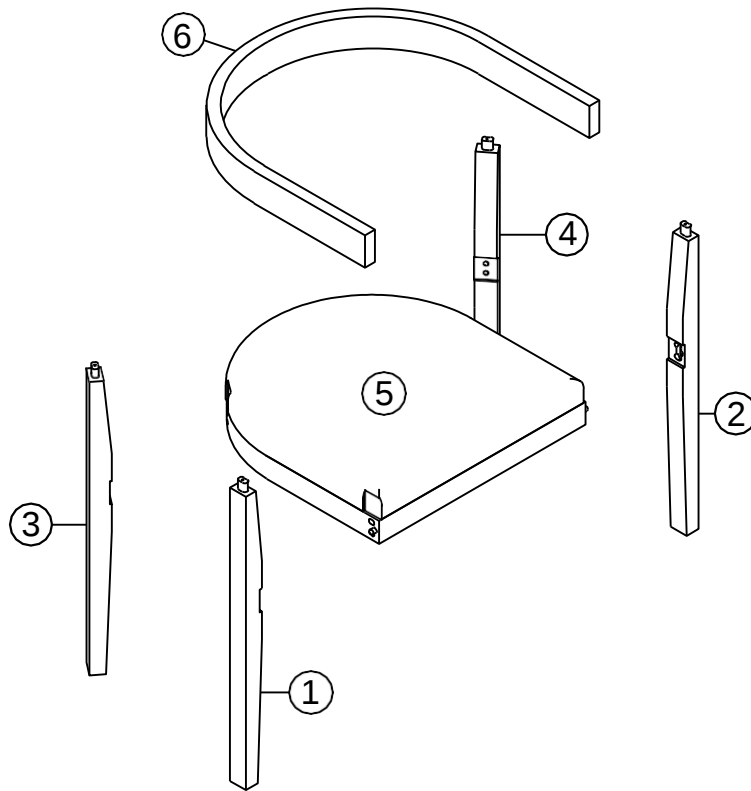

Part List

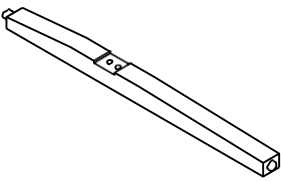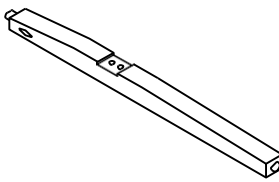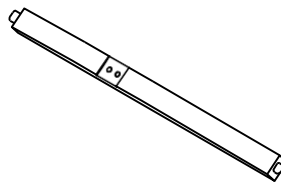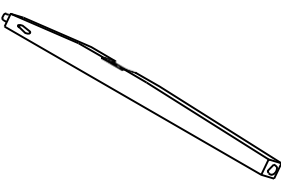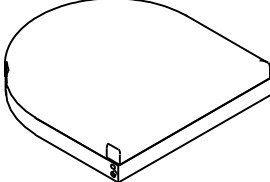     
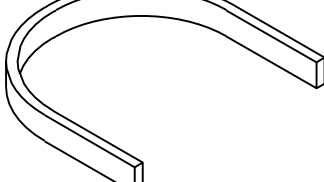 
		
FRONT LEG - LEFT (4 pc)	FRONT LEG - RIGHT (4 pc)	BACK LEG - LEFT (4 pc)
		
BACK LEG - RIGHT (4 pc)	SEAT FRAME (4 pc)	BACKREST (4 pc)

 Hardware List

A  5/16"x70 mm BOLT (16 pcs)	B  5/16"x40 mm BOLT (16 pcs)	C  5/16"x11 mm LOCK WASHER (32 pcs)	
D  5/16"x19 mm FLAT WASHER (32 pcs)	E  4x58mm ALLEN KEY (1 pc)	F  4x40 mm SCREW (16 pcs)	 ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



STEP 1:

B 	C 	D 
16 pcs	16 pcs	16 pcs

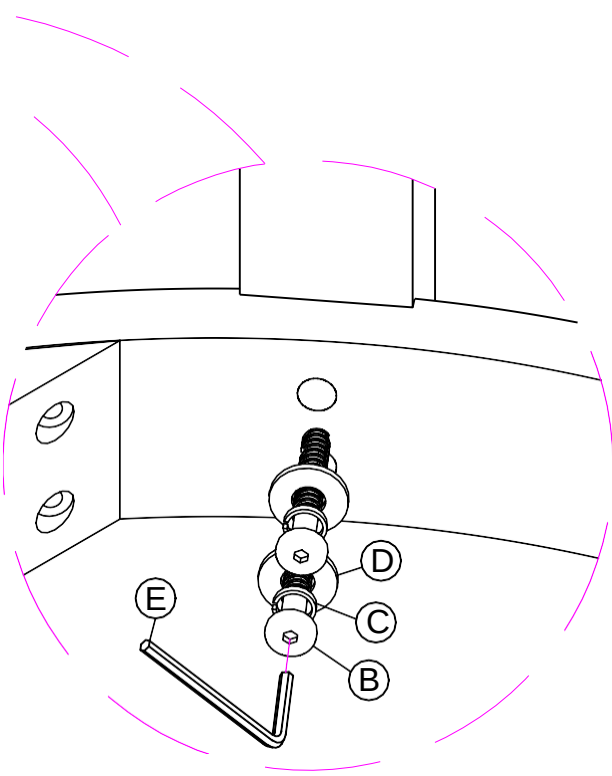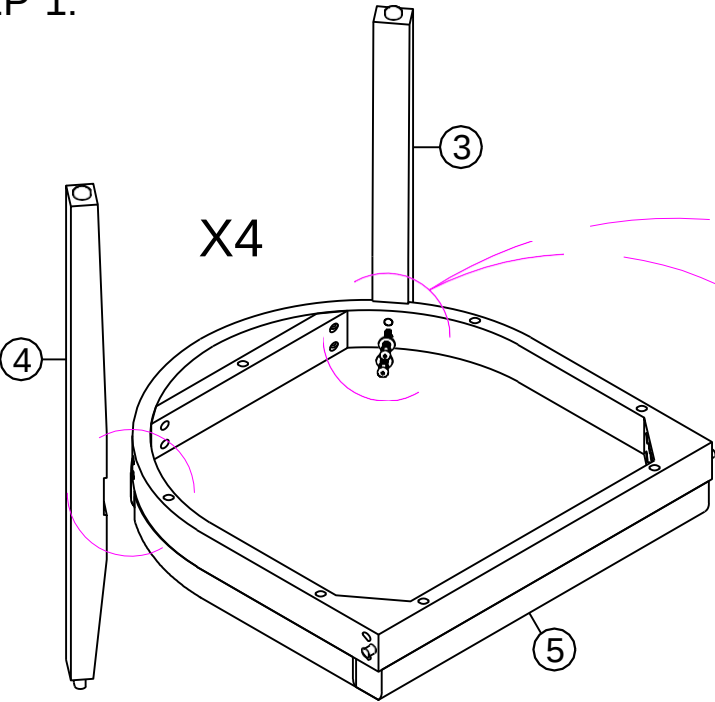  

STEP 2:


A 	C 	D 
16 pcs	16 pcs	16 pcs

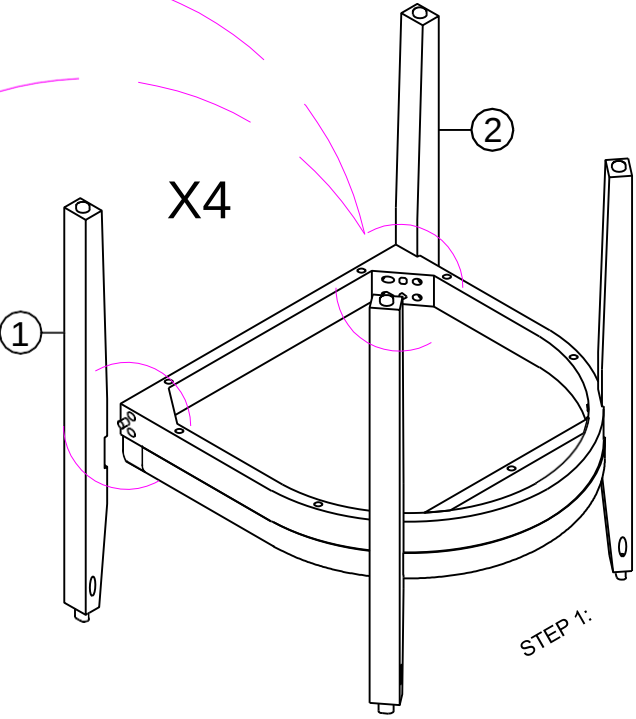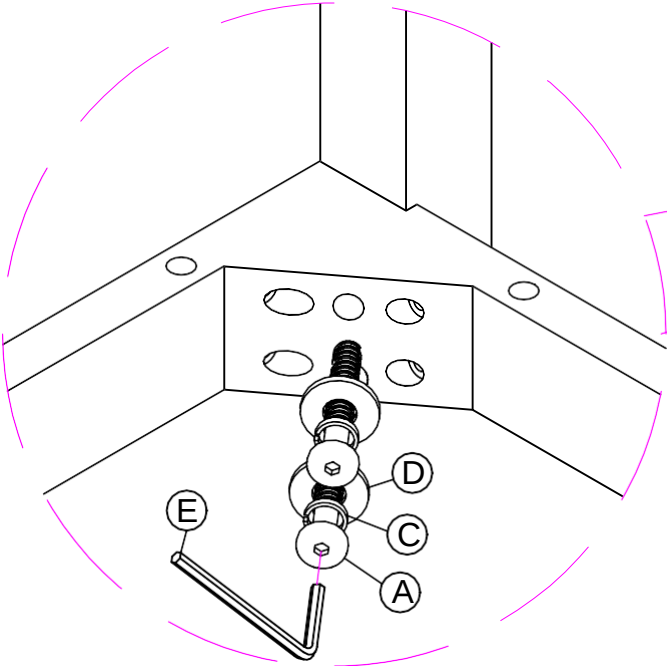  


STEP 1:

STEP 3:

 (F)



16 pcs

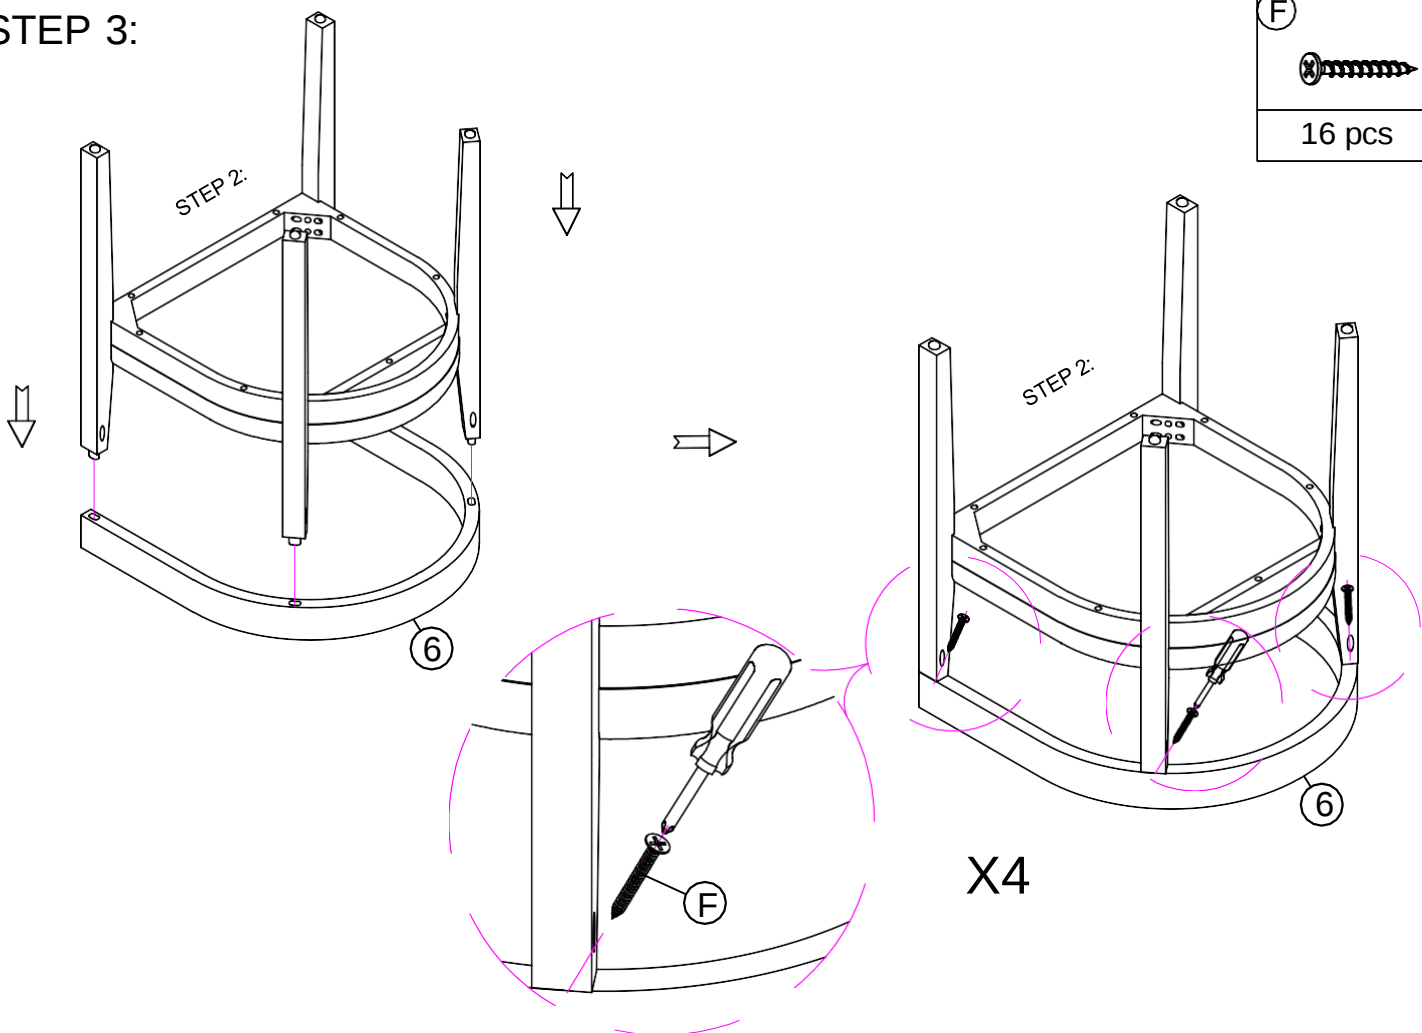 

FULLY

