 



Assembly instruction

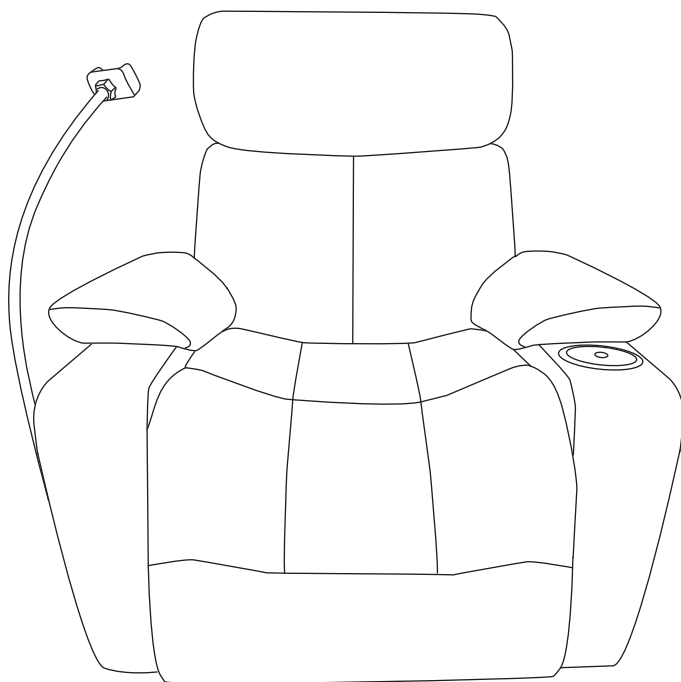

Assembly


Step 1: Install the Backrest

 1. Align the connectors on both sides of the Backrest with the mounting points on the Seat.
2. Press down firmly until a 'click' is heard, indicating the backrest is securely installed.

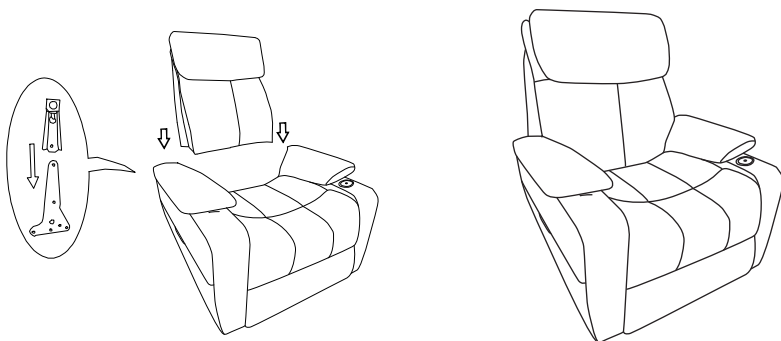

Step 2: Install the mobile holder



(the hole of the holder is located below the side armrest)

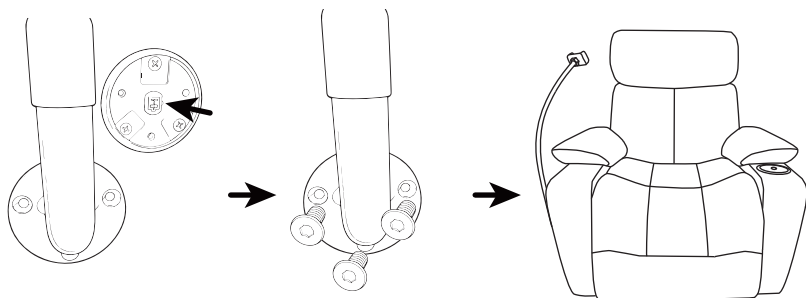


1. Insert it into the hole and align it properly
2. Tighten the three corresponding screws clockwise to secure it firmly.
3. The mobile holder is installed successfully

Step 3: Connect to Power

1. Connect one end of the Power Adaptor to the port at the rear of the chair and connect the other end to the Power Cable.
2. Connect the Power Cable to an electrical outlet.

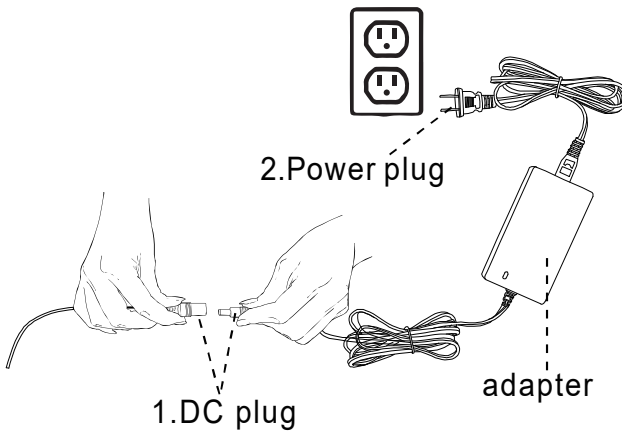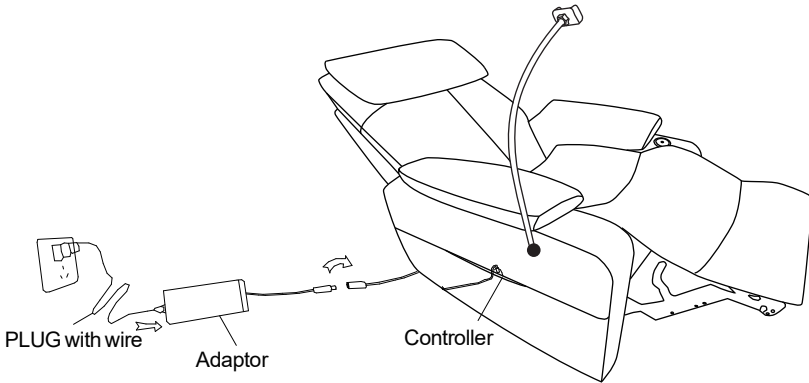

Functions:

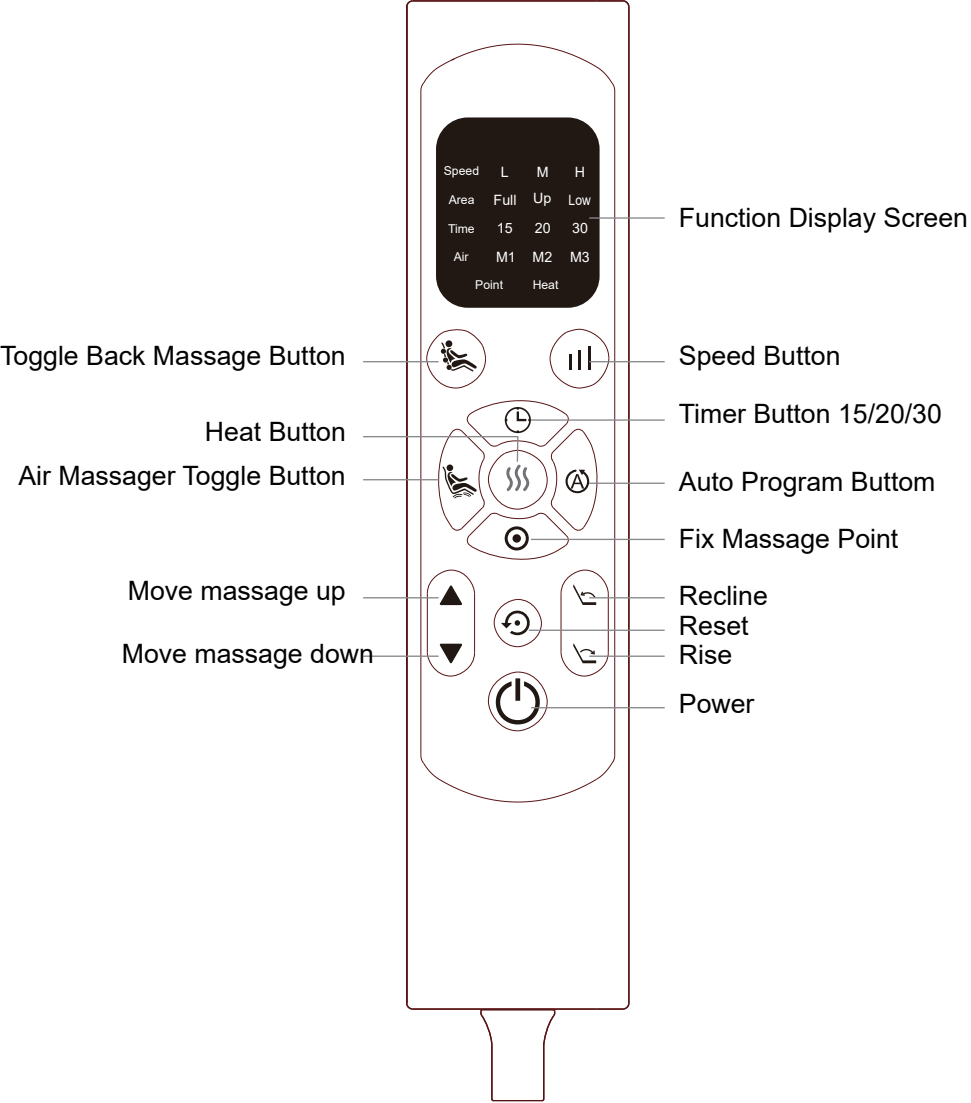

Functions:

	Power Button • Plug in the 24V power adapter to turn on standby mode. • Press the Power Button once to turn the chair on or off. • When powered on, the chair starts with a full-back massage at Low speed and a 15-minute timer. • The wireless charging function for the cup holder and mobile phone will also turn on automatically. • When powered off, the massage mechanism will return to its starting position automatically.
	Toggle Back Massage Button • Press this button to choose the massage area. • The massage areas cycle in this order: Full Back→Upper Back→Lower Back • The matching indicator light will turn on for the selected area.
	Speed Button • Press this button to adjust the massage speed. • Speed settings cycle in this order: Low→Medium→High→Off • Selecting "Off" will stop the massage.
	Move Massager Up Button • In Fixed-Point mode, press and hold this button to move the massage position upward. • Release the button to stop movement.
	Move Massager Down Button • In Fixed-Point mode, press and hold this button to move the massage position downward. • Release the button to stop movement.
	Reset Button • Press this button to automatically return the massage mechanism to its default position.
	Heat Button • Press this button to turn the back heating function on or off. • The indicator light will show when heating is active.
	Fixed-Point Button • Press this button to activate Fixed-Point massage mode. • In this mode, the massage focuses on one specific area. • Use the Up and Down buttons to adjust the massage position.

Functions:

	Auto Program Button • Press this button to start Automatic Massage Mode. • Auto Mode includes: • Full-back massage • Medium speed • 20-minute timer • Medium air pressure • Heat function on • Changing any setting will exit Auto Mode.
	Timer Button • Press this button to change the massage time. • Timer settings cycle in this order: 15 min→20 min→30 min • The countdown timer restarts after each adjustment.
	Air Massager Toggle Button • Press this button to adjust the air pressure intensity. • Settings cycle in this order: M1→M2→M3→Off • Selecting "Off" will stop the air pressure massage.
	Recline Button • Press and hold this button to recline the backrest and legrest. • Release the button to stop movement. • The chair will stop automatically when it reaches the lowest position.
	Rise Button • Press and hold this button to raise the backrest and legrest. • Release the button to stop movement. • The chair will stop automatically when it reaches the highest position.

Please make sure the cables are connected properly so they do not get damaged.

Before using this product, please talk to your doctor if you:

- **Use a pacemaker or other medical device**
- **Are currently under medical care or feeling unwell**
- **Are pregnant or menstruating**
- **Have osteoporosis or back injuries**
- **Have sensitive or injured skin**
- **Have a fever over 100.4°F (38°C)**
- **Are not sensitive to heat**

Children and anyone needing assistance should use this product with adult supervision.

User Guide

- **Use this product only as described in this manual.**
- **Only use the power adapter included with the product.**
- **Stop using the product if it becomes damaged.**

