



FLOOR LAMP

SAFETY & WARNINGS

Warning

- To reduce the risk of fire, electrical shock, or personal injury: always turn off and unplug this lighting fixture and allow it to cool before attempting to replace the light bulb.
- Do not touch light bulb while fixture is turned on.
- Keep flammable materials away from this lighting fixture.
- Never look directly at a lit bulb.

Safety Information

- Before assembly, place all parts out on a clean flat surface and inspect each part for defects that may have occurred during shipping.
- Inspect wire insulation for any cuts, abrasions or exposed copper that may have resulted during shipping. If there are any defects in the wire, DO NOT continue to assemble. Please send an email to our Customer Service immediately.
- Consult a qualified electrician if you have any electrical questions.
- Never drape clothes over the lamp.
- To reduce the likelihood of tipping over, we recommend placing the lamp behind furniture and keep children and pets away.
- To prevent children from suffocating and choking, keep them away from packing materials.
- Please read this manual carefully and keep it for future reference.

INSTALLATION

Step 1

Place 01 on a flat surface. Insert four 02 into the top of 01 and tighten into four 03. Insert four 04 into the top of four 03.

Step 2

Attach 05 to top of four 04 and secure by four 06. Insert four 07 into the top of four 06.

Step 3

Attach 08 to top of four 07 and secure by four 09. Insert four 10 into the top of four 09.

Step 4


Attach 13 to top of four 10 and secure by four 15. Insert four 14 into four holes on 13. Insert 11 through the middle hole of 13 and secure it with 12 underneath 13.

Step 5

Place 16 onto four 15. Insert four 17 through the holes in the four corners of 16 and tighten into four 15.

Step 6

Place 18 through 16 and down onto 13 outside of four 14. Install a 19.

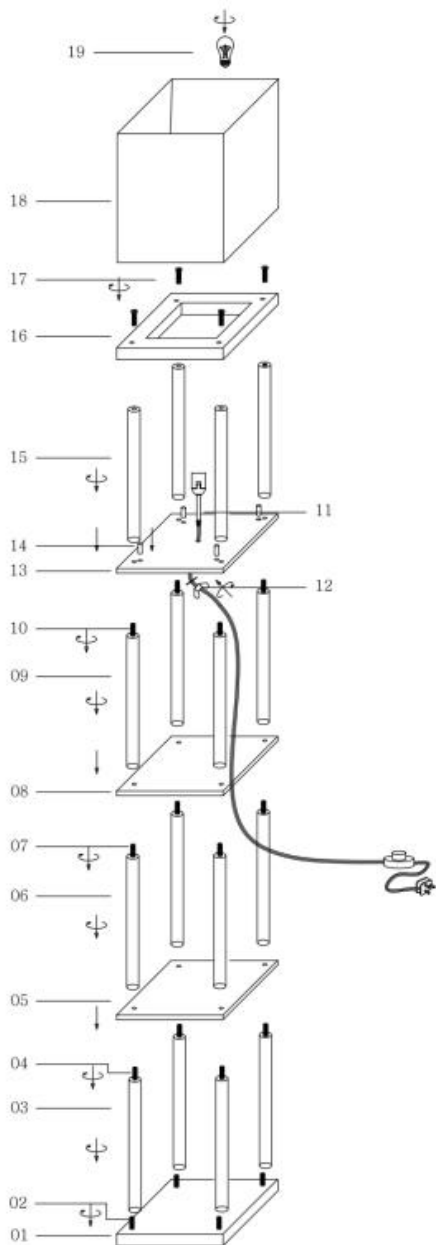

CLEANING & CARE

- Unplug lamp before cleaning.
- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.