 


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

 
Hardware Package (included):



Mounting Plate Unit (A)




Mounting Screw (B)



Wire Connector (C)



Bolt Nut (D)

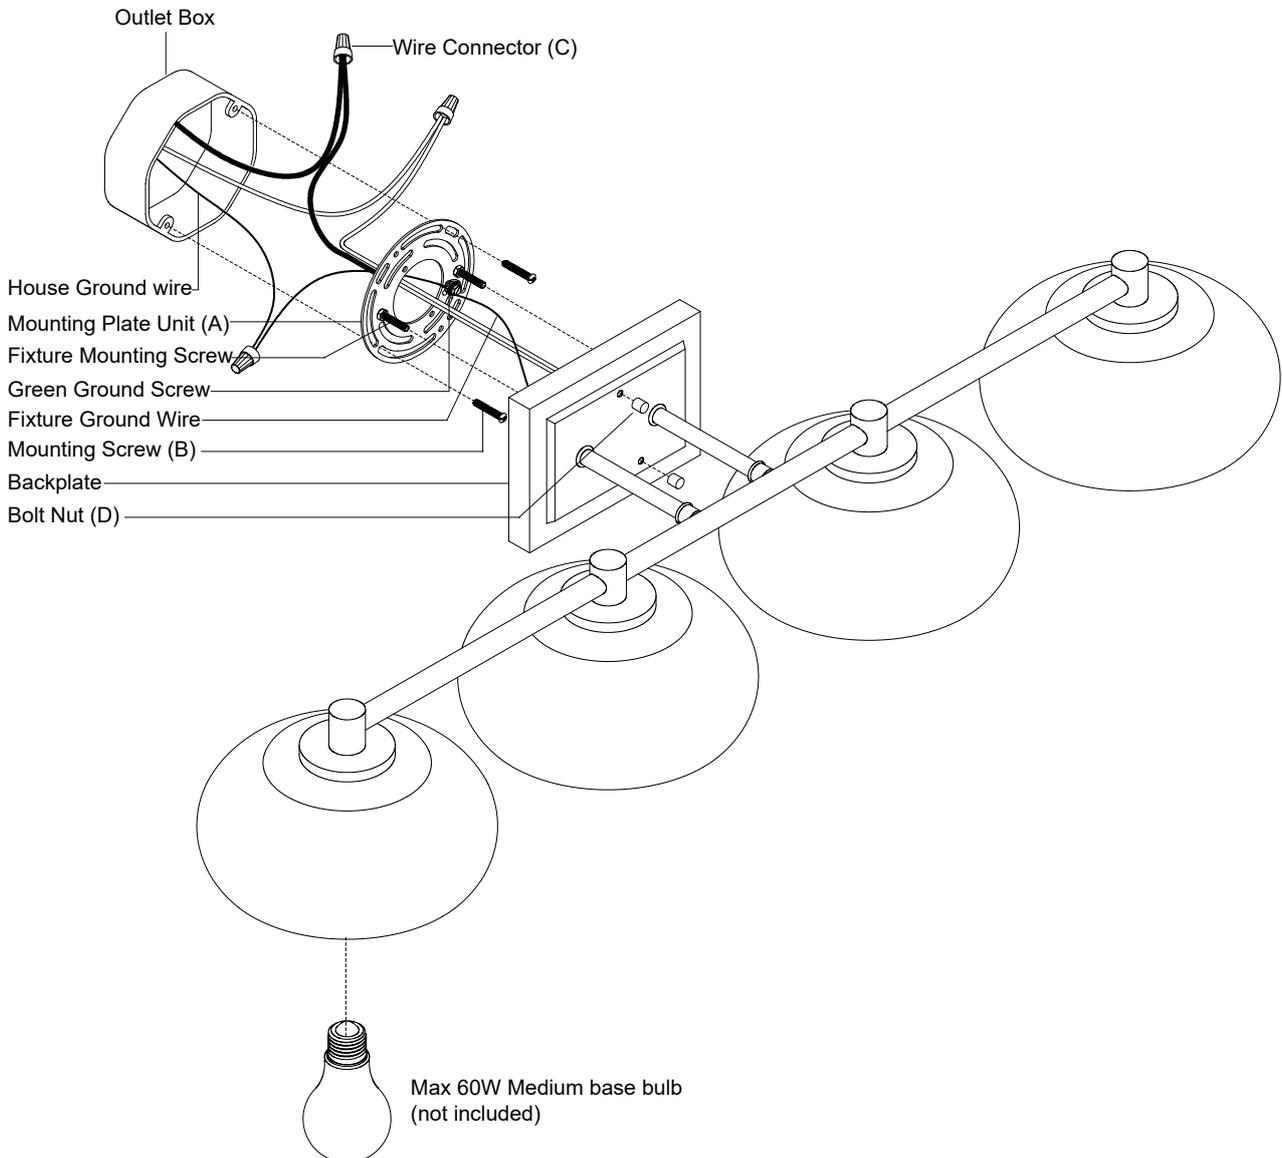

Installation Steps



Turn off the power at fuse or circuit box

1. Attach mounting plate unit (A) to the outlet box using two mounting screws (B). Adjust the length of the preinstalled fixture mounting screws if necessary.
Note: Make sure that the fixture mounting screws are lined up horizontally to make the fixture level.
2. Connect the smooth wire (marked) to black wire (power), the ribbed wire (unmarked) to white wire (neutral) with the wire connectors (C) provided. Connect the copper wire on the light fixture to the mounting plate unit (A) by securing it with the green ground screw, then connect it to the house ground wire with wire connectors (C). Carefully put all the wires into outlet box.
3. Attach the backplate to the mounting plate unit (A) by aligning and inserting the two fixture mounting screws from the mounting plate unit (A) into the open holes on the backplate, then exposed fixture mounting screws before screwing the two bolt nuts (D).
4. Install 4 X 60W medium base bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

Spare Parts List:

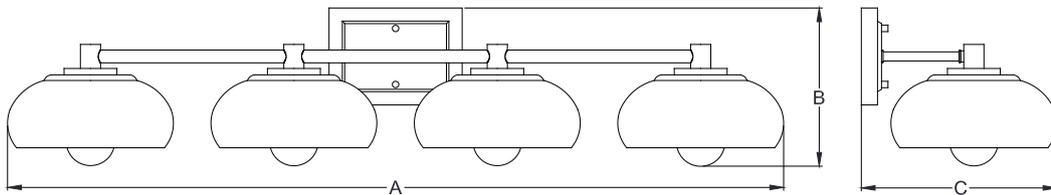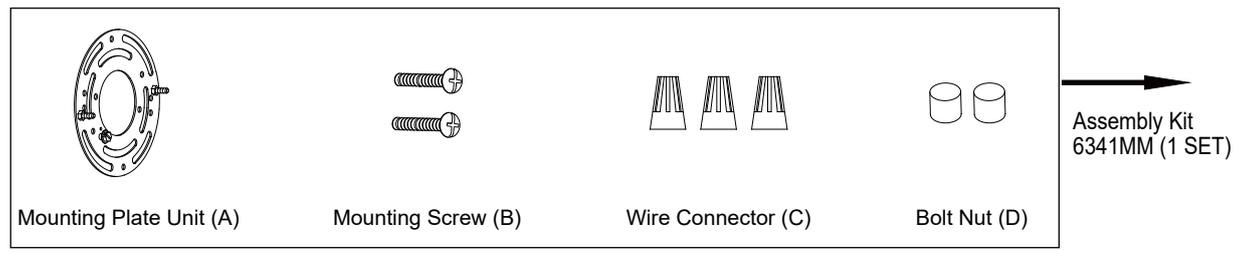

A: 38"

B: 7"

C: 9-1/2"

1 Year Warranty

We warrant all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

We reserve the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.