

NOTES:


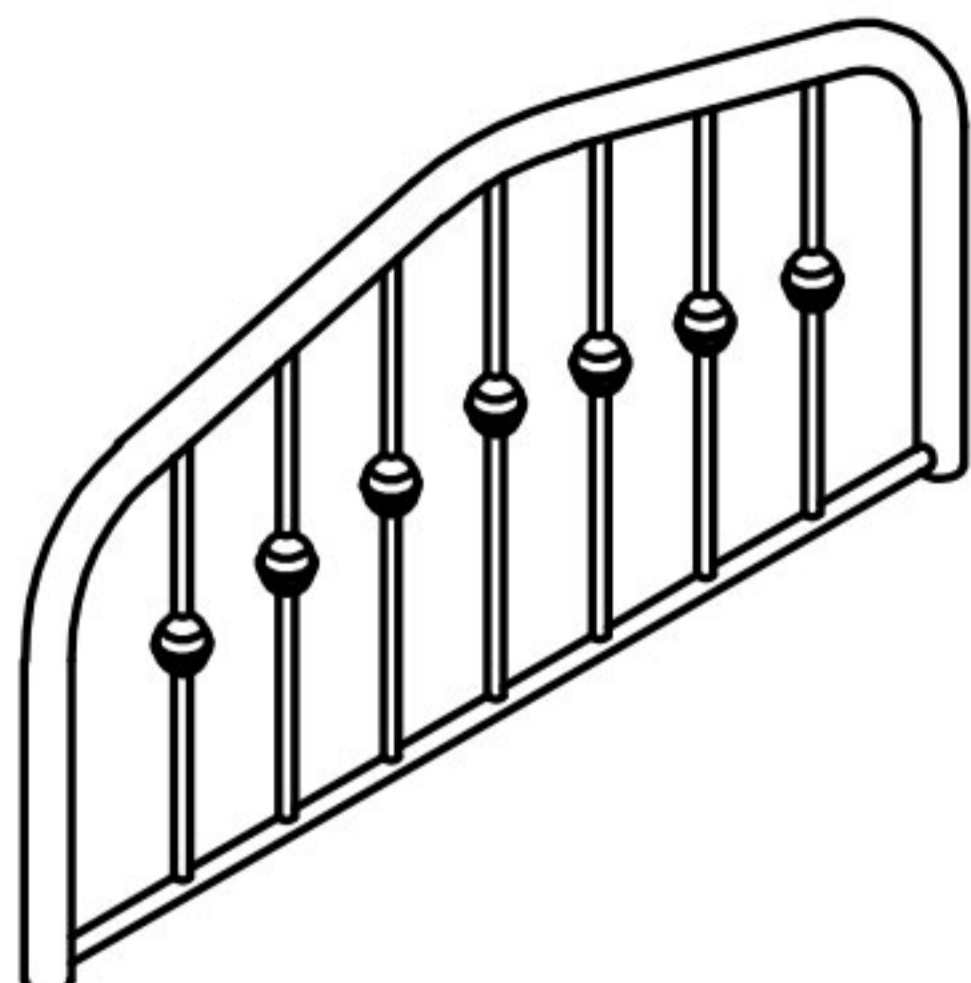 
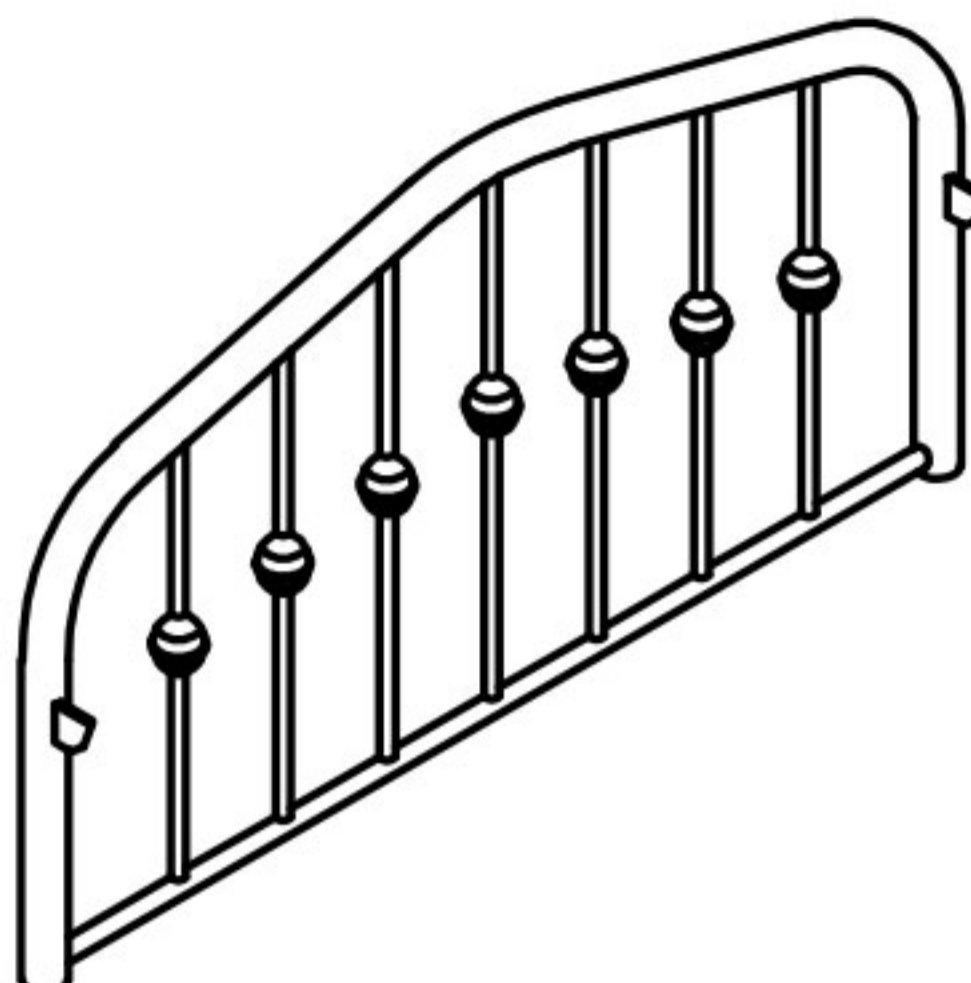 
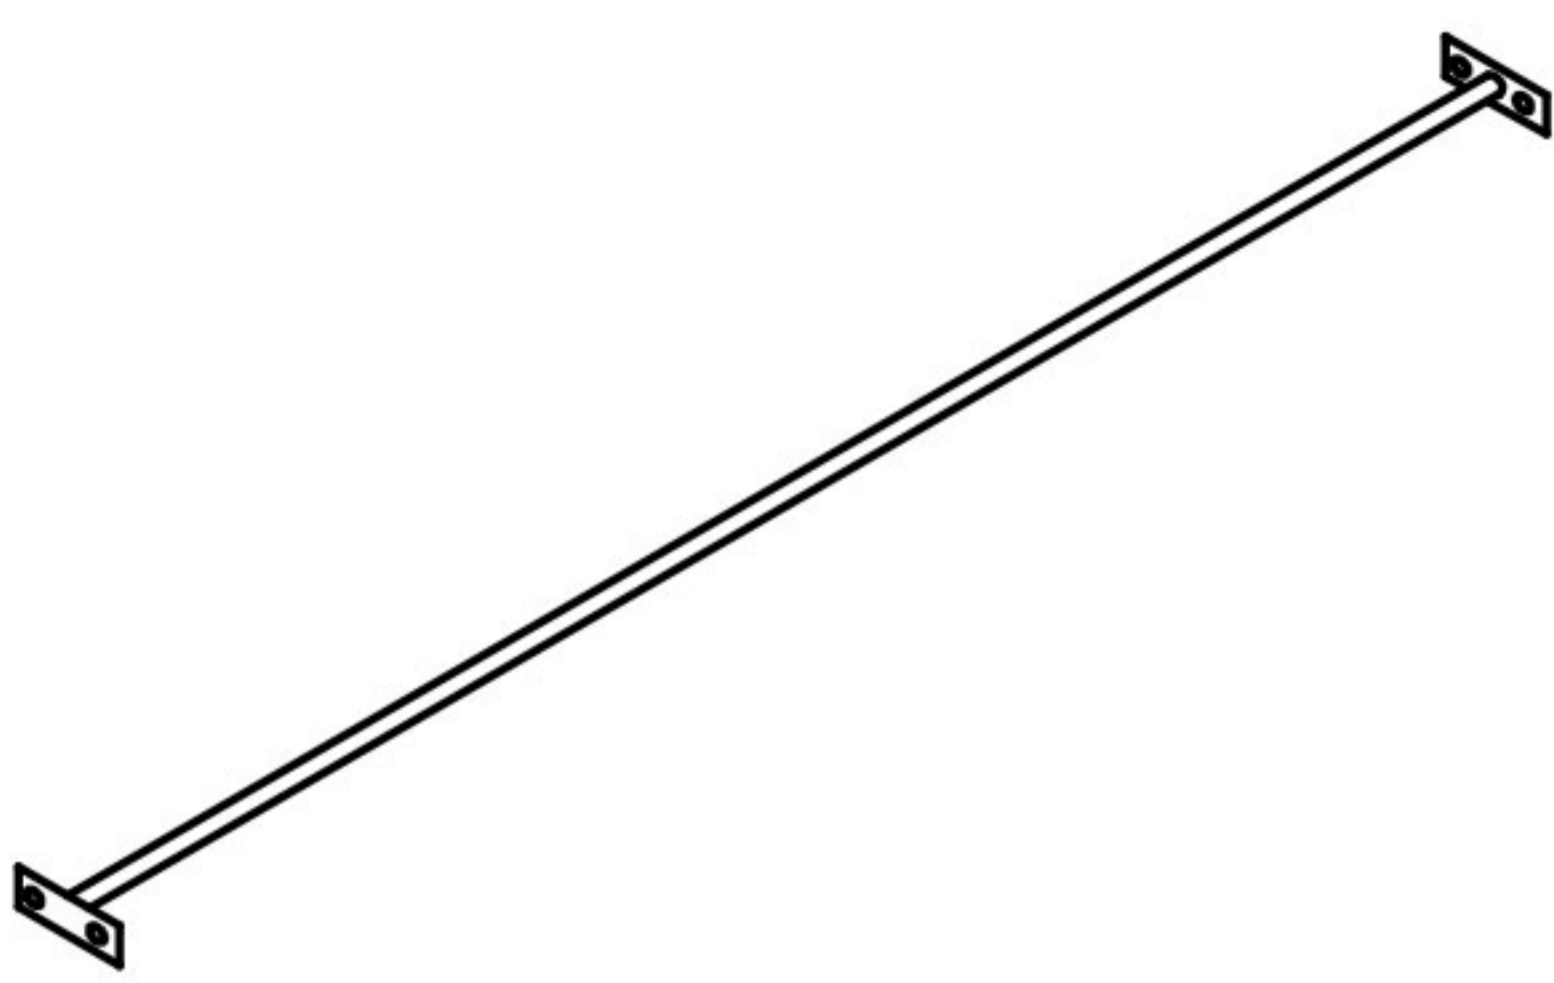 
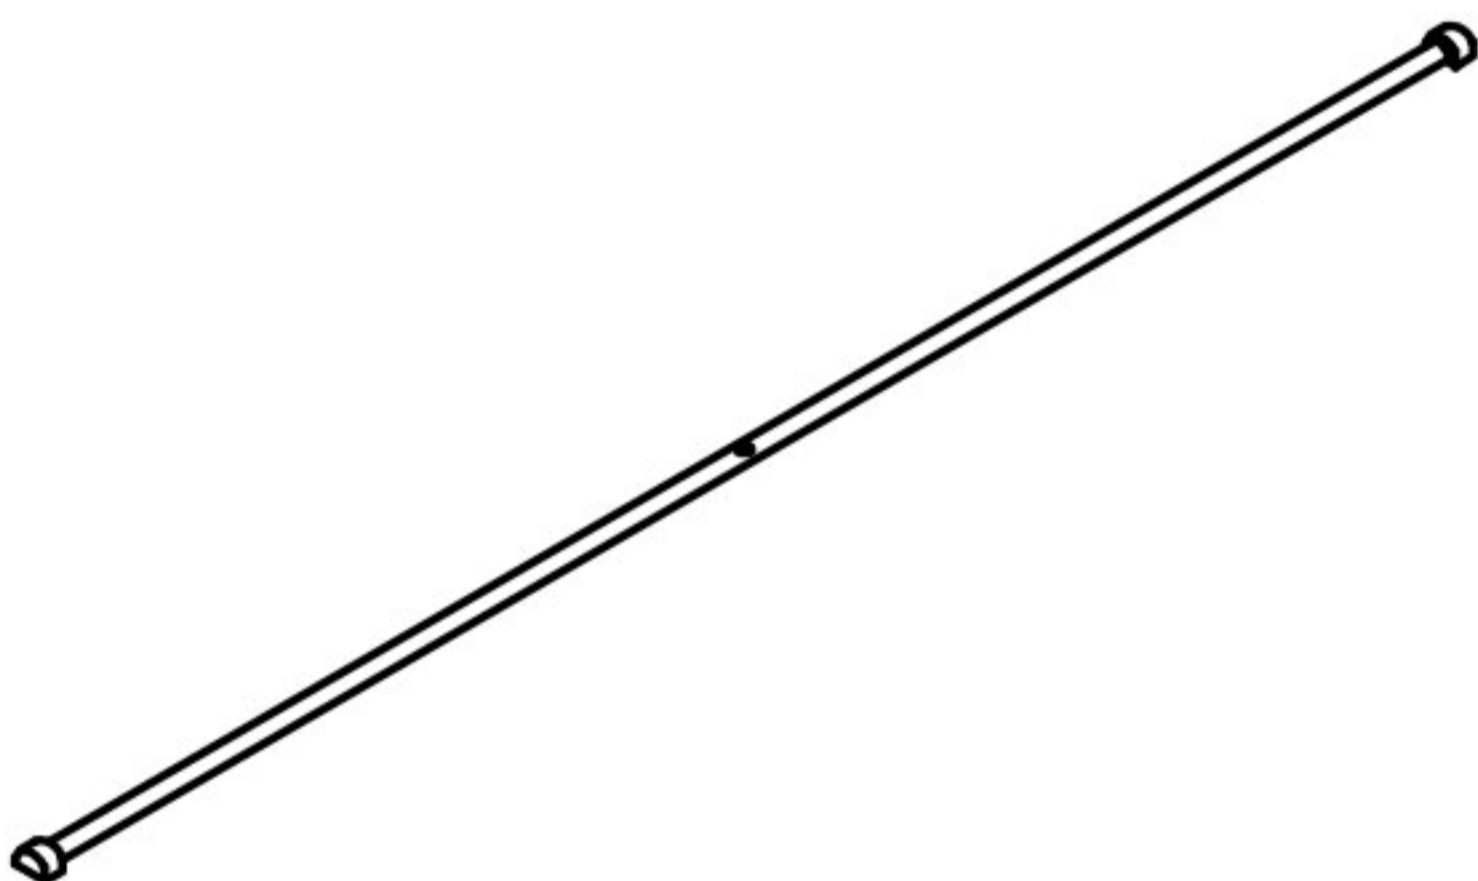 
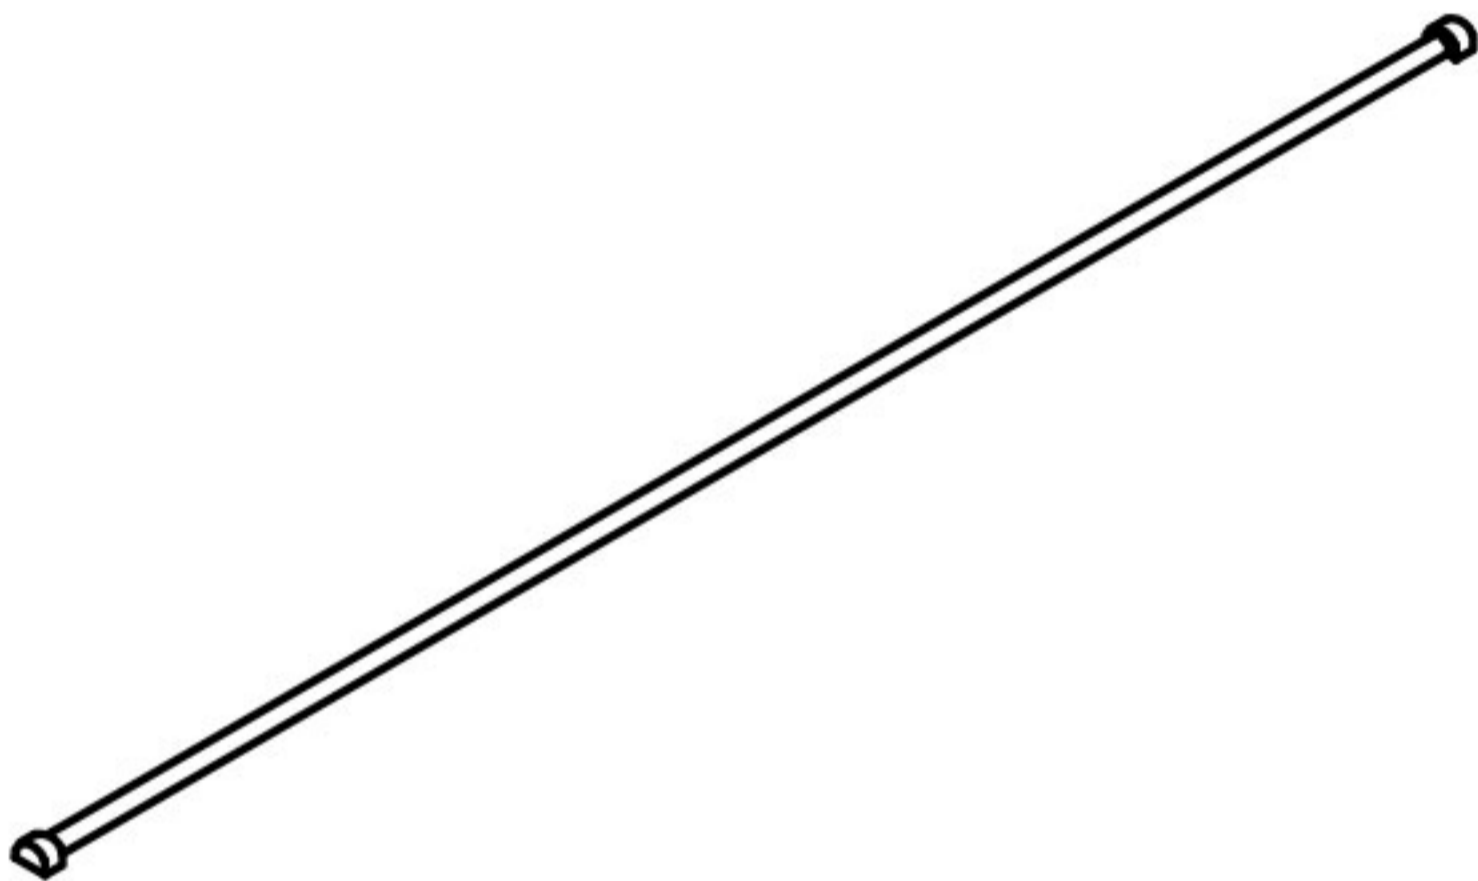 
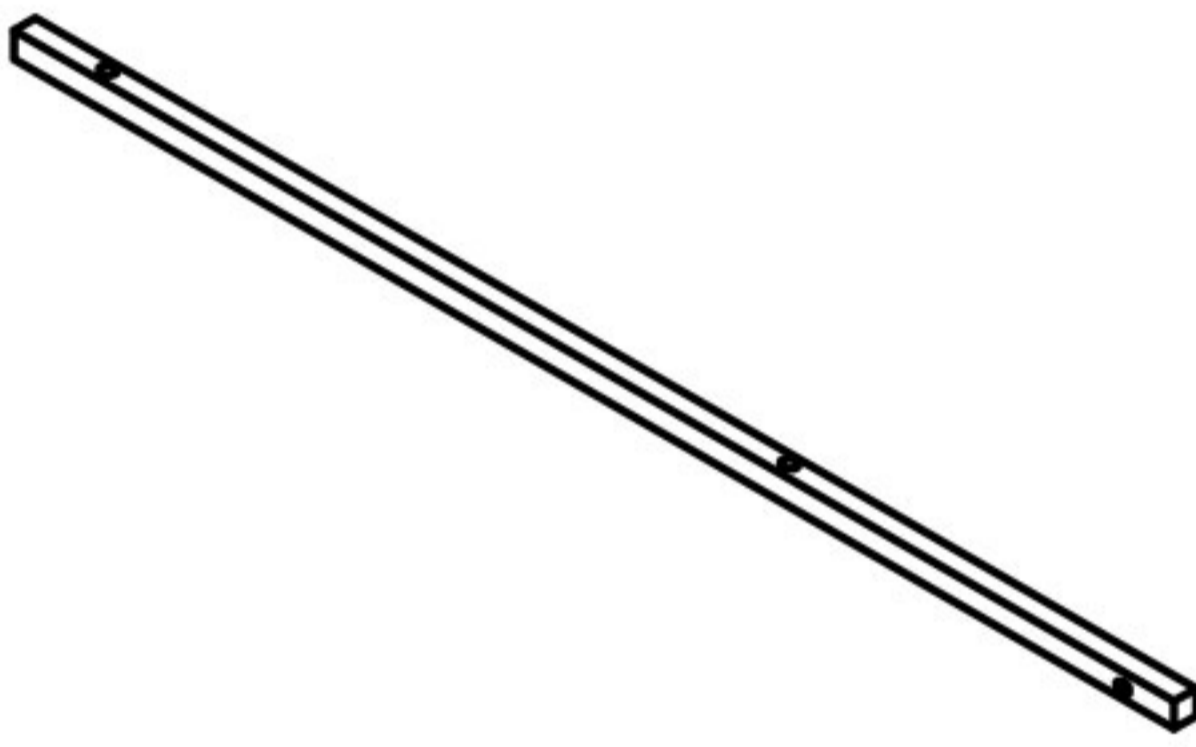 
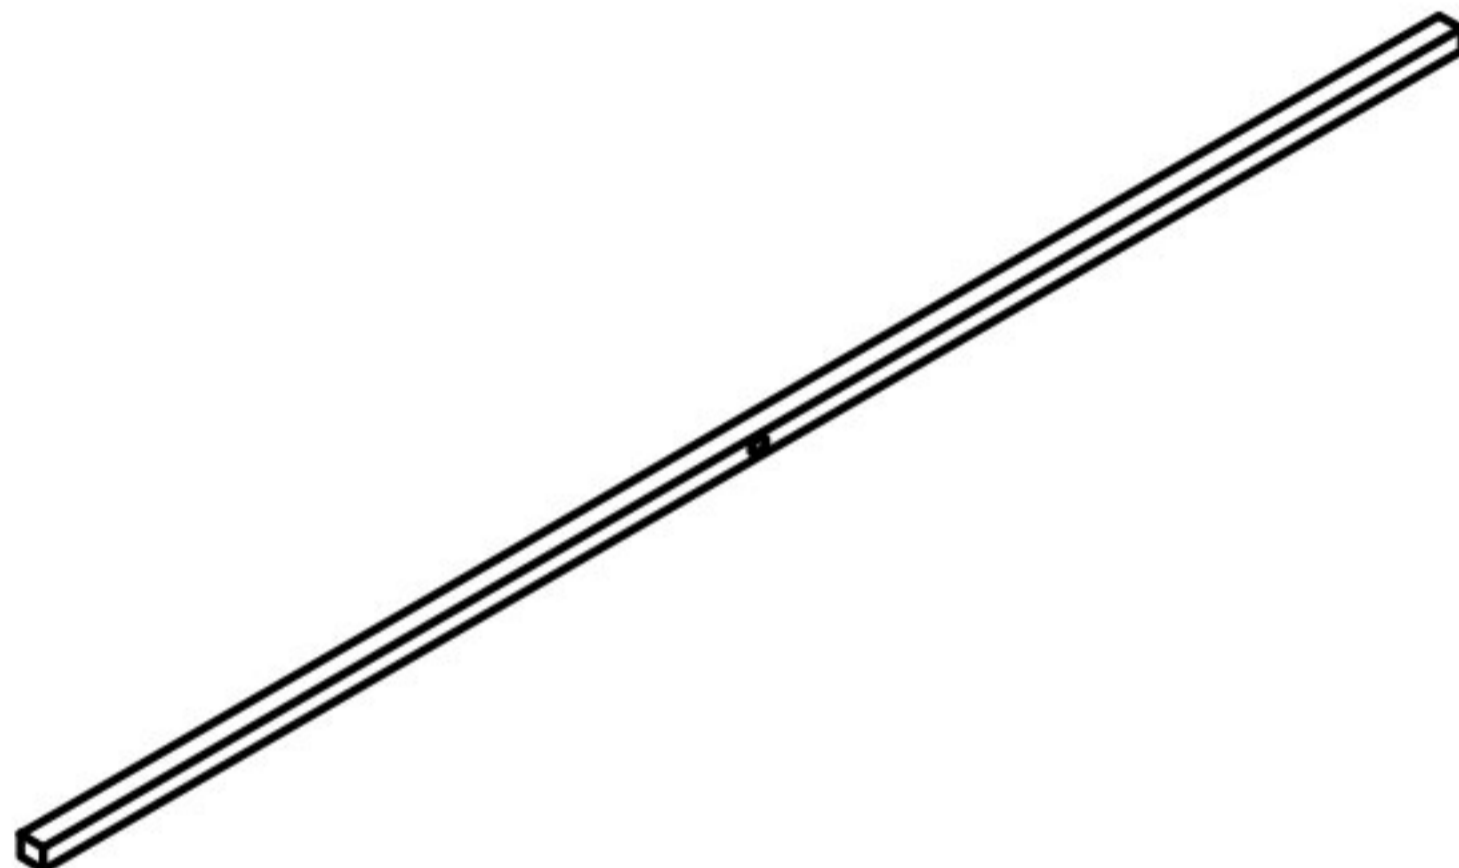 
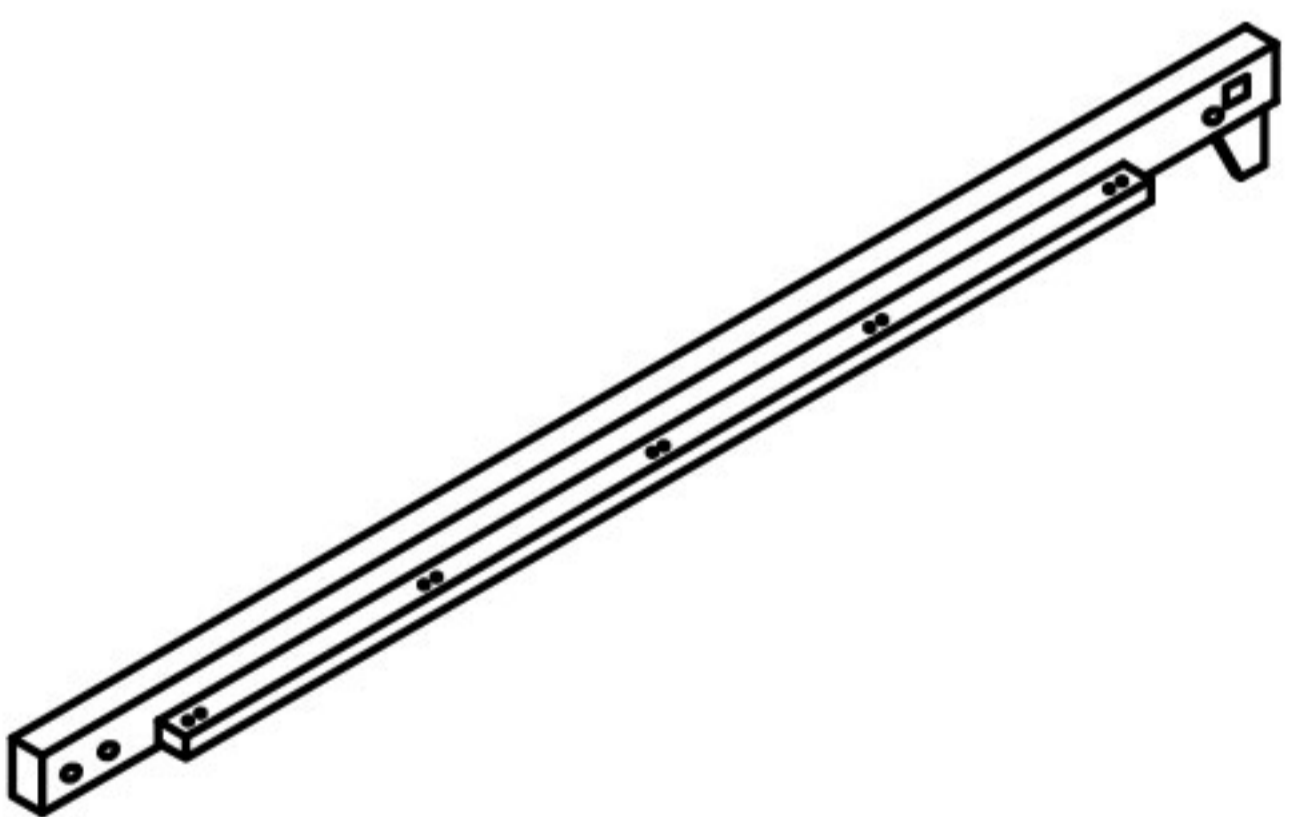 
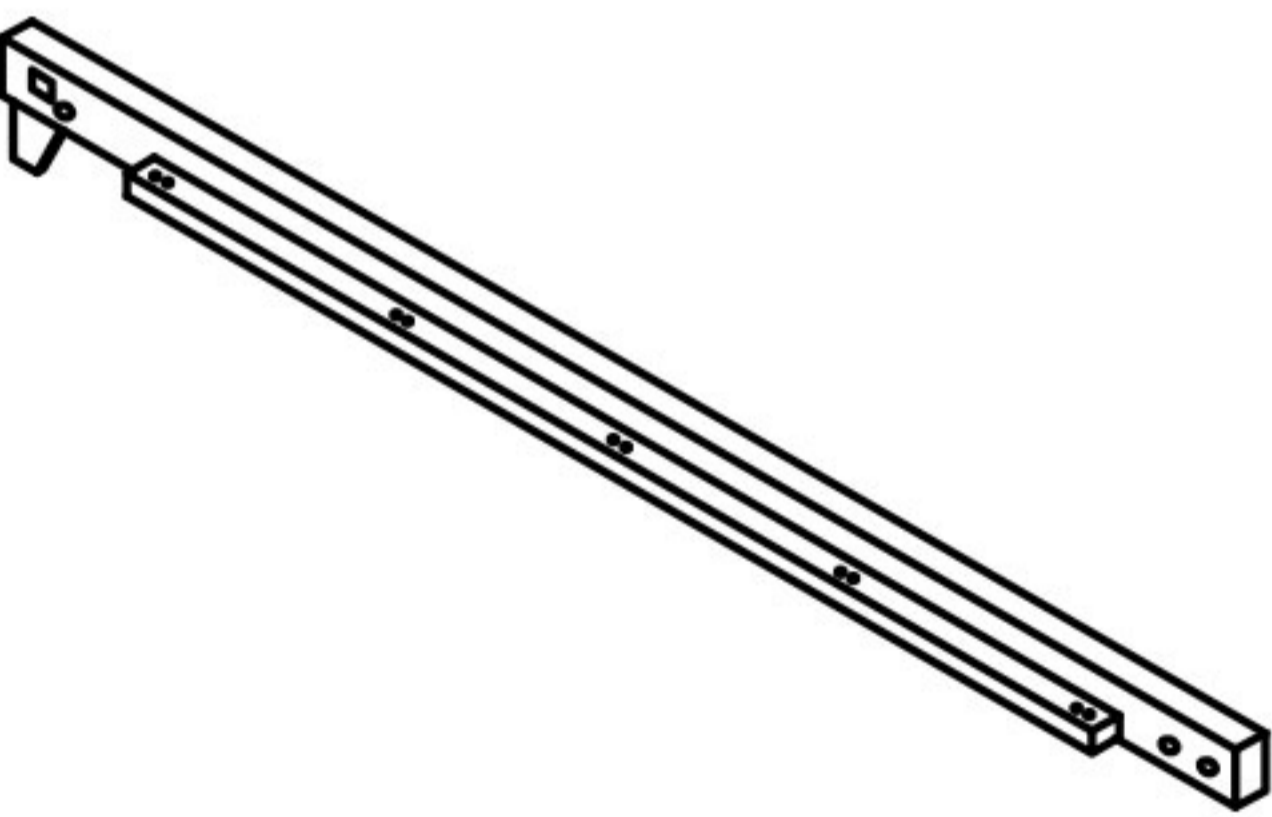 
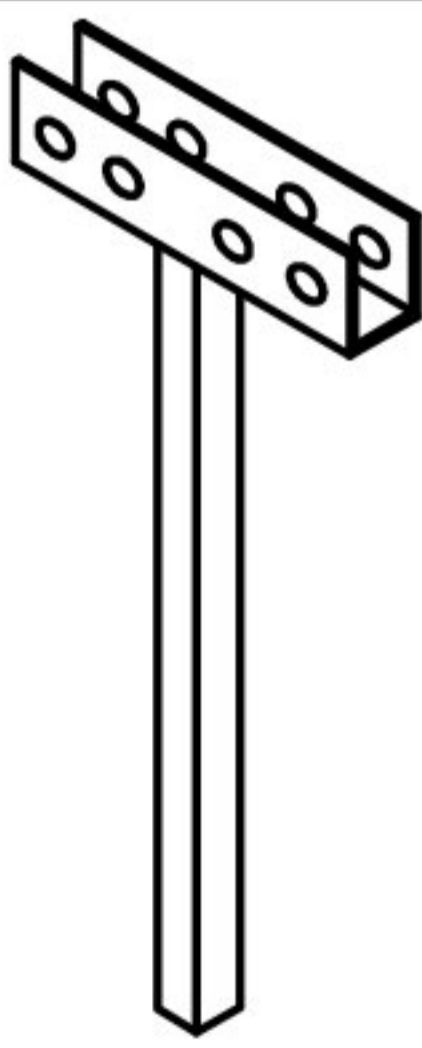 
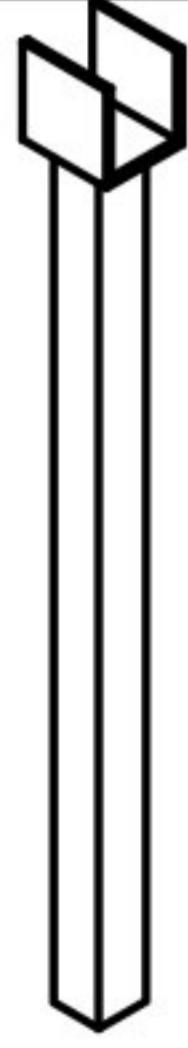 
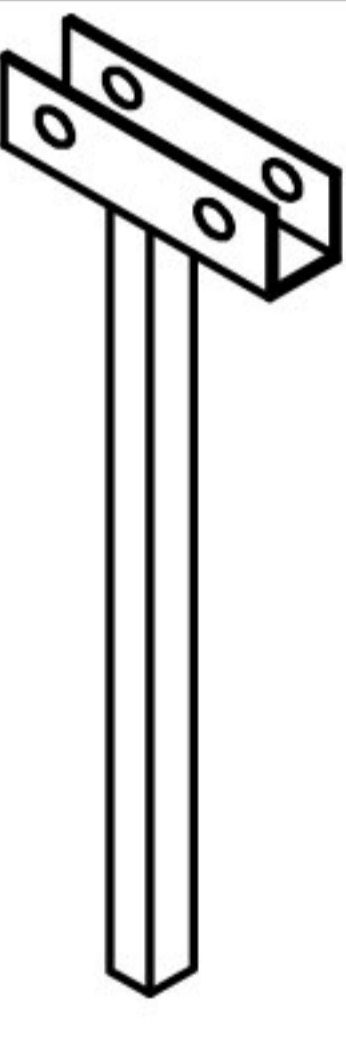 
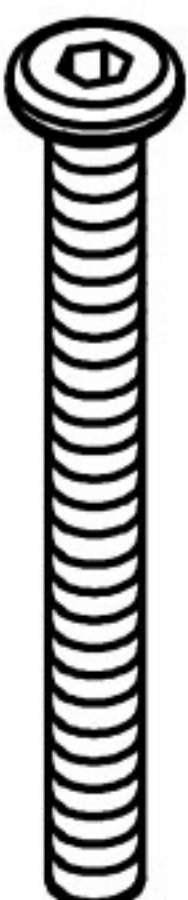 
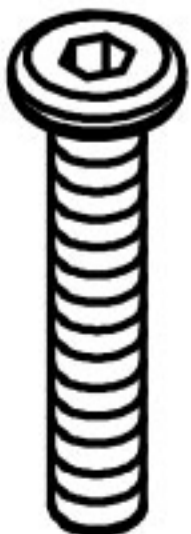 
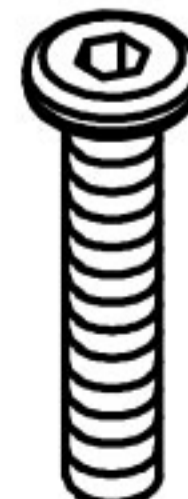 









- The item is only intended to be used indoors. The product must be assembled and used in accordance with the provisions of the manual.
- It is recommended that assembly is undertaken by about 2 adults. Please read assembly instructions before assembly and strictly adhere to each step outlined. Estimated assembly time is 30 minutes.

WARNING:

- **WARNIND FOR YOUNG CHILDREN** - This product contains small components, please ensure that they are kept away from small children while assembling.

  
1

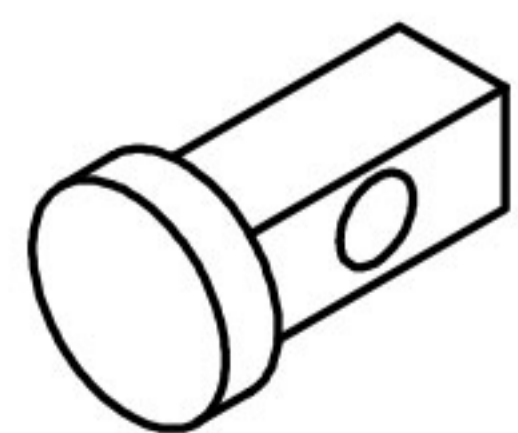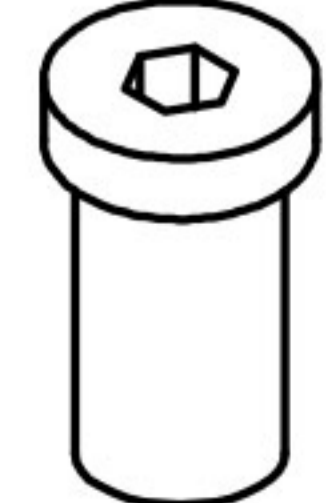PARTS LIST

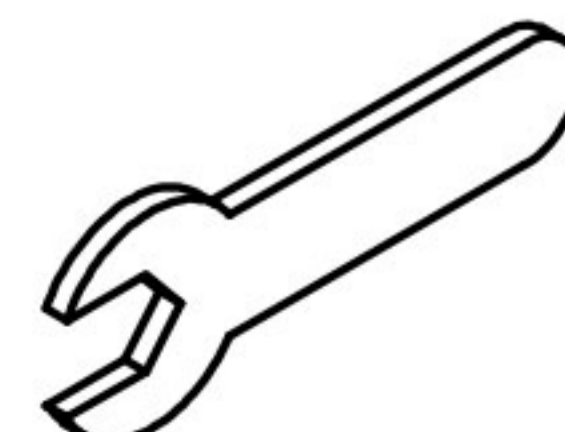 
A			B			C			D		
											
2PCS			1PC			1PC			1PC		
E			F			G			H		
											
4PCS			6PCS			2PCS			2PCS		
I			J			K			L	M	
											
2PCS			2PCS			2PCS			4PCS	1PC	
aa	bb	cc	dd	ee	ff	gg	hh	ii	jj	kk	ll
											
1/4*85 4PCS	1/4*45 4PCS	1/4*40 6PCS	1/4*35 4PCS	1/4*18 8PCS	1/4*15 4PCS	4PCS	1/4 4PCS	1/4 8PCS	1/4 2PCS	1/4 2PCS	1PC

NOTE: PLEASE DO NOT TIGHTEN THE BOLTS UNTIL ALL FIXED

 ①

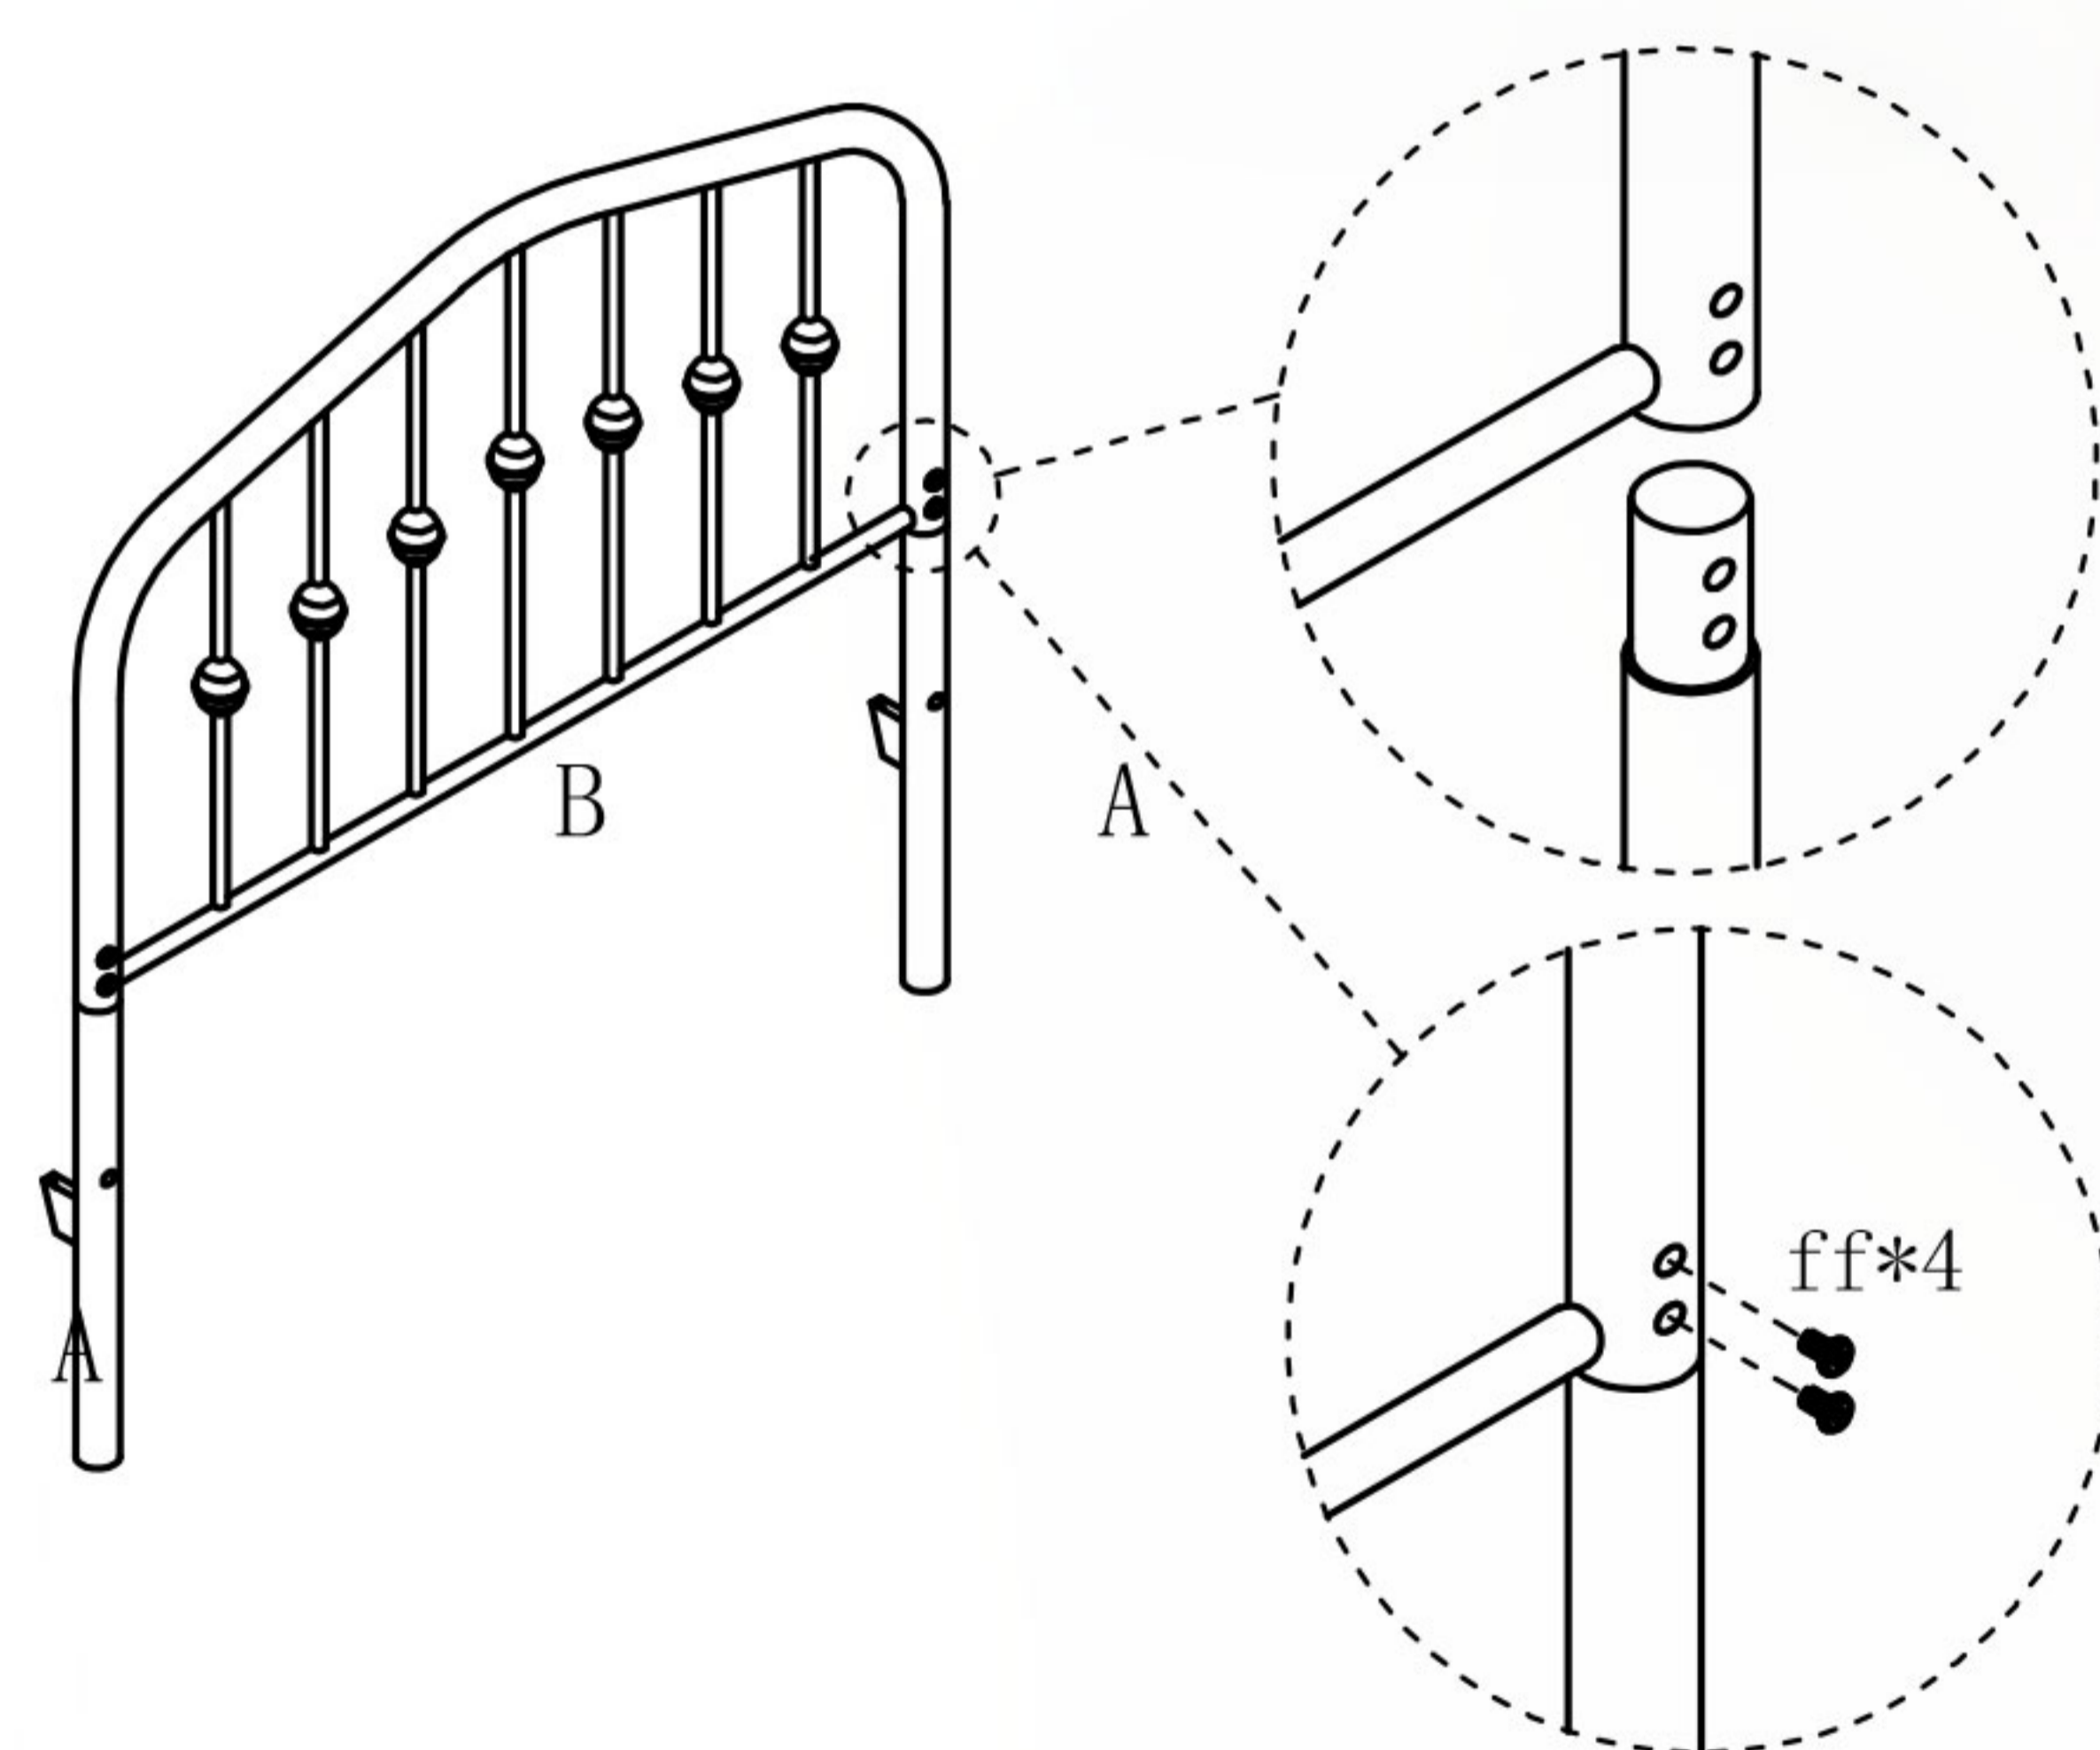


②

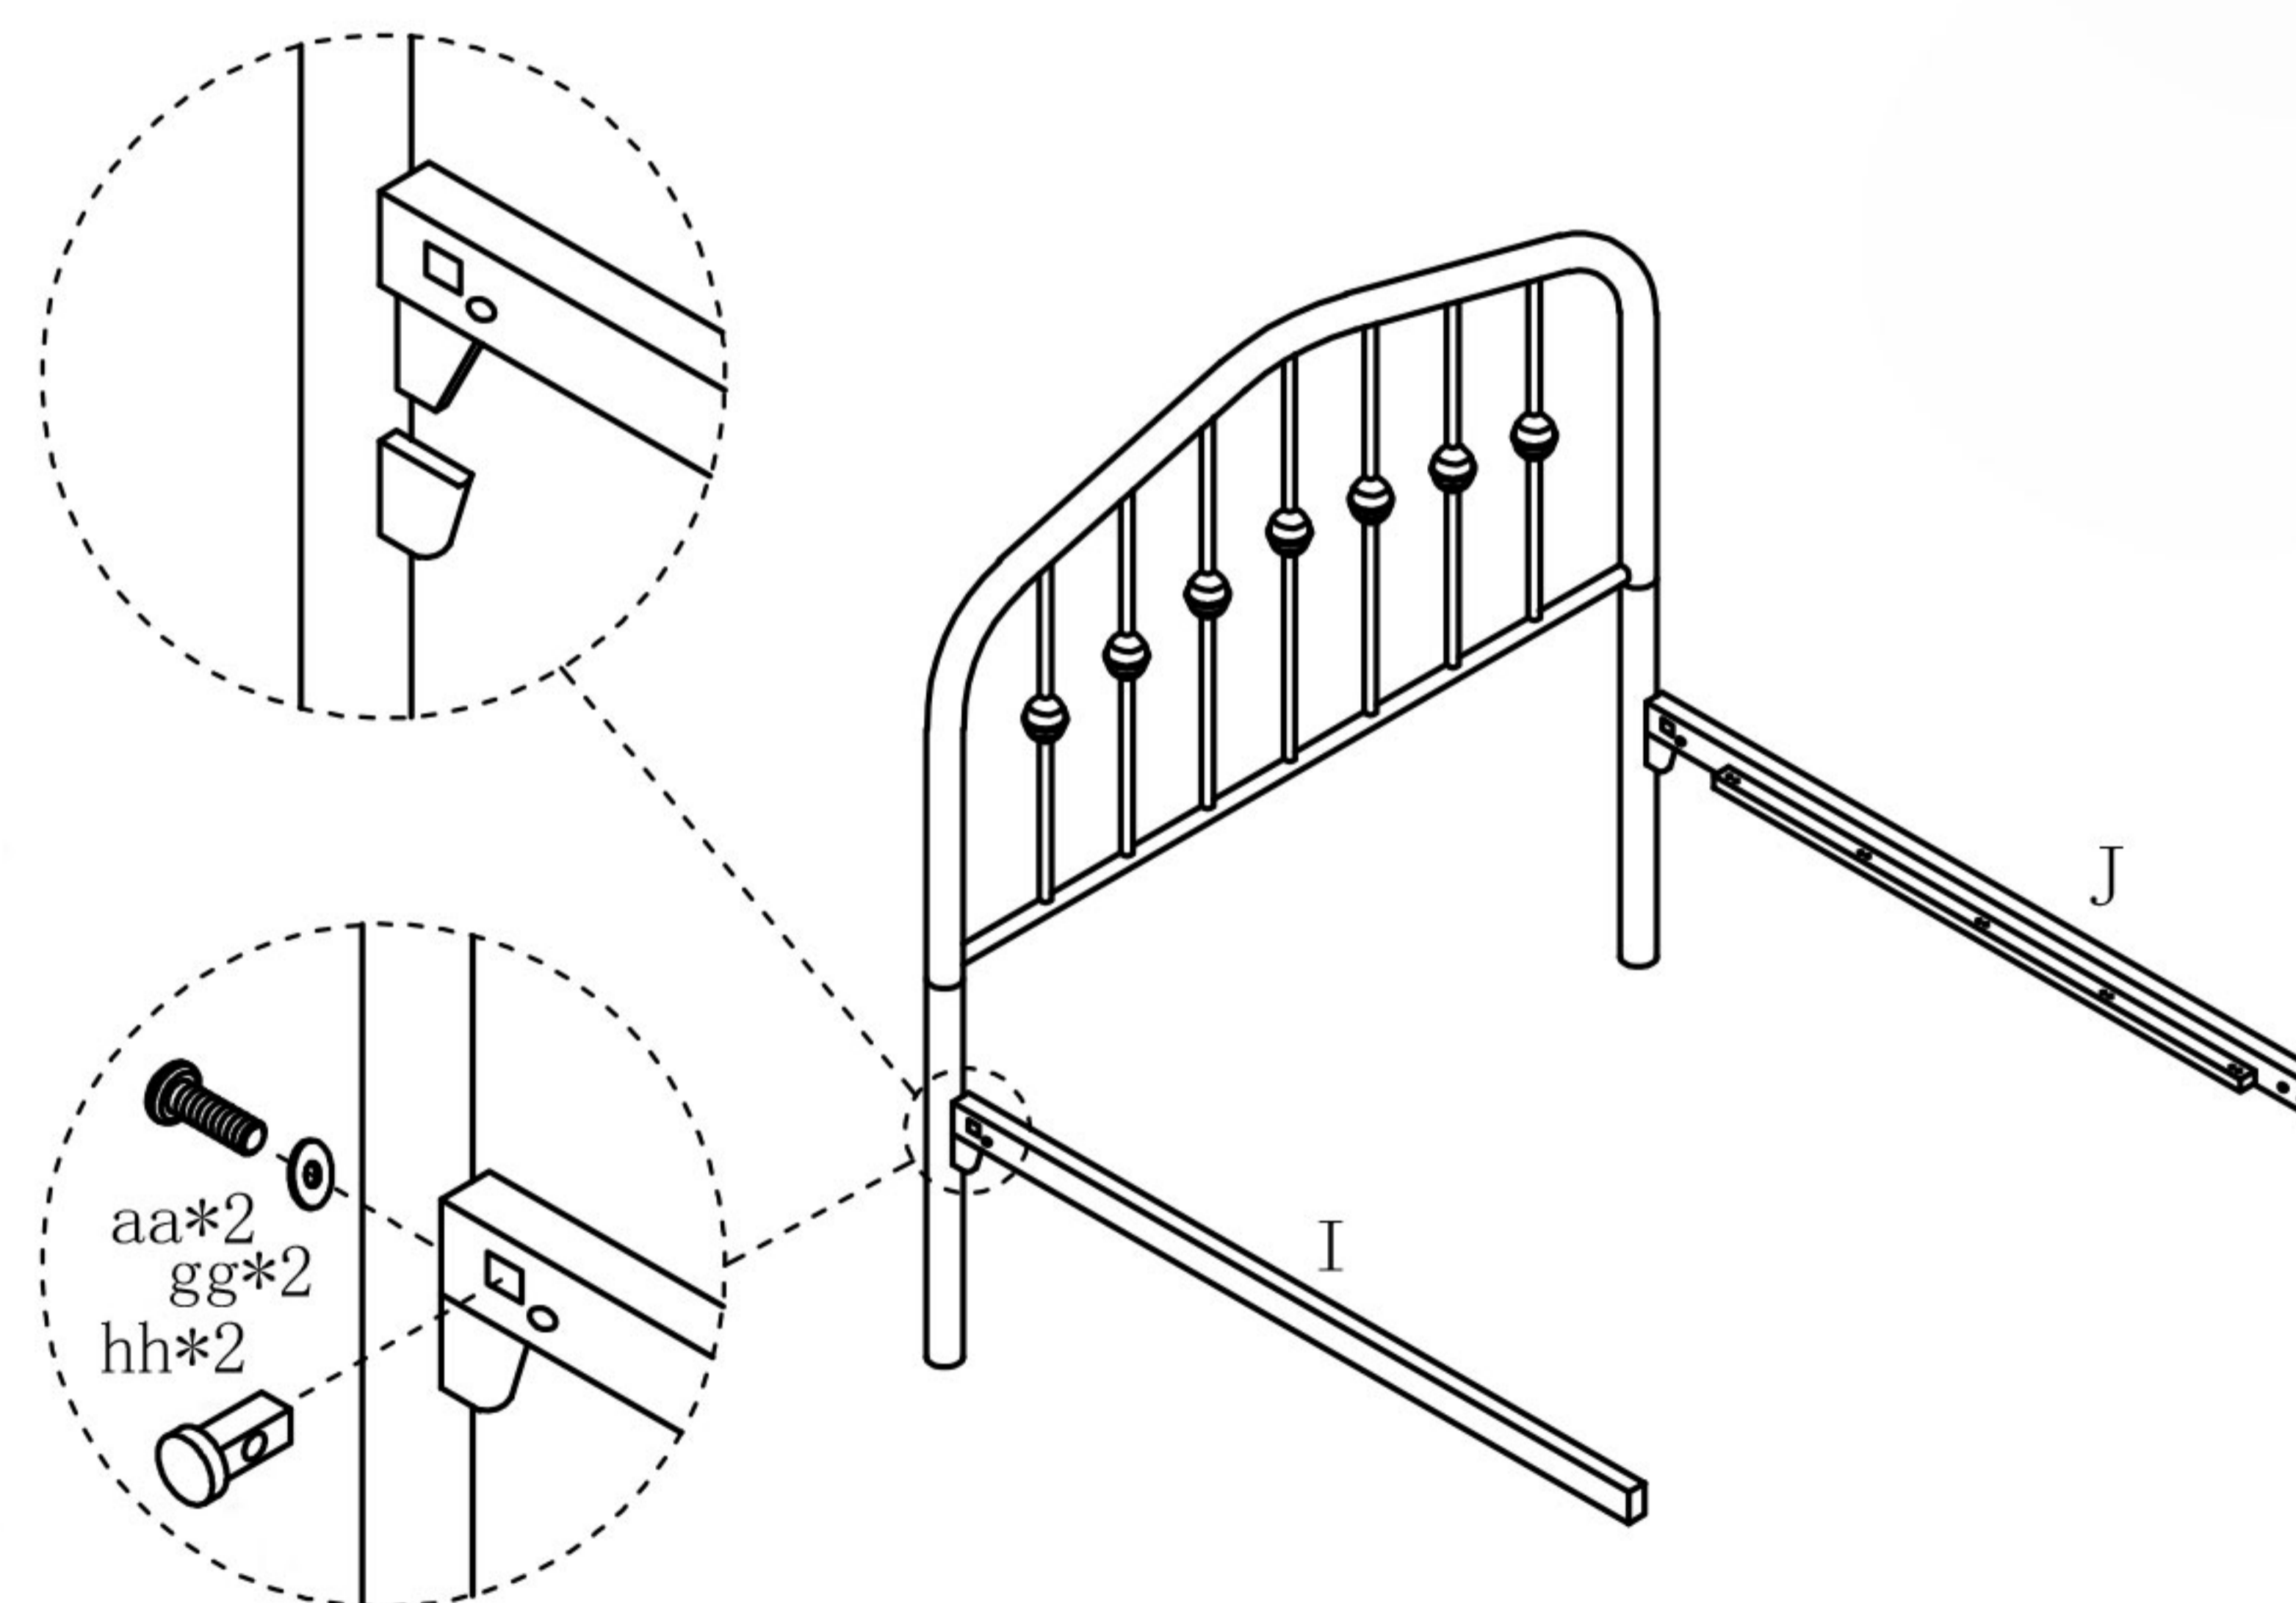 


3

 
3

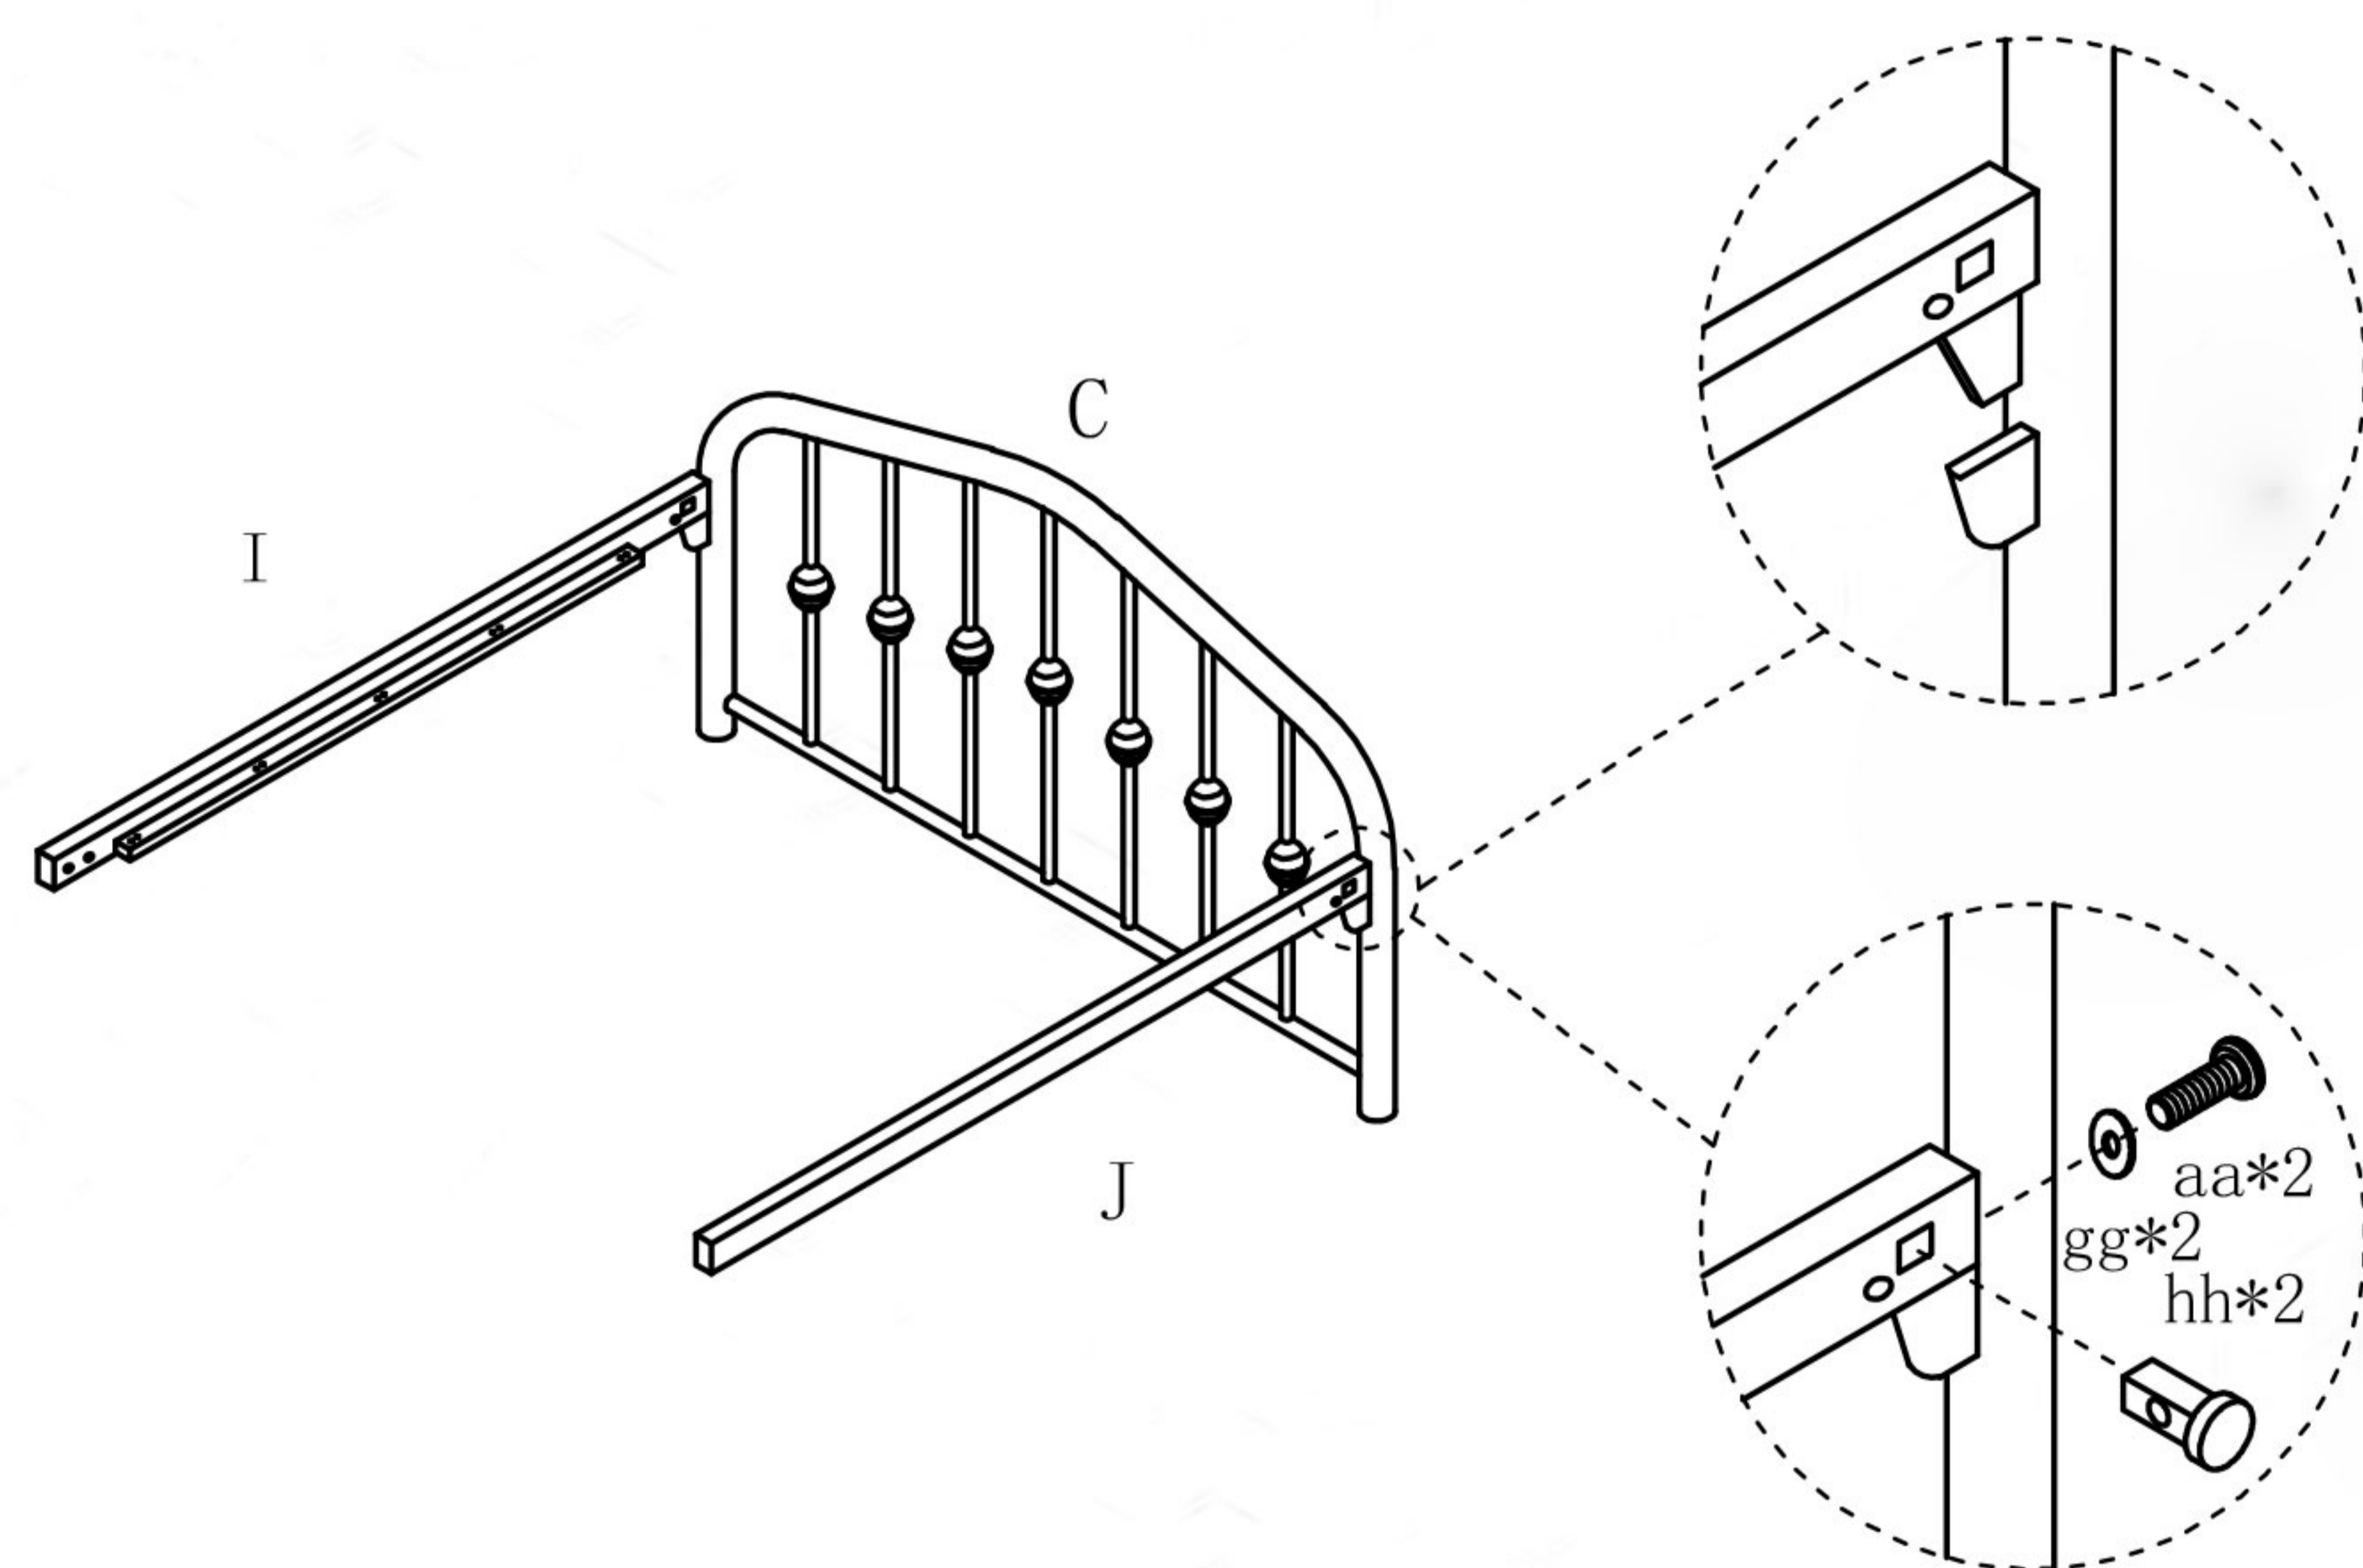


4

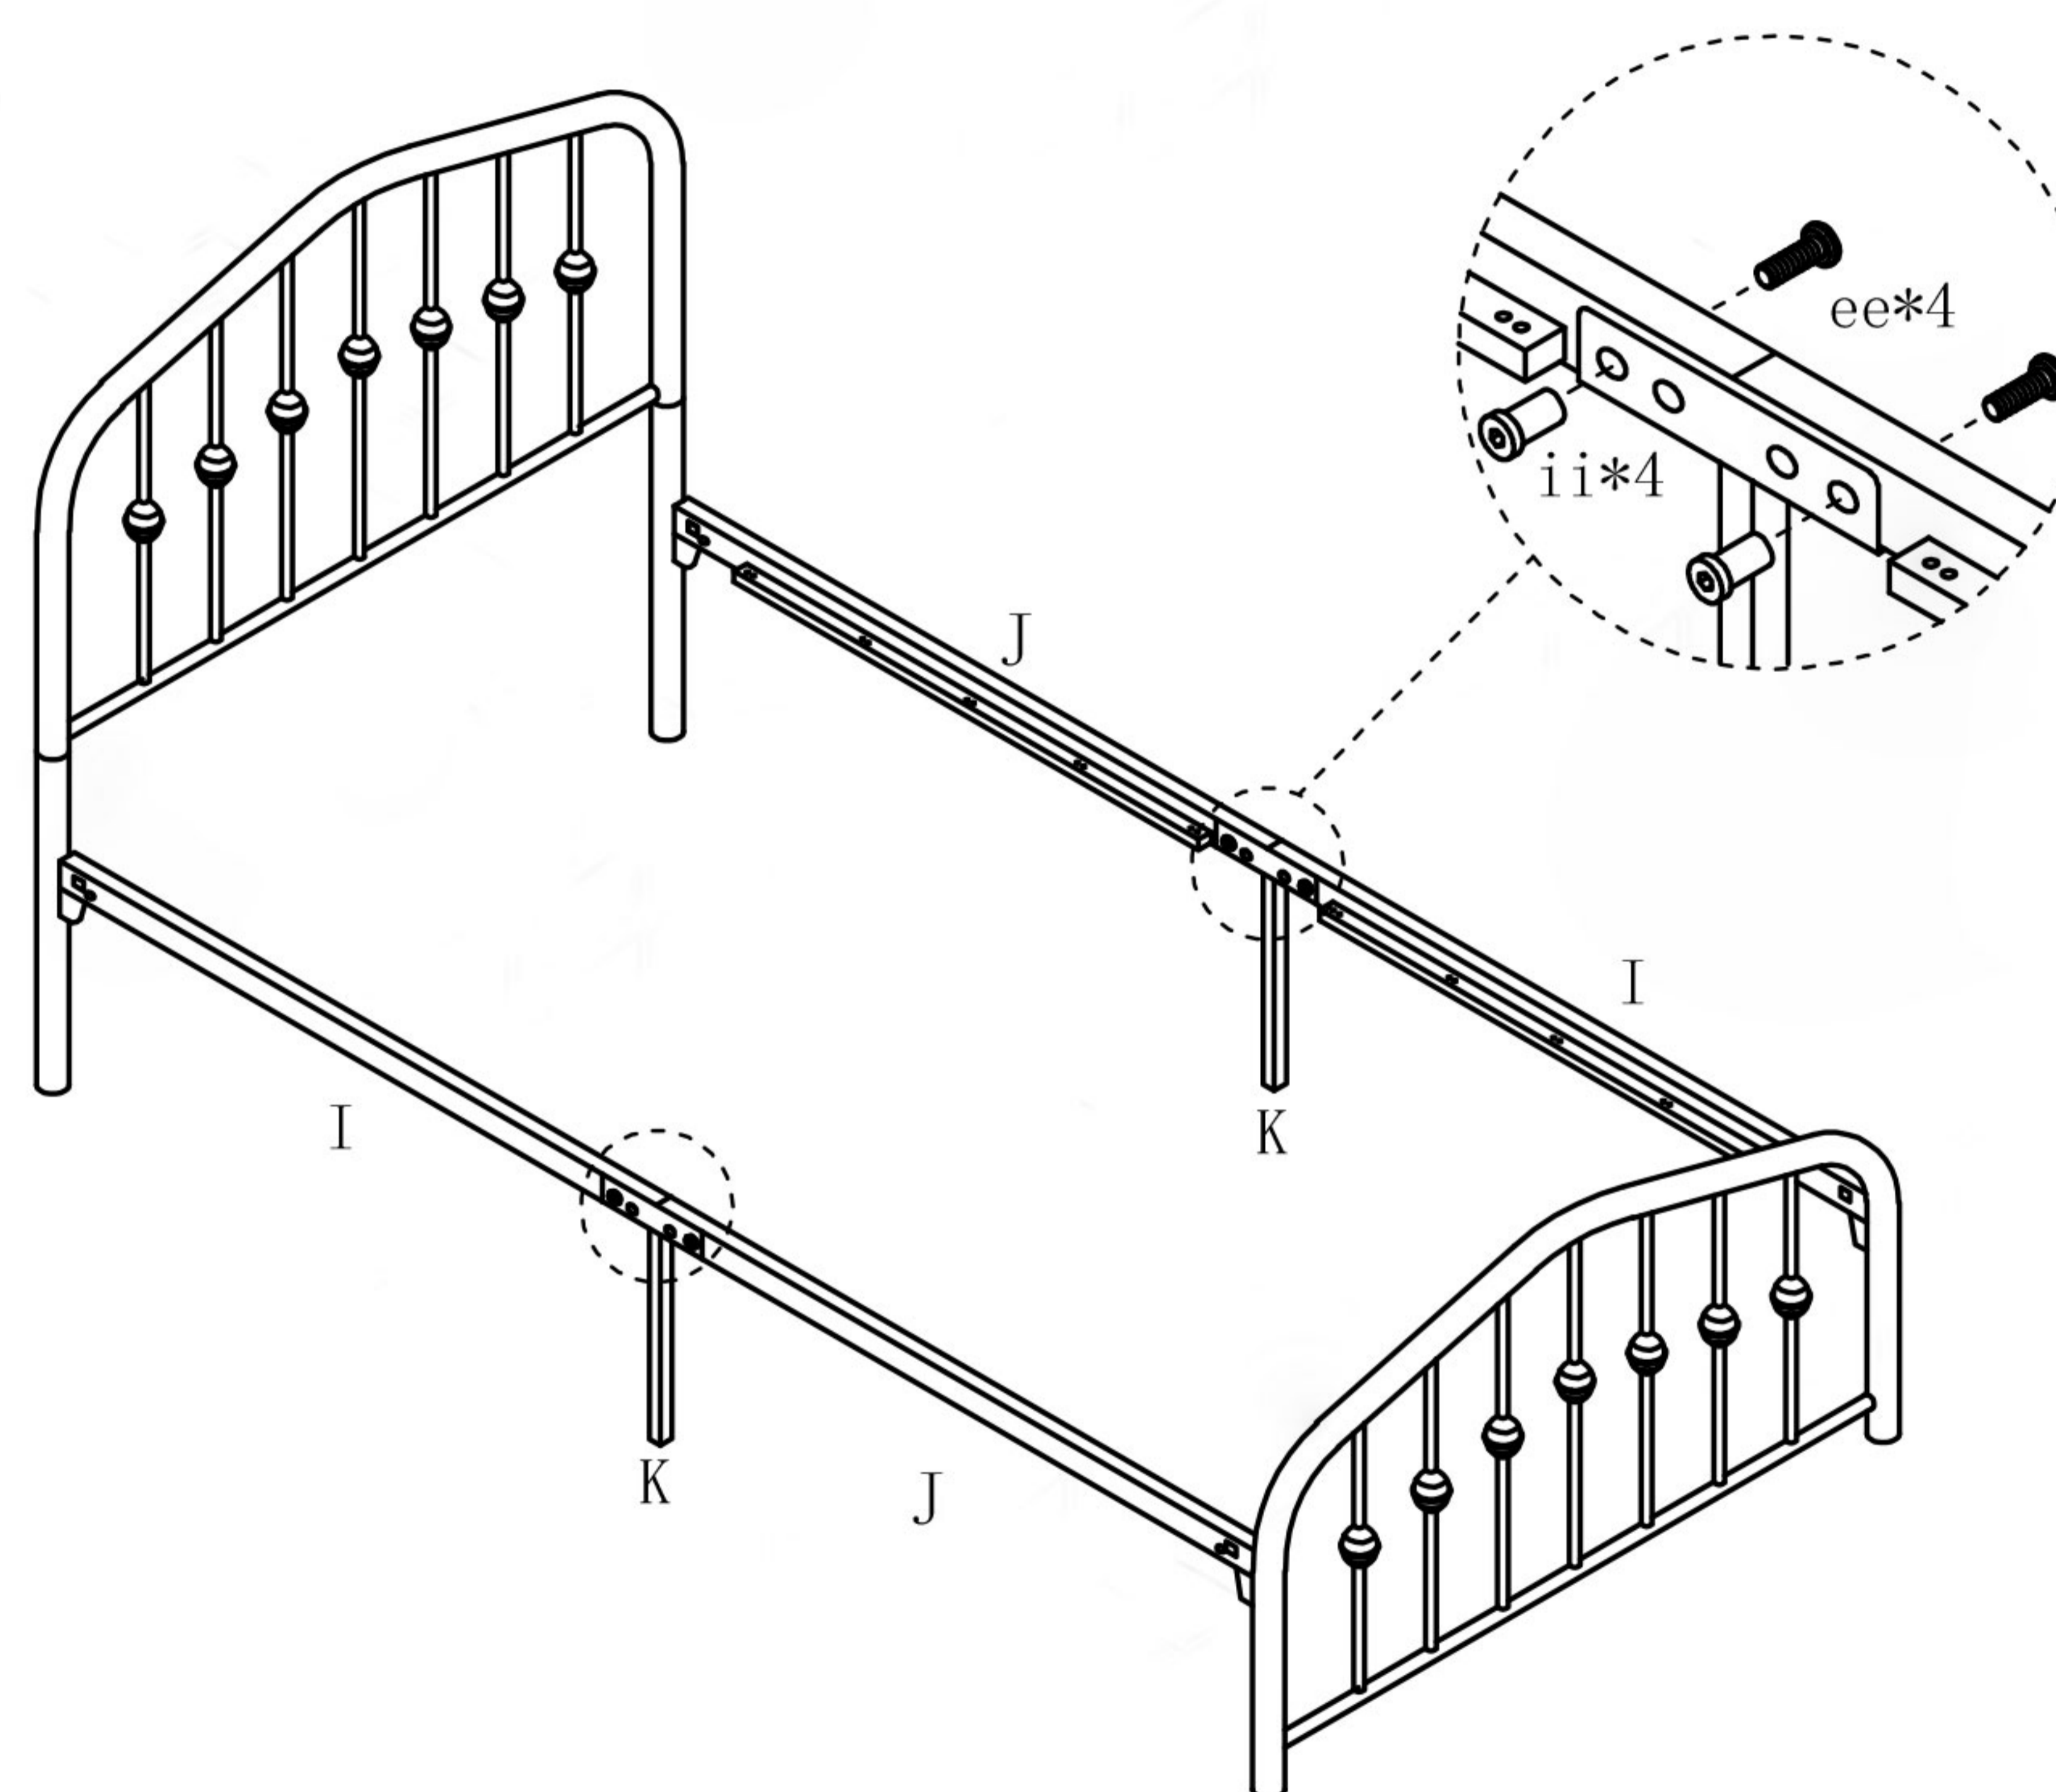 


⑤

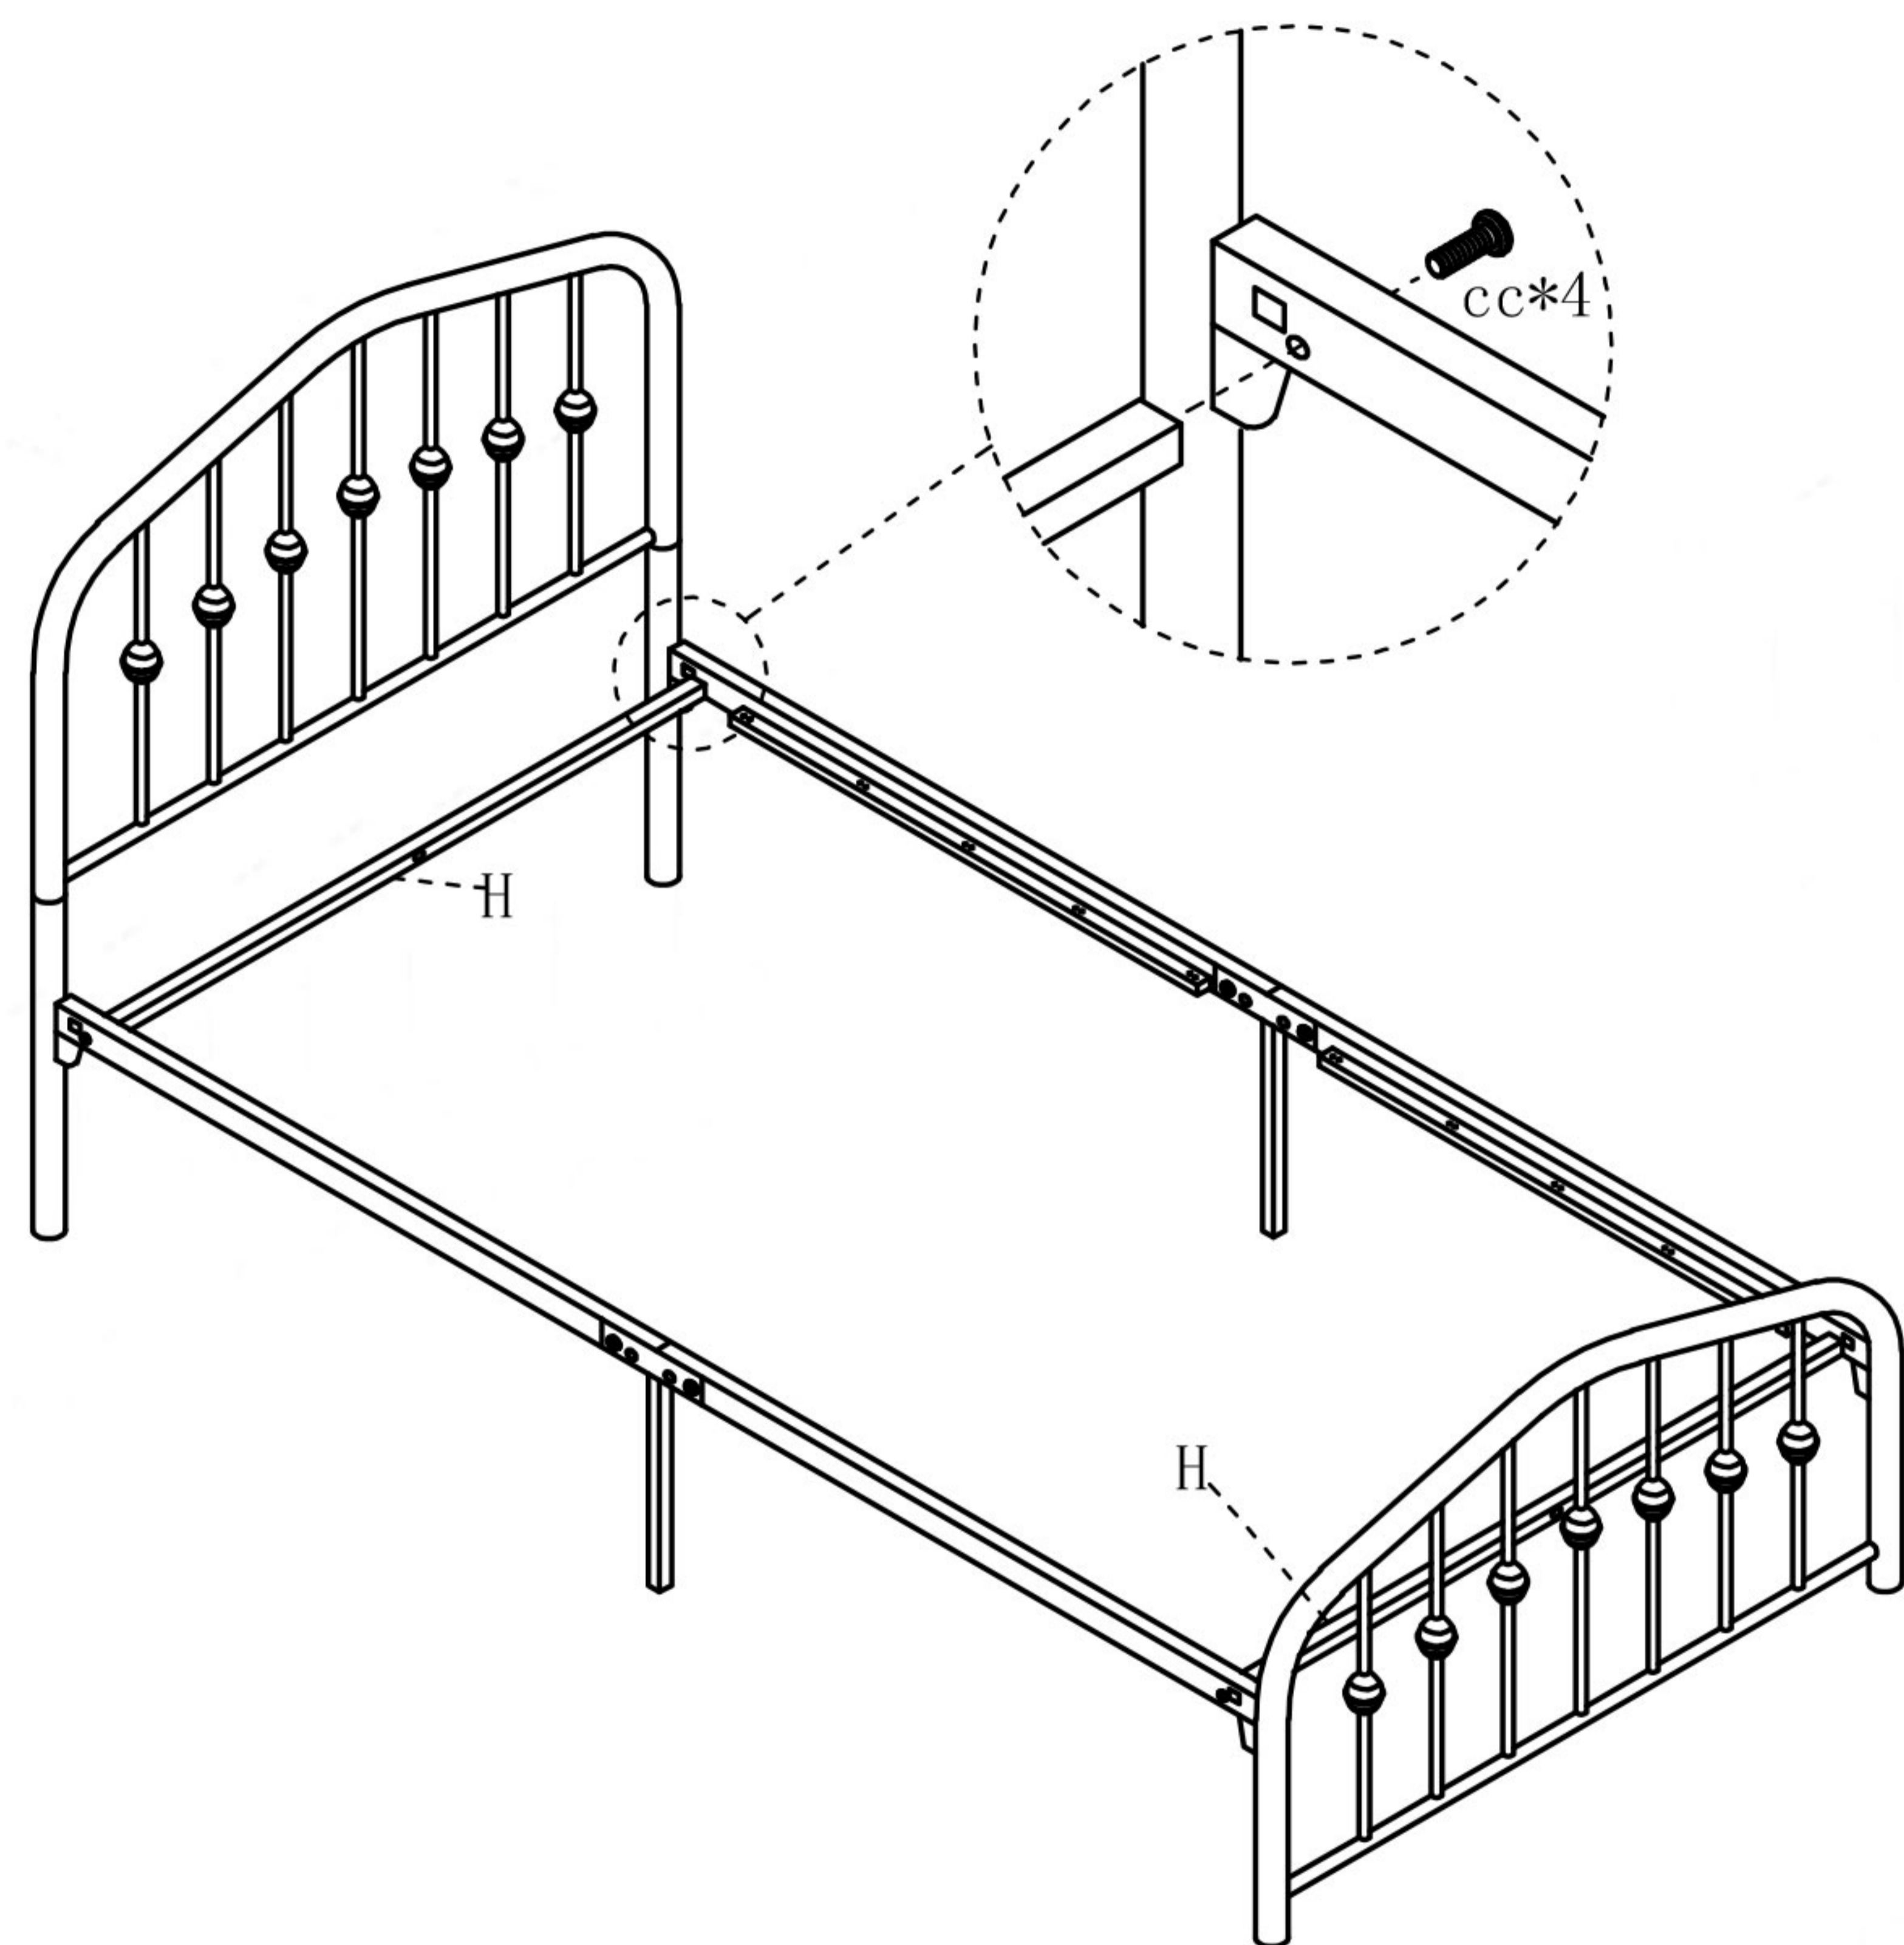 


⑥

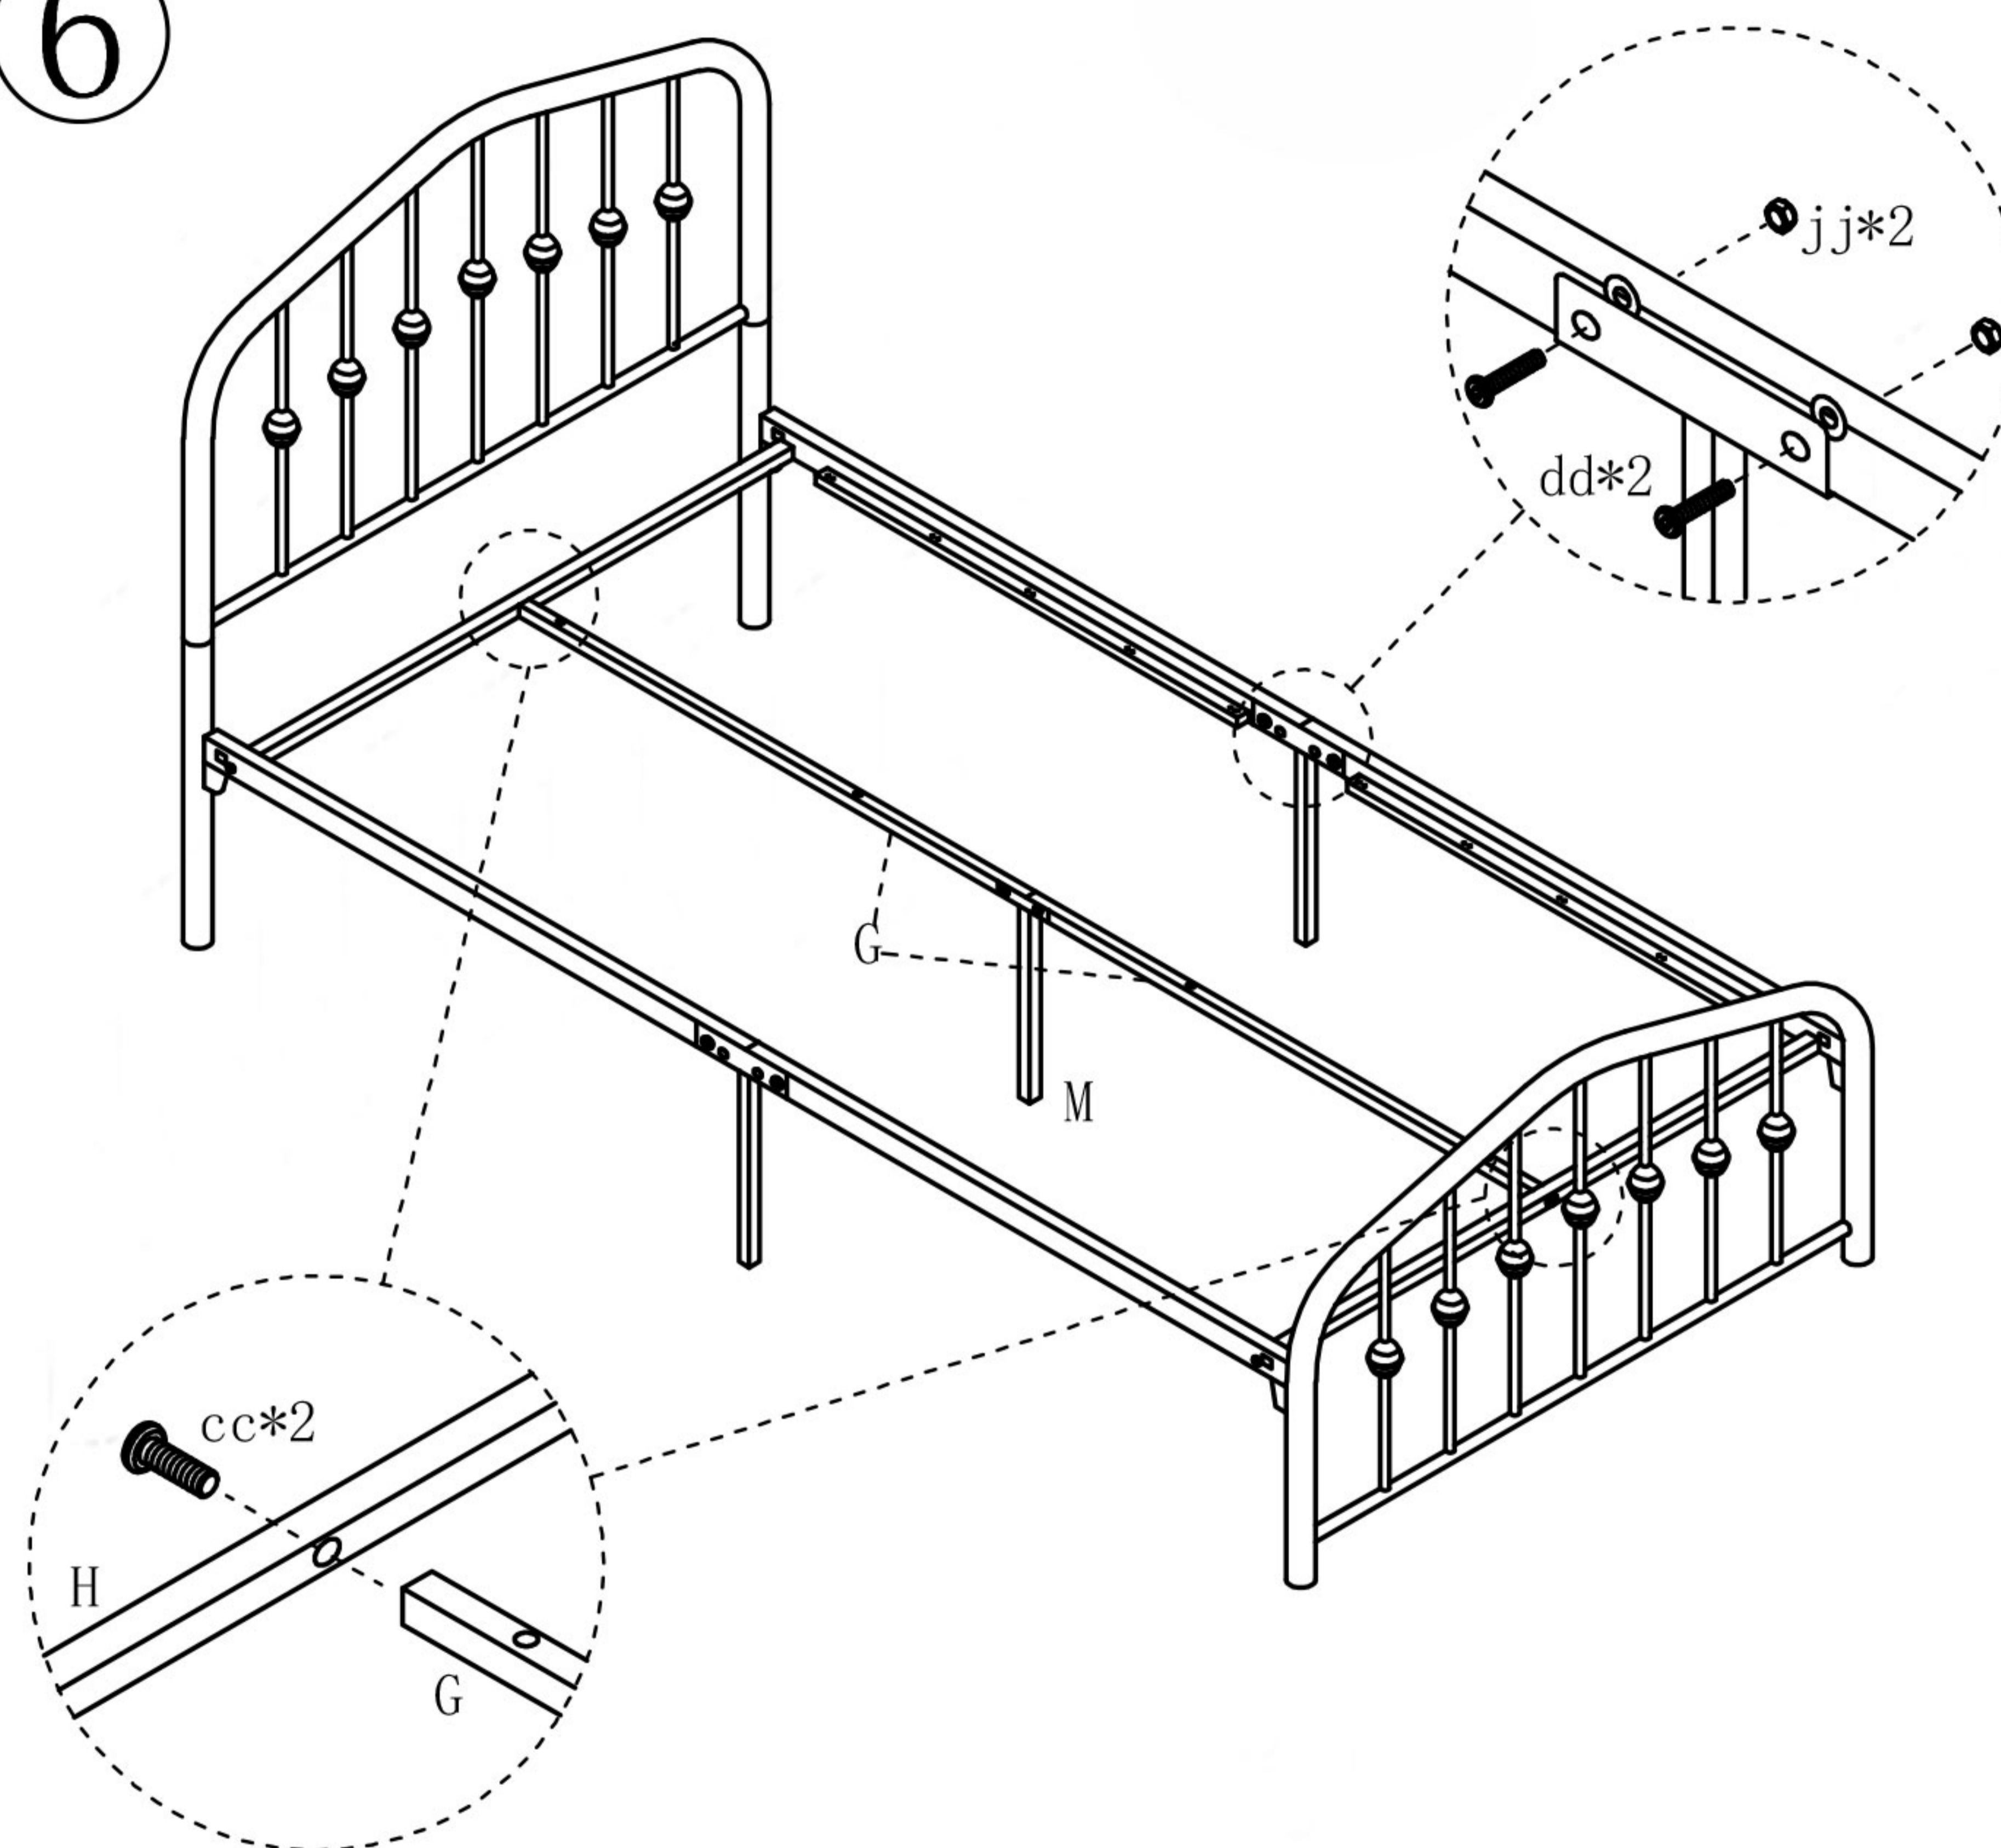 


7

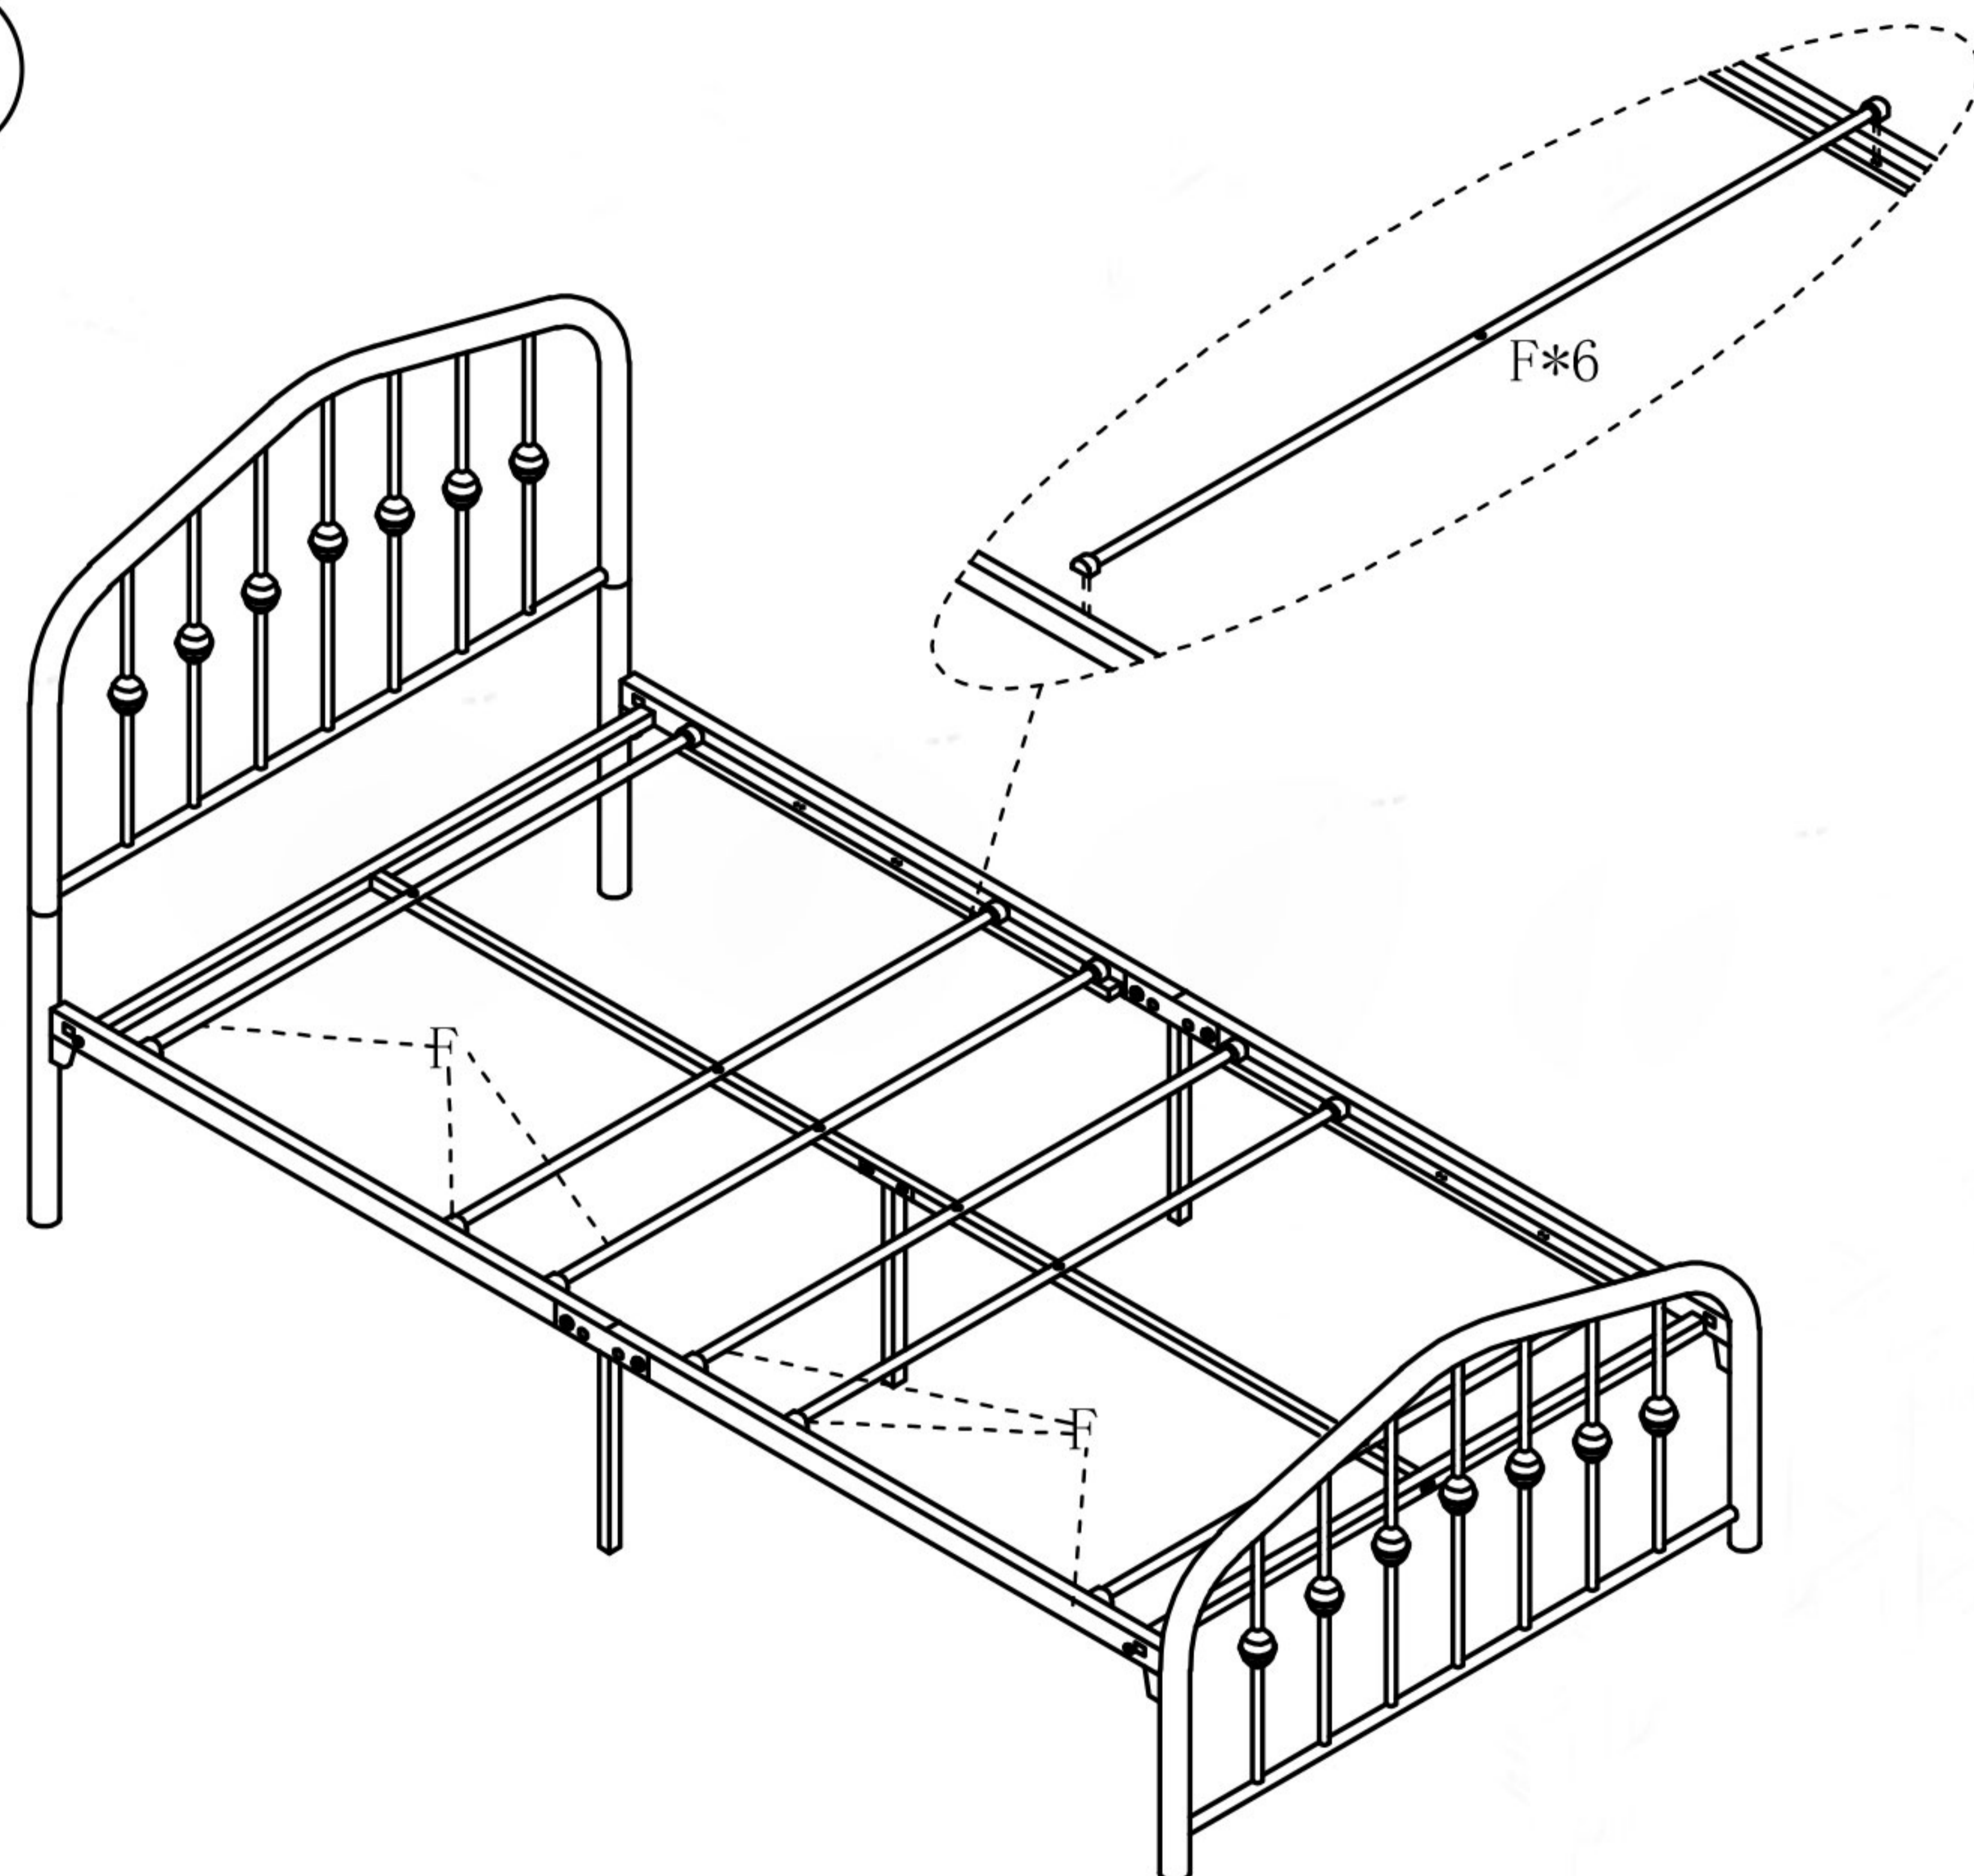 

8

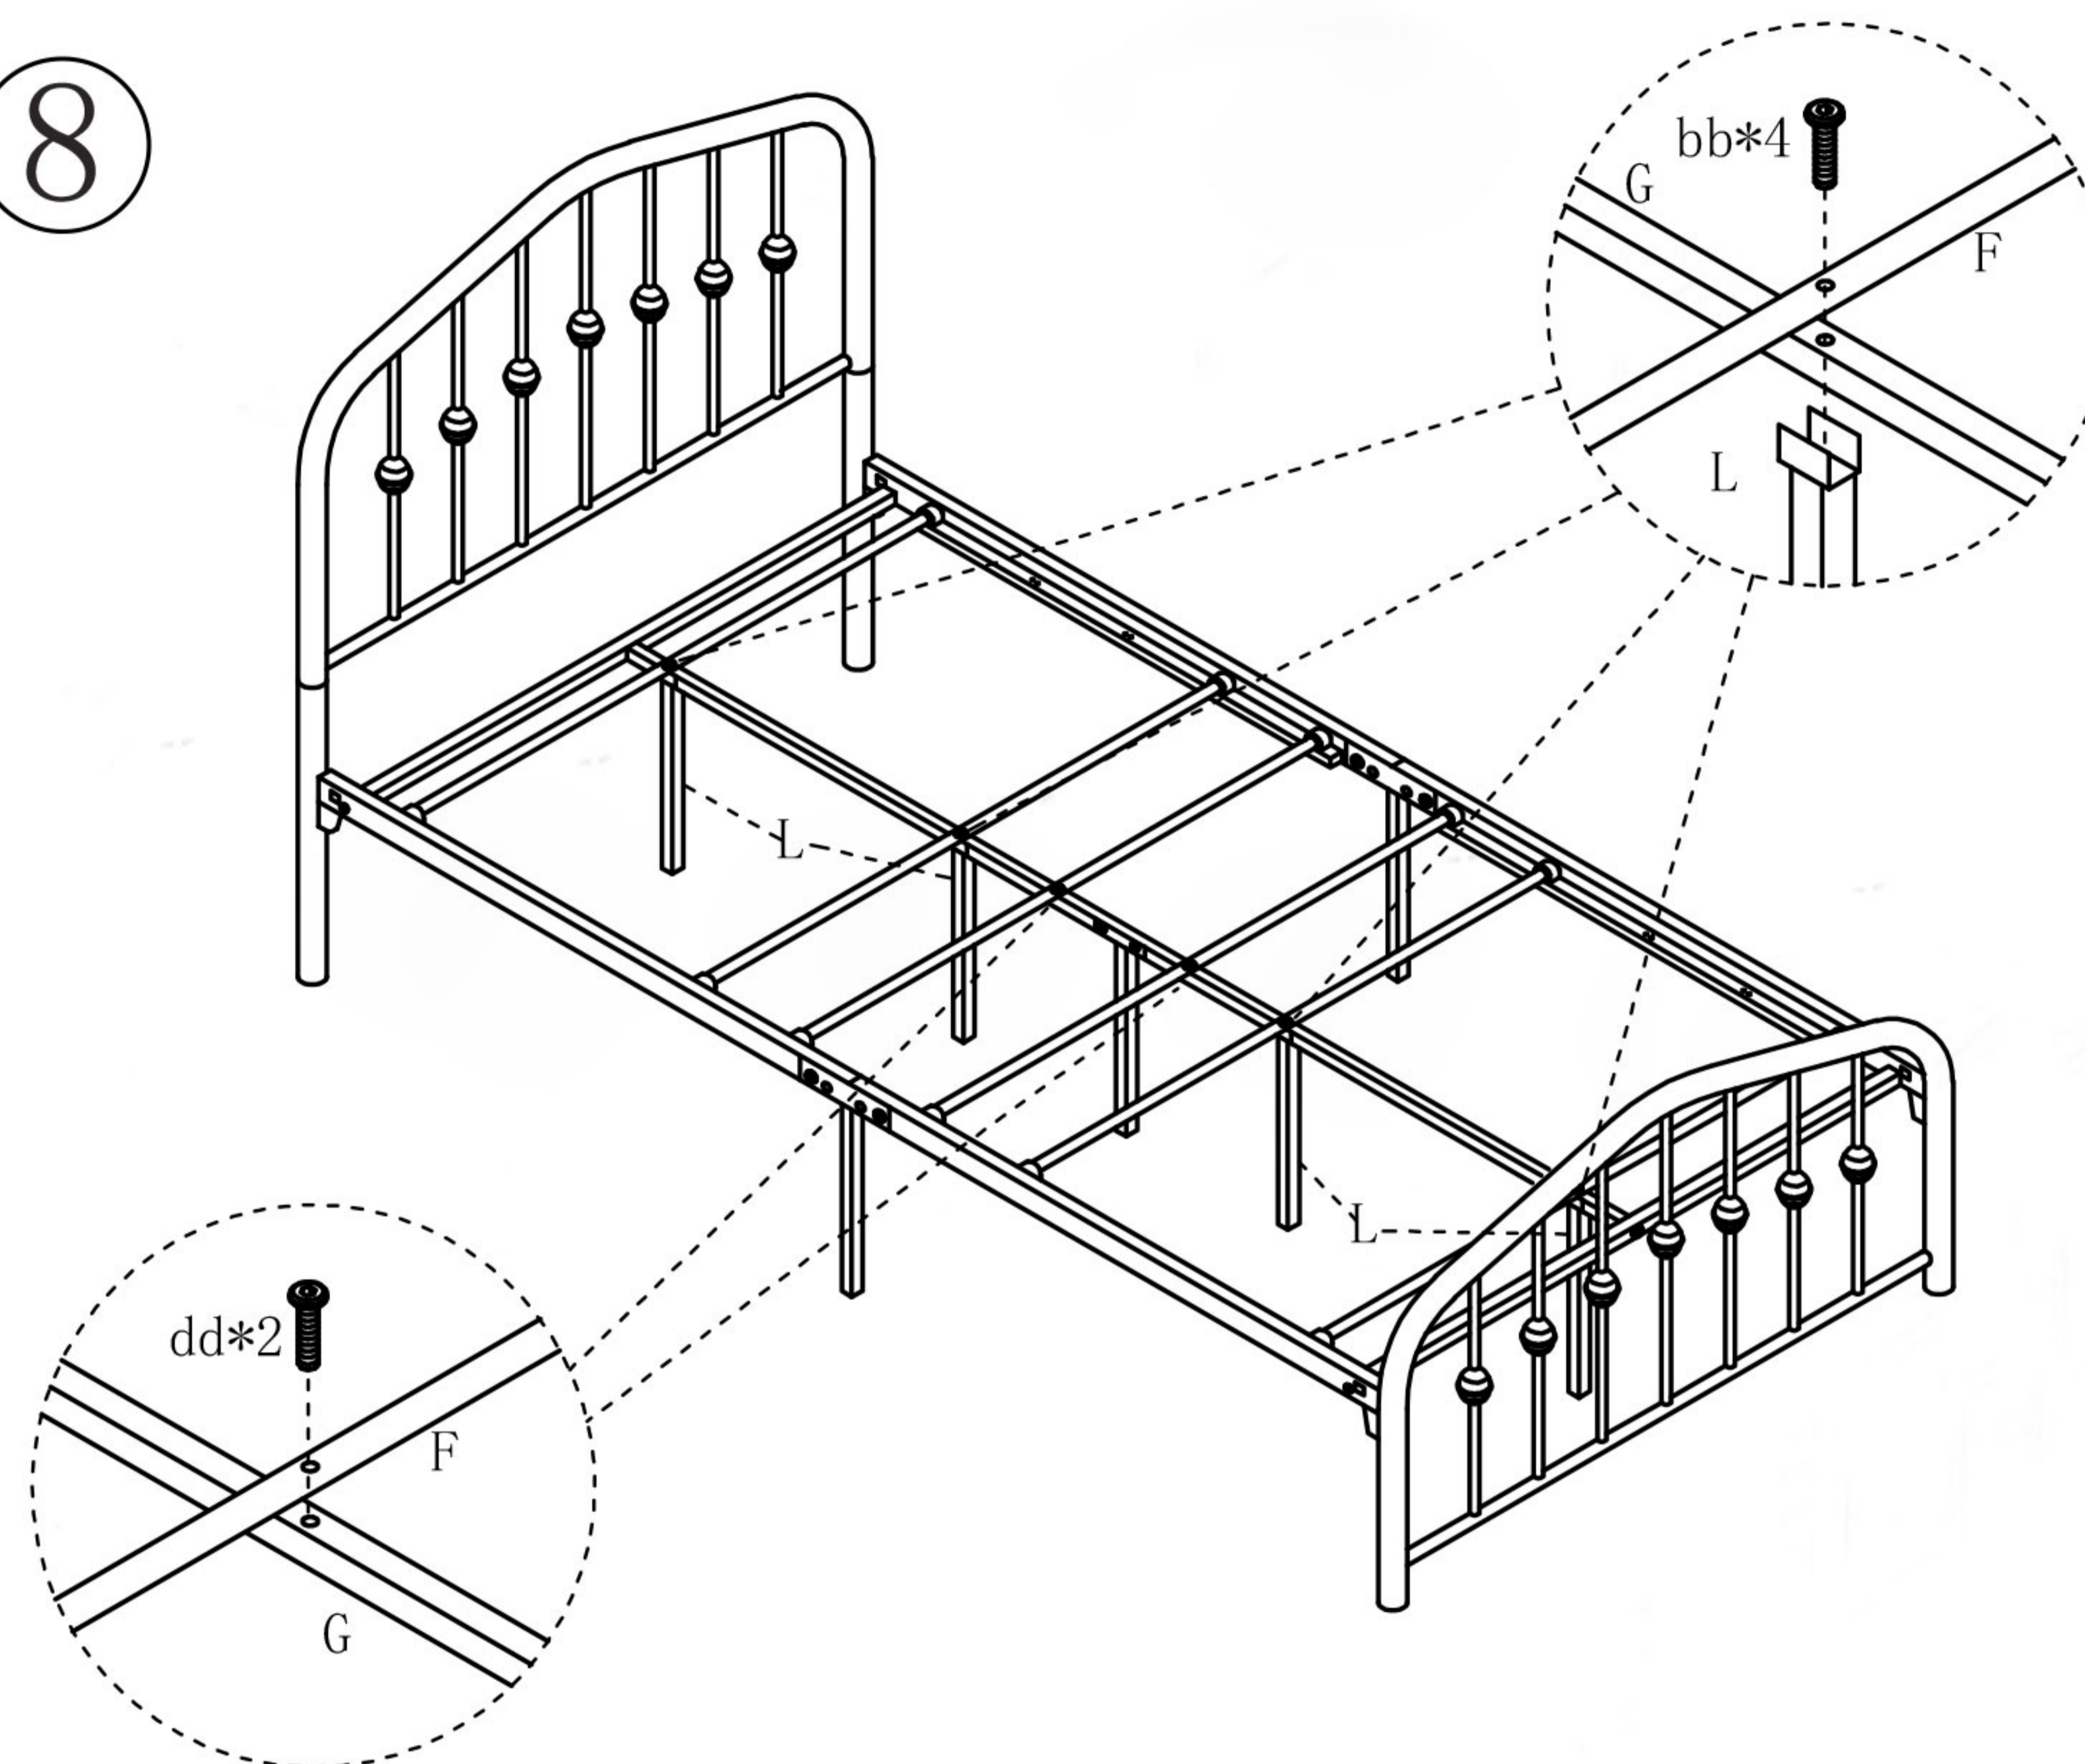 

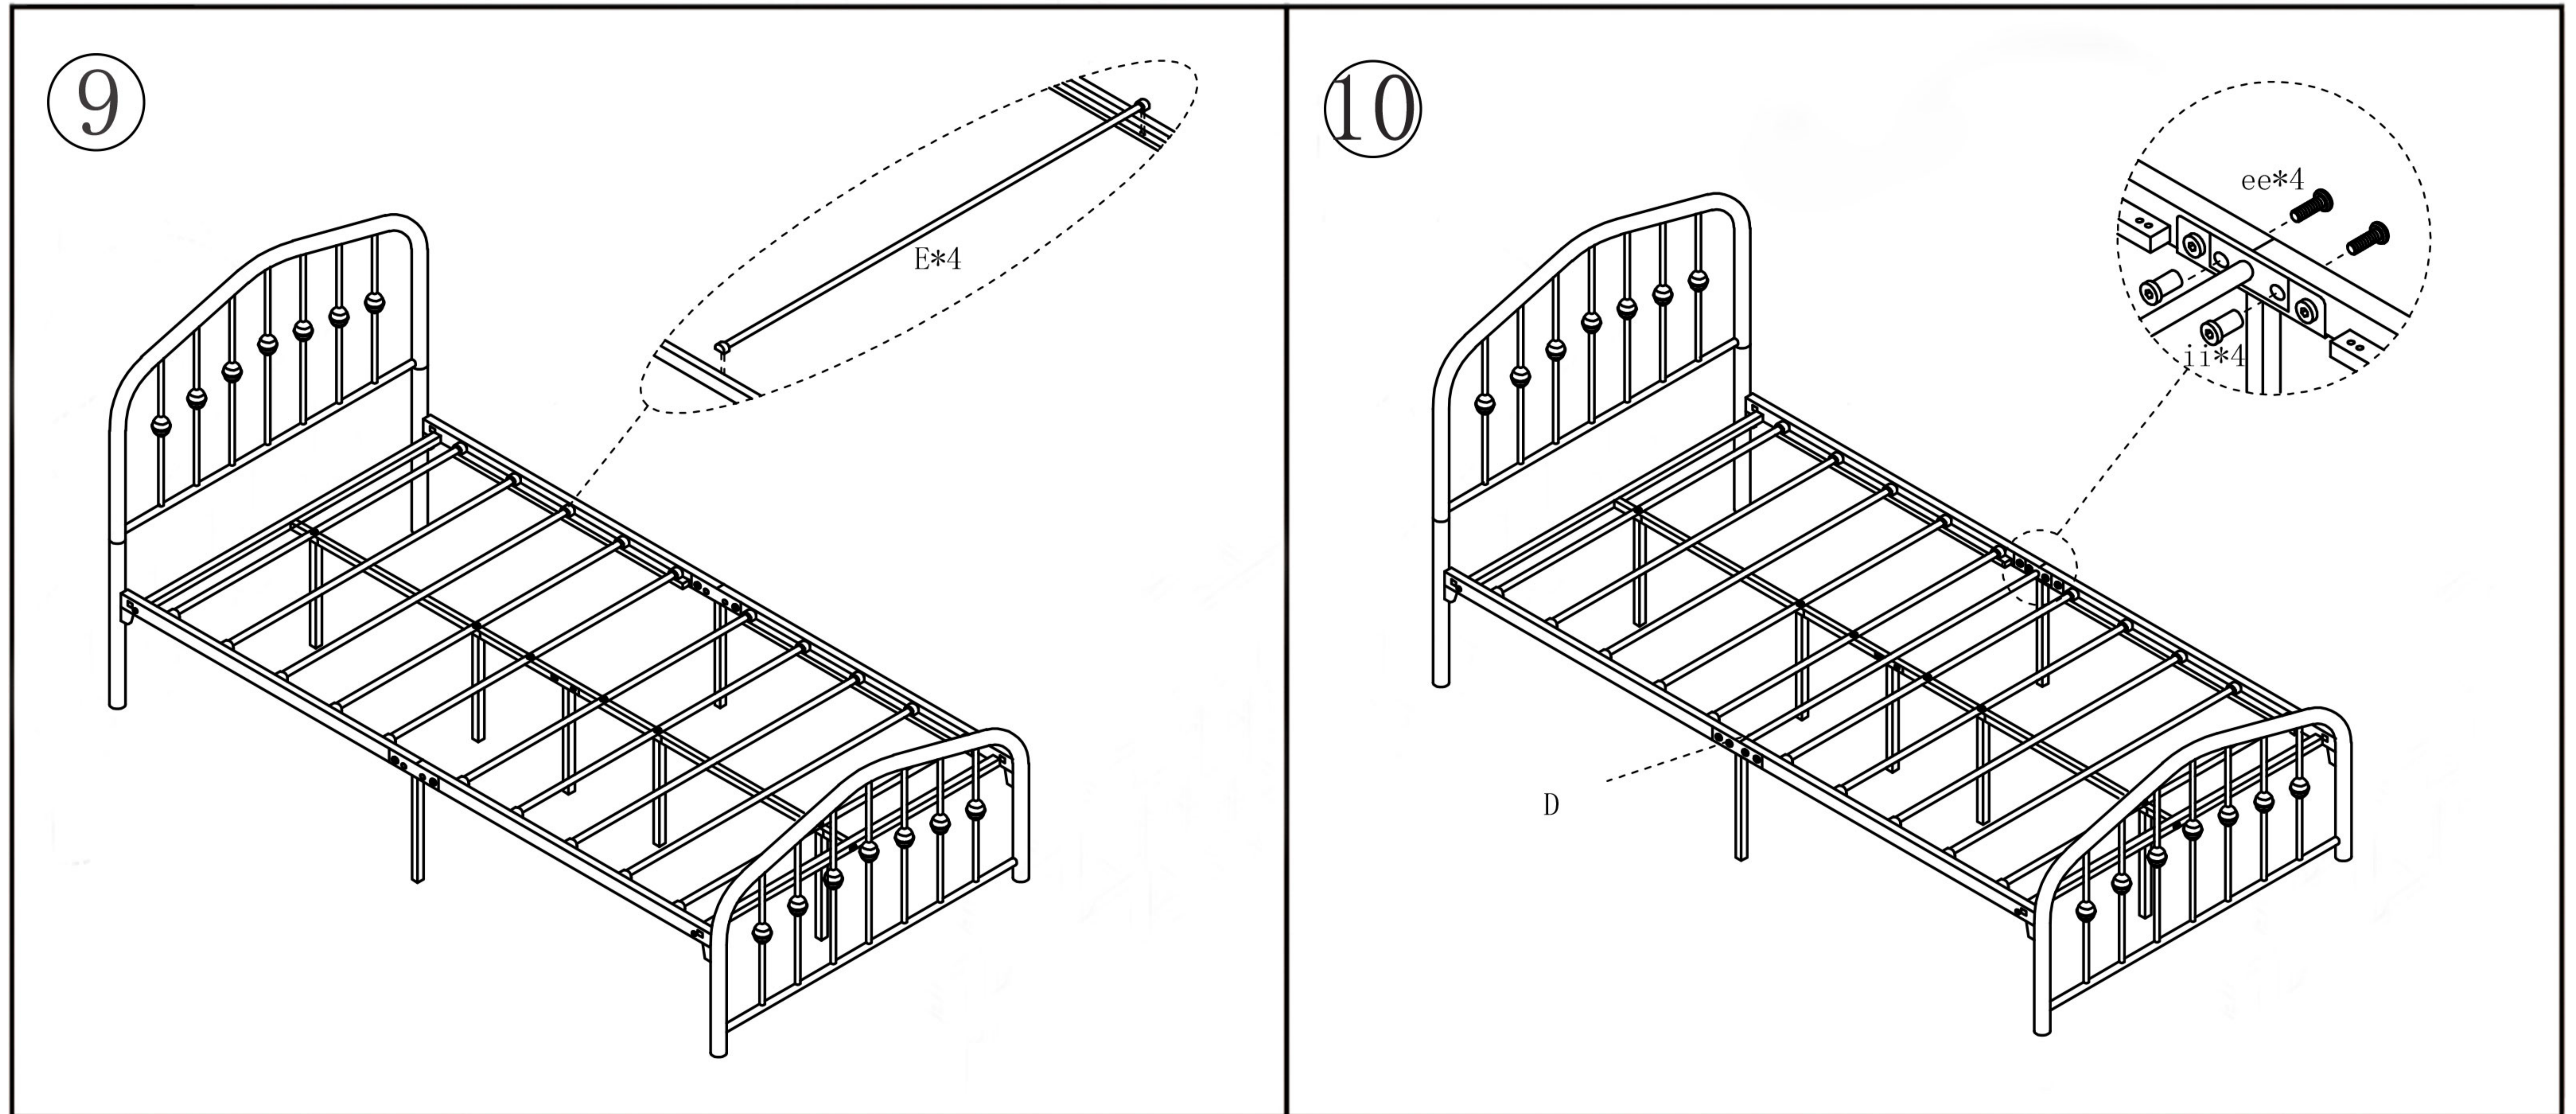 

Warranty Information:

We warranty this product to be free from defects in materials. This warranty covers one year from the date of original purchase.