

ASSEMBLY INSTRUCTIONS

ASSEMBLY
REQUIREMENTS

 
2-Person
Assembly

90 minutes
Assembly Time
(Approximate)

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

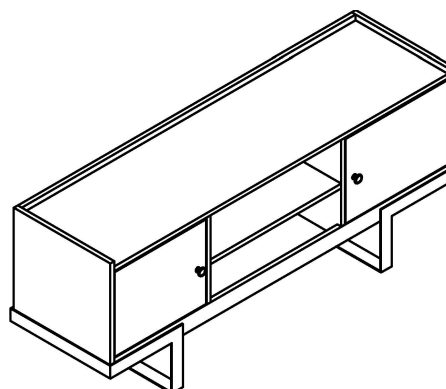

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


ASSEMBLY INSTRUCTIONS

PARTS LIST AND ASSEMBLY OVERVIEW


NO.	PART NAME	QTY	NO.	PART NAME	QTY
(A)	Top Panel	1	(G)	Left Partition Panel	1
(B)	Bottom Panel	1	(H)	Right Partition Panel	1
(C)	Right Door Panel	1	(I)	Back Panel	1
(D)	Left Door Panel	1	(J)	Front Rail	1
(E)	Right Side Panel	1	(K)	Back Rail	1
(F)	Left Side Panel	1	(L)	Metal Leg	2
			(M)	Shelf	1

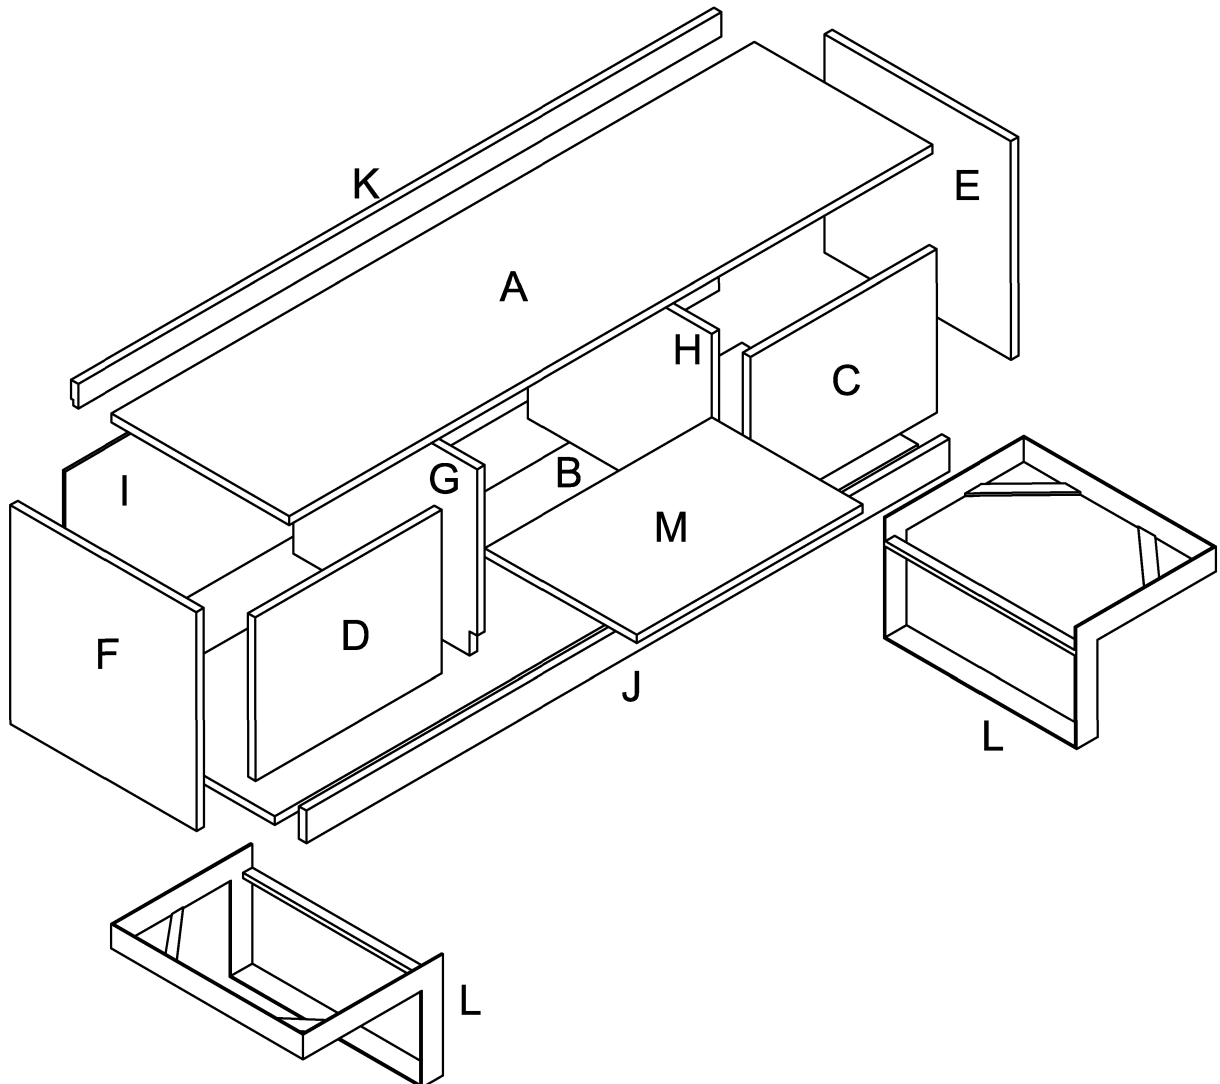 


ASSEMBLY INSTRUCTIONS

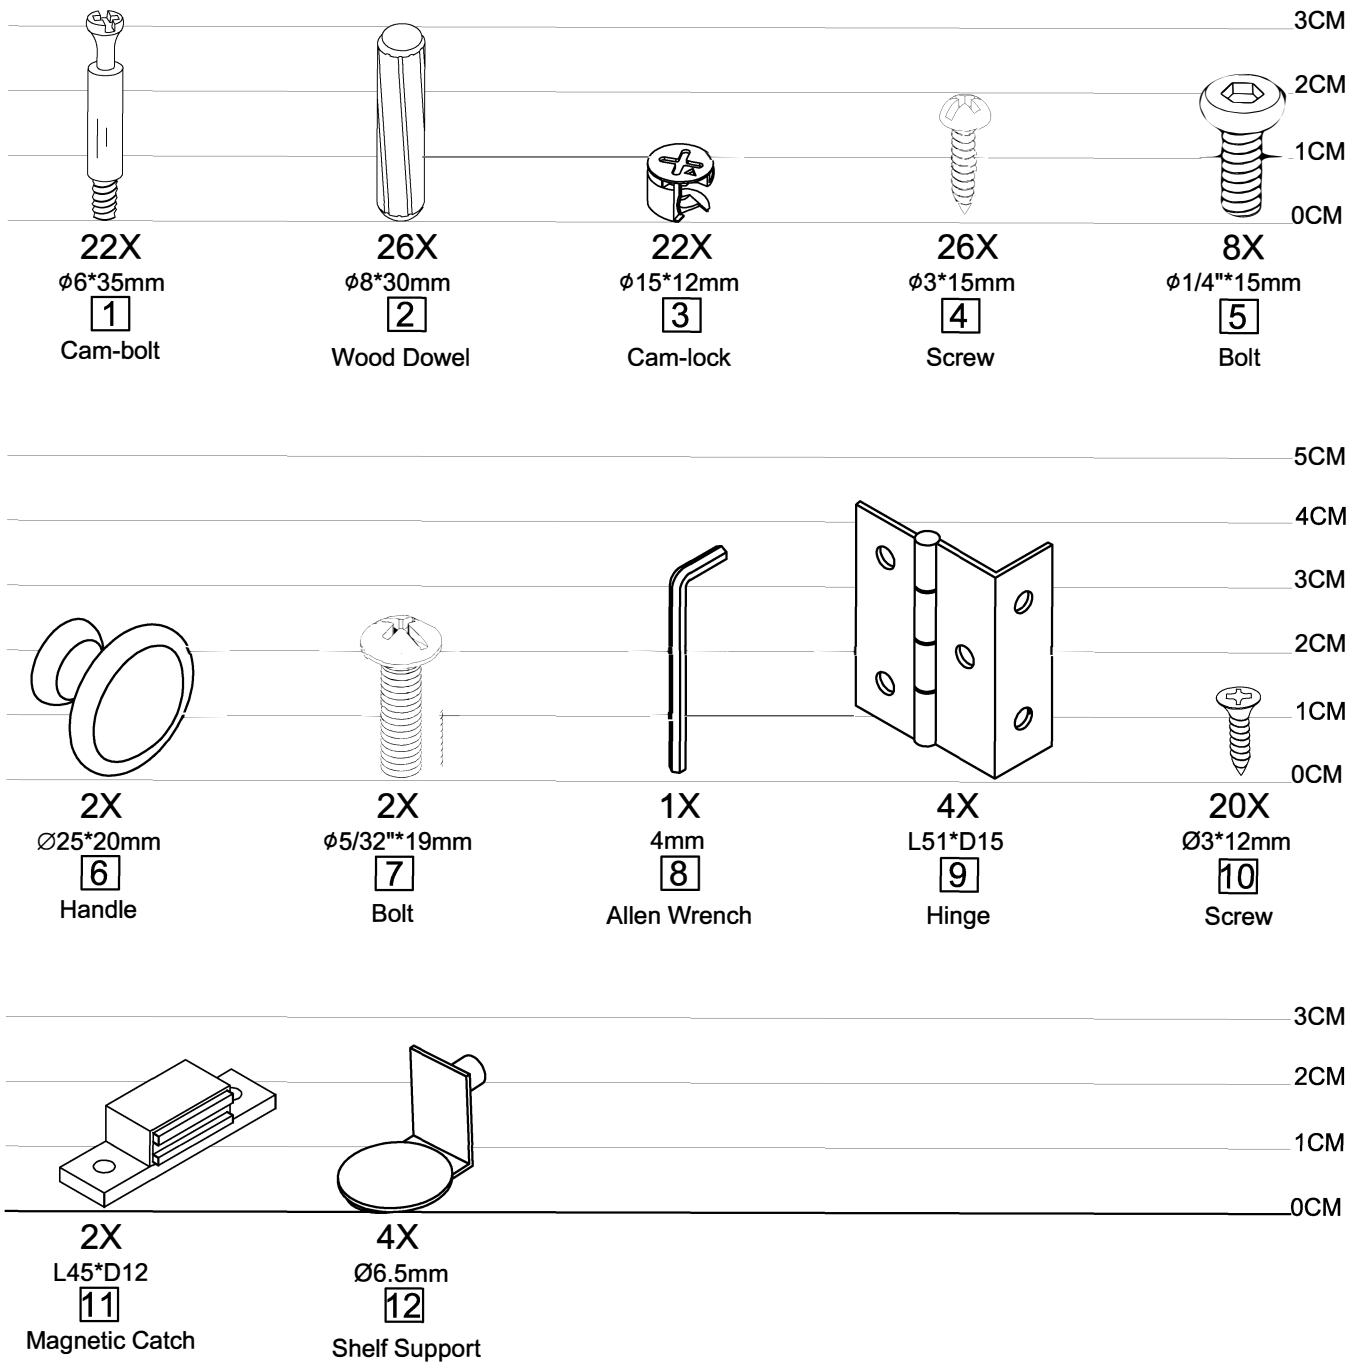 

EXTRA HARDWARE

 

INSTRUCTIONS FOR CAM-BOLT & CAM-LOCK

 


CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

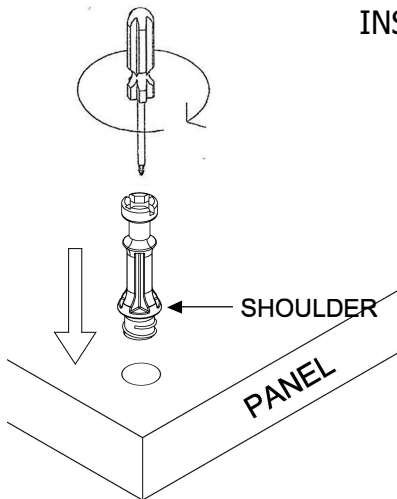 

 Place Cam-bolt on pre-drilled hole and screw in vertically

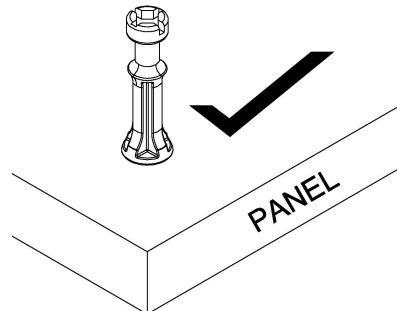

 
Shoulder is flushed (on the same level) with the panel.

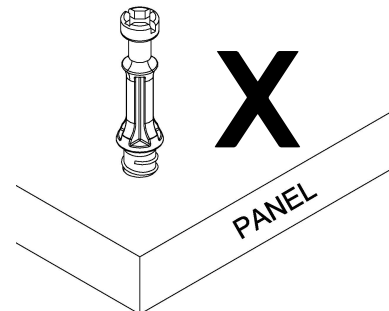

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

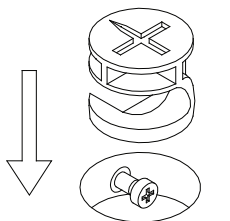

Insert Cam-lock with arrow align to Cam-bolt head



 CORRECT



WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

 


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

ASSEMBLY INSTRUCTIONS


STEP 1

- Place the following parts as shown on a flat surface and on a soft material: Top Panel (A), Bottom Panel (B), Right Side Panel (E), Left Side Panel (F), Front Rail (J) and Back Rail (K).
- Screw in Cam-bolt (1) into designated holes on each part. Refer to Page 4 for instructions on inserting and tightening cam-bolts.
- On Top Panel (A) locate pilot holes for Magnetic Catch (11) and use Screw (4) to affix Magnetic Catch.

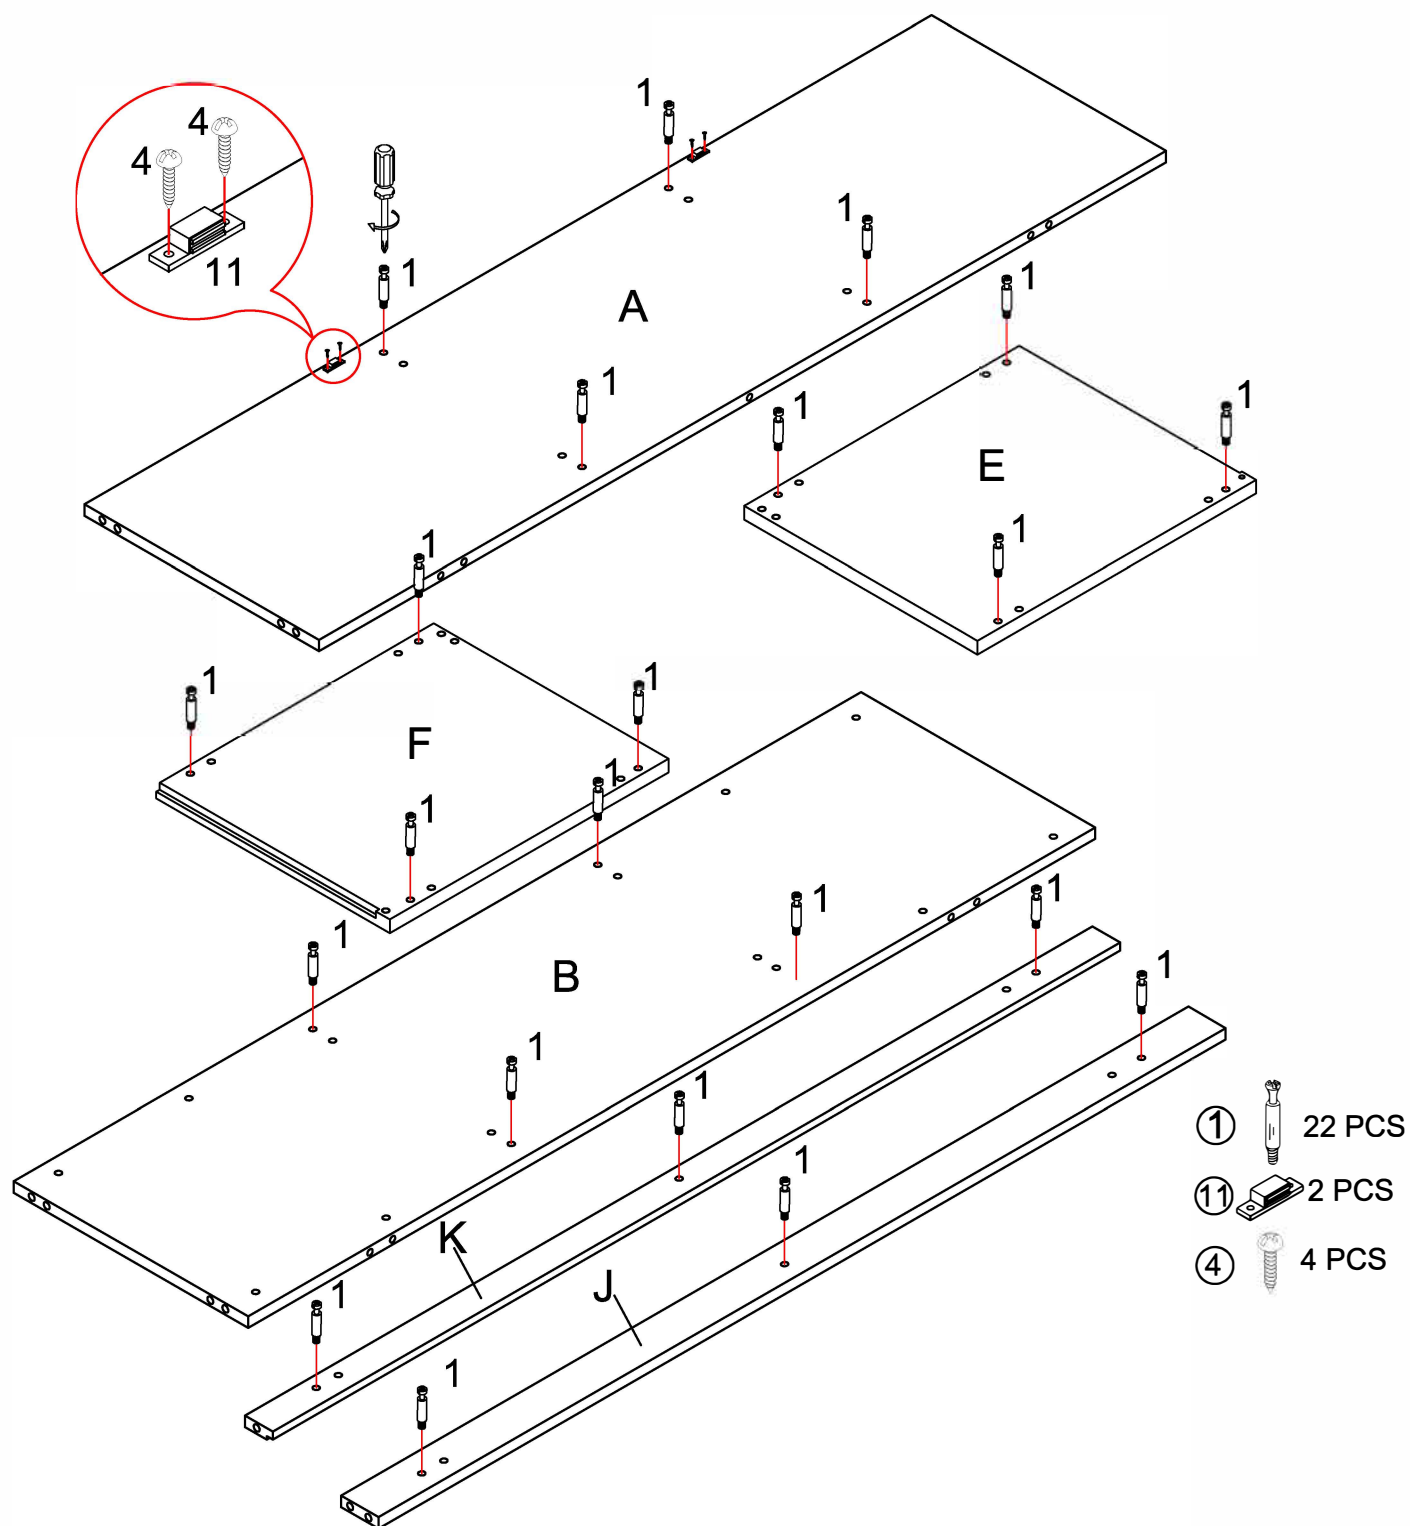


ASSEMBLY INSTRUCTIONS

 - STEP 2**
- On Front Rail (J) insert Wood Dowel (2) into designated hole beside cam-bolt and attach (J) to Bottom Panel (B).
 - Insert Cam-lock (3) into designated holes on (B) then turn clockwise to lock onto cam-bolt. Refer to Page 4 for instructions on inserting and tightening cam-lock.

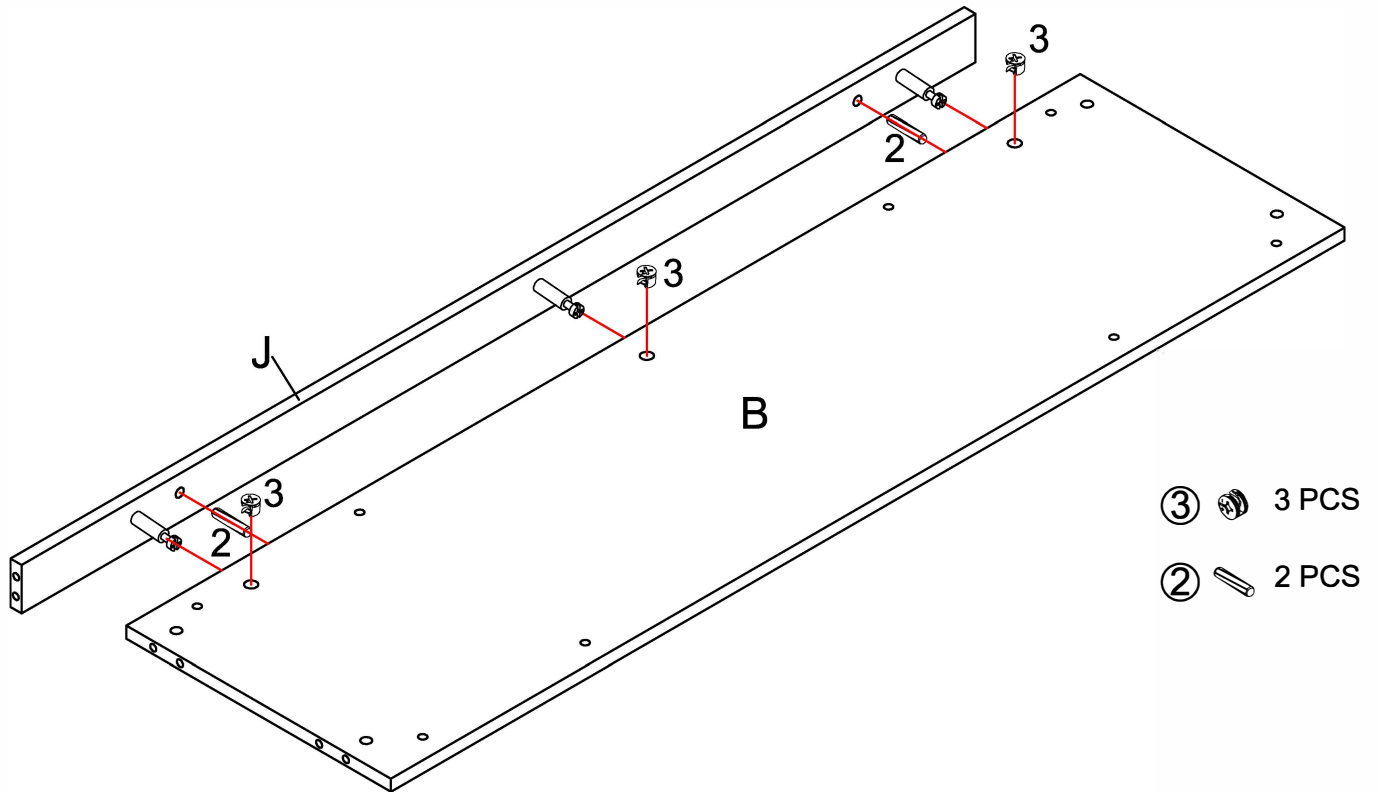

 
- STEP 3**
- On Back Rail (K) insert Wood Dowel (2) into designated hole beside cam-bolt and attach (K) to Top Panel (A). Note the orientation of (K) with respect to the groove line.
 - Insert Cam-lock (3) into designated holes on (A) then turn clockwise to lock onto cam-bolt.

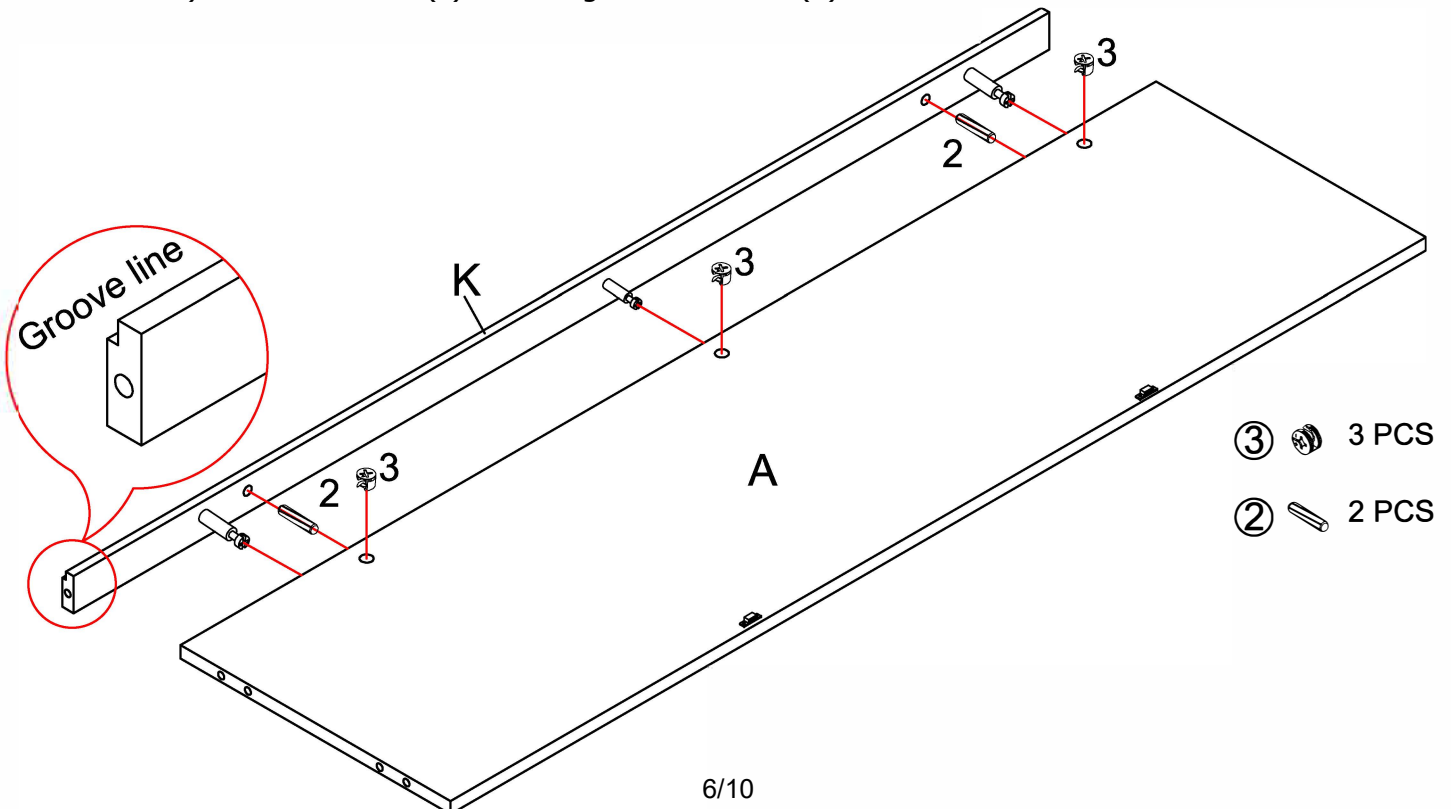

ASSEMBLY INSTRUCTIONS

STEP 4

 - On Bottom Panel (B) insert Wood Dowel (2) into designated inner hole beside cam-bolt and attach Left & Right Partition Panel (G & H) to (B). Note the orientation of (G & H) with respect to the groove lines.
- Insert Cam-lock (3) into designated holes on (G & H) then turn clockwise to lock onto cam-bolt.

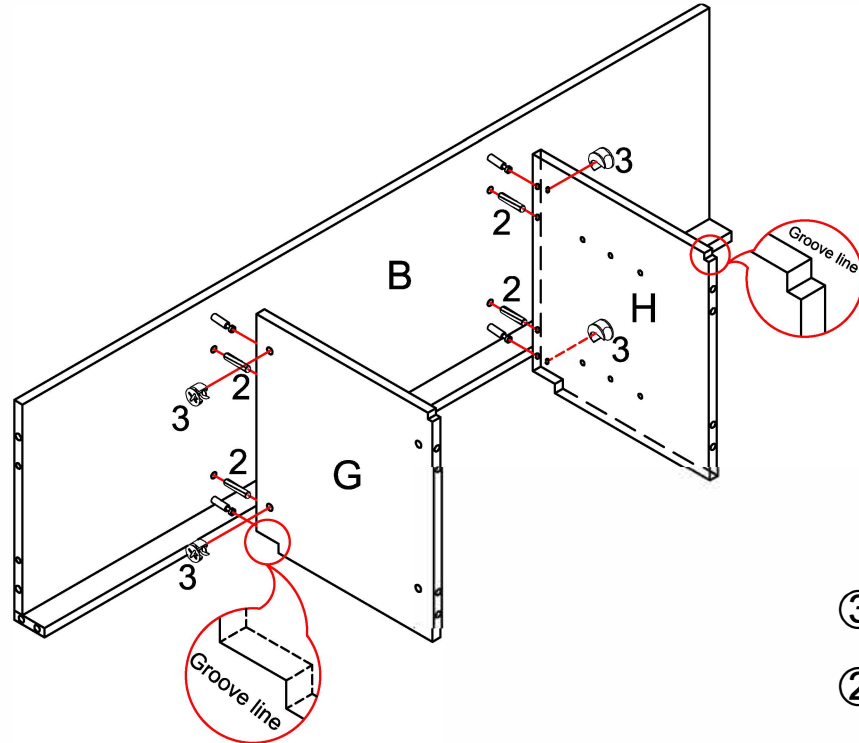


③ 4 PCS

② 4 PCS

STEP 5

 - On Top Panel (A) completed in STEP 3, insert Wood Dowel (2) into designated inner holes beside cam-bolt and attach (A) to Left & Right Partition Panels (G & H).
- Insert Cam-lock (3) into designated holes on (G & H) then turn clockwise to lock onto cam-bolt.

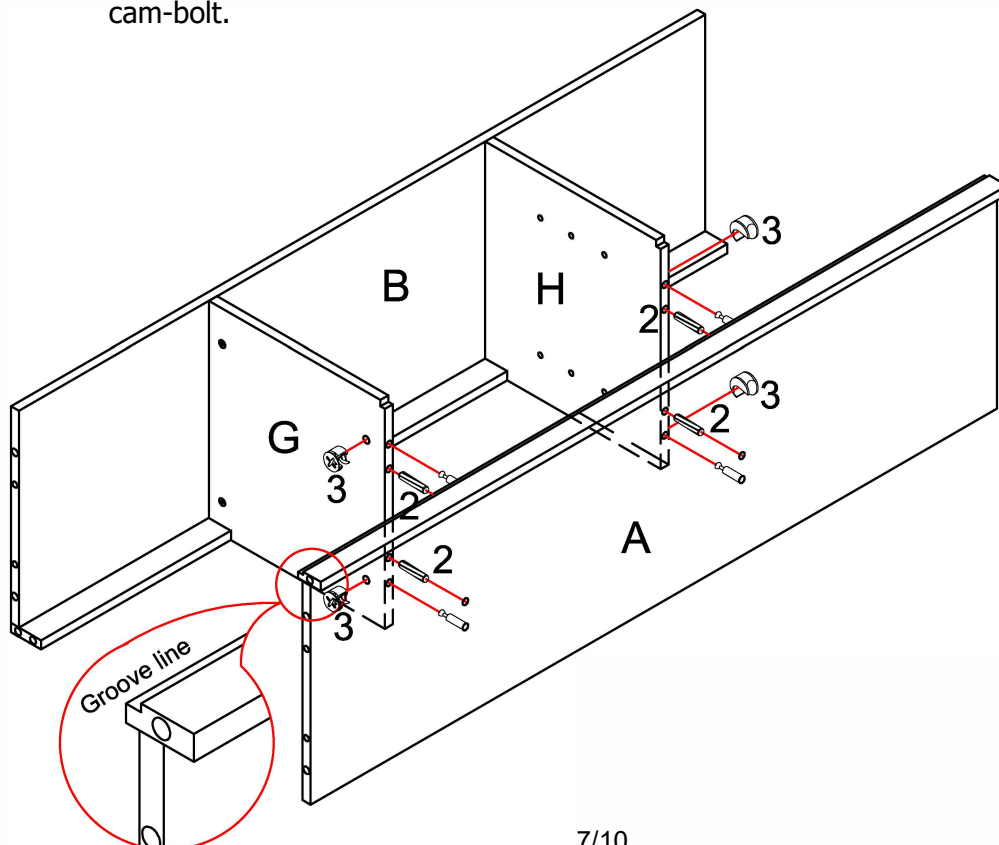


③ 4 PCS

② 4 PCS

ASSEMBLY INSTRUCTIONS


STEP 6

 - Insert Wood Dowel (2) into the designated holes on left edge of Top Panel (A) & Back Rail and Bottom Panels (B) & Front Rail, and attach Left Panel (F).
- Insert Cam-lock (3) into designated holes on (A & B) and turn clockwise to lock onto cam-bolt.

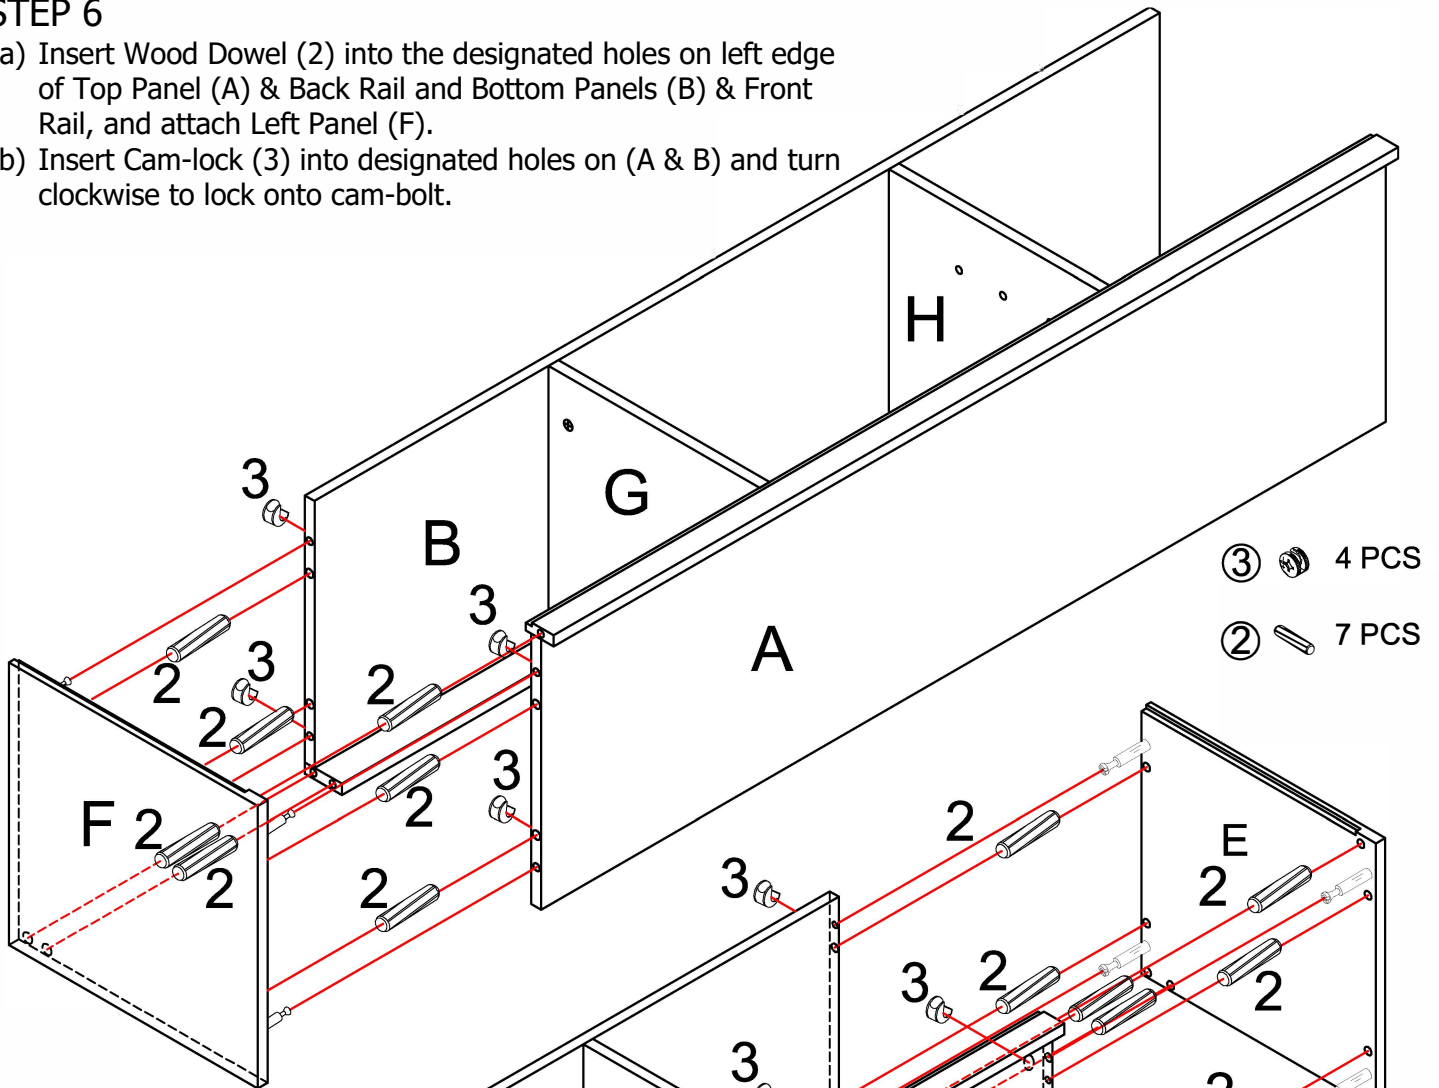

STEP 7

 
- Insert Wood Dowel (2) into the designated holes on right edge of Top Panel (A), Back Rail, Bottom Panel (B) & Front Rail, and attach Right Panel (E).
- Insert Cam-lock (3) into designated holes on (A & B) and turn clockwise to lock onto cam-bolt.

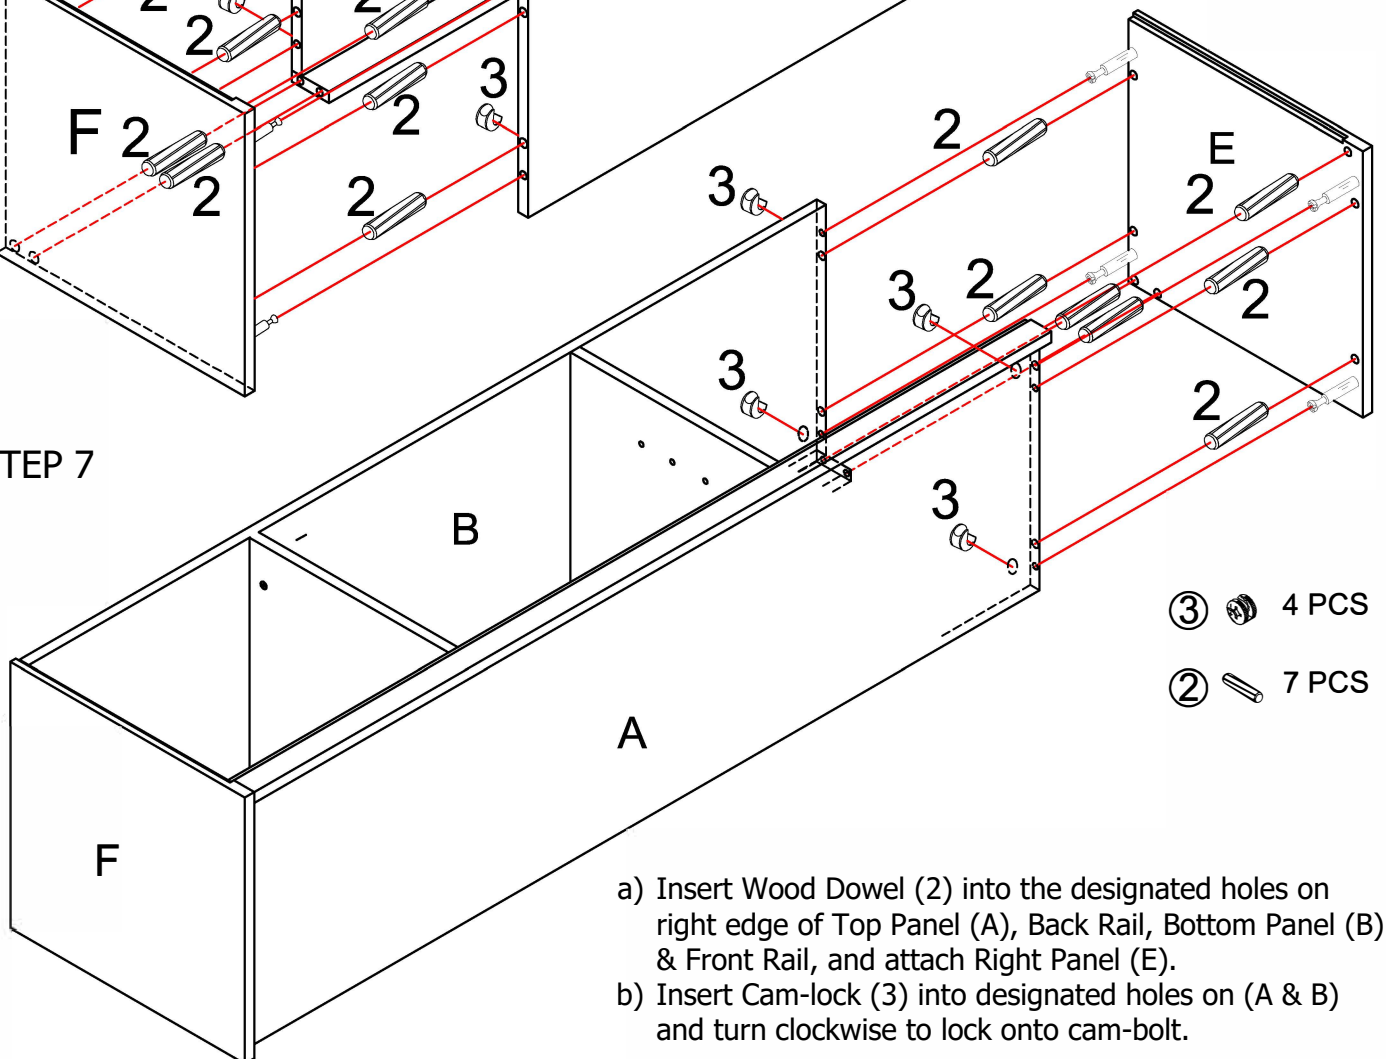

ASSEMBLY INSTRUCTIONS


STEP 8

 - Fit Back Panel (I) into the groove on Right & Left Panel (E & F) and Back Rail.
- Locate pre-drilled holes on Pack Panel and fasten with Screw (4).

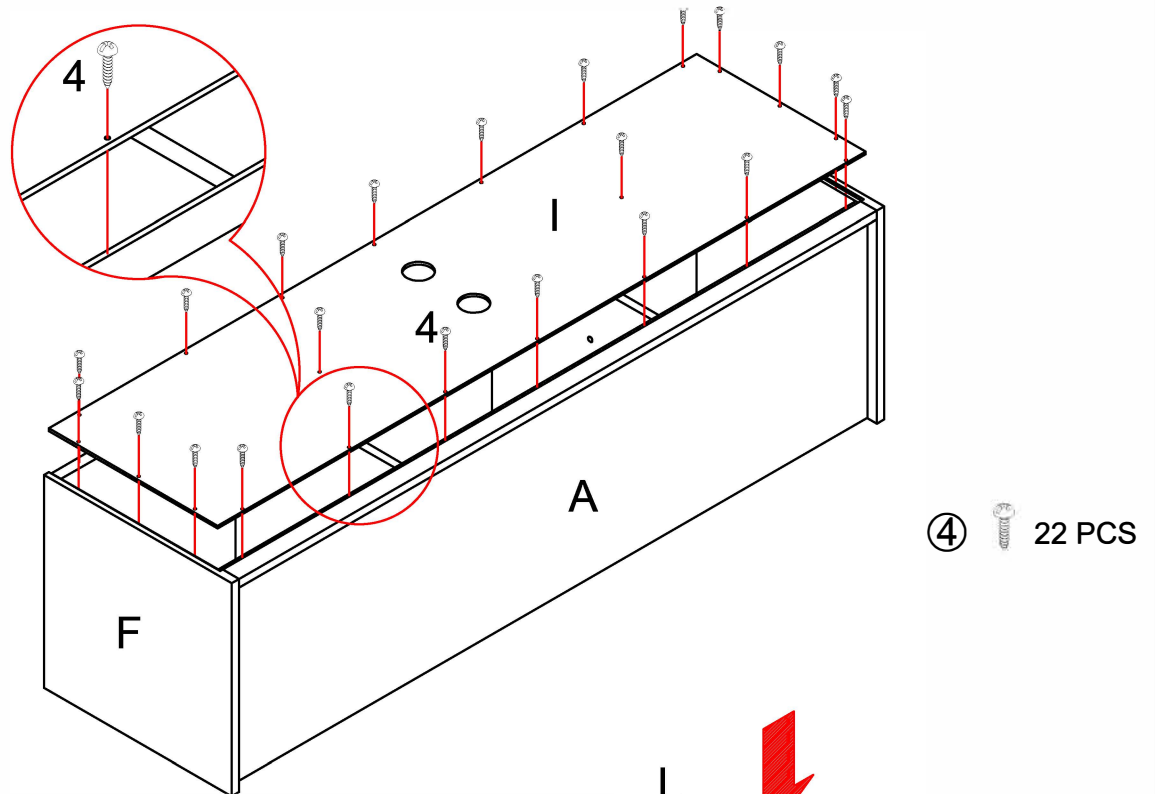

STEP 9

 
- Position TV Stand with the bottom-side facing up as shown and Fit Metal Leg (L) over Bottom and Side Panels.
- Use Bolt (5) to fasten (L) to Bottom Panel.

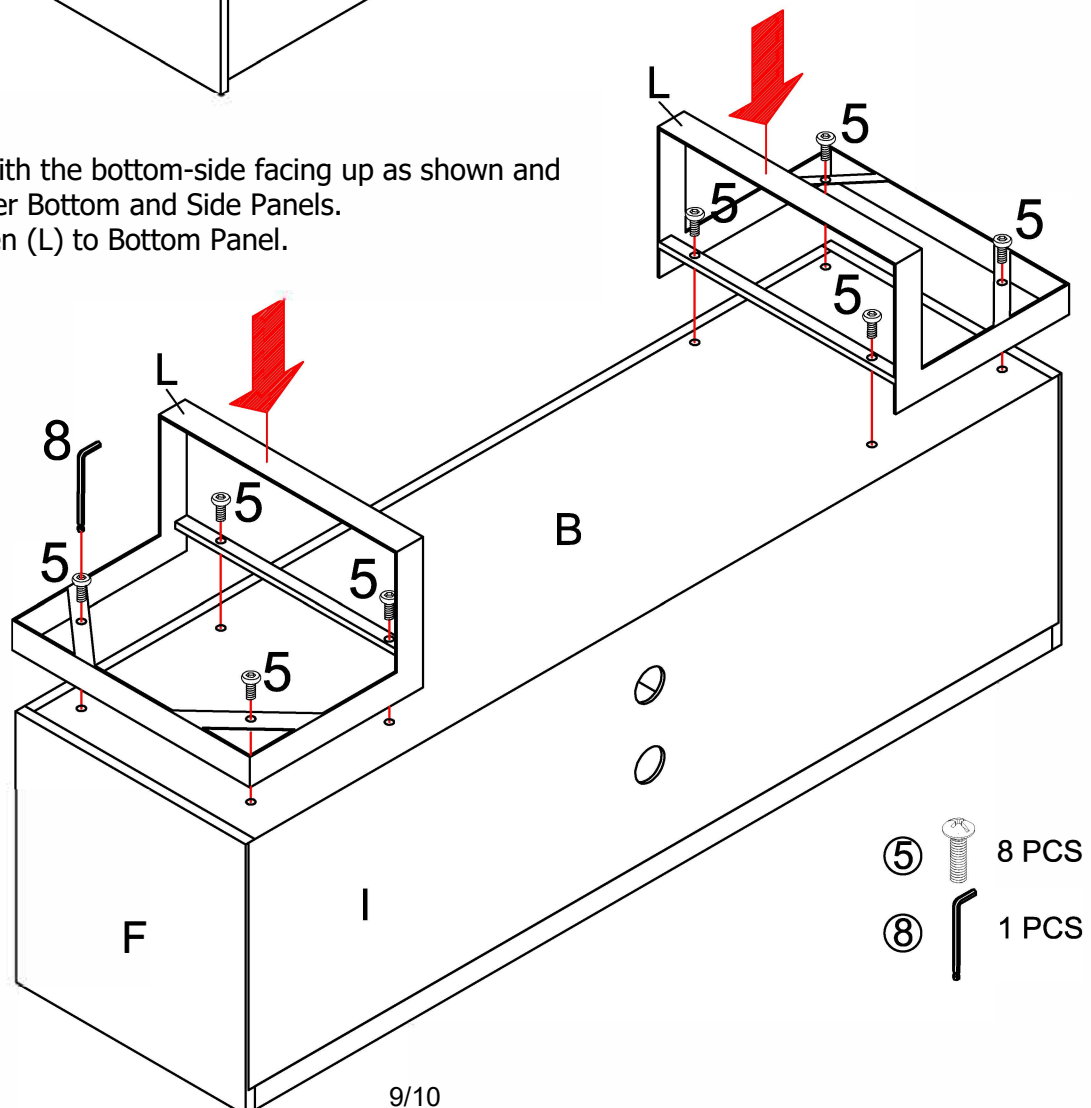

ASSEMBLY INSTRUCTIONS


STEP 10

 - Select desired height and insert Shelf Support (12).
- Place Shelf (M) to rest on (12).

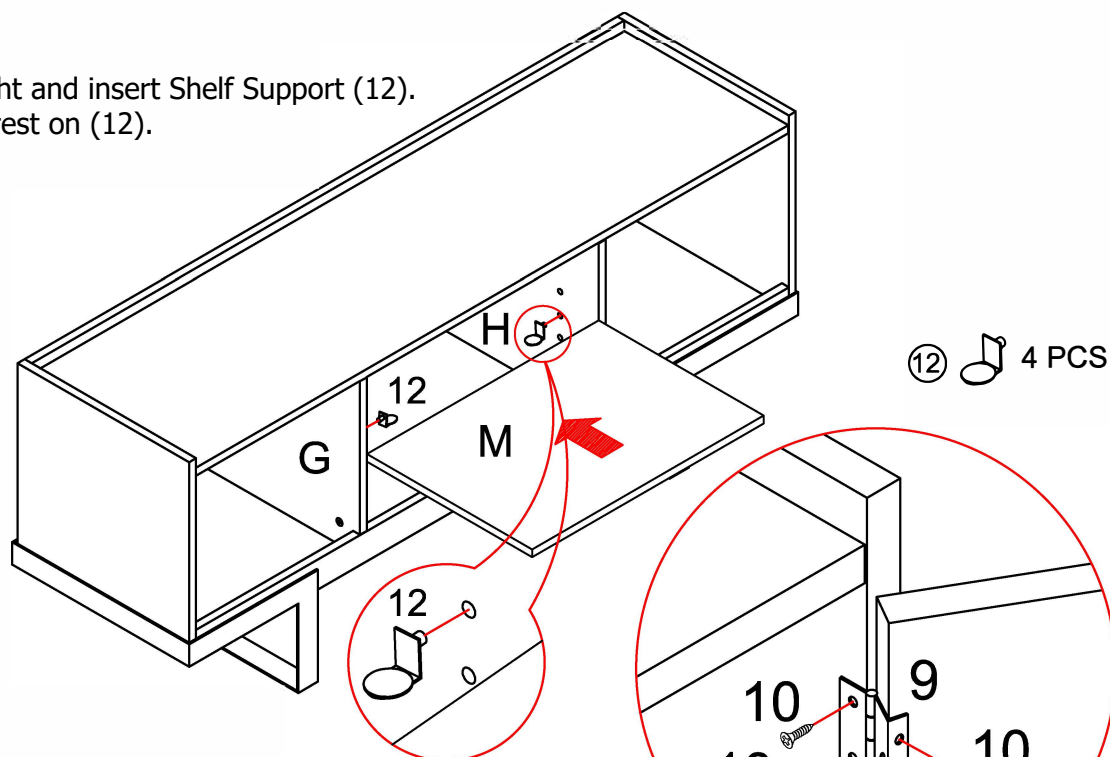

STEP 11

 - Place Hinge (9) against door and side panels (refer to enlarged drawing) and align the screw holes on hinge to pilot holes on door and panels.
- Use Screw (10) to fasten hinge.
- Use Bolt (7) to fasten Handle (6) to door.

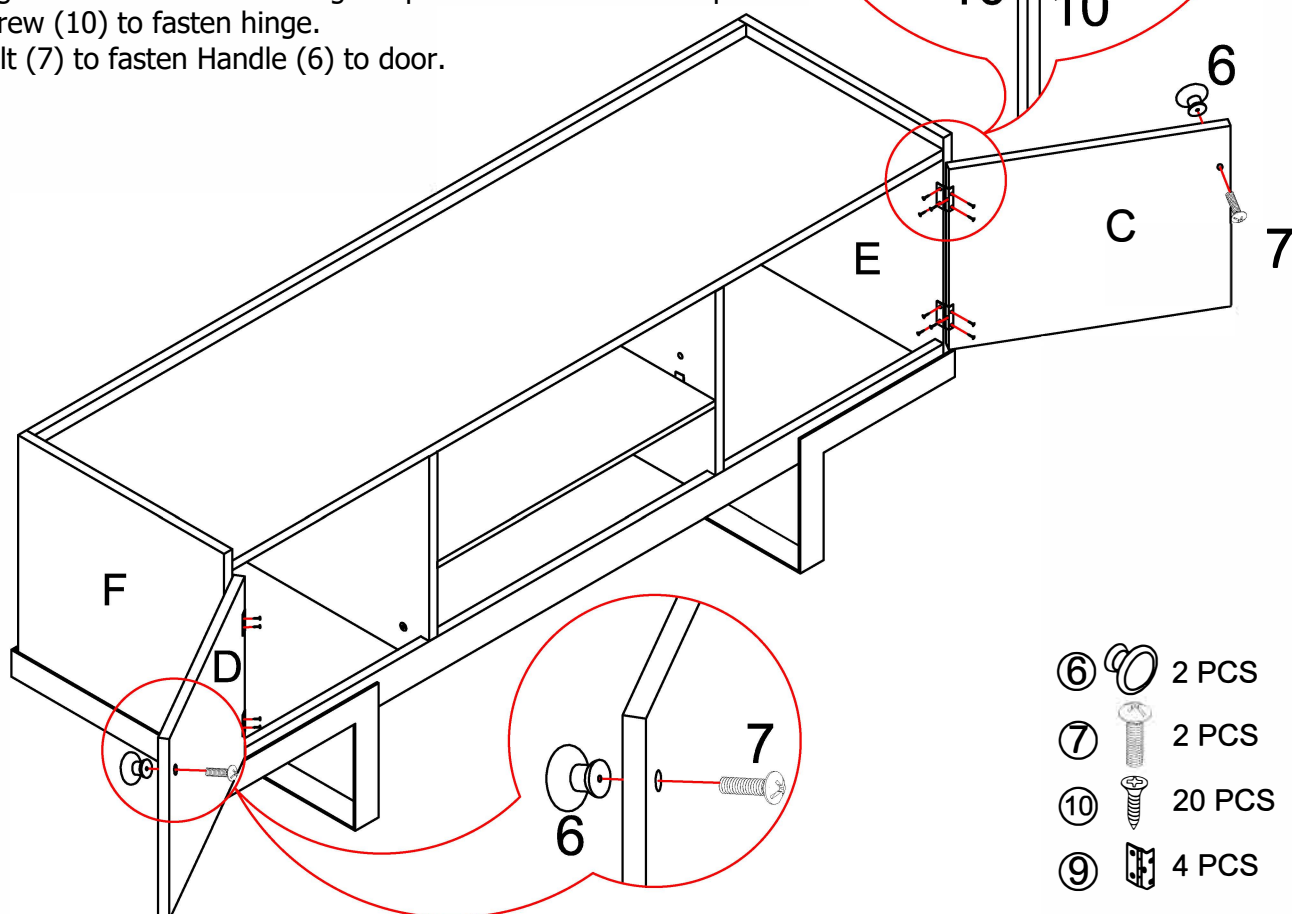

The assembly of the TV Stand is complete.