 
 
 
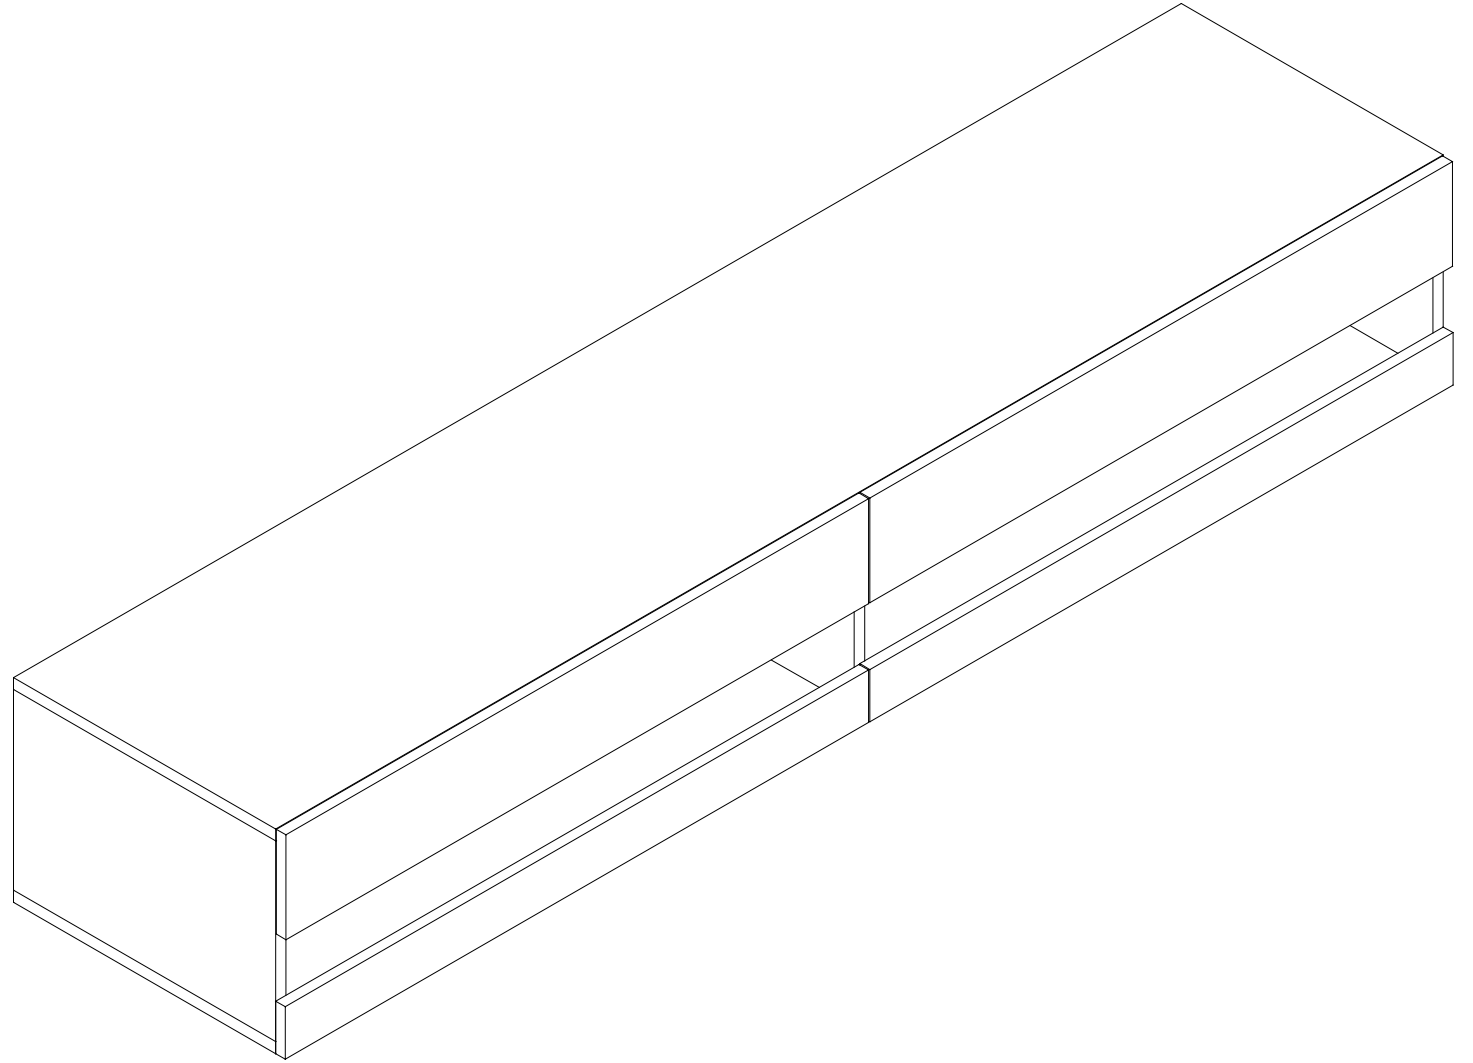 
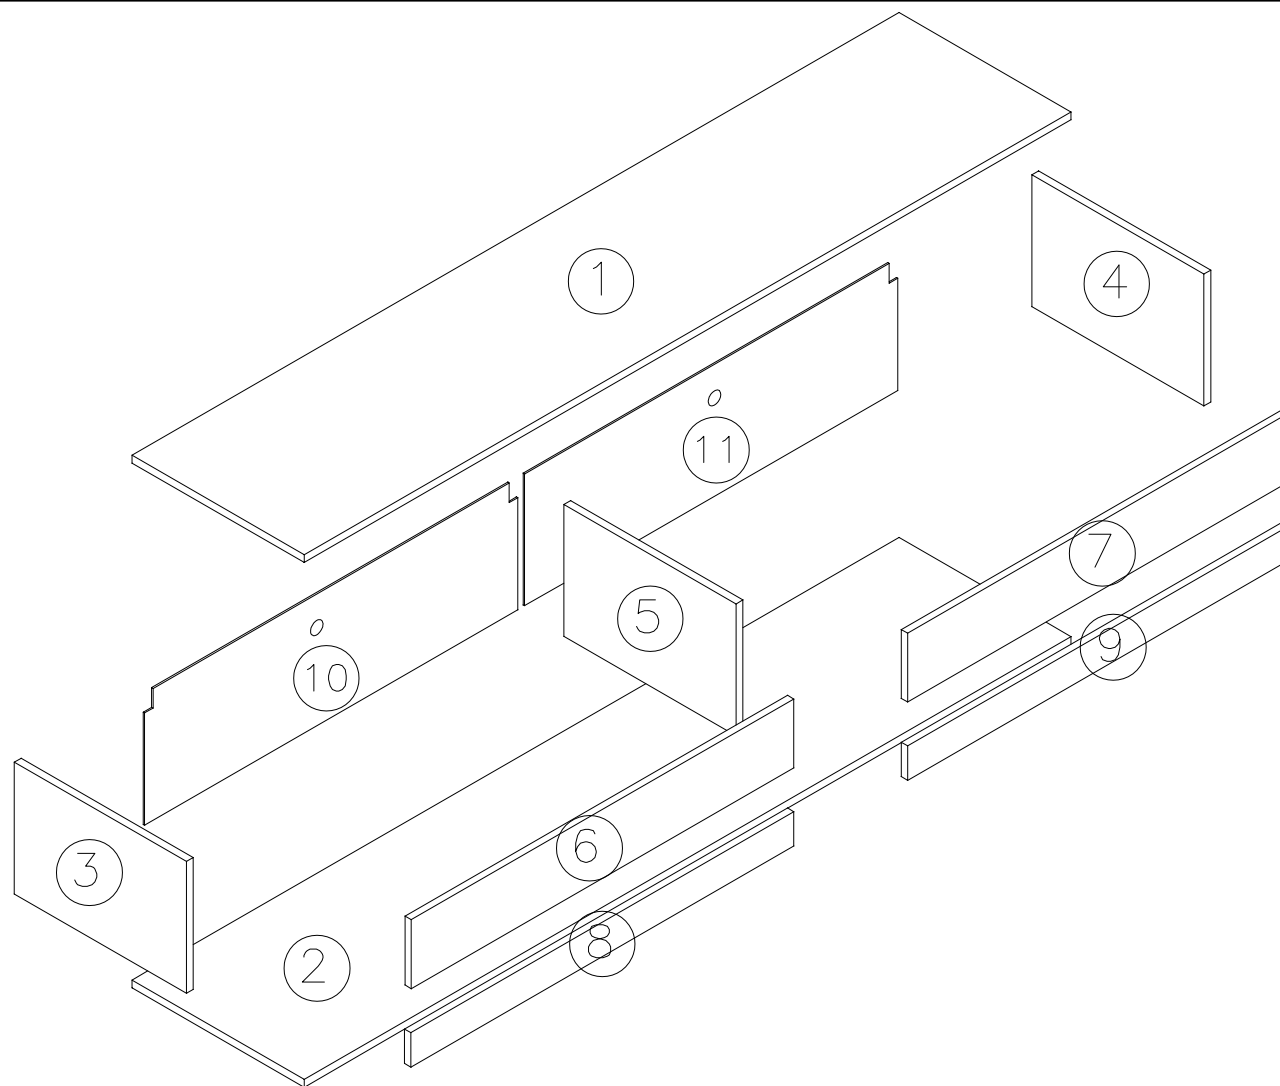 
 
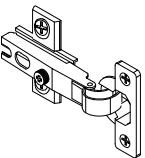 
 
 
 
 
 




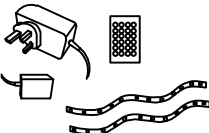


A  20PCS	B  20PCS	C  16PCS	D  4PCS	E  2PCS	F  3PCS	G  3PCS	H 3.5*14  32PCS	I 3.5*30  6PCS
J 4*50  6PCS	K  6PCS	LED  1PCS						

1

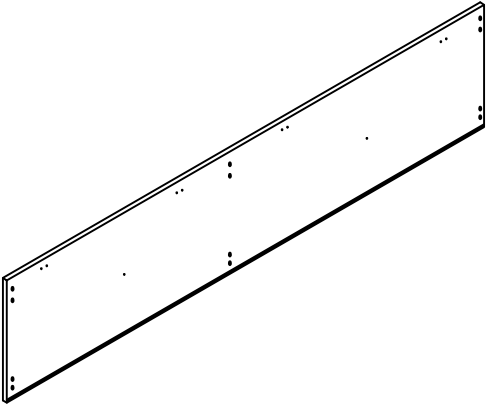


1800*400 1PC

 2

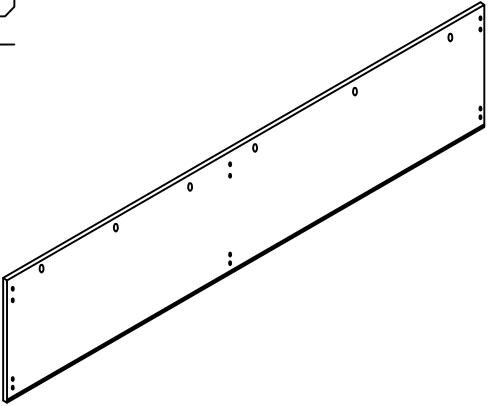


1800*400 1PC

 3

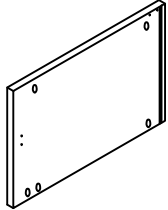


400*268 1PC

 4

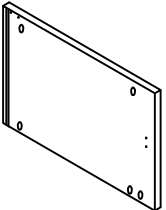


400*268 1PC

 5

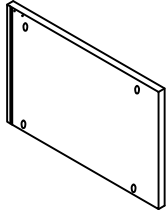


400*268 1PC

 6

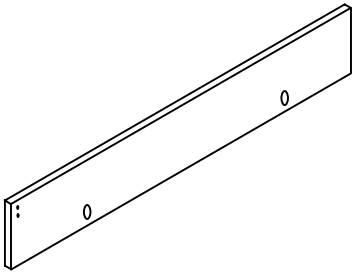


898*150 1PC

 7

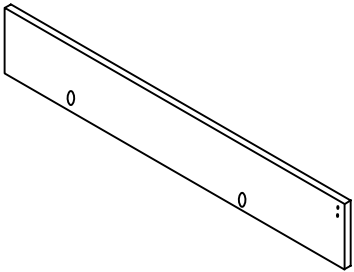


898*150 1PC

 8

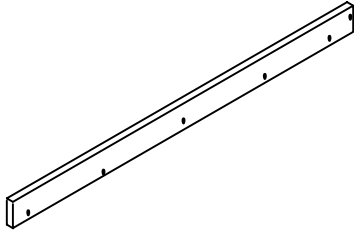


898*60 1PC

 9

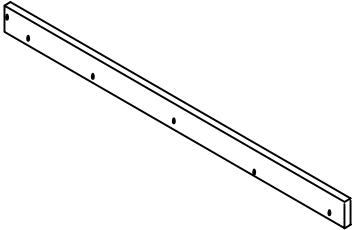


898*60 1PC

 10

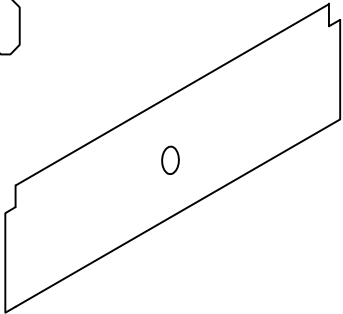





884*233 1PC

 
11

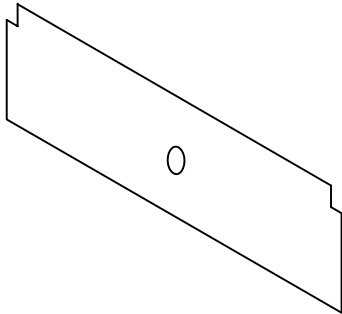


884*233 1PC

     
1

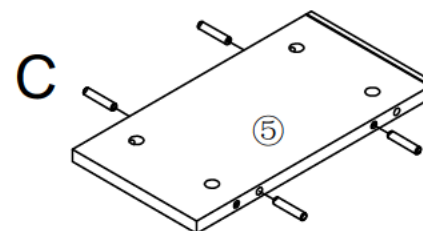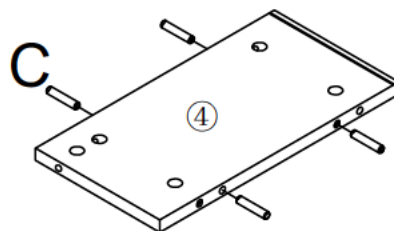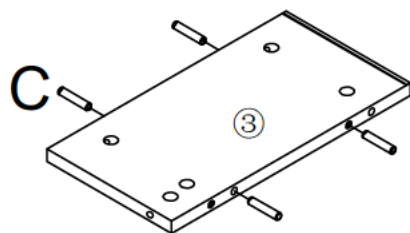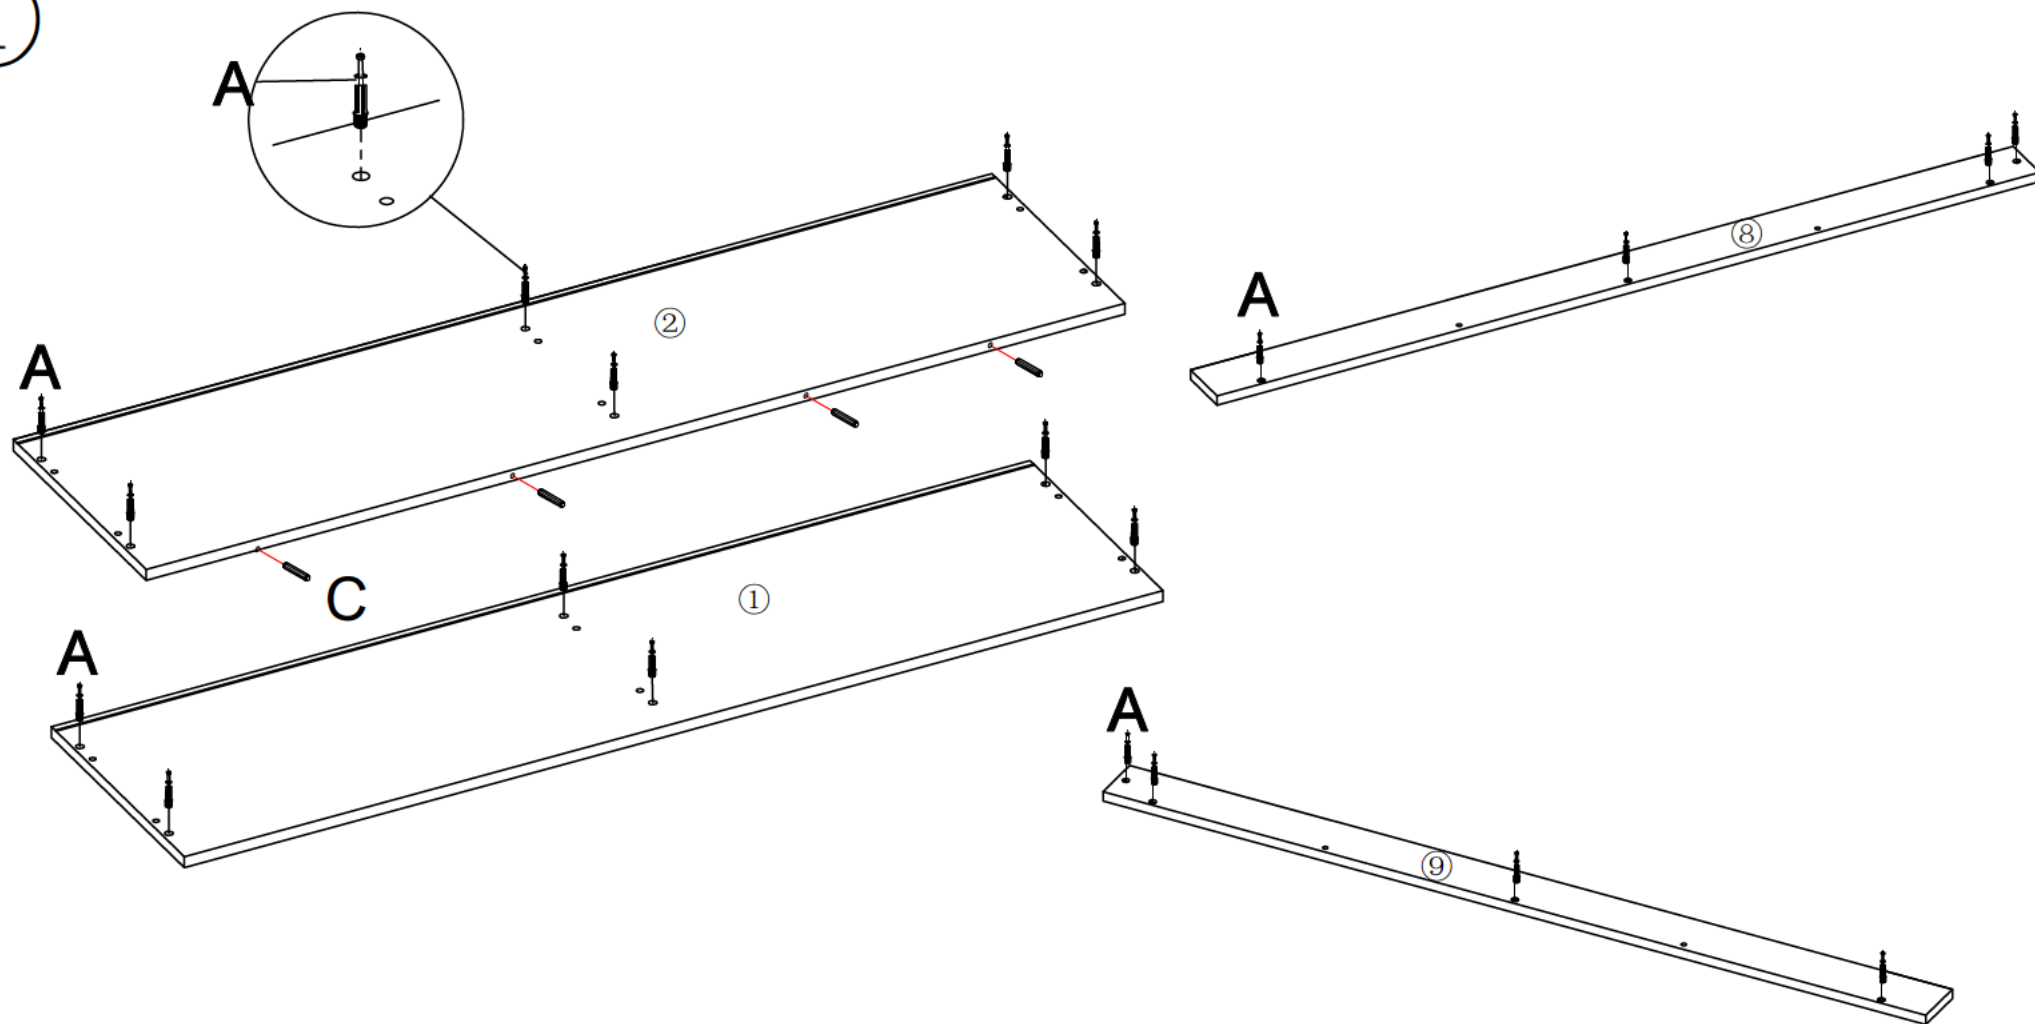


	A*20
	C*16

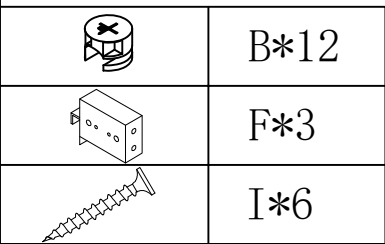 


③

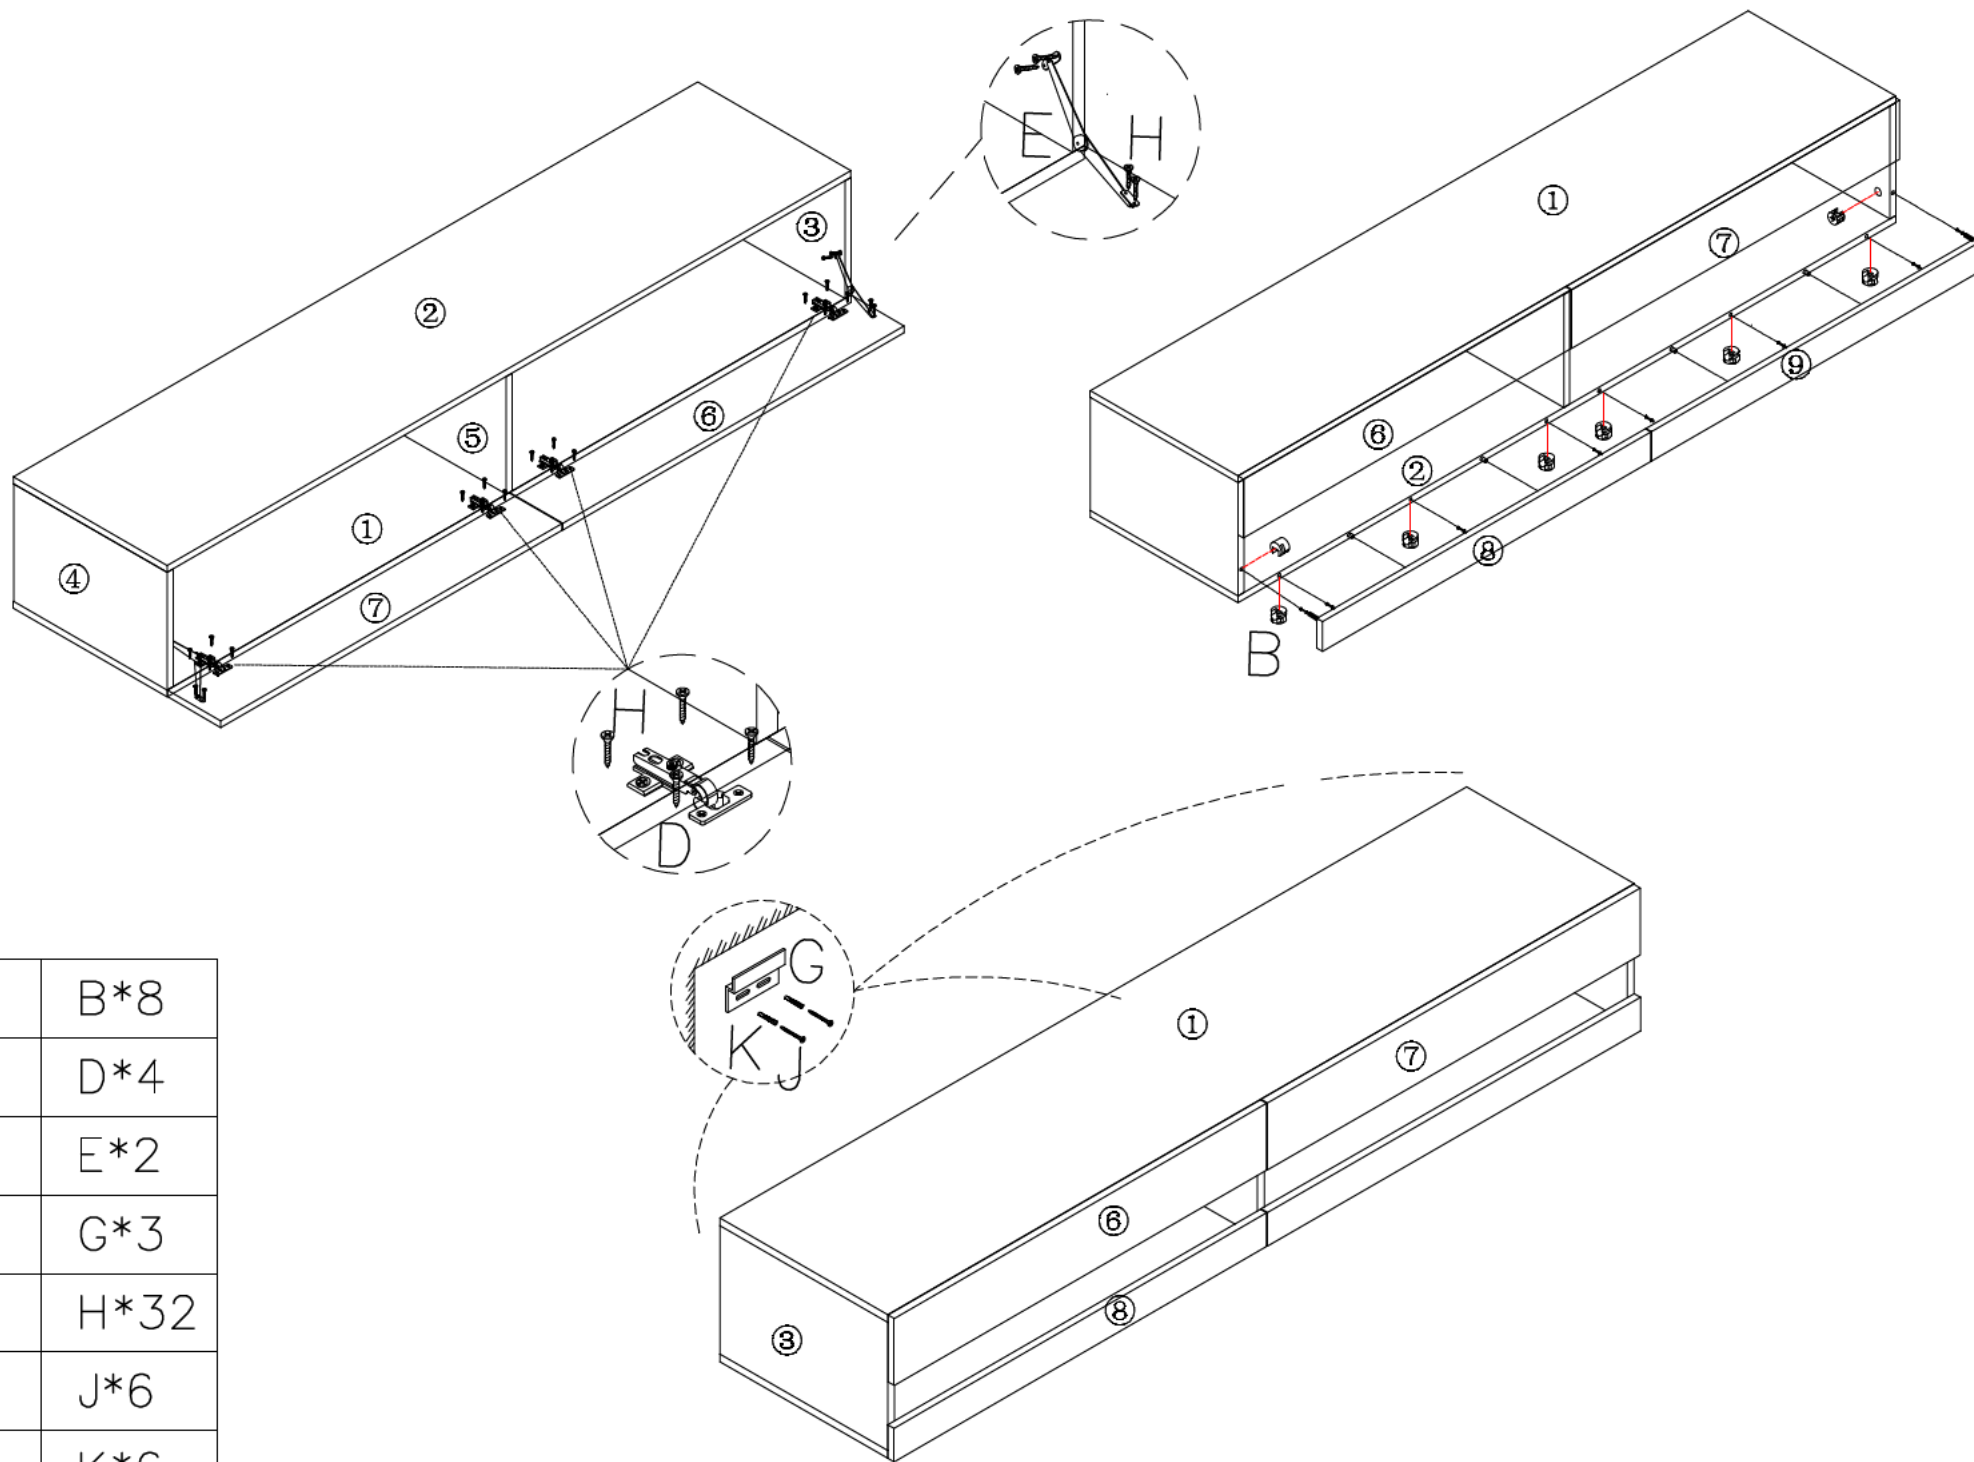 

 	B*8
	D*4
	E*2
	G*3
	H*32
	J*6
	K*6

④

 The following
installation LED
lights

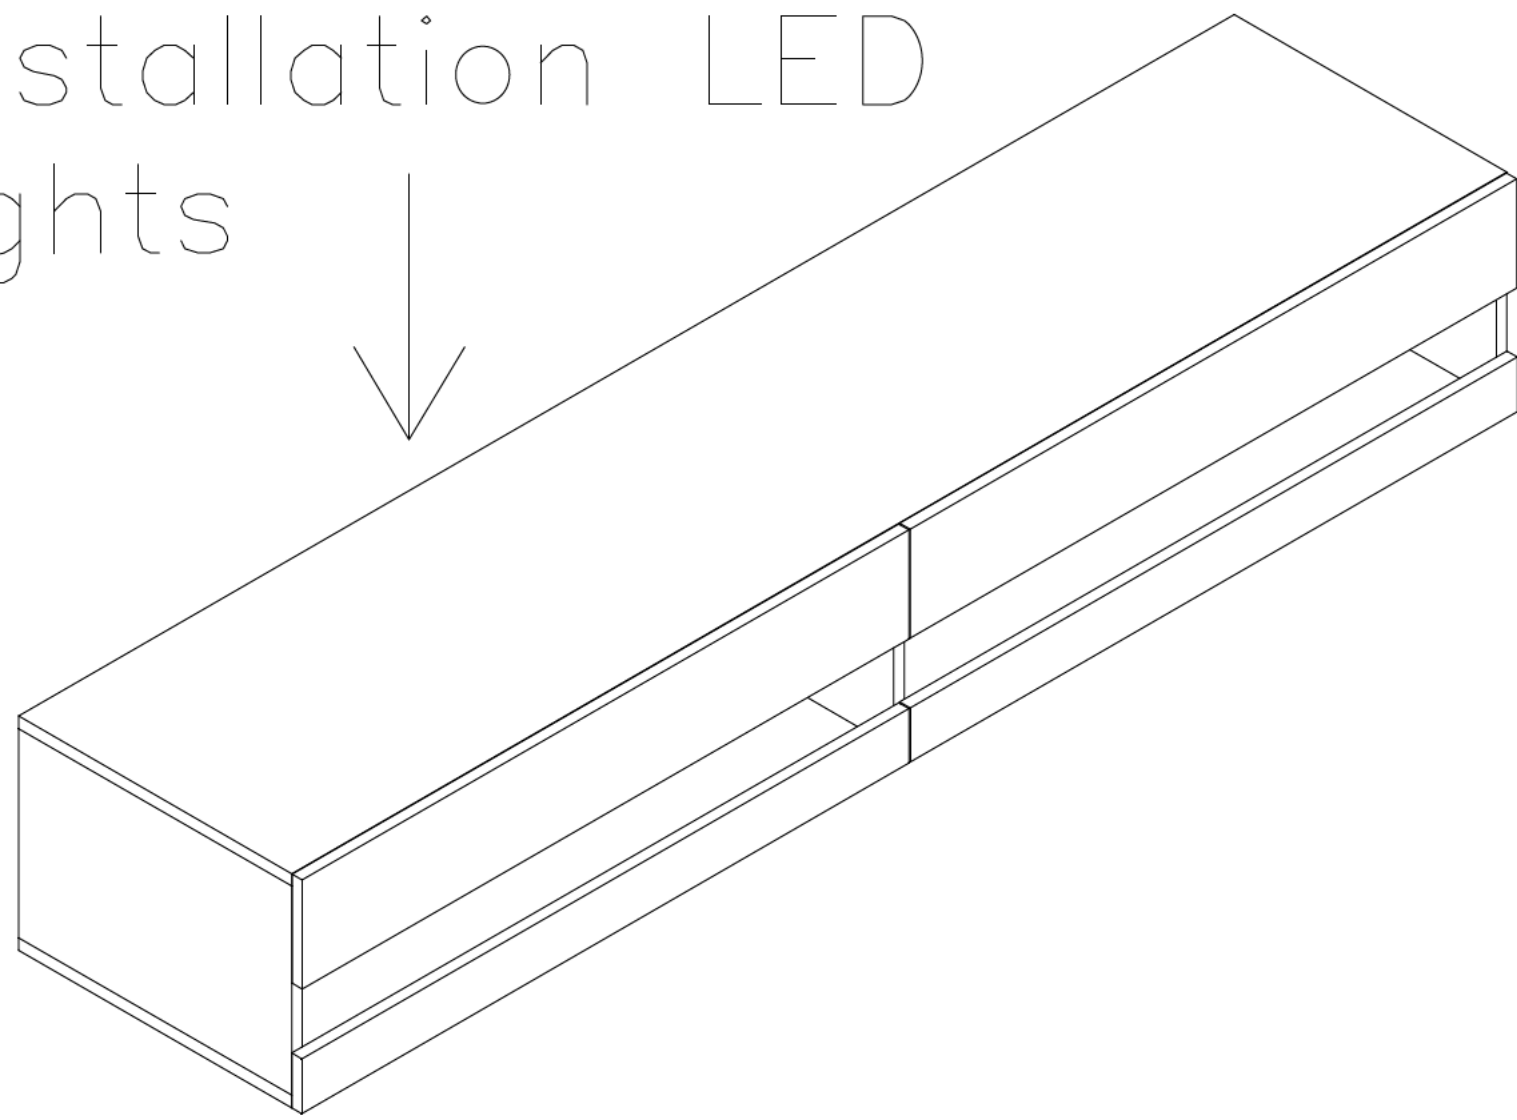

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

