 




VINGLI WALNUT FLUTED BATHROOM VANITY SINK CABINET

ASSEMBLY INSTRUCTION

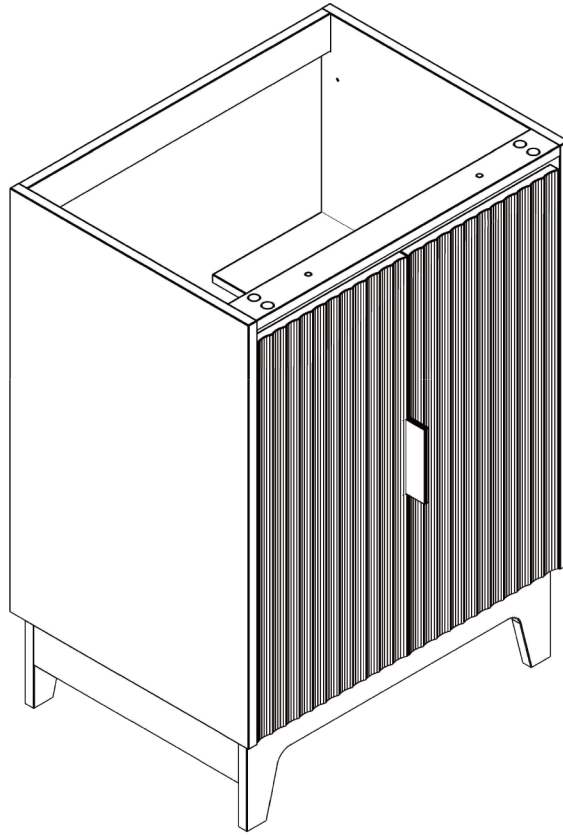

Thank you for purchasing from VINGLI!

Please contact us via email if parts are missing or damaged, we will gladly ship your replacement parts free of charge.



IMPORTANT

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

RETURN & WARRANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing VINGLI.

We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

VINGLI believes you will absolutely love your furniture, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

Warranty

VINGLI warrants this product to be free from defects in material and workmanship agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to be repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.

Components repaired or replaced warranted through the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

For help with assembly, identifying parts, product information or to order parts, please contact us freely.

BEFORE STARTING

Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



- Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

 
- Prepare a flat and Philips screwdriver (not included)
A Power Screwdriver is recommended.



- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.




- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

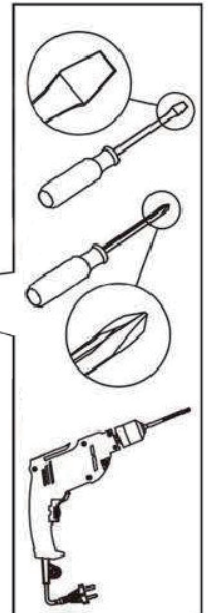

! WARNING :

- Do not allow children to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- Avoid sharp objects or corrosive chemicals to prevent damage to the product
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards

 ASSEMBLY TIPS

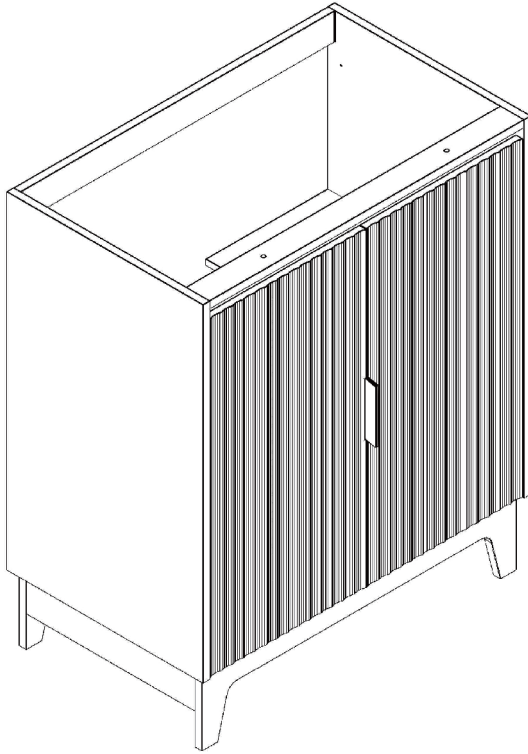

OVERALL SIZE:

61x47x 85 cm (L x W x H)
24x18.5x33.5 in (L x W x H)

FEATURES:

1. Mid-Century Modern Style
2. Unique Fluted Design
3. Fashionable Golden Metal Handle
4. U-Shape Shelf
5. Silent Hinge



Estimated Time for Assembly

1.5 - 3 Hours

Estimated People for Assembly



 
2

Caution:

1. This product is designed for home use and not intended for commercial use.
2. This product contains small components. Please ensure that they are kept away from small children.
3. Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

IDENTIFY PARTS


One unit per box

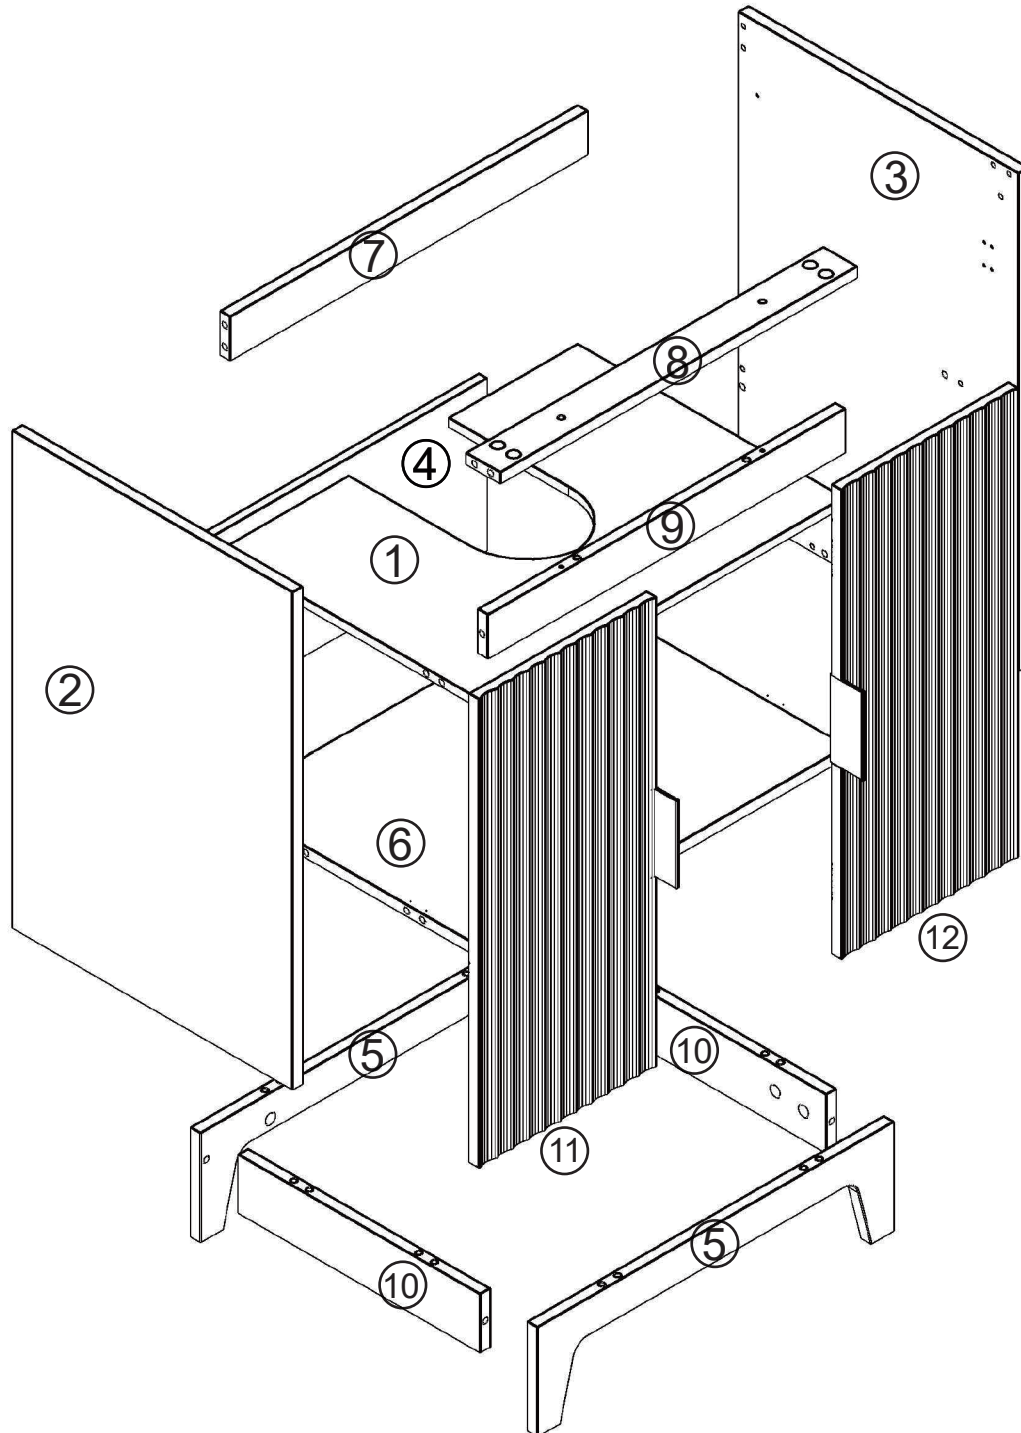

**TOOLS NEEDED FOR ASSEMBLY: DRILLER & HANDHELD SCREWDRIVER (NOT INCLUDED)
THE USE OF POWER SCREWDRIVER IS NOT RECOMMENDED**

COMPONENTS

 
1

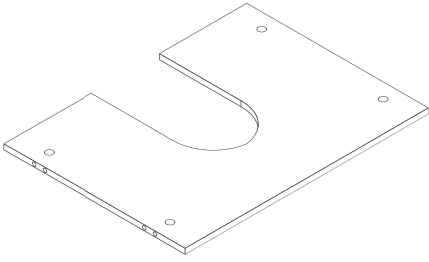

567x423x12mm

U-Shape Shelf x1

 
2

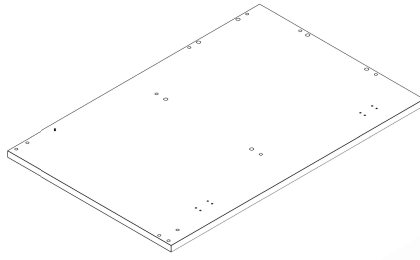

685x445x15mm

Left Side Panel x1

 
3

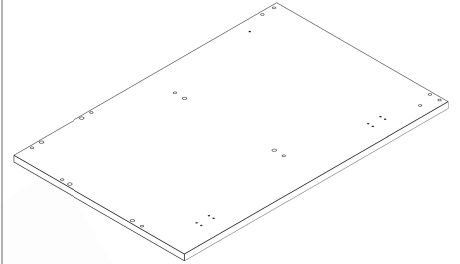

685x445x15mm

Right Side Panel x1

 
4

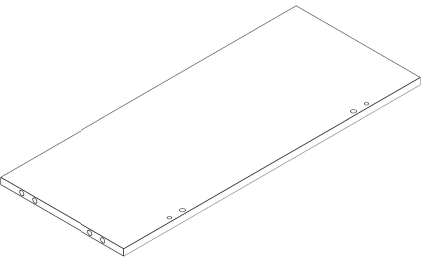

567x237x12mm

Lower Back Panel x1

 
5

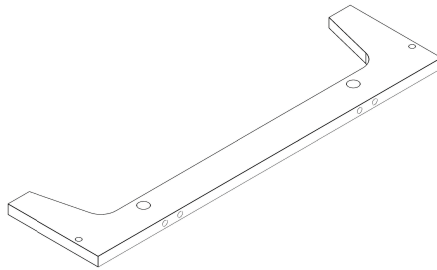

566x150x15mm

Base Front & Back Wood Foot X2

 
6

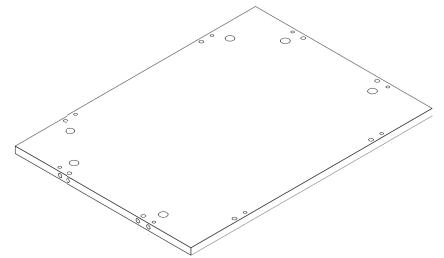

567x415x15mm

Bottom Panel x1

 
7

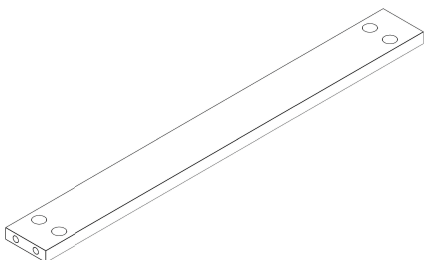

567x60x15mm

Top Back Panel x1

 
8

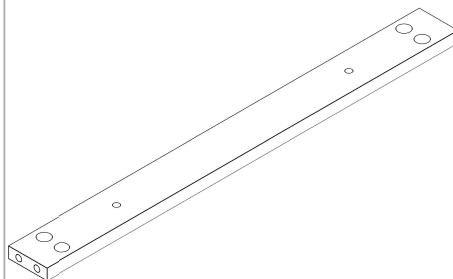

567x53x15mm

Top Front Strip x1

 9

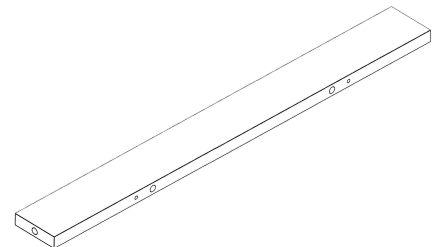


567x60x15mm

Upper Front Strip x1

COMPONENTS

 
10

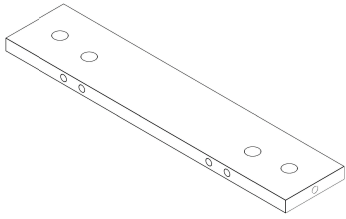

384x80x15mm

Base Side Wood Strip x2

 
11

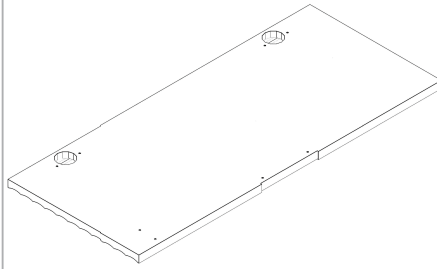

645.5x280.5x15mm

Left Door Panel x1

 12

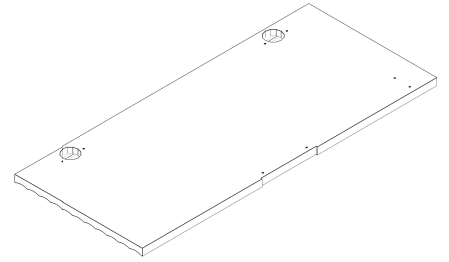


645.5x280.5x15mm

Right Door Panel x1


COMPONENTS

 A




+3(Spare)
M6x35mm
Cam Bolt (x36)

B




+3(Spare)
15x10mm
Cam Lock (x36)

 C




M4x30mm
Screw (x2)

 D




+3(Spare)
M4X14mm
Screw (x36)

 E




Ø6x30mm
Wool Dowel (x24)

 F




Hinge(x4)

 G




Handle (x2)

 H

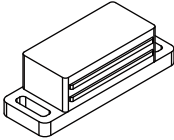


Magnetic Latch (x2)

I




I-1 I-2
Anti-Tipping Kit & Screw (x2)

J



 
Hole Cover Sticker (x36)

L




Clear Silicone Bumper Pad(x10)

M




Plastic Anchor(x2)

 N




Screw(x2)

 O




Stainless Strike Plate(x2)

 Assembly guide for cam bolt (A) and cam lock (B)
Make sure to align the arrow of the cam lock with the direction of the bolt head. Do not over tighten.

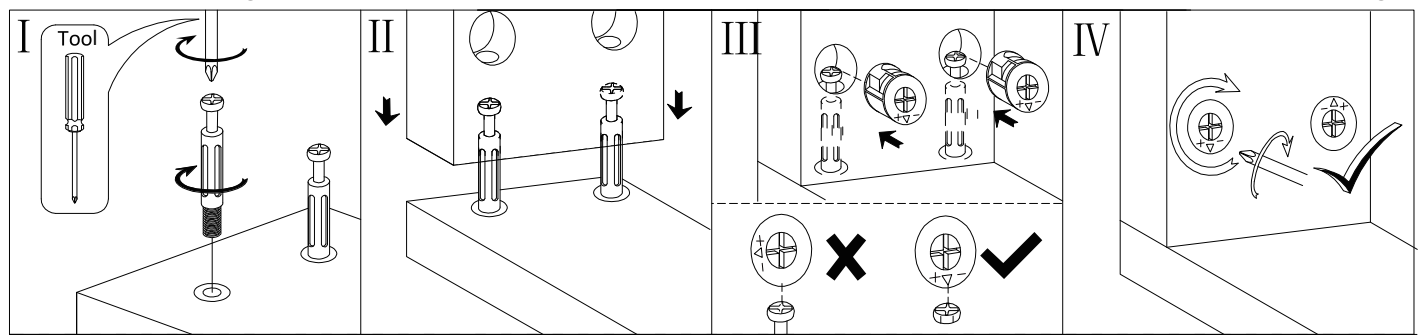


ASSEMBLY STEPS

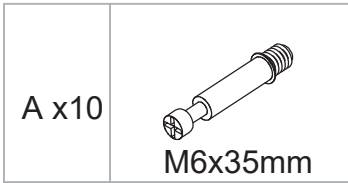   

 


STEP 1

Screw the cam bolt (A) into panel (4) and panel (6).

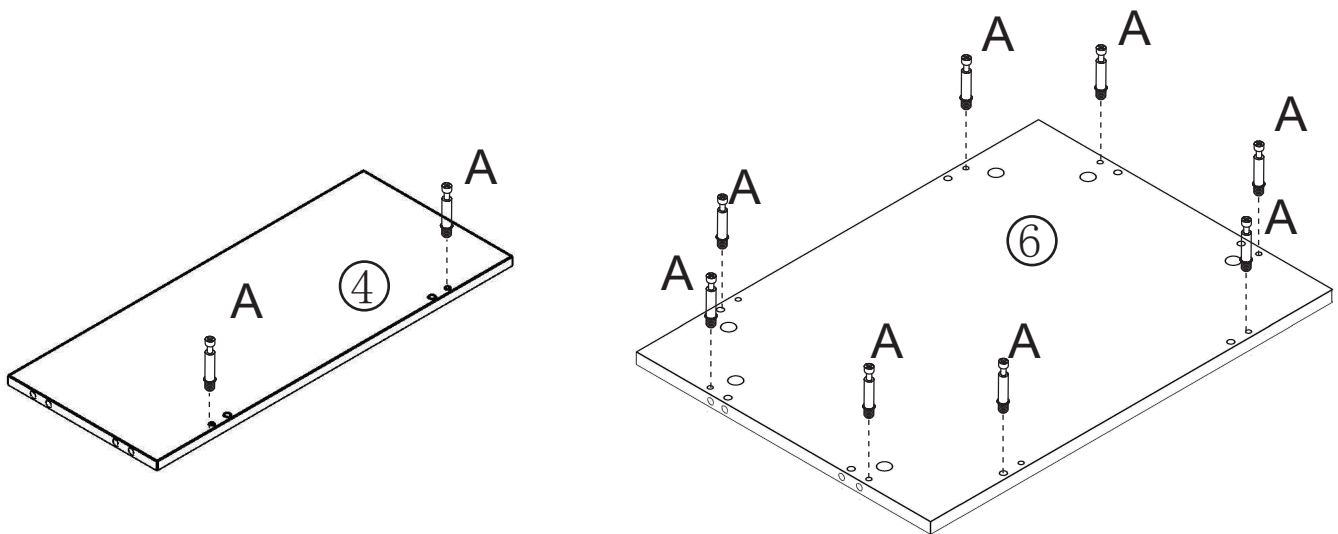 


ASSEMBLY STEPS

 
 

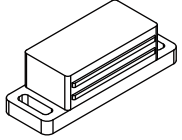 
A x2		B x2		E x2	
	M6x35mm		15x10mm		Ø6x30mm

STEP 2

Connect panel (4) to panel (6) with wood dowel (E) and secure with cam lock (B).

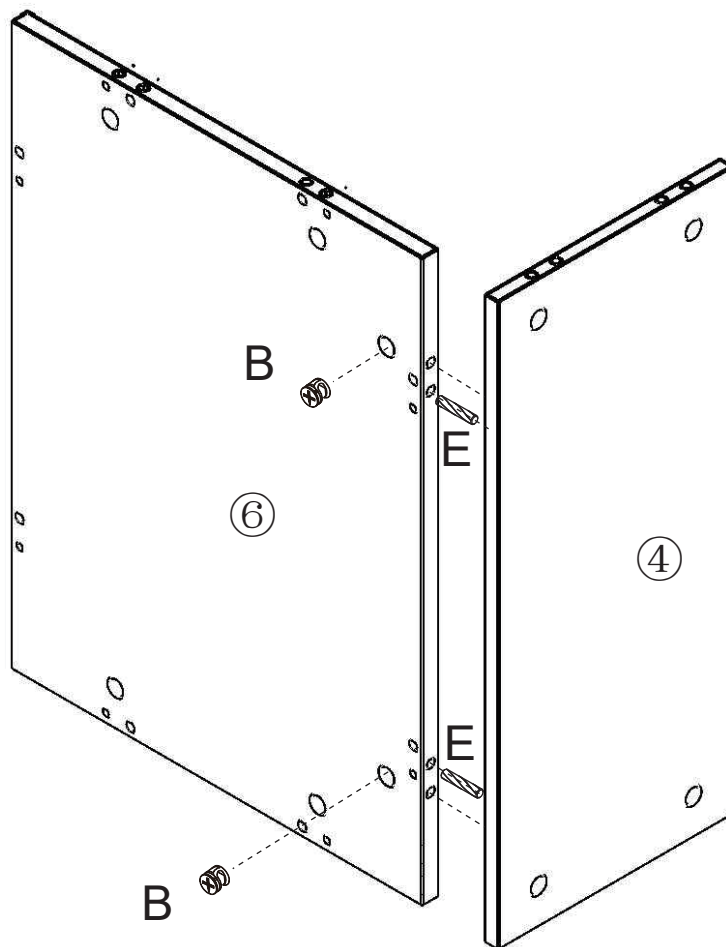


ASSEMBLY STEPS


C x2	 M4x30mm	D x4	 M4X14mm	E x2	 Ø6x30mm	H x2	
------	--	------	--	------	---	------	---

STEP 3

 1. Fix the magnet latch (H) on panel (9) with screw (D).
2. Connect panel (8) to panel (9) with wood dowel (E) and screw (C).

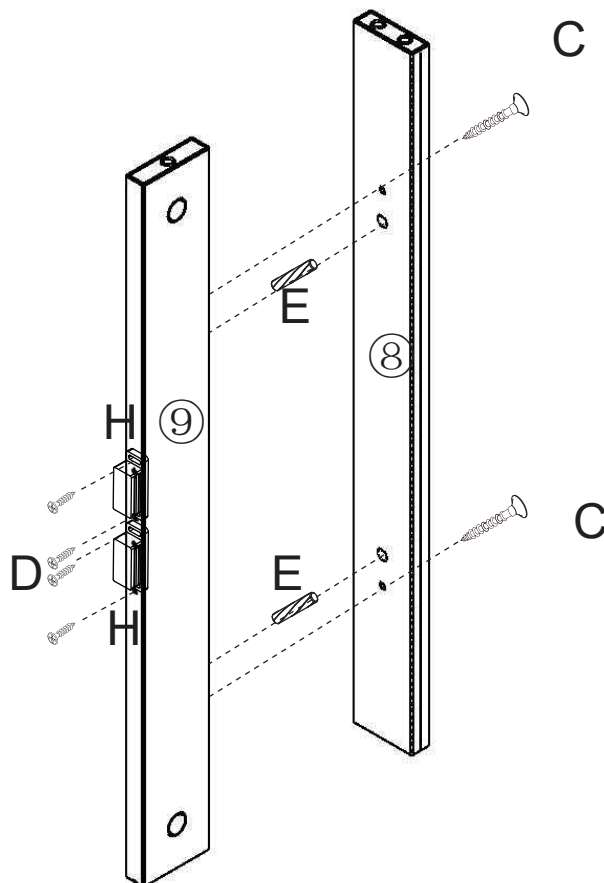


ASSEMBLY STEPS

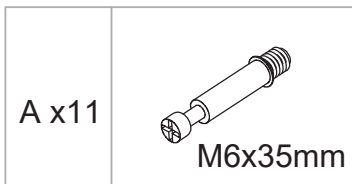 

STEP 4

 Screw the cam bolt (A) into panel (2) .

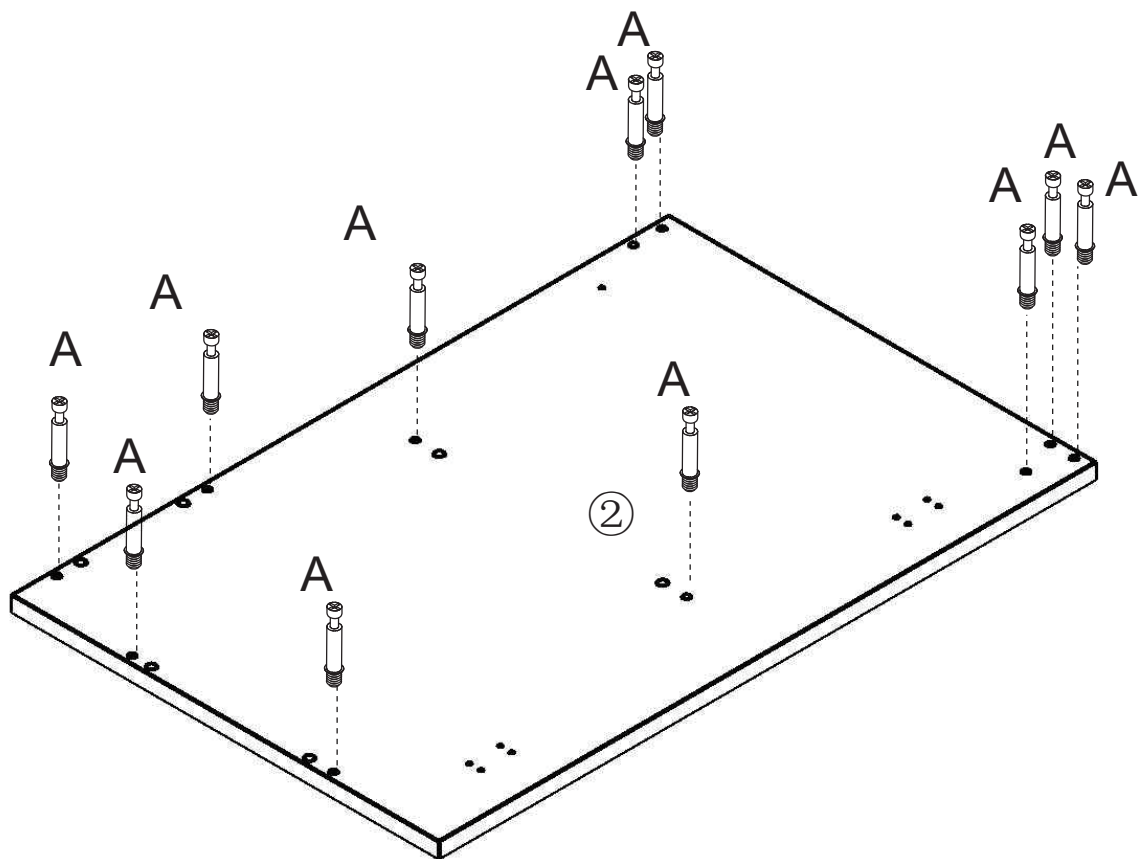


ASSEMBLY STEPS

B x11



15x10mm

 E x6




Ø6x30mm

STEP 5


1. Attach panel (1) and panel (7) to panel (2) using wood dowel (E) and secure with cam lock (B).

2. Attach the already installed panel (4) and panel (6) to panel (2) using wood dowel (E) and secure with cam lock (B).

 3. Attach the already installed panel (8) and panel (9) to panel (2) secure with cam lock (B).

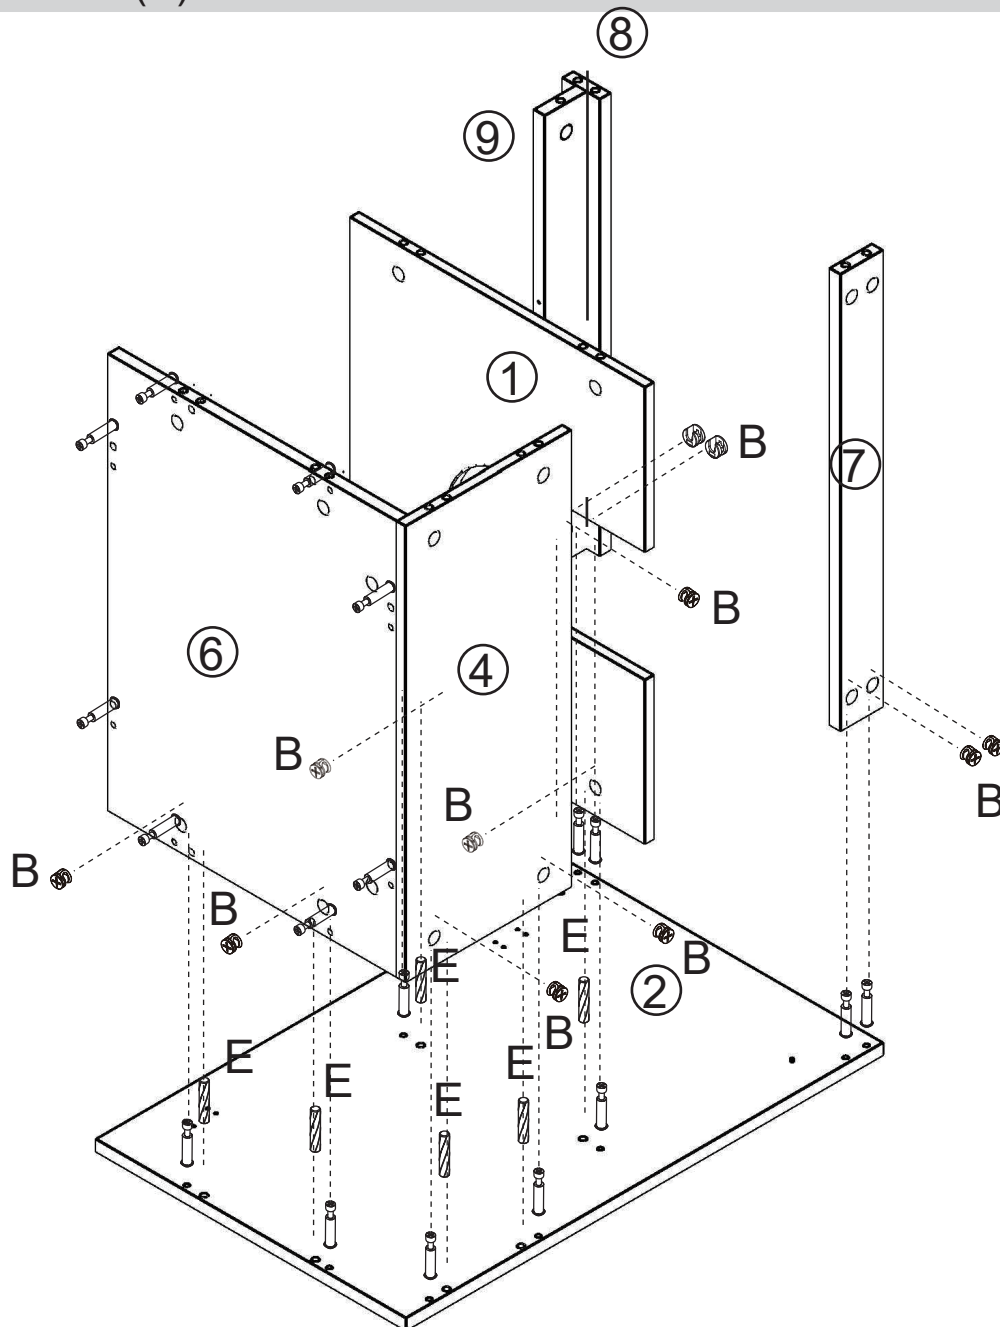


ASSEMBLY STEPS

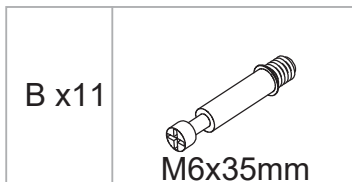  
 


STEP 6

Screw the cam bolt (A) into panel (3).

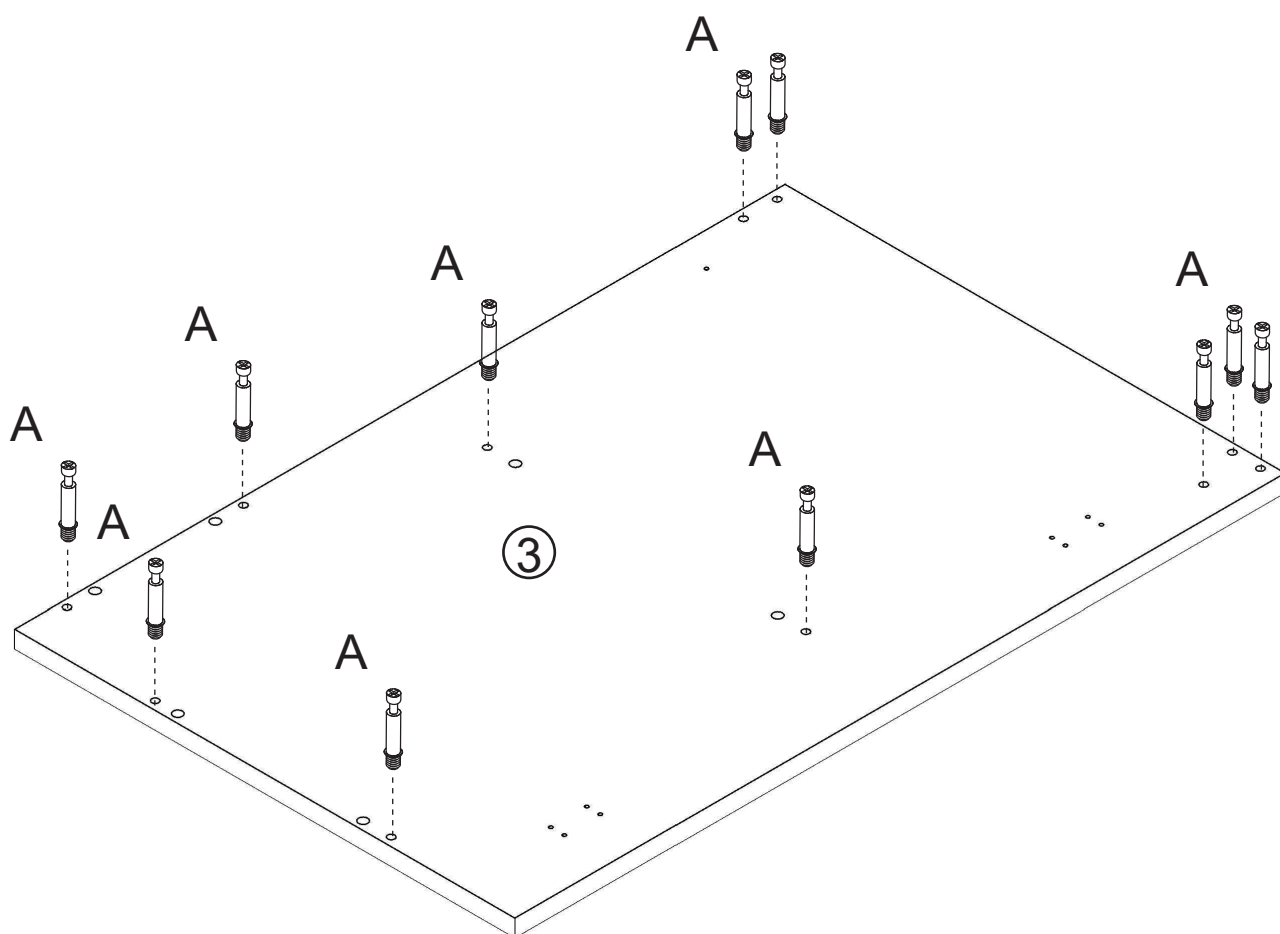


ASSEMBLY STEPS



B x11	 15x10mm	E x6	 Ø6x30mm
-------	--	------	--

STEP 7

 Connect panel (3) to the components installed in step 5 with wood dowel (E) and secure with cam lock (B).

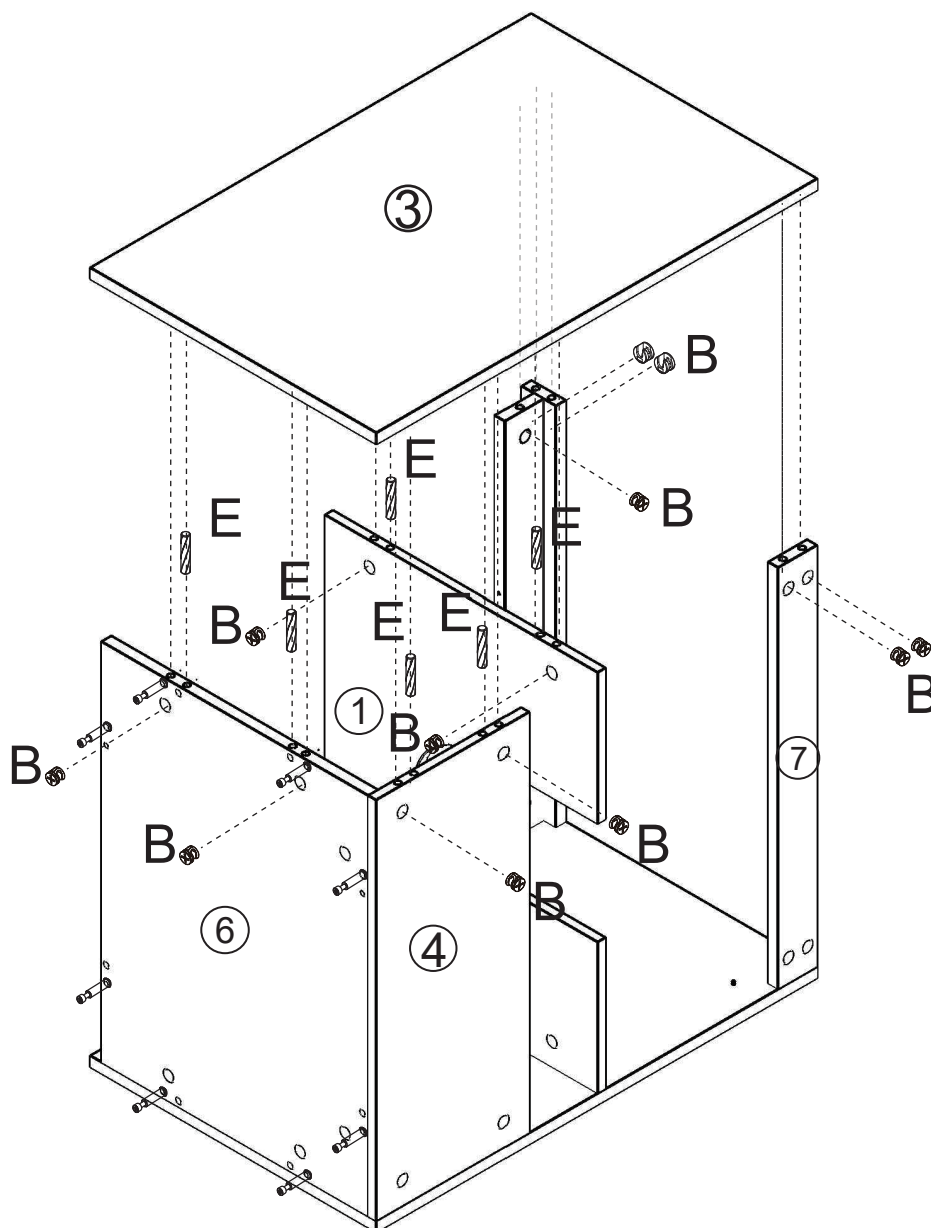


ASSEMBLY STEPS

 

A x4	 M6x35mm	B x4	 15x10mm
------	--	------	--

 STEP 8

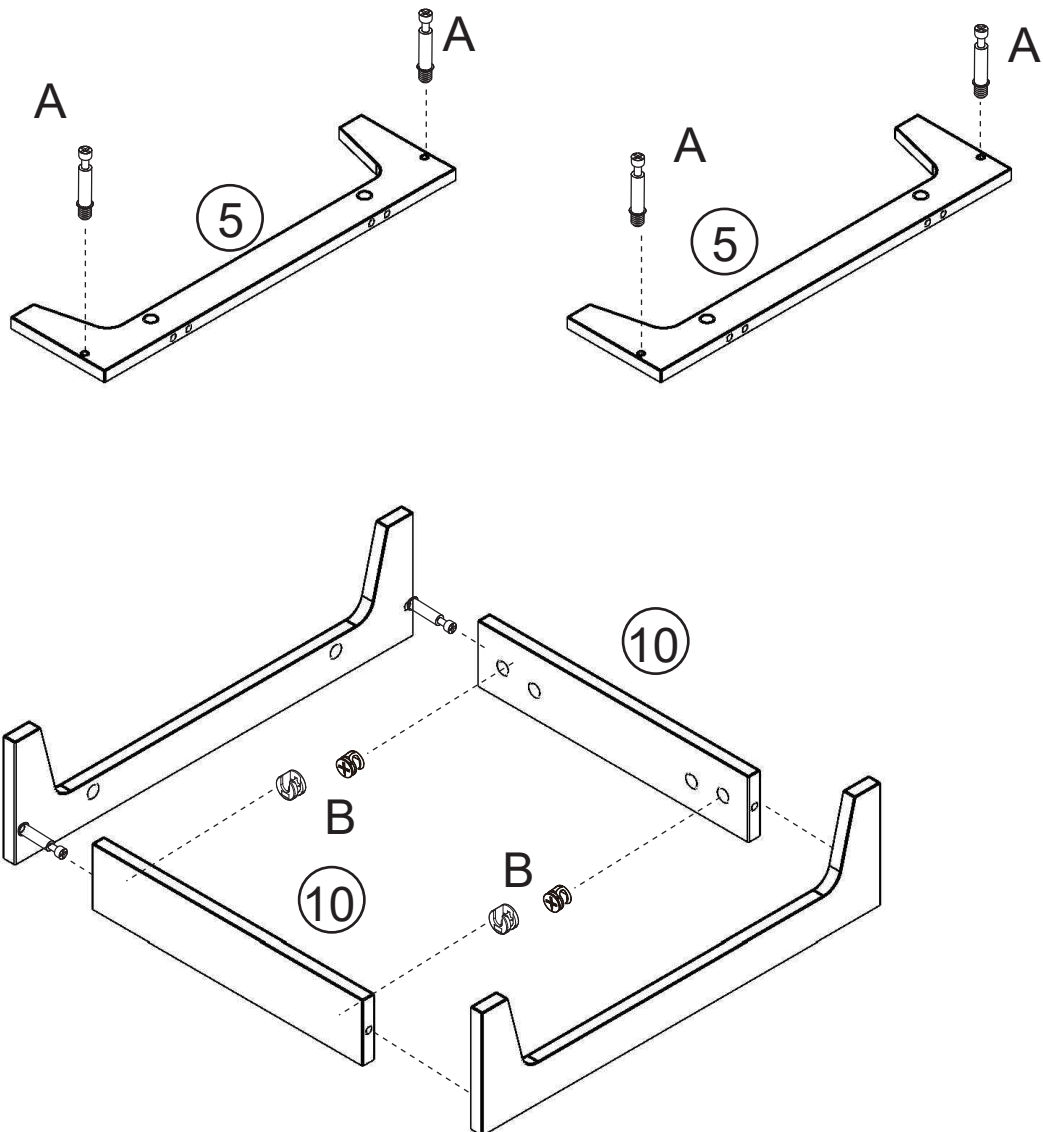1. Screw the cam bolt (A) into base front & back wood foot (5).
2. Connect the base front & back wood foot (5) to the base side wood strip (10) and secure with cam lock (B) .




ASSEMBLY STEPS





B x8	 15x10mm	E x8	 Ø6x30mm
------	--	------	--

STEP 9

 1. Turn over the prototype of the cabinet installed in step 7, so that the bottom panel (6) is facing upwards.
2. Connect the bottom base installed in step 8 to panel (6) with wood dowel (E) and secure with cam lock (B).


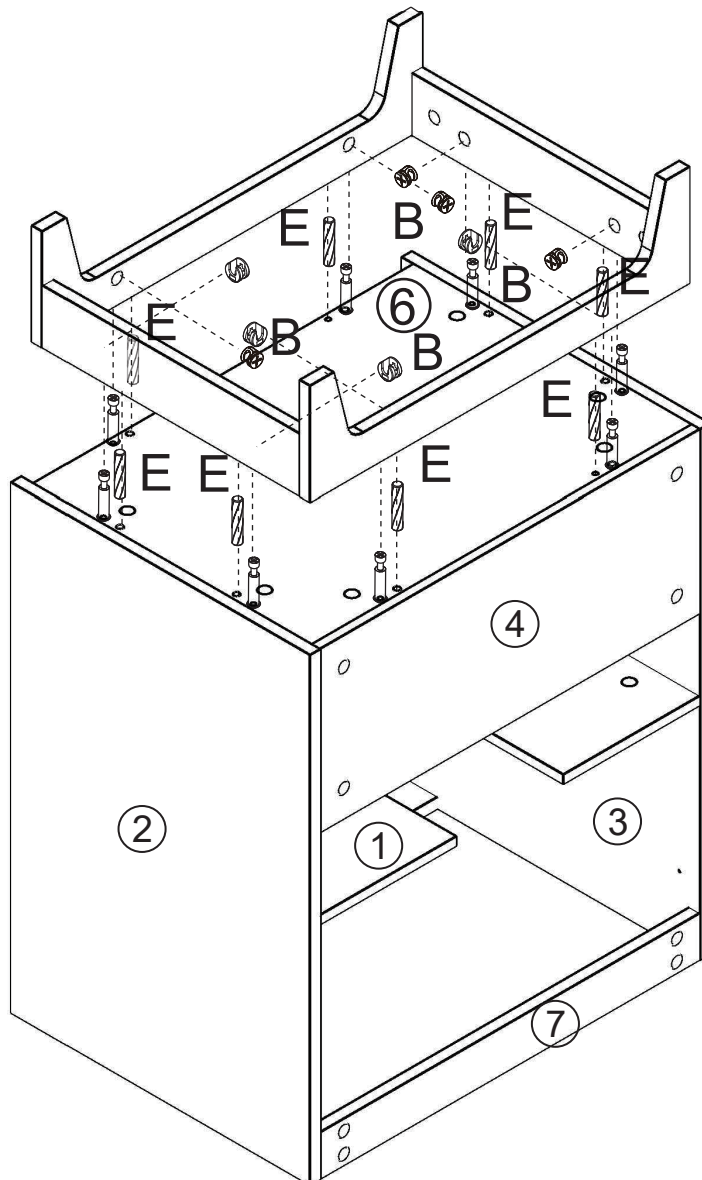


ASSEMBLY STEPS

    
D x16  M4X14mm	F x4 	O x2 	G x2 
---	---	--	---

STEP 10

  1. Use screw (D) to attach hinge (F) and stainless strike plate (O) to panel (11) and panel (12) respectively.
2. Use handle screw (D) to attach handle (G) to panel (11) and panel (12).

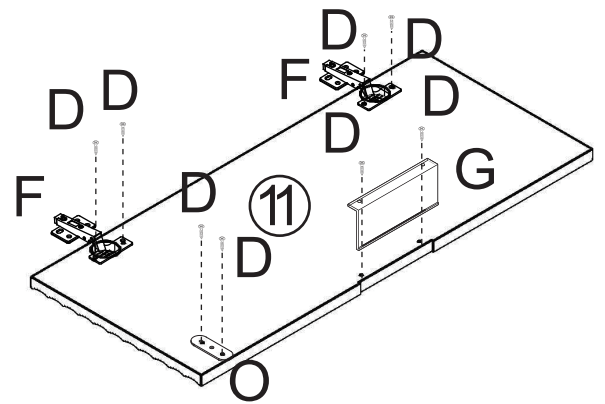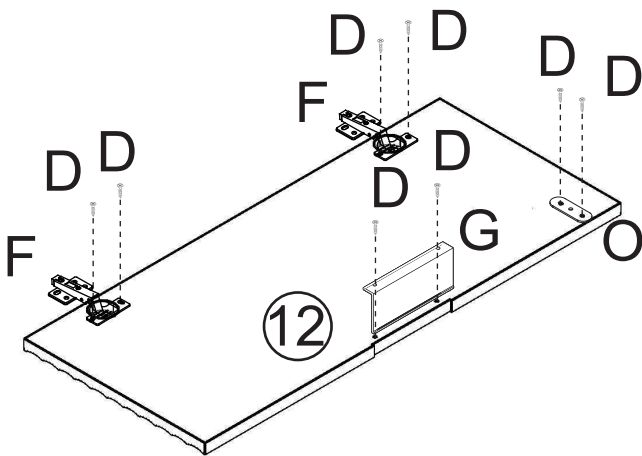


ASSEMBLY STEPS


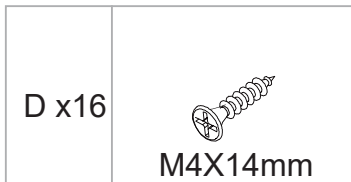 


STEP 11

 Use screw (D) to secure panel (11) and panel (12) to the cabinet body.

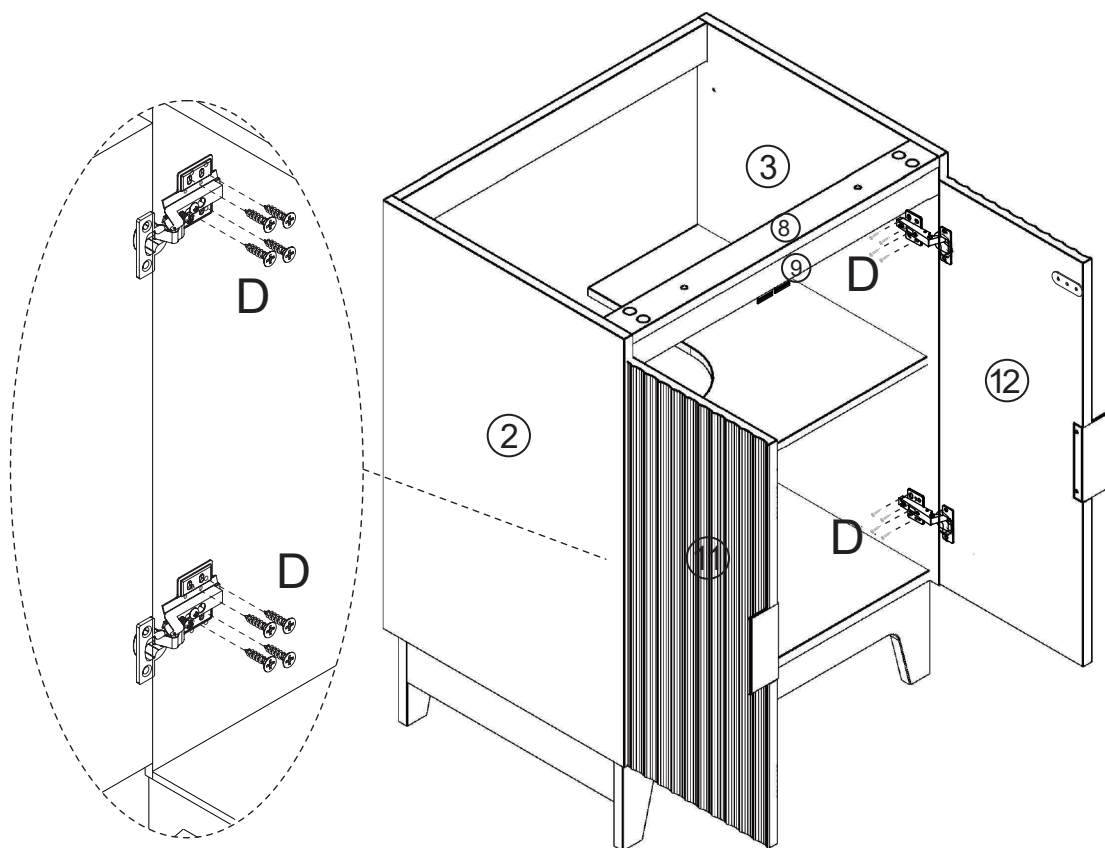


ASSEMBLY STEPS

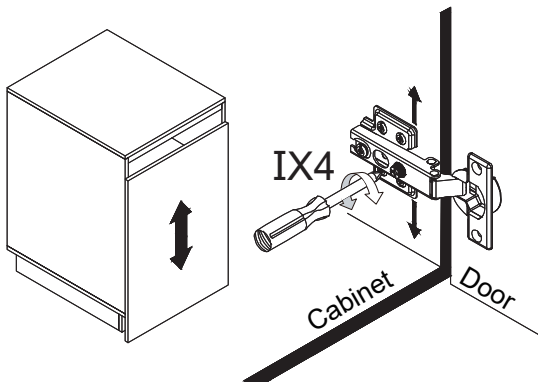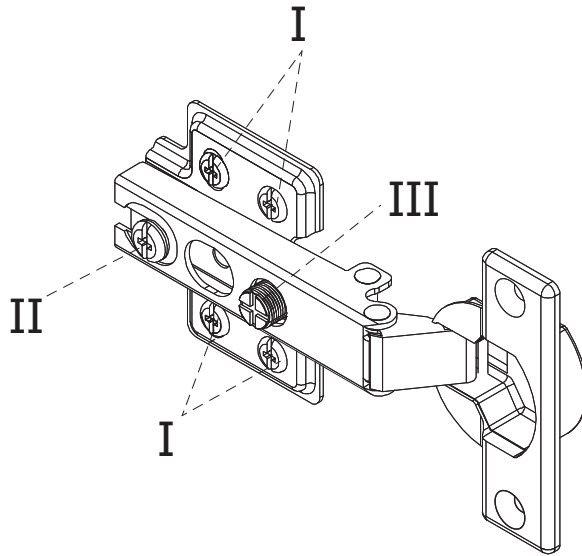  


To adjust the vertical height.

 Loosen the four screws "I" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

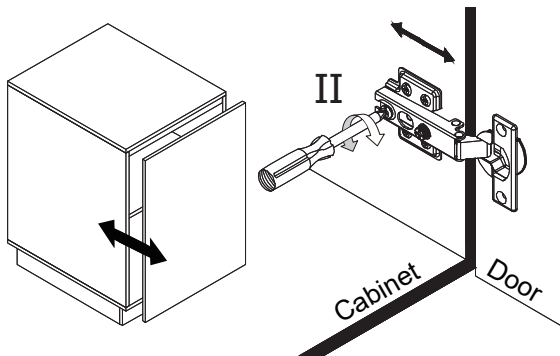

To adjust depth.

 Loosen screw "II" and adjust door, if the door cannot be adjusted, please loosen screw "III", then try again. Tighten screw "II" and "III"

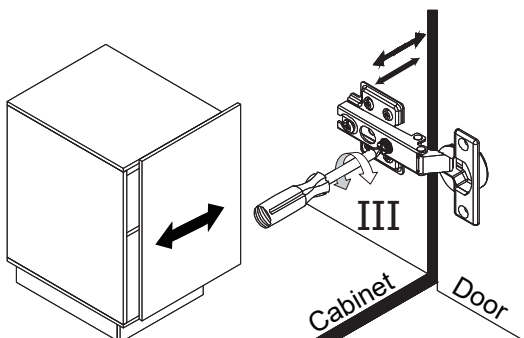

To adjust side ways.



Turning the screw "III" on both hinges on each door.

ASSEMBLY STEPS



I x2		M x2		N x2	
------	--	------	--	------	--

  STEP 12

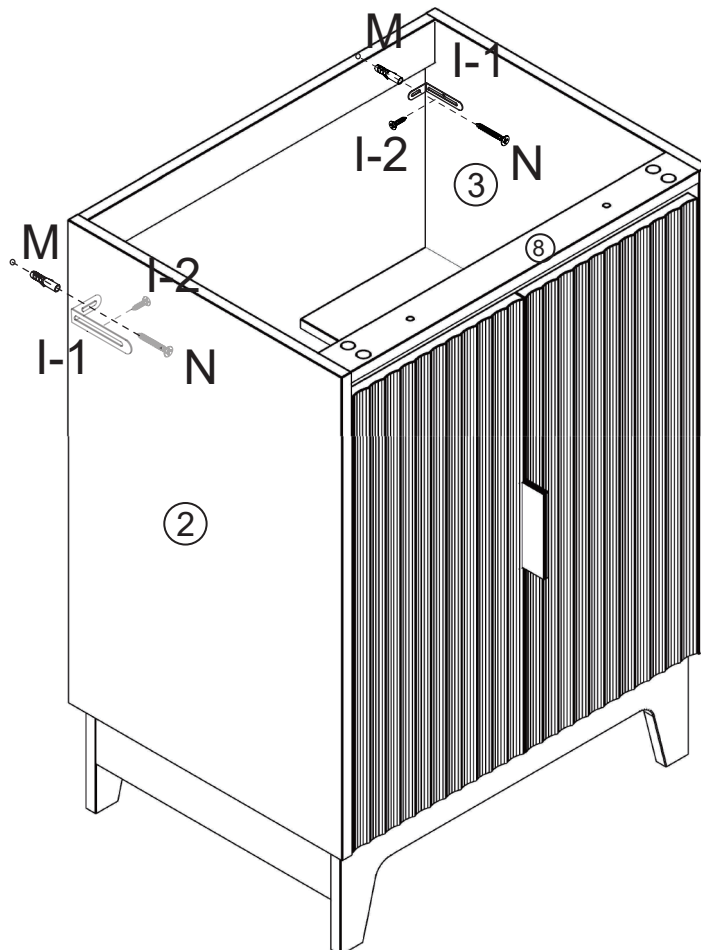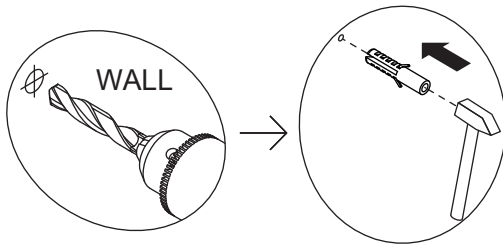1. Fix the anti-tipping kit (I-1) on panel (2) and panel (3) using screw (I-2).
2. Drill two holes in the wall and insert the plastic anchor (M).
3. Embed the plastic anchor (M) into holes, and then use screw (N) to pass through the anti-tipping kit (I-1) to fix it onto the wall.




ASSEMBLY STEPS

J x36		L x 10	
-------	---	--------	---

STEP 13

 1. Use hole cover sticker (J) to cover hole position.
2. Use clear silicone bumper pad (L) to stick it to the top surface of the cabinet to increase friction, so that the ceramic sink can be better secured above the cabinet as shown below.

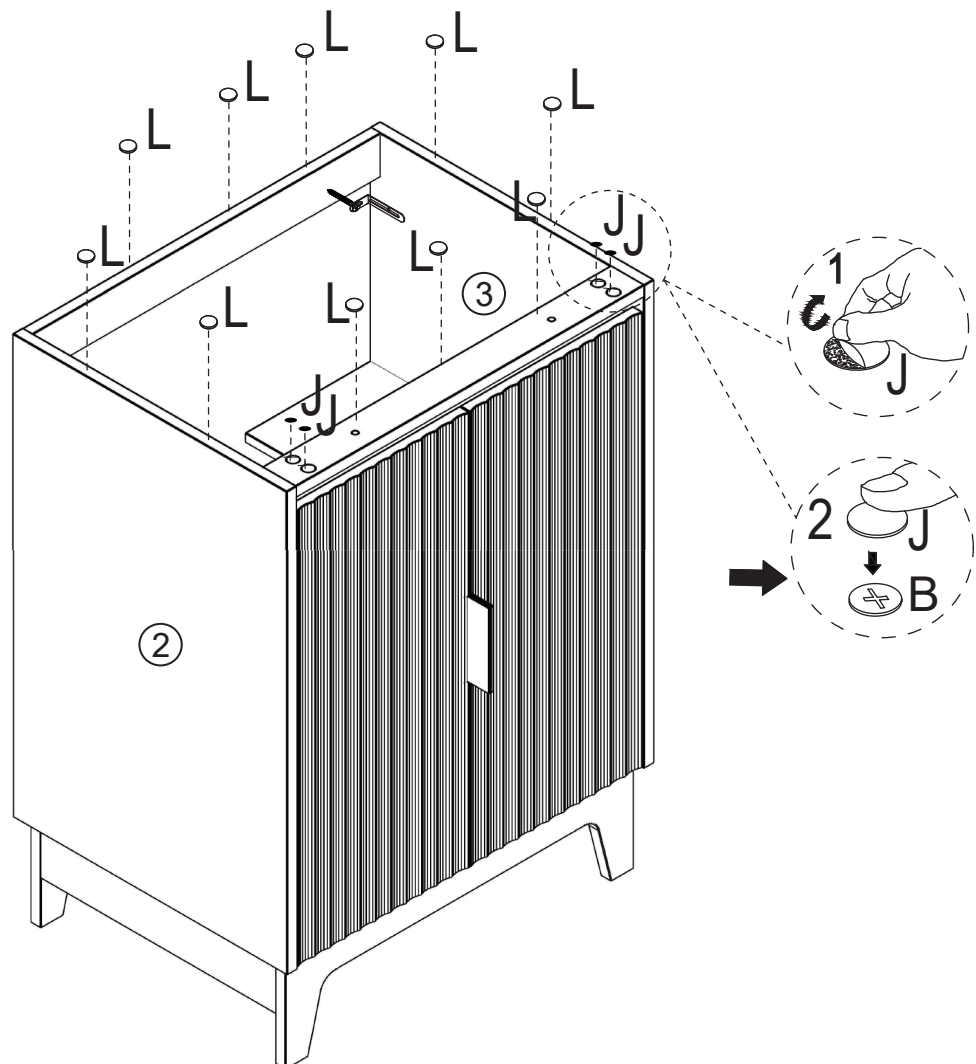

1.What should I do when I received a defected item?

Please feel free to contact VINGLI customer service via the link where you purchased this item with your order ID, pictures of the defective areas to us. We are eager to help you to make it right.

2.Is it easy to put the screws to the panels?

Yes. As long as you follow the instruction and use the correct screws and put it in the correct holes, it is easy to screw it into pre-drilled holes.

3.What should I do if I have a problem with the drawers not closing flush?

The problem with the drawers not closing flush is usually caused by the assembly of the drawer slides.Here are the solutions as below:

1)Please check whether the slide rail is damaged,for example,the ball of the slide rail has fallen out,if so,please ask us for replacements of the drawer slides;

2)Refer to the assembly manual to check if the holes for the slide rail are assembled correctly.If there is no problem with the assembly,but the slide rail is stuck in the process of pushing in,please release the entire drawer as you did the first time you removed the drawer slides,and then push it back in again.

Any query,please contact us directly.

Supplementary Instructions for Safe Use

English

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German

WARNUNG



Kinder sind an einem Möbelkippen gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!