

Care & Maintenance






Caution: You must read this before you proceed


- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Prolonged exposure to rain may cause rusting which can stain floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ✓  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- ⊘  ● Children should not climb or jump on the furniture.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ✓  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- ⊘  ● Do not place the product in stone areas or areas that absorb too much sunlight.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ✓  ● Keep away from sources of ignition.
- ✓  ● High-pressure water guns must not be used for cleaning. Dust and pick-up spills using a clean, non-colored, lint-free cloth.

SKU: KS028CS-T


ASSEMBLY INSTRUCTION

No	Hardware	Fig	Q.ty
①	Bolt M6x20mm		16
②	Washer M6		16
③	Iron corner bracket		4
④	Iron plate		4
⑤	Allen Key		1

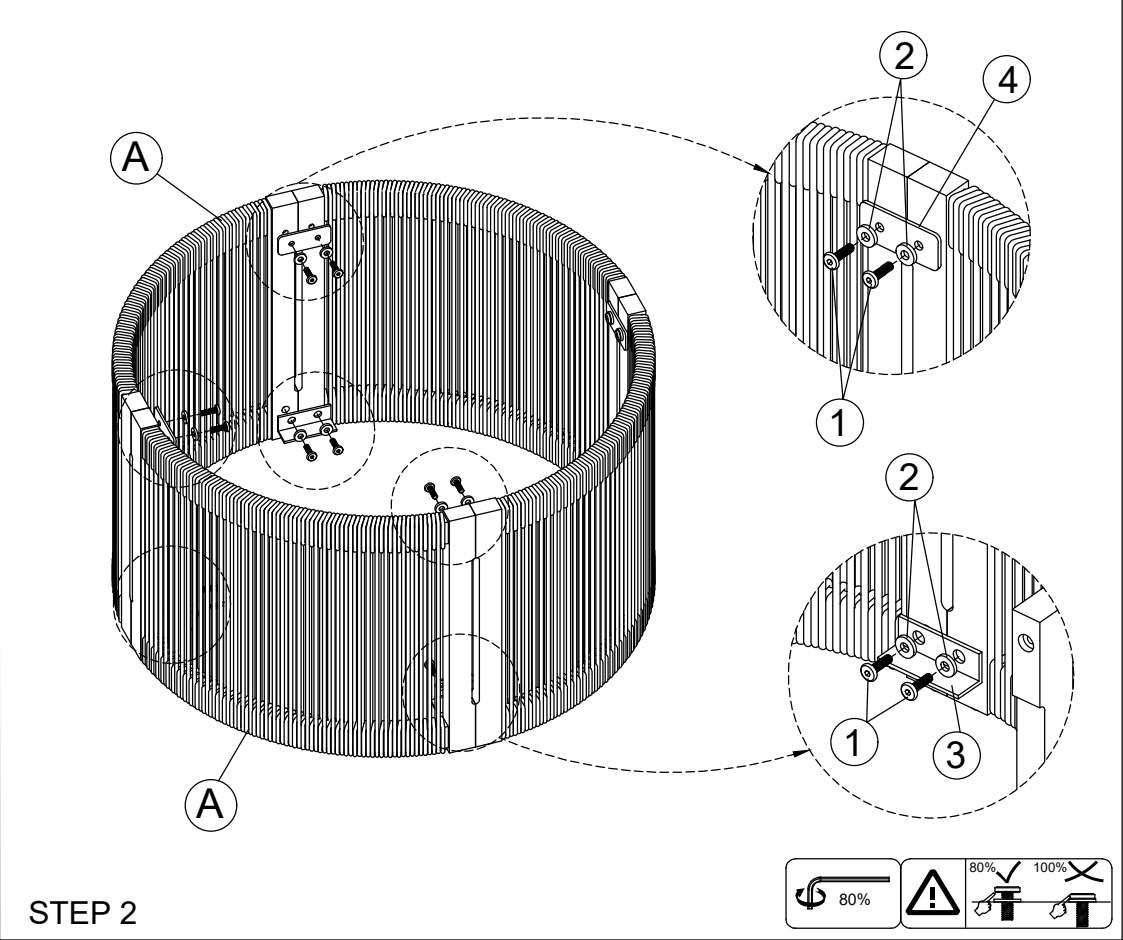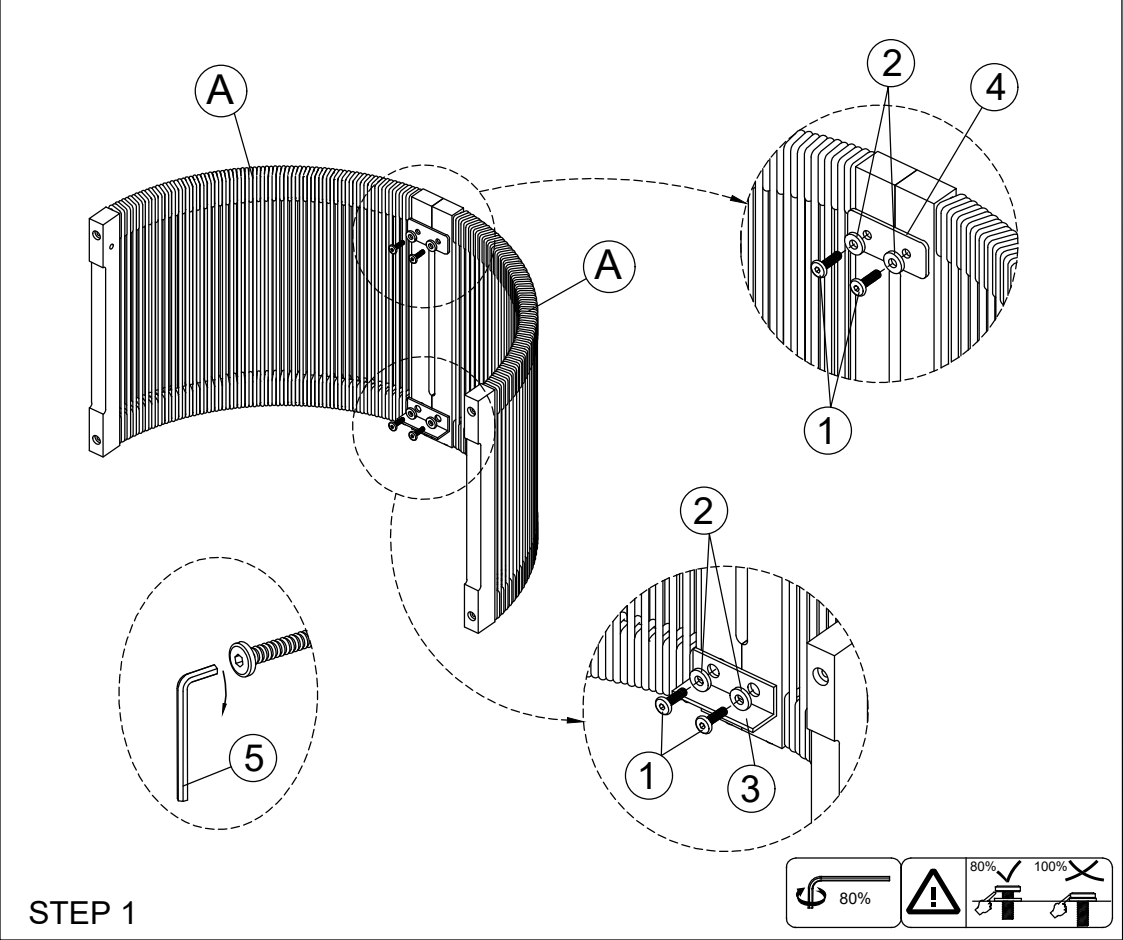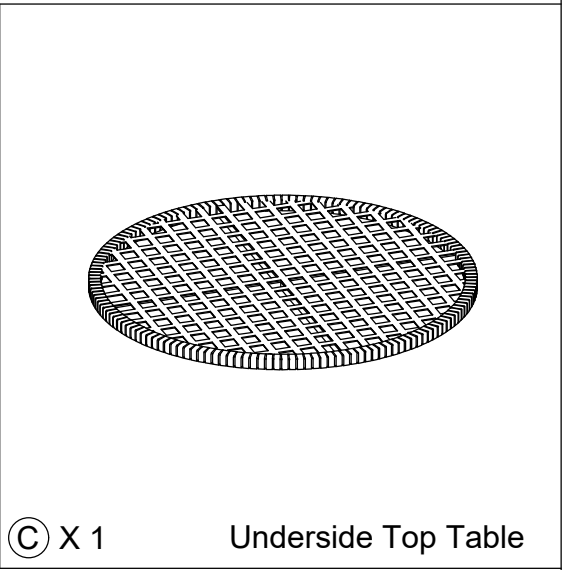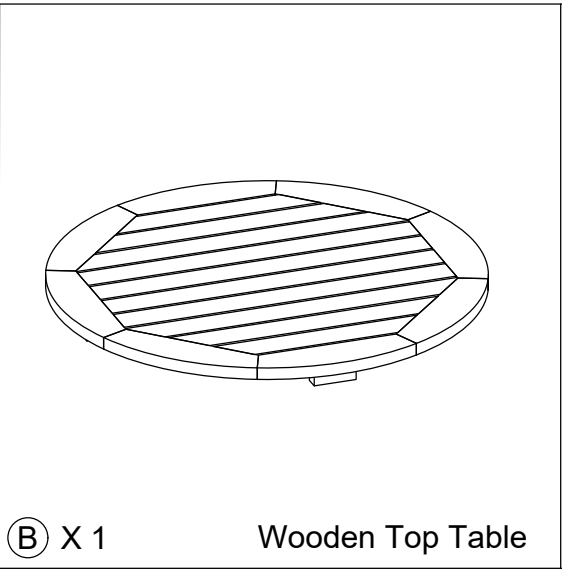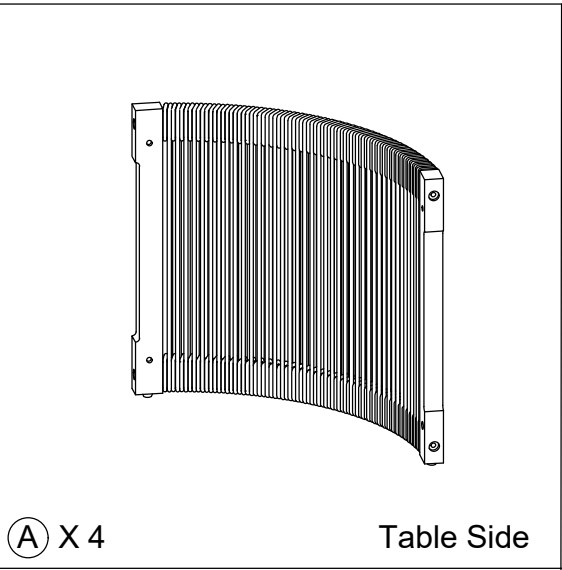


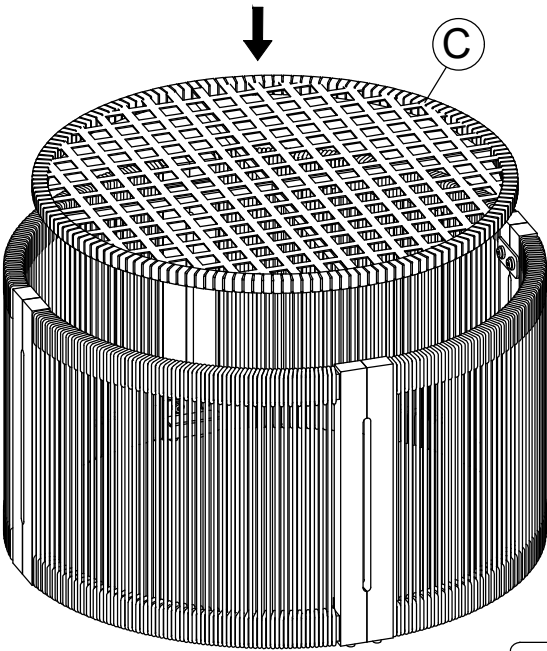


STEP 3

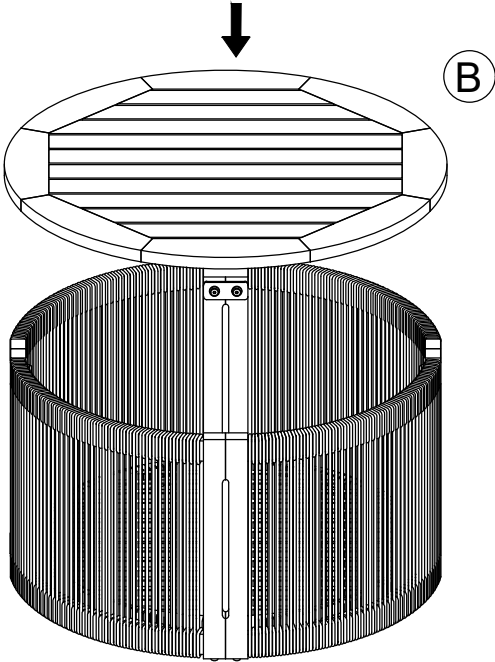

STEP 4

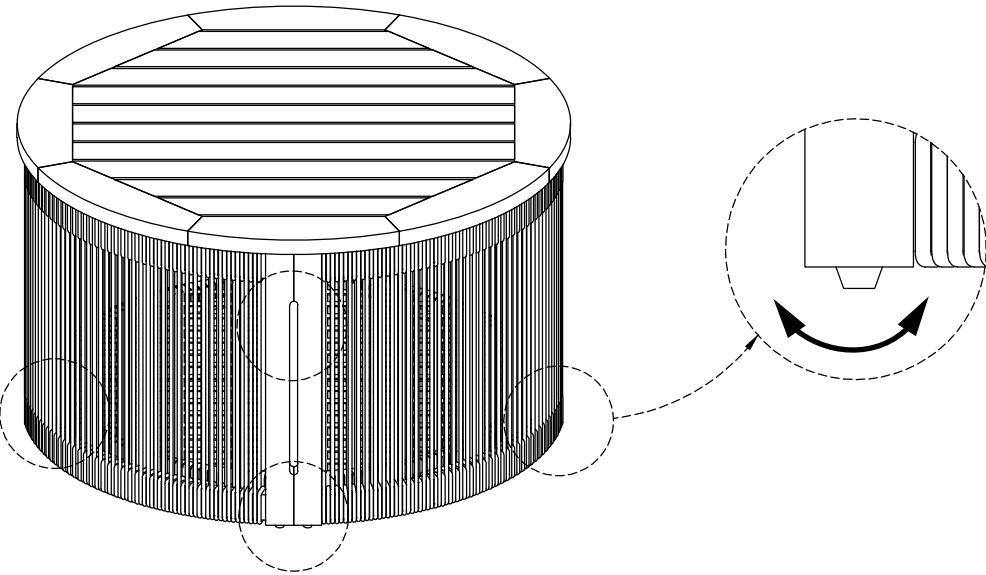

STEP 5

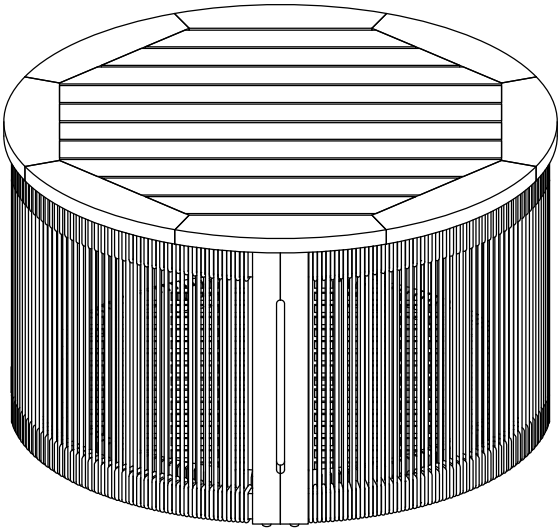

FINISH

