


BAR STOOLS

USER MANUAL


ASSEMBLY INSTRUCTIONS

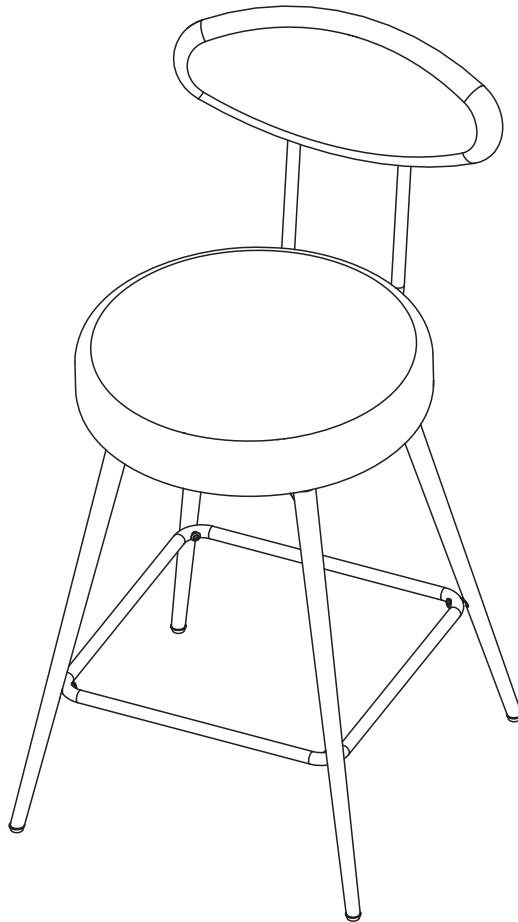

WARNING

- **-Assembly:** Adult assembly required.
CHOKING HAZARD: Small screws and parts can pose a choking risk. Keep them away from children under 3 years old.
- **-Packaging:** Keep these packaging materials out of reach of children.
- **-Inspection:** check the product for wear and tear, and any part is damaged, missing, or has loose screws. Check all fasteners regularly.
- **-Weight Limit:** 300 lbs.
- **-Safety:** Keep away from heat sources.
- **-Storage:** Do not leave outdoors or near wet surroundings.

PRODUCT SPECIFICATIONS

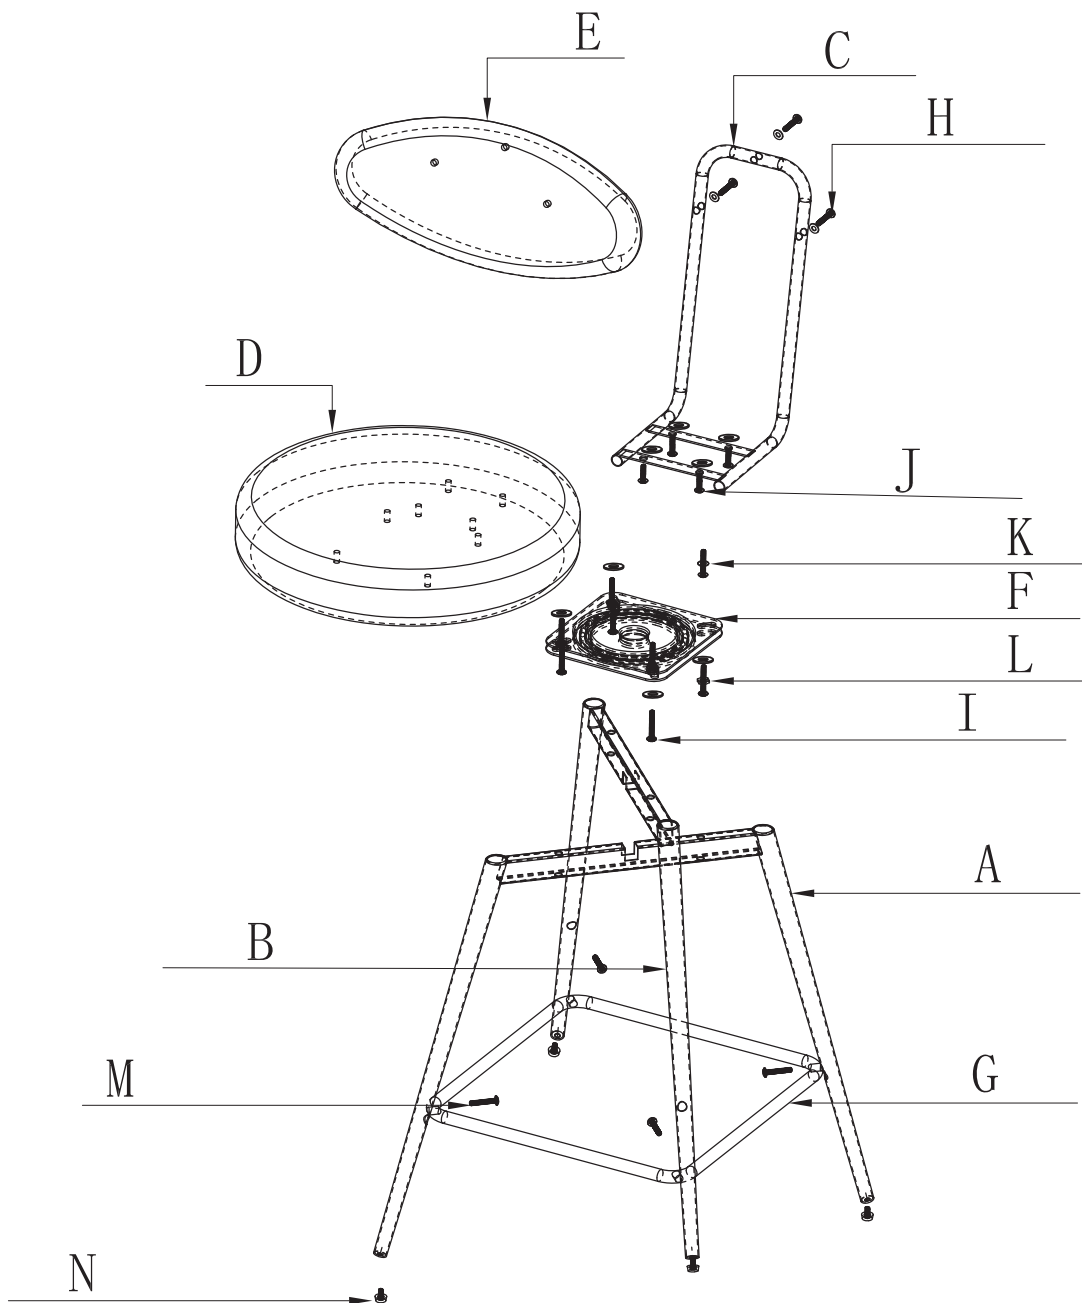


Product information:


Size: 18*22*37.7inch

Net weight : 14LBS


PACKAGING LIST

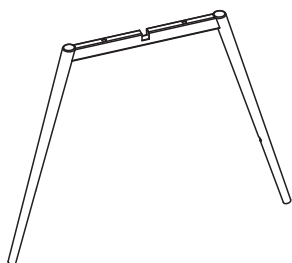


(A) *1PC

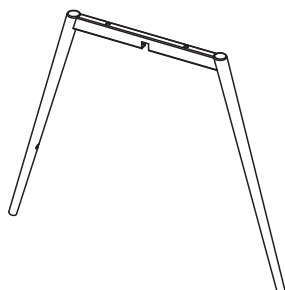


(B) *1PC

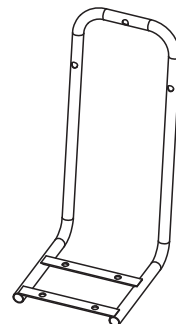


(C) *1PC

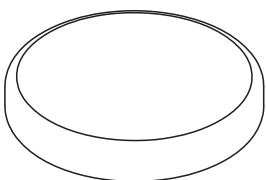


(D) *1PC

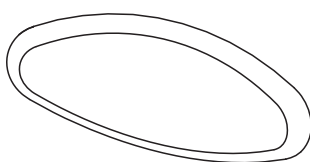


(E) *1PC

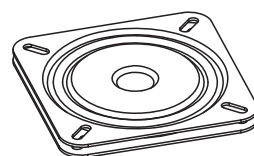

(F) *1PC

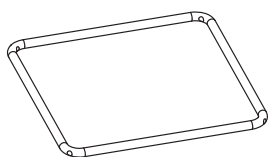


 (G) *1PC



6*35mm

 (H) *2PCS



6*40mm

(I) *4PCS

 


6*25mm

(J) *8PCS



(K) *15PCS




(L) *4PCS



6*30mm

 (M) *5PCS




(N) *4PCS

4

STEP 1


Insert A into B along the middle notch until the surface is flush.

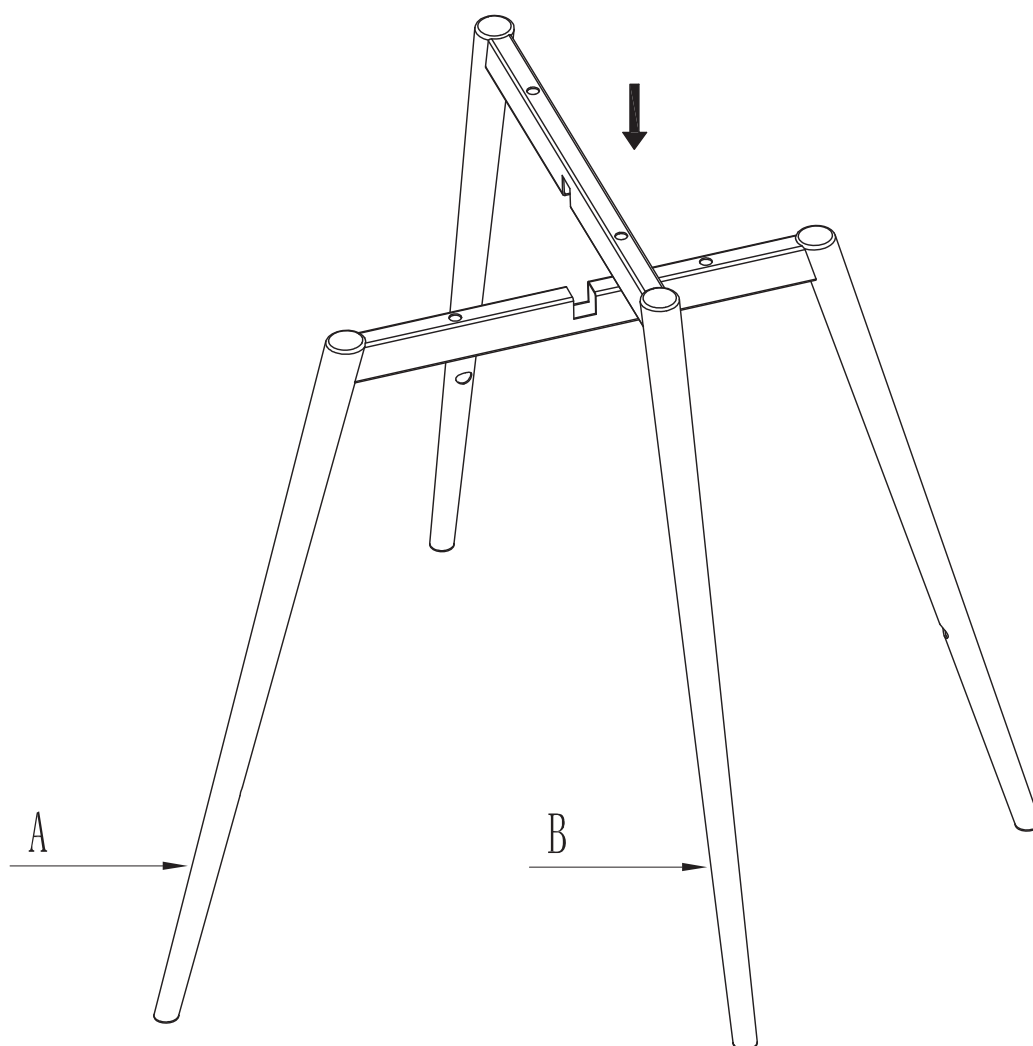

5

STEP 2


Align the mounting plate F with the hole on the chair leg and lock in the screw I, washer K and nut L.

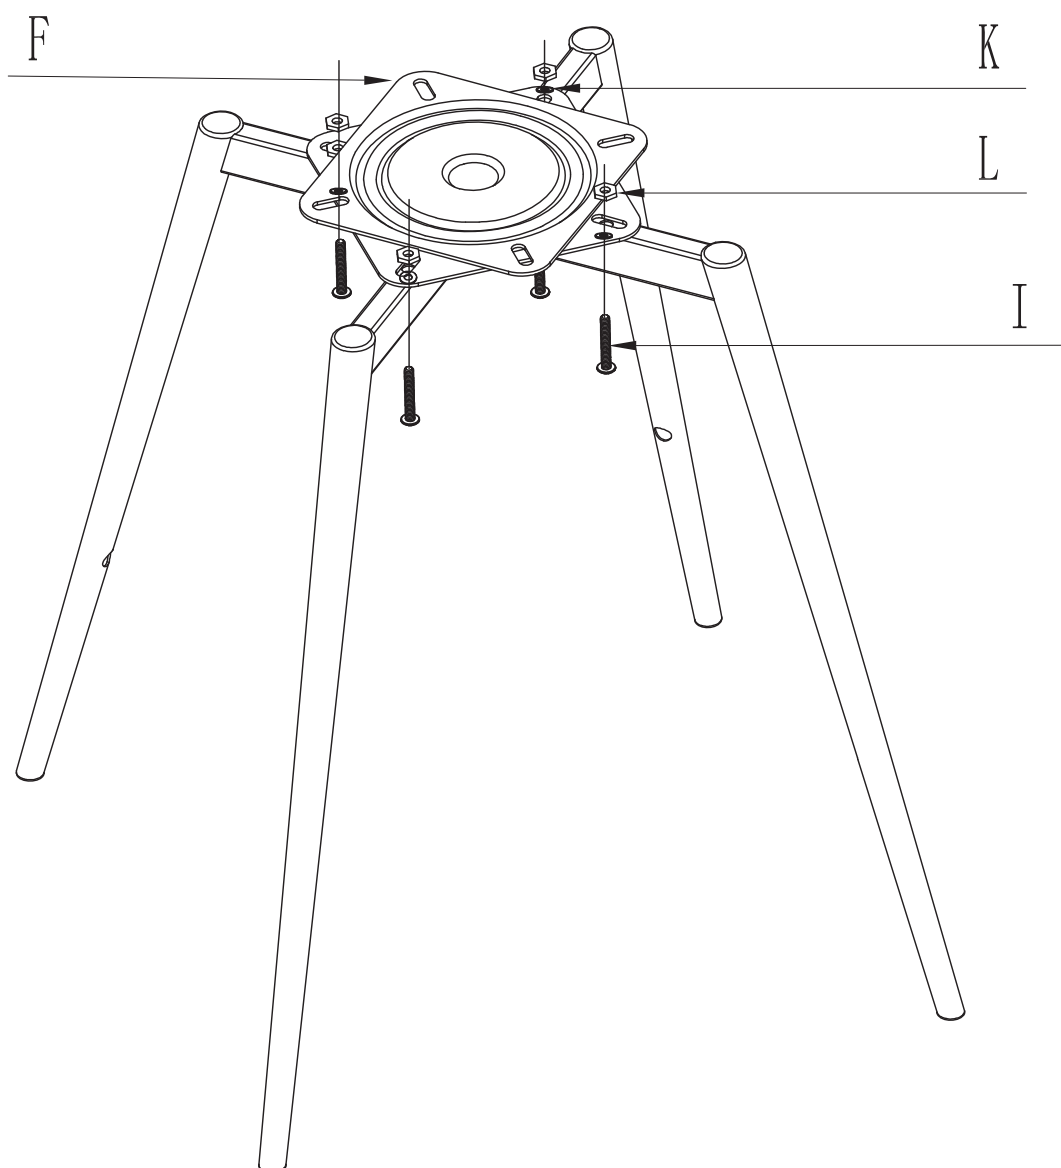

6

STEP 3


Align the seat cushion D with the hole on the turntable F. Then lock the screw J and the washer K from the bottom.

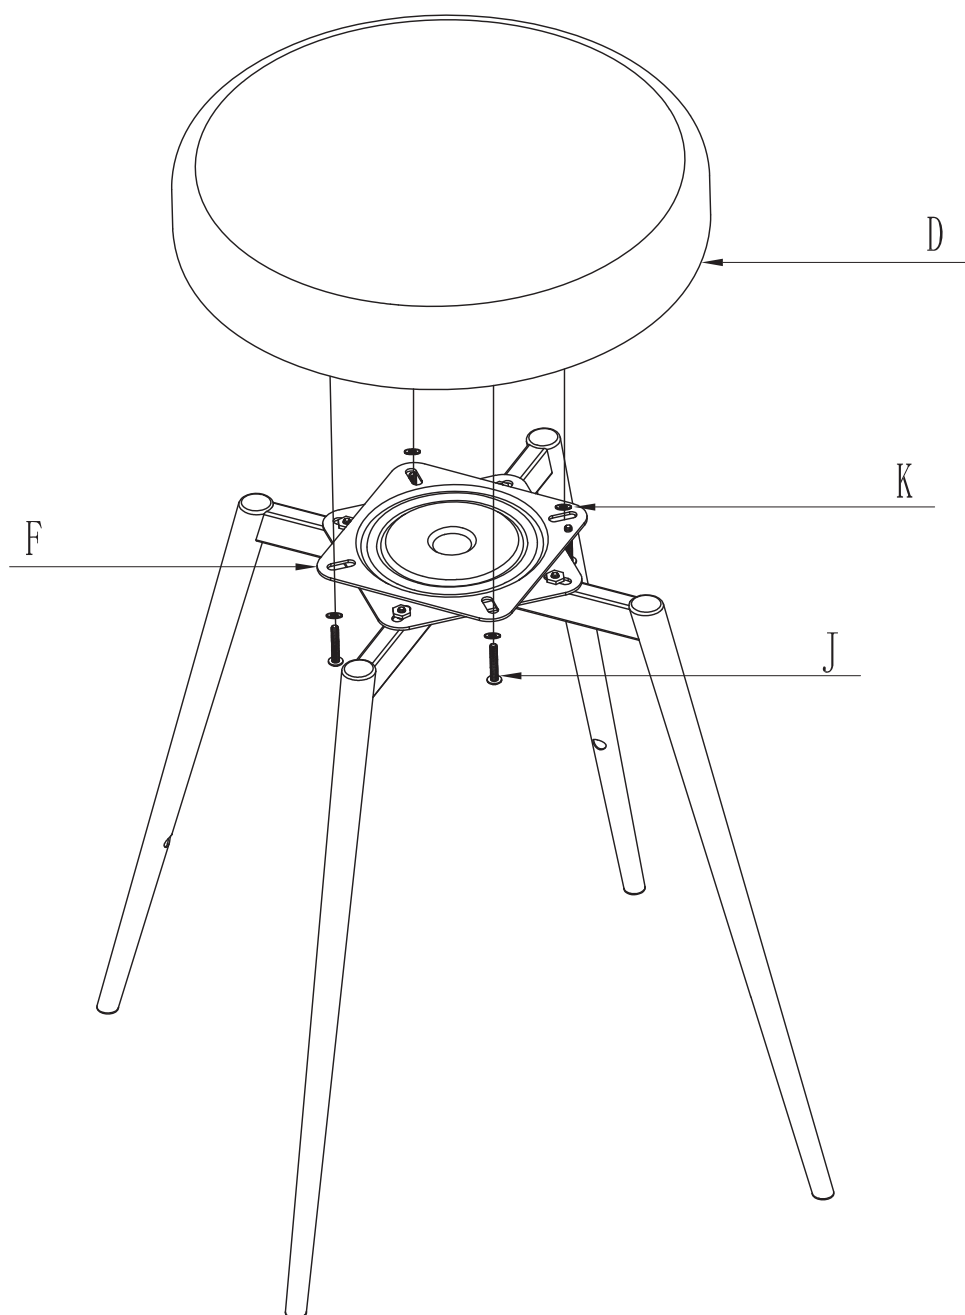

7


STEP 4

Align the cushion E with the hole on the cushion elbow C, and then lock the screw H from the back.

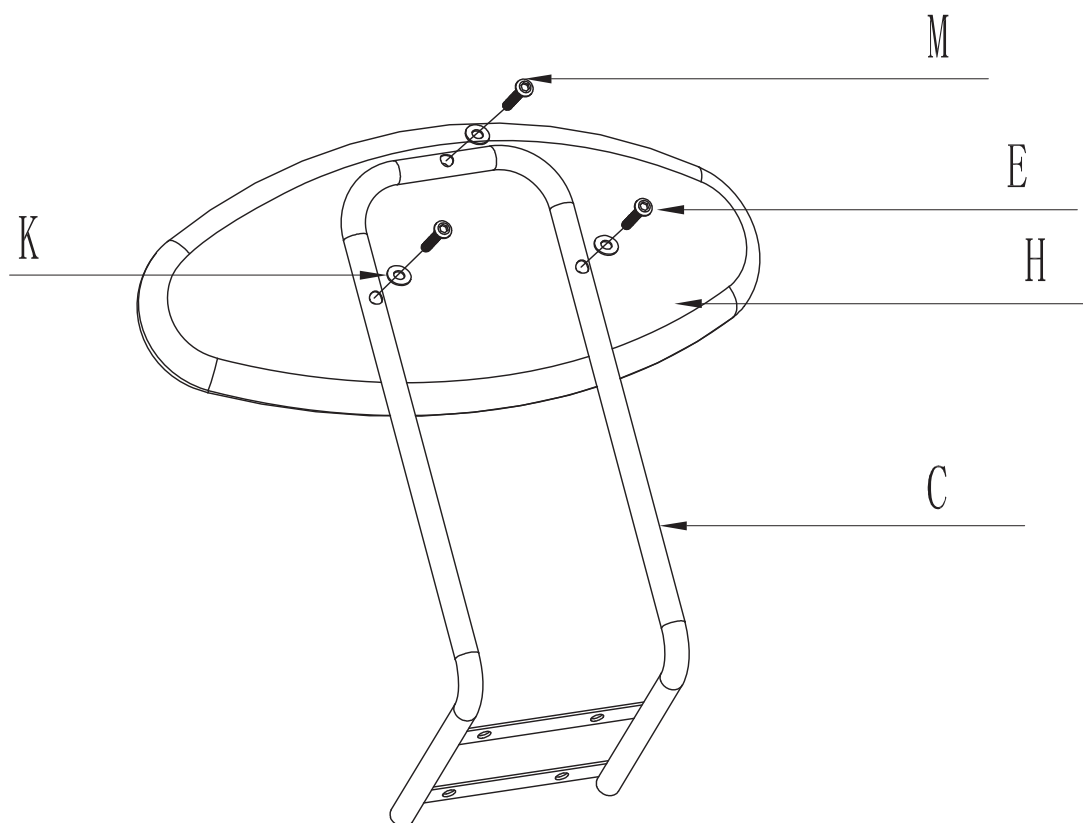


STEP 5

Align the assembled back cushion with the holes on the seat cushion, and then lock the gasket K and screw T from the bottom.

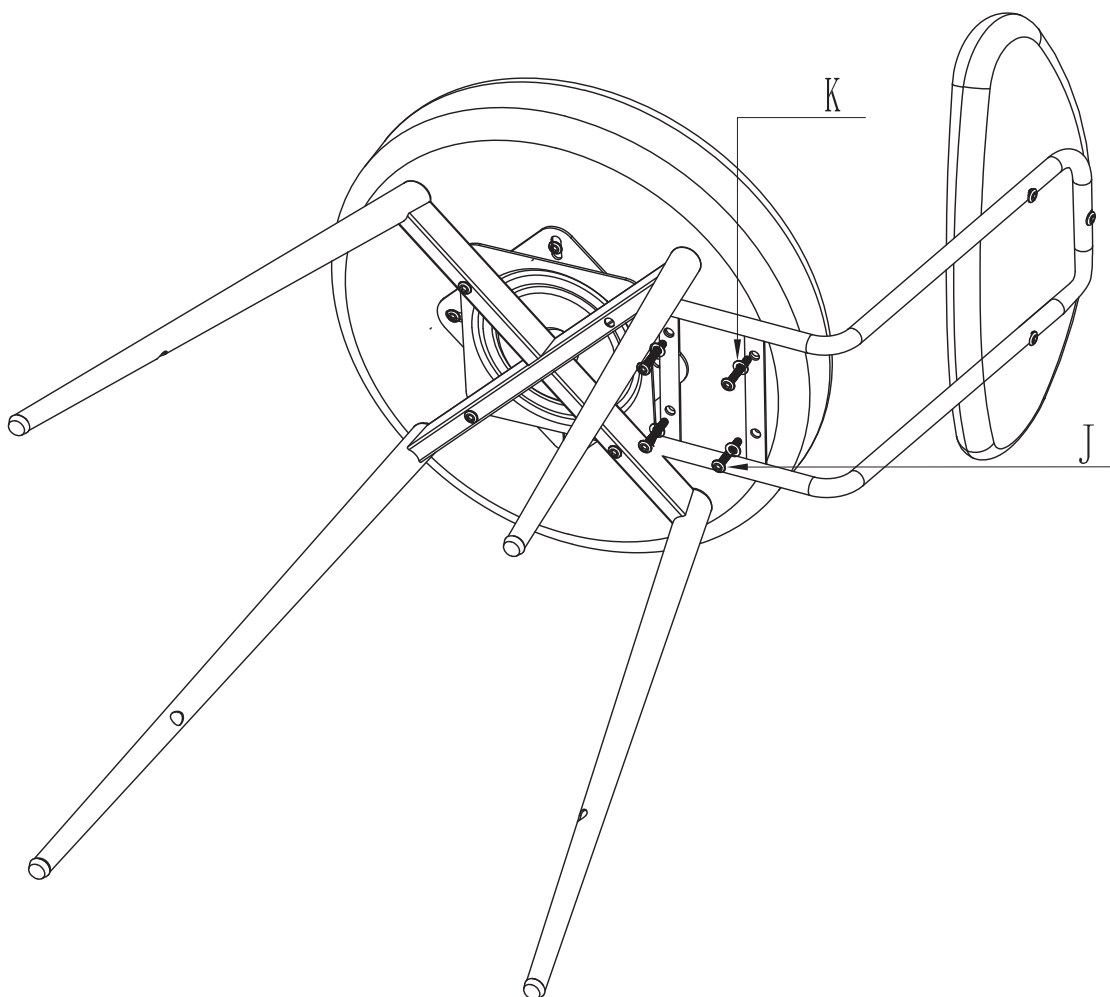


STEP 6

Align the square foot tube G along the hole on the chair leg and insert the screw M

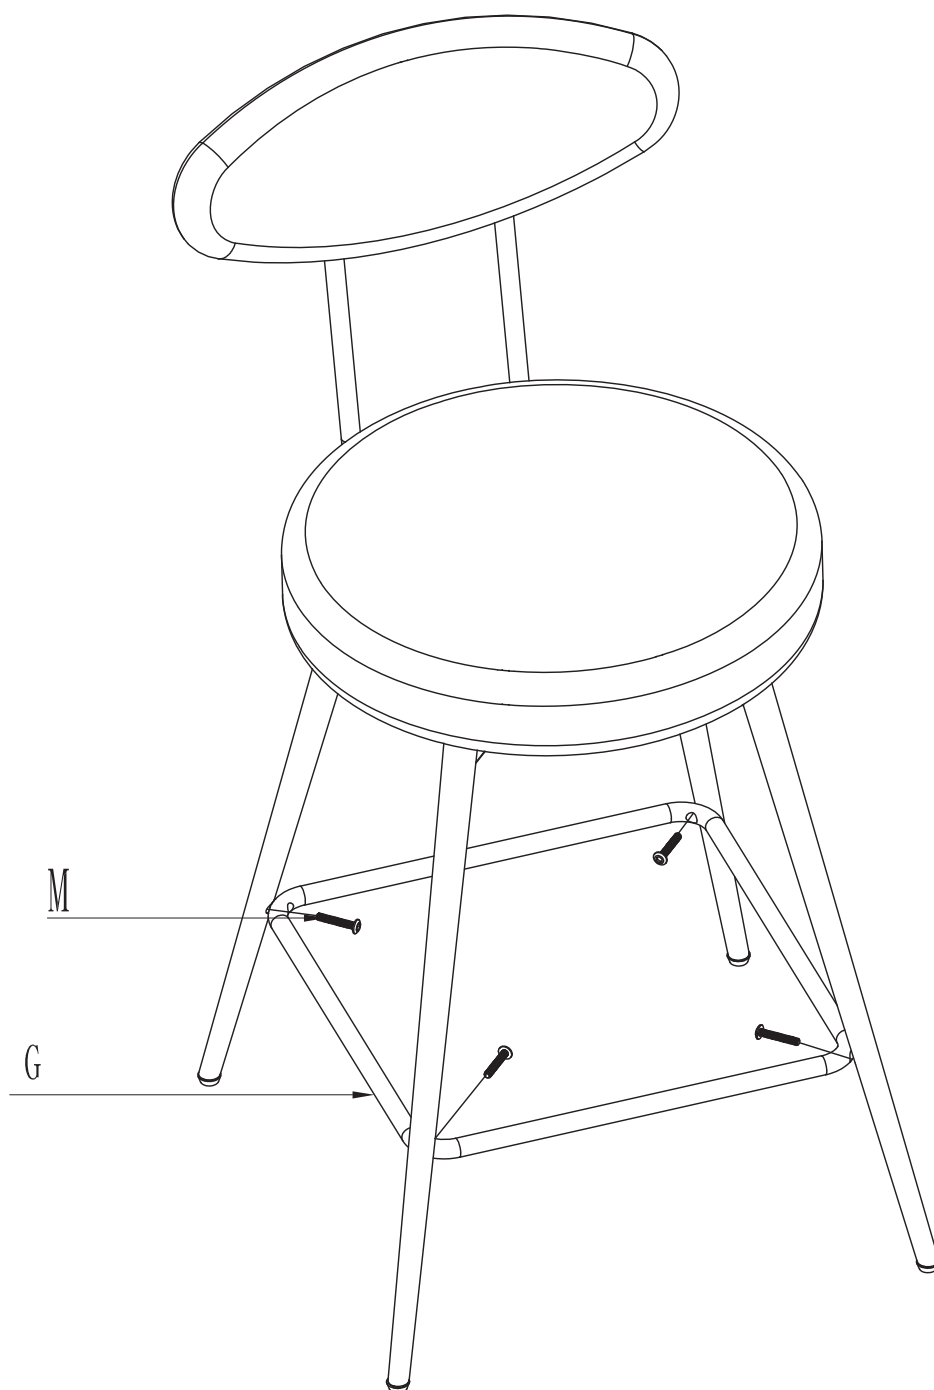


STEP 7

After installation, adjust the foot nails N at the bottom to keep the chair balanced.

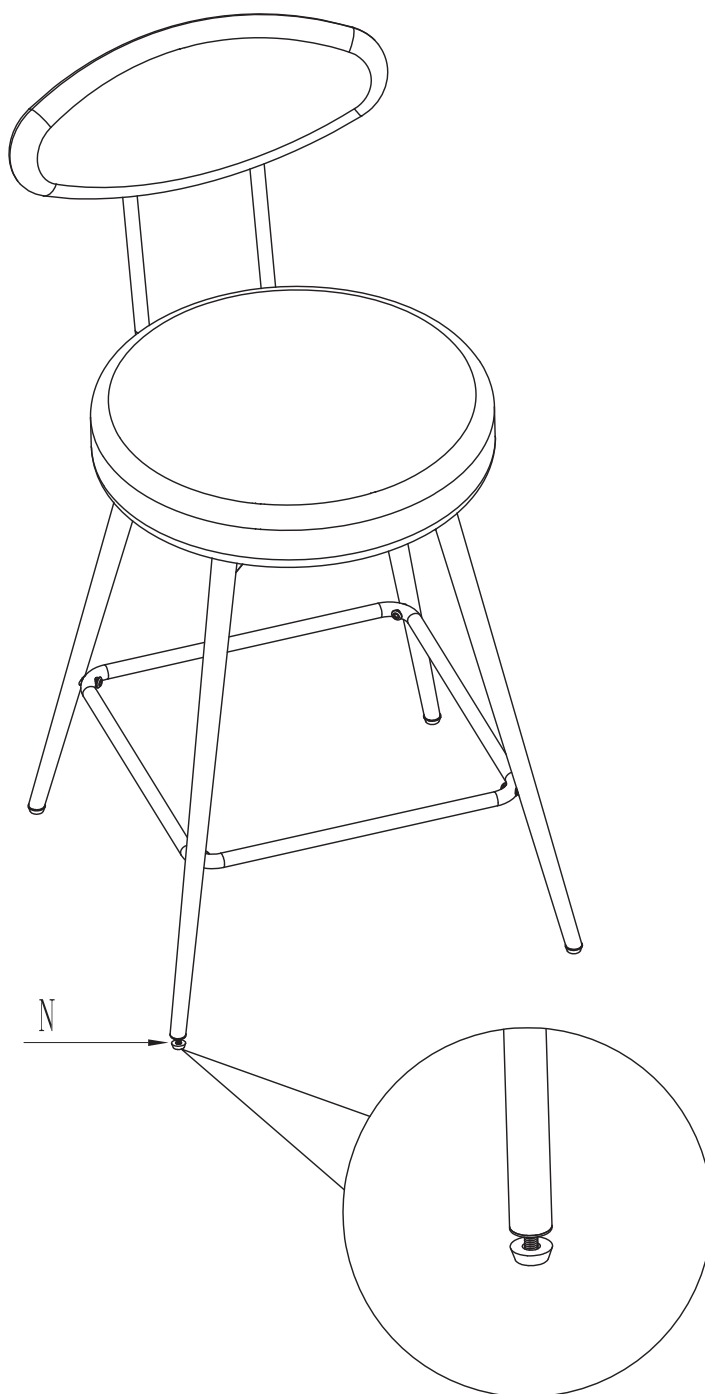

STEP 8

Installation completed

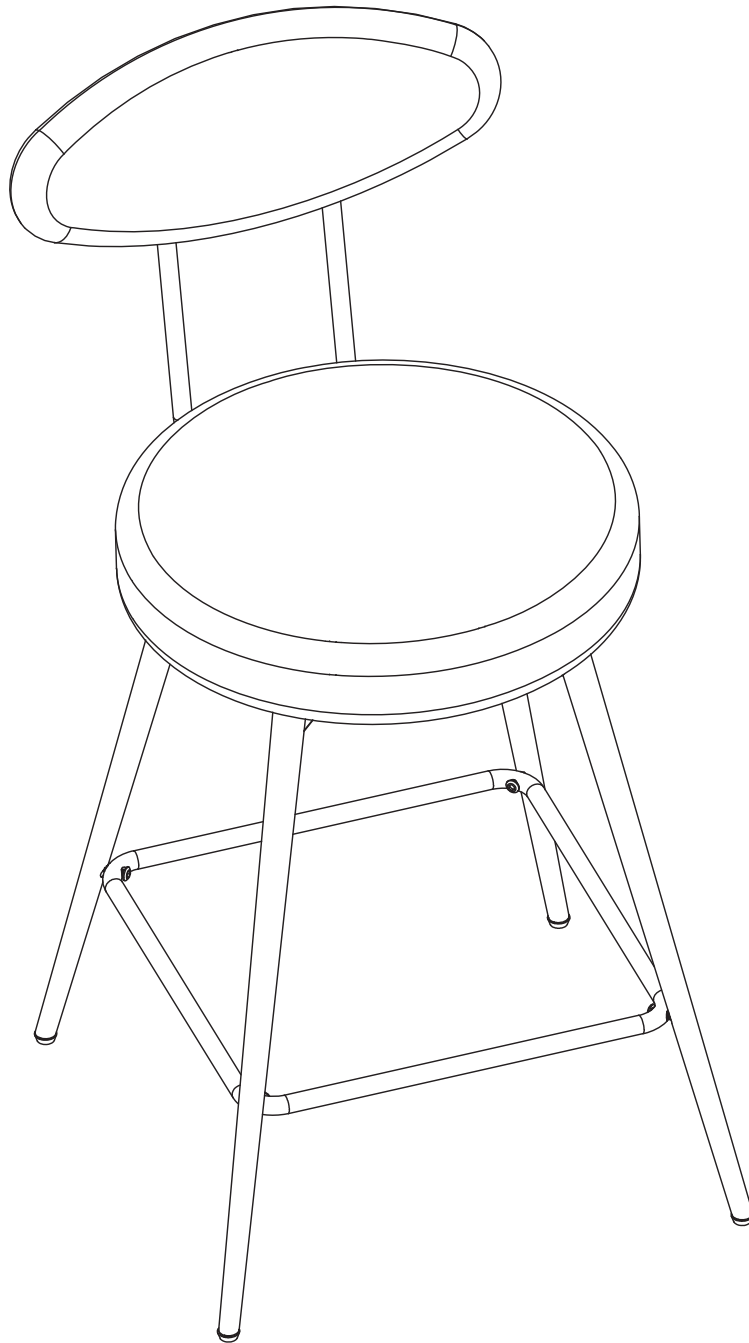

MAINTENANCE AND PRESERVATION

WARRANTY

metal furniture are generally more durable than plastic ones, but they can sometimes break. While metal furniture can last many years with proper care, products are not guaranteed against damage due to play and use.

Products sold are guaranteed against defects in materials and workmanship for twelve (12) months from the date of original purchase. This warranty is valid only under normal use and for the intended purpose of the product.

Comfortable experience, Bringing aesthetics to life

Made in China