 



## 2.4g Drive remote control manual

### Basic operation instructions:

1. Code matching and grouping: The remote control can only be used after code matching operation with the driver. The methods are as follows:
2. After the normal connection between the drive and the load lamp (light source) and the power is completed, turn  ON the power. At the moment of turning ON the power (within 3 seconds after seeing the light/light source ( ON ), press the ON button and the light (light source) will flash "slowly for three times", that is, the code and grouping are successful. A) Note: a remote control can match countless drives, but a drive can only accept at most 4 remote controls simultaneously.
3. Code cleaning method is as follows: select the lamp that needs code cleaning, turn ON the power again after cutting off the power, and within 3 seconds after switching ON the power light), press the main ON button for 5 times continuously, that is, the light/light source will "flash six times", and confirm the success of code cleaning. After the code is cleared successfully, the operation process of rematching the code is exactly the same as the operation of the first "matching code".
4. Night Light Function: Find the night light key on the remote control and press it. No matter what state the light is in, the light will return to the night light mode.
5. Timing function: find the timing key ON the remote control. The first flash of the light means half an hour, and the second flash means one hour.
6. The wall switch section: the power supply adopts advanced automatic synchronization technology, lamp light open after three seconds, the power supply will automatically enter the memory function, the electric breaking with wall switch, and then to electricity, the light is memory state before the last time to turn off the lights, and then the electric breaking again with wall switch, then into a state power supply section, repeat switch, can be used to switch out: white, warm white, neutral light.
7. Remote control section function: press the color temperature key on the remote control to quickly select positive white light, warm white light and neutral light.
8. Situational light function: Find the S.Light on the remote control. After pressing it, the sidelight will turn on or the auxiliary light will turn on

