 


Brushless ear mounted awn power 8811

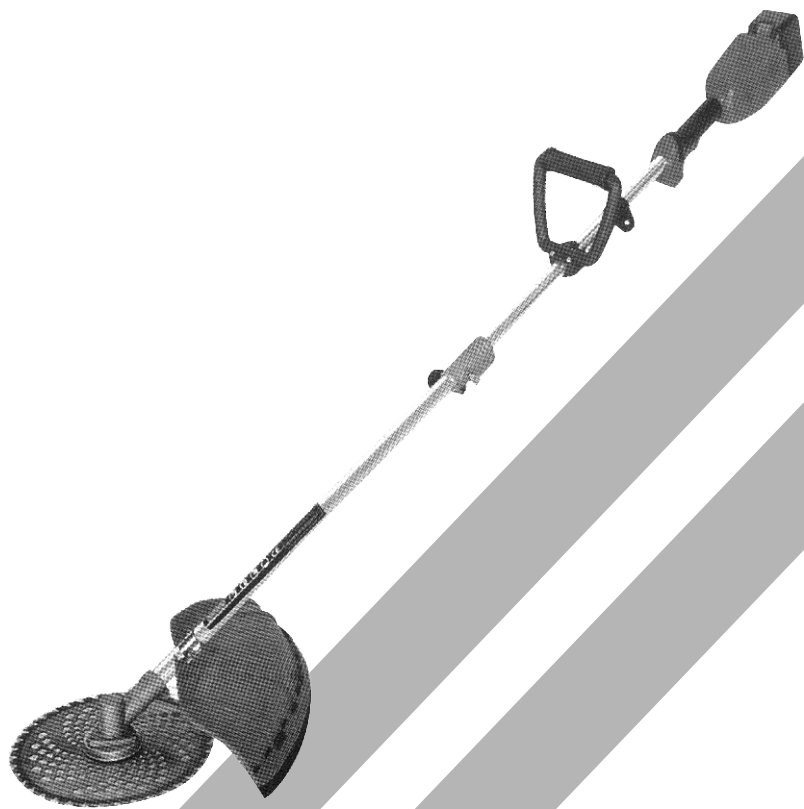

Product ser am

一、Logo Description

The following signs may appear on the machine you purchased. Please recognize these signs and understand their meanings, so as to improve work efficiency and safety when operating the machine.

	Before using the machine, please read the manual carefully and strictly follow the manual to operate, set, and maintain the machine.
	If you feel excessive noise, please wear earplugs and other noise prevention equipment.
	Wear gloves when using the machine.
	When using the machine, please wear sturdy work shoes.
	When using the machine, ensure that people and pets stay away from the work area. Specially for children, they should be kept 15 meters away from the work area.

二、Safety guidelines




Please carefully read the following safety precautions and strictly adhere to them. Our company reserves the right to maintain the final interpretation for safety accidents and product issues caused by non-compliance with safety regulations.

1. Before use, carefully read the manual, familiarize yourself with the machine operation methods, and ensure that the machine is installed correctly and can operate normally.
2. It is prohibited for beginners and children to use the machine.
3. Set the machine in the following environment: sufficient and bright light, no dust, froug, and no one nearby.
4. The machine cannot be used in the following environments: rainy days, ear high-voltage circuits, r onolids.
5. Before use, the machine should be carefully inspected. If the parts of the machine are found to be damaged or worn, the damaged parts should be repaired and replaced first.
6. When using, wear suitable work clothes, and ensure that the clothes are not too loose. Do not wear loose clothes. Do not wear jewelry, such as rings, watches, and necklaces, when using the machine.
7. When using, ensure that the machine is not used for other purposes.
8. Keep the machine at a safe distance from the work area when the machine is running.
9. Do not expose the machine to rain or other water and do not use it to prevent water from entering the machine.
10. Do not use the machine to cut or pierce other parts or to prevent water from entering the machine.
11. In the following situations, it is necessary to disconnect the battery from the machine and leave the machine unattended: When cleaning obstacles, inspecting and cleaning machines; When making out of range; When using other parts; When the machine begins to operate abnormally. After disconnecting the battery, do not use the machine to completely stop running before performing other operations on the machine.
12. When parts are damaged, please replace the original parts of the product. Other parts may cause safety accidents.

三、Technical specifications

Name	Rechargeable brushless electric lawn mower
Model	8811
Voltage	24V
Power	1200W
Weight	3.7KG

四、Component name

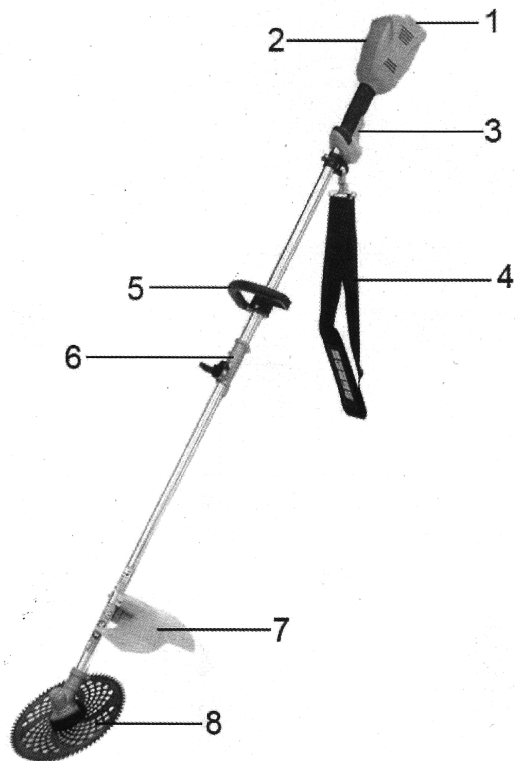


1	Direct plug-in battery plug II	2	External battery plug II
3	Start switch	4	Shoulder strap
5	auxiliary handle	6	Connecting sleeve
7	Grass baffle	8	Blade

五、Installation instructions


▲ be careful! Before installing the lawn mower, make sure to cut off the power supply between the mower and the power supply.

Warning! Only start the lawn mower after complete assembly.

A. Install the connecting rod: As shown in the figure, align it with the connecting rod, slightly rotate the rod to ensure that the pin is inserted into the circular hole, turn left and right to ensure that it is securely fastened, and then tighten the knob.

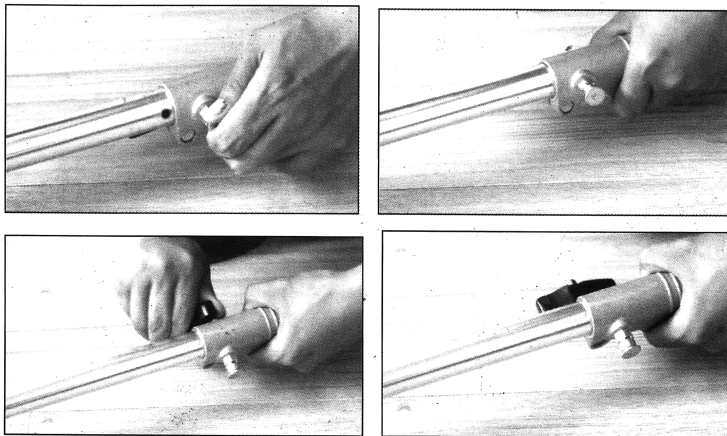


B. Install the protective cover: As shown in the figure, 1. Place the protective cover on a pole about 15 centimeters away from the blade. 2. Place a fixing block on it. 3. Install the bolt, secure it with an Allen wrench, and tighten the screw.

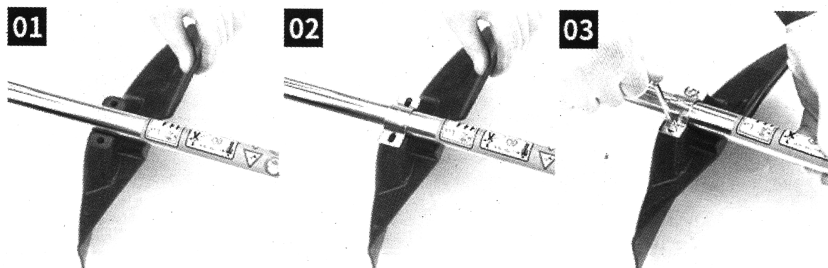


C. Install auxiliary handle:

1. Find a comfortable position and clip the auxiliary handle washer into the straight rod.
2. Close the upper and lower accessories of the auxiliary handle. 3. Tighten the screws

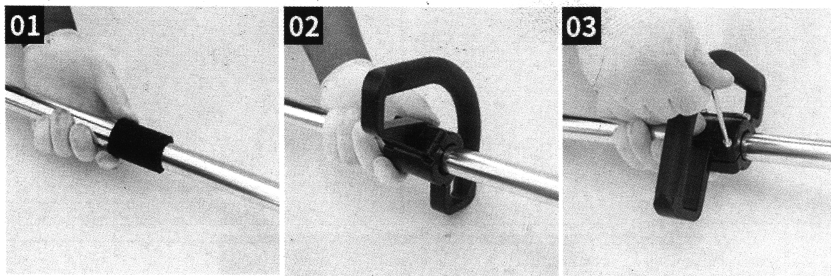


D. Install the blade (the installation of the grass head can be used as a reference):
as shown in the figure


1. Use a wrench to pass through two small circular holes, fix the knife holder, and then loosen the nut clockwise to remove the gasket and protective sleeve of the blade
2. Place the blade (with the font facing downwards) and place it on the blade holder
3. Install the gasket
4. Install protective cover
5. Install the nut and tighten it counterclockwise, ensuring that the wrench is removed after tightening
6. Correct rotation direction of the blade.

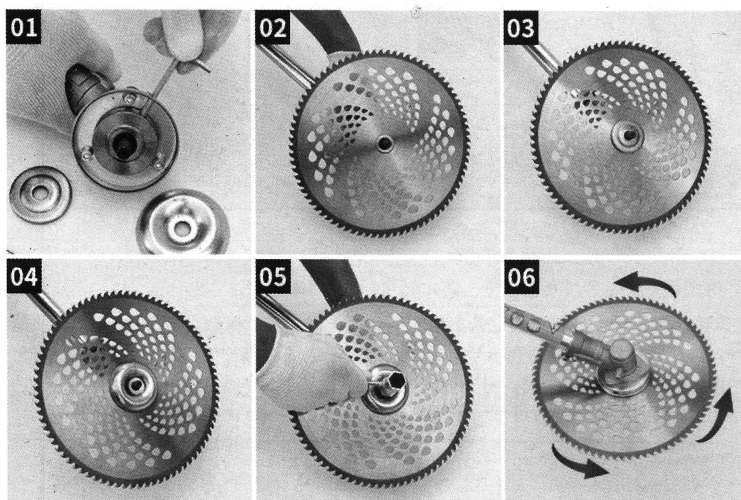

- ⚠ be careful!** 1. Insert the wrench into two circular holes to secure the cutterbed. 2. Loosen the nut clockwise and tighten it counterclockwise. 3. The nut must be tightened, otherwise it will vibrate. E. Install the straw rope: Take a straw rope and fold it in half, thread it into the two circular holes of the straw head, insert it, turn it over, and wind it counterclockwise. After winding, thread the straw rope into the symmetrical two circular holes of the straw head.

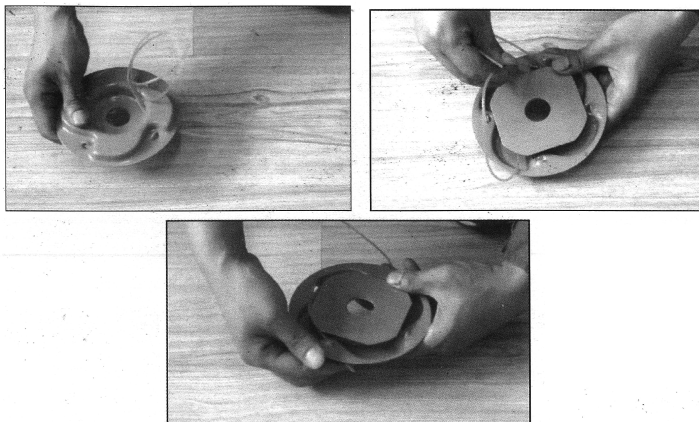


F. Install the battery: As shown in the figure, insert the battery along the slot of the fixing clip and secure it with a click. The method of removing it is to press and hold the button and pull out the battery downwards.

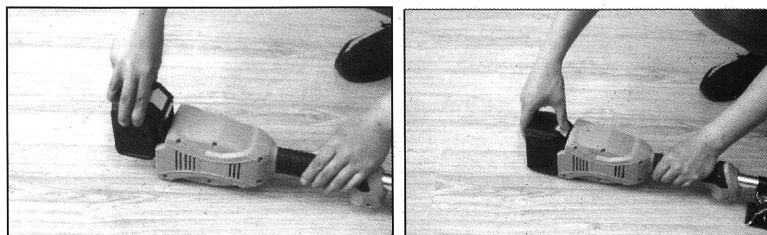


▲ Be careful! The battery is guaranteed to be charged once every 1-2 months to prevent a decrease in storage capacity

G. Install the support wheel: as shown in the figure, unscrew the screws on the fixing strip, place one side of the fixing sleeve on the rod, then align and place the other side, tighten the screws, and fix them with an allen wrench. Unscrew the nut on the wheel, fit the wheel axle into the circular hole of the bracket, then fix the nut and tighten the wheel axle. Install the other side using the same method.

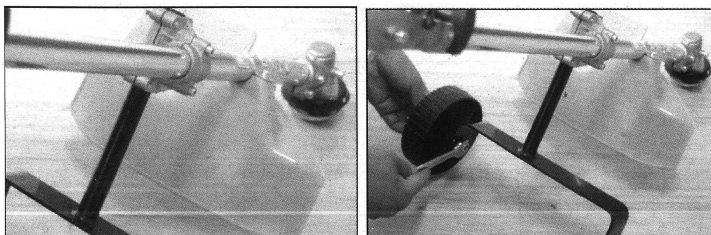

▲ Be careful! Use a 13mm wrench or vise to secure the nut and tighten the axle


Starting method: As shown in the figure, press and hold the switch to start, long press for three seconds to lock, and then press again to stop.

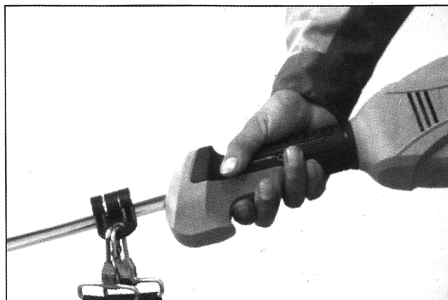

六、Instructions

▲ Be careful! Please strictly follow the instructions for operating the machine, otherwise the user will be responsible for any safety accidents caused!

1. Before starting this machine, it is necessary to ensure that the accessories used have been installed properly.
2. Before starting the machine, make sure that the blade has not touched any objects, such as branches, stones, etc.
3. If there is any machine malfunction, please immediately turn off the switch and unplug the cable plug.
4. During operation, keep both hands tightly gripping the handle and auxiliary handle for easy control, and pay attention to the handle to avoid getting stuck with roller skate, resin, grease, and ensure a stable and balanced foothold.
5. This machine can only be used for designated purposes and cannot be used indiscriminately
6. Do not use other methods to start the machine.
7. Please ensure that there are no children or other people within 15 meters of the workplace, and also pay attention to the surrounding animals

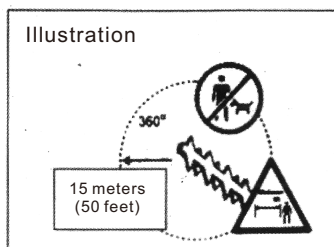

七、Troubleshooting

fault	Measure
Motor does not rotate	Check the battery level and charge the battery The start switch is damaged, please contact your dealer for repair Check if the blade is entangled and entangled with debris, and clean up debris
Abnormal vibration	Reinstall the blade or tie the straw rope Tighten the nuts appropriately.

W a r r a n t y a n d

Warranty conditions:

1. Users can enjoy the after-sales service provided by our company and authorized distributors by purchasing tickets. It is the responsibility of the user to operate, store, maintain, and maintain the machine correctly according to the instructions in the manual.
2. Product warranty period: 90 days from the date of purchase for commercial use, and 1 year from the date of purchase for non commercial use.
3. During the warranty period, normal wear and tear of consumable parts and human induced damage to the machine will not be guaranteed after verification.
4. During the warranty period, if the product is not used according to the instructions or is dismantled and repaired by oneself, it will not be guaranteed after being verified to be correct. If repair is required, a production cost will be charged.
5. The buyer can bring the ticket to the designated point of the seller's unit for repair, or send the machine to our company's maintenance center for repair. (The transportation and insurance fees shall be paid by oneself).
6. This warranty card is only applicable to purchasing users in the People's Republic of China.

Warranty Information

Model		Seal of distribution unit:
Product name		
Distribution unit		
Purchasing date		
Unit of use		
User Phone		

Maintenance records

Date	Damaged parts	Abstract	Quality controller

Certificate

Inspector: M-11