 


ESPRESSO MACHINE KFJ-9818 USER MANUAL



PLumChef
PlumChef Electrical Appliance Co., Limited

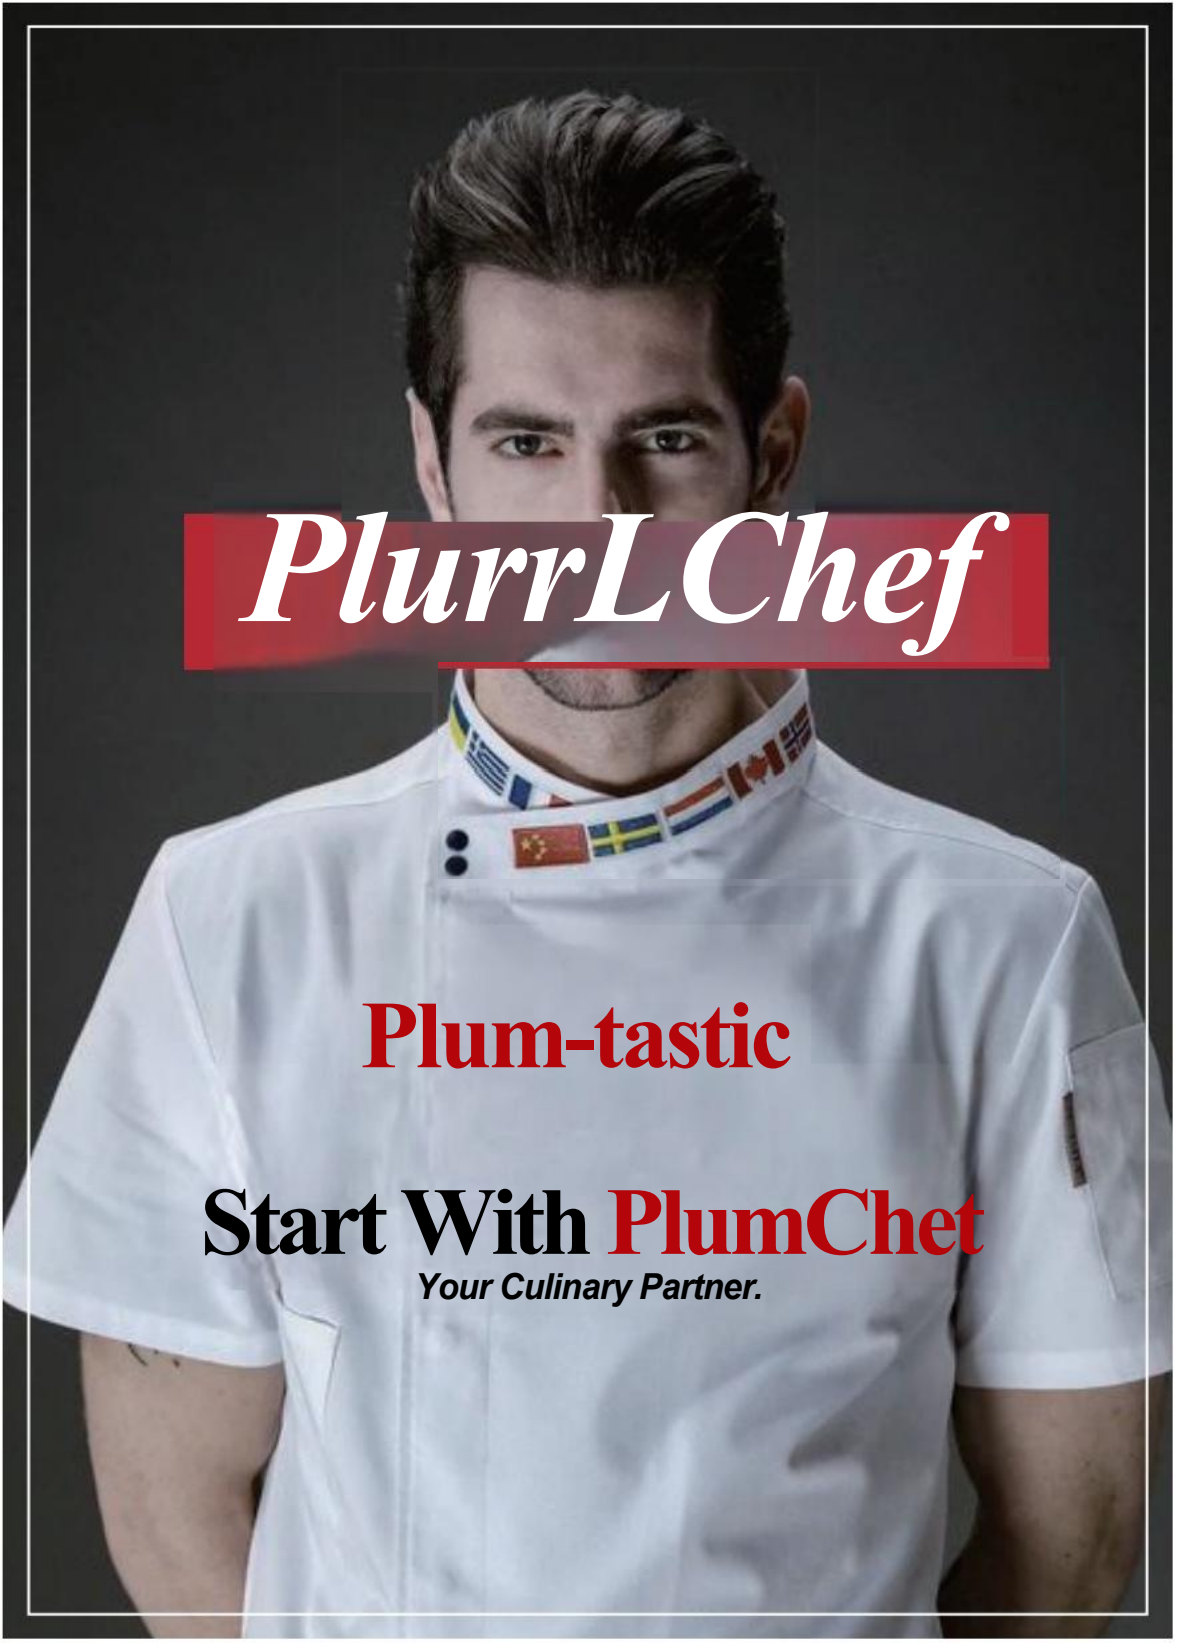

PlurrLChef

Plum-tastic

Start With PlumChet

Your Culinary Partner.

Product introduction

This product is an espresso coffee machine in the coffee machine system of our company. Its model is classical atmosphere, rich in coffee grease and foam, easy to operate, safe and easy to clean.

 
Product features

1. Detachable transparent water tank and removable drip tray
2. Can make all kinds of espresso coffee.
3. Durable stainless cup plate for coffee cups preheating.
4. Can make espresso coffee and milk foam.
5. Detachable frothing nozzle and drip tray for easy cleaning.
6. With a thermometer on the front body to display the temperature

Product picture



KNOW YOUR COFFEE MAKER

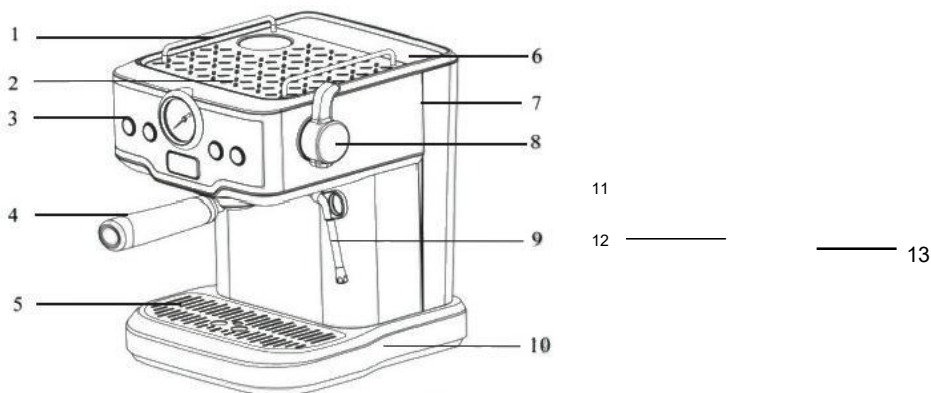

1.Warming cup rail 2.warming cup plate 3.control panel 4.funnel
 5.water tray 6.water tank cover 7.water tank 8.steam knob
 9.frothing nozzle 10.machine base 11.two cups offilter 12.one cup of
 filter 13.coffee spoon(with tamper)

CONTROL PANEL



Button mode		Function
	ON/OFF Power button	Turns coffee machine power ON/OFF
	Single cup coffee	Extracts coffee (single cup)
	Double cup coffee	Extracts coffee (double cup)
	Steam button	Creates steam to make milk froth
NSERTuoOK	Install funnel	Install funnel from Insert position to lock position
95	Digital screen	Digitalscreen (shows temperature &time)

IMPORTANT SAFEGUARDS

When using an electrical appliance,basic safety precautions should always be followed to reduce the risk of fire,electric shock or injury to people,including the followings:

- 1.Before using checks that the voltage of wall outlet corresponds to coffee maker rating plate.
- 2.The appliance must be earthed.
- 3.Closesupervision is necessary when your appliance is being used near children.
- 4.To prevent electric shock in case of fire,do not put the power cord and pluginto water or any other liquid;Do not damage,over bend or stretch the power cord;Do not place heavy objects on the cord.

- 5.To protect against electric shock,do not put cord,plug or machine into water or any other liquids
- 6.Do not use the equipment in high temperature,high magnetic field and damp environment.Do not put the coffee machine on a hot surface,near the fire source or other electrical appliances,such as refrigerator.
- 7.Please do not turn on the machine when the wire or plug is damaged,the coffee machine is out of order or damaged in any way,and return to the nearest authorized service center for inspection and maintenance,or contact the dealer.
- 8.Please use original accessories.
- 9.This machine is only used for making coffee,do not use it for other purposes,and put it in a dry environment
- 10.Place the coffee maker on a flat surface or on a table.Do not hang the power cord on the edge of the table or counter
- 11.Don't let cord hang over edge of table or countertop
- 12.When operating the coffee machine,do not directly touch the hot parts on the surface.
- 13.Regularly clean and maintain the coffee machine parts to ensure the quality of coffee and extend the service life of the coffee machine.
- 14.Do not move or turn off the power when the coffee machine is working
- 15.Do not operate without water
- 16.To ensure safety,please read the instructions carefully and grasp the correct use method.
- 17.Do not wash the coffee maker or power cord in water or other liquids.
- 18.Household use only,don't use outdoors.
- 19.Before using it for the first time,please cook it twice with clean water to remove the odor.
- 27.HOUSEHOLD USE ONLY.
- 20.Save these instructions booklet for future reference.

 
Operation

First time use and machine preparation

- 1.Pour the water into the tank and the water level should not exceed the

"Max" mark in the tank


2.Remove the funnel from the packaging box,put it into the filter and screw it into the corresponding position of the machine.The funnel handle is aligned with the "  mark.(pig .1)

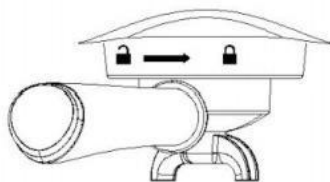

Pig.1

3.Plugin the power,then pressthe  • button,the machinebeeps."one cup"and"wo

 
cups"button light flashes three times,the machine starts to warm up.

 make sure that the steam knob is  .If it is ,the four lights will flash together and it will not work.


4.When the indicator light of "one cup"and "two cups"are continuously on,press the"one cup"button to rinse the coffee filteror coffee cup with hot water.

Make Espresso coffee

 1.While the machine is preheating,the ground coffee powder (the coffee powder should be no.1 powder,not too thick or too fine)can be loaded into the"filter "and then compressed with the coffee spoon(with tamper);Meanwhile,clean the coffee powder at the edgeof the funnelwith a brush or hand (if 1 cup is needed,use 1 cup filter;if 2 cups are needed,use 2 cups filter).

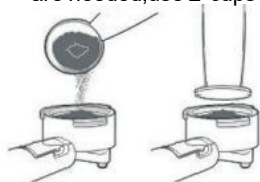

 2.Insert the funnel and lock it tightly as indication sign,then place the coffee cup under the funnel.

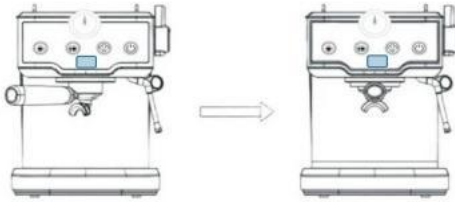


3. When the "☕" "☕☕" light is on, press the "☕" button several times and the coffee starts to flow out 1 cup of coffee. (or press the key "☕☕" to release 2 cups of coffee)
4. At the same time, adjust the position of the coffee cup to let the coffee liquid flow into the cup along the cup wall.
5. Wait for the coffee to drip, it's done!

Make milk frothy

1. Press  and the indicator starts flashing until the indicator turns on normally and the preheating is completed

 2. Pour the iced whole fat milk into the milk tank cup 1/3 of the way, insert the steam nozzle 1CM into the milk surface, then slowly turn around the "steam knob" until the steam starts to come out. (turn knob from  to )

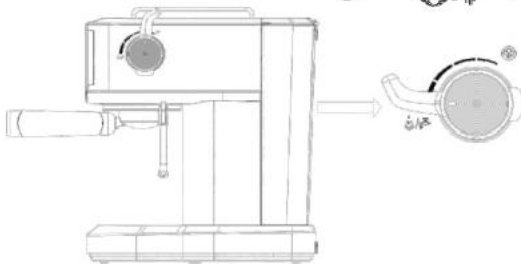

(Note: The steam nozzle can be adjusted according to personal proficiency. Release a little water from the steam pipe before foaming to clear it)

3. When the temperature of milk reaches about 75 degrees and the milk foam begins to infate, you can twist the "steam knob" to  and press  to close.

Tips: After using the milk foam function, clean the steam pipe with hot water function to prevent milk from scaling in the steam pipe and causing blockage and clean clean nozzle up immediately.

Hot water function

Press the "U" switch turn the "steam knob" to "S", and the steam pipe starts to continuously discharge hot water; Turn the steam knob to "stop the hot water".

After the machine is heated up (when the "S" indicator lights become stay on, hold down the "☕" button and the funnel starts to pour coffee. When the desired amount is reached, then release the "☕" button, you will listen a sound from the machine. That means the time has been memorized. The next time you press the "☕" button, press this time to make coffee. (The longest time is 60 seconds, The setting is invalid for more than 60 seconds, remaining at the default time.) RE: If you set the time was too short, the memory time will not be save, the continuous time effluent volume should be more than 15ml.

2. "☕" memory function is the same as above (one cup)

3. Restore factory Settings: press and hold "☕" + "☁" for 3 seconds at the same time. When both keys are on and ringing 3 times, reflecting the factory settings have been restored.

*please turn off power first (press U enter standby mode)

Cooling function

After the machine has produced steam,if you want to make coffee, turn off the steam knob.If the temperature is too high and the one cup and two cups indicator lights flash rapidly,the machine, needs to be cooled.At this time,rotate the steam knob to "  " the machine starts to pump water,and the steam pipe starts to continuously discharge water and cool down.After the indicator light stop flashing and turn the steam knob to "  ",then machine cooling down.It can make coffee when the power indicator is constant brightness.

Cleaning

Manual descaling should be performed when the machine has been used to produce steam or coffee approximately 500 times

First put the descaling agent (about 10g)into the water tank,and then add water to "Max".Power on,when preheatingfinished ,turn the steam knob to the "  ",water pump starts pumping water .water will come from nozzle and It will last two minutes.Then,rotate the steam knob to and then rotate to  ,the pump starts to pump water again,and then follow the last step to operate the machine,and make it for about 5 times cycle until the water tank is drained;At this time,add clear water to the water tank to "Max"and turn the steam knob to  During this time,water pump starts pumping water.make it for about 5 times cycle to clear out the descaling agent inside the boiler

Maintenance

- 1.Cut off the power and let the coffee machine clean before it cools completely.
 - 2.Wipe the exterior and some parts of the coffee maker with a damp cloth or a clean sponge.
- Note:Do not use alcohol or solvent cleaner,do not immerse the machine in water to clean.
- 3.Unscrew the coffee funnel and clean the coffee grounds in the filter.

Trouble removal

Problem	Reason	Method
No water/steam	1.Check if there is water in the water tank and ensure it is properly seated 2.Water is not added in advance in the machine 3.The machine is not preheated	1.Fill the tank with water and turn on the power switch and the coffee switch 2.How to add water to the machine: press the hot water button,and the pump willstart to add water into the machine until there is water flowing out from the steam nozzle or funnel. 3.The machine needs to be preheated before the coffee can be produced.That is,it indicates that the coffee willturn to normal light in the flickering state
No grease	The coffee grounds are too thick/the grounds are not pressed	Replace the coffee powder and flatten it with a press
No steam	1.Steam outlet is blocked 2.Steam switch is not on or preheating is not completed to turn on steam	1.Use a small wire to clear any blockage in the steam outlet 2.Clean the steam pipe with hot water after foaming 3.Turn on the steam switch,and wait for the preheating to complete before steam
More or less Coffee	Too much or too little coffee powder	According to the standard amount of powder,1 cup with 1 tablespoon to pressure,coffee powder can not be too thick or too fine.Too thick coffee can not be completely extracted,too fine affect the amount of coffee.
The milk does not foam well	1.whether it is whole milk 2.Before the steam key is warmed up,it starts to mik	1.Use whole milk 2.Steam can only be started after the steam indicator light turns from flashing to constant light.
No coffee,coffee light and steam light flash	The temperature is too high after steaming	Water cooling
Not boil coffee	In the steam state,the steam switch is not off	Turn the steam switch to OFF

Plum-tastic

Start With PlumChef

Your CulinaryPartner.

PluoLChef

