

Assembly Instructions

CAUTION: You must read this before you proceed



 
SAFETY WARNING

Never adjust Chaise Lounge or recliner backrest while seated.

Always make sure the backrest is flat before moving the Chaise Lounge.

Keep all limbs clear from under the backrest when it is in a raised position.

Serious finger, hand, or other bodily injuries may result from adjusting the Chaise Lounge backrest position while seated.

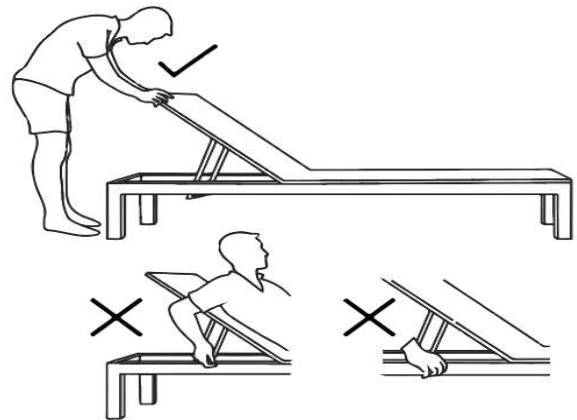

The examples pictured above are non exhaustive and are for your reference only.

Care & Maintenance



- Not for commercial use. For residential use only. Usage non commercial.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or vawnings.



 
- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint free cloth.

Please look underneath the Chaise Lounge top for hardware packs

CHAISE LOUNGE


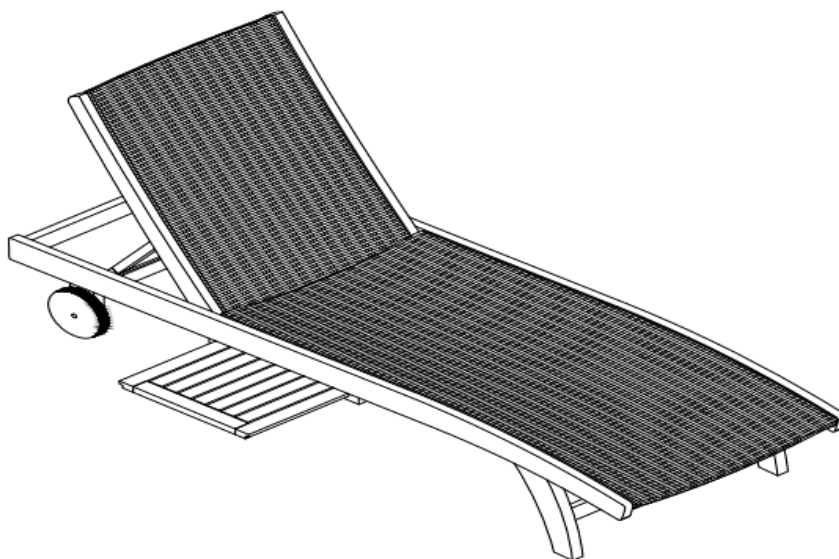





CAUTION: This Chaise Lounge is NOT a TOY.

Keep your child/ children at bay during the assembly process.

Whenever moving/lifting the Chaise Lounge and to prevent damage to the Chaise Lounge, two adults are needed to execute these actions.

  
Part List

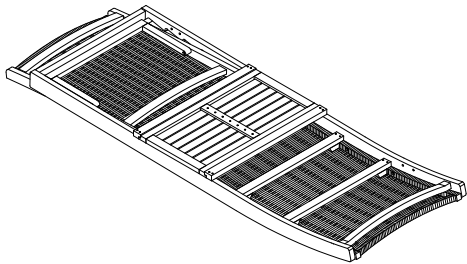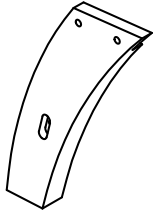Label	Picture	Description	QTY
A		Seat Frame	1
B		Leg 1	1
C		Leg 2	1

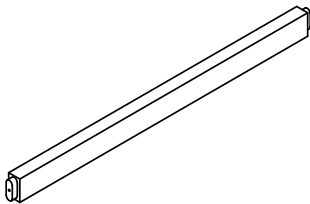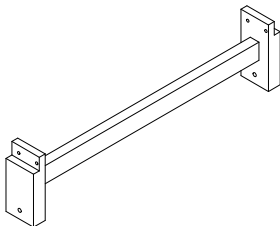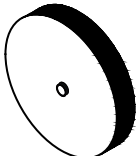   D		Leg Support Bar	1
E		Leg Frame	1
F		Wheel	2


Hardware

Label	Picture	Description	QTY
①		Bolt (M8x70mm)	3
②		Bolt (M6x35mm)	9
③		Screw (M6x40mm)	3
④		Washer (M8x30x5mm)	3
⑤		Washer (M8x30x3mm)	3
⑥		Washer (M8x20x2mm)	3
⑦		Eru (M8x18x2mm)	3

 ⑧		Allen Wrench	1
⑨		Wrench	1

Assembly Preparation

 Before Beginning Assembly

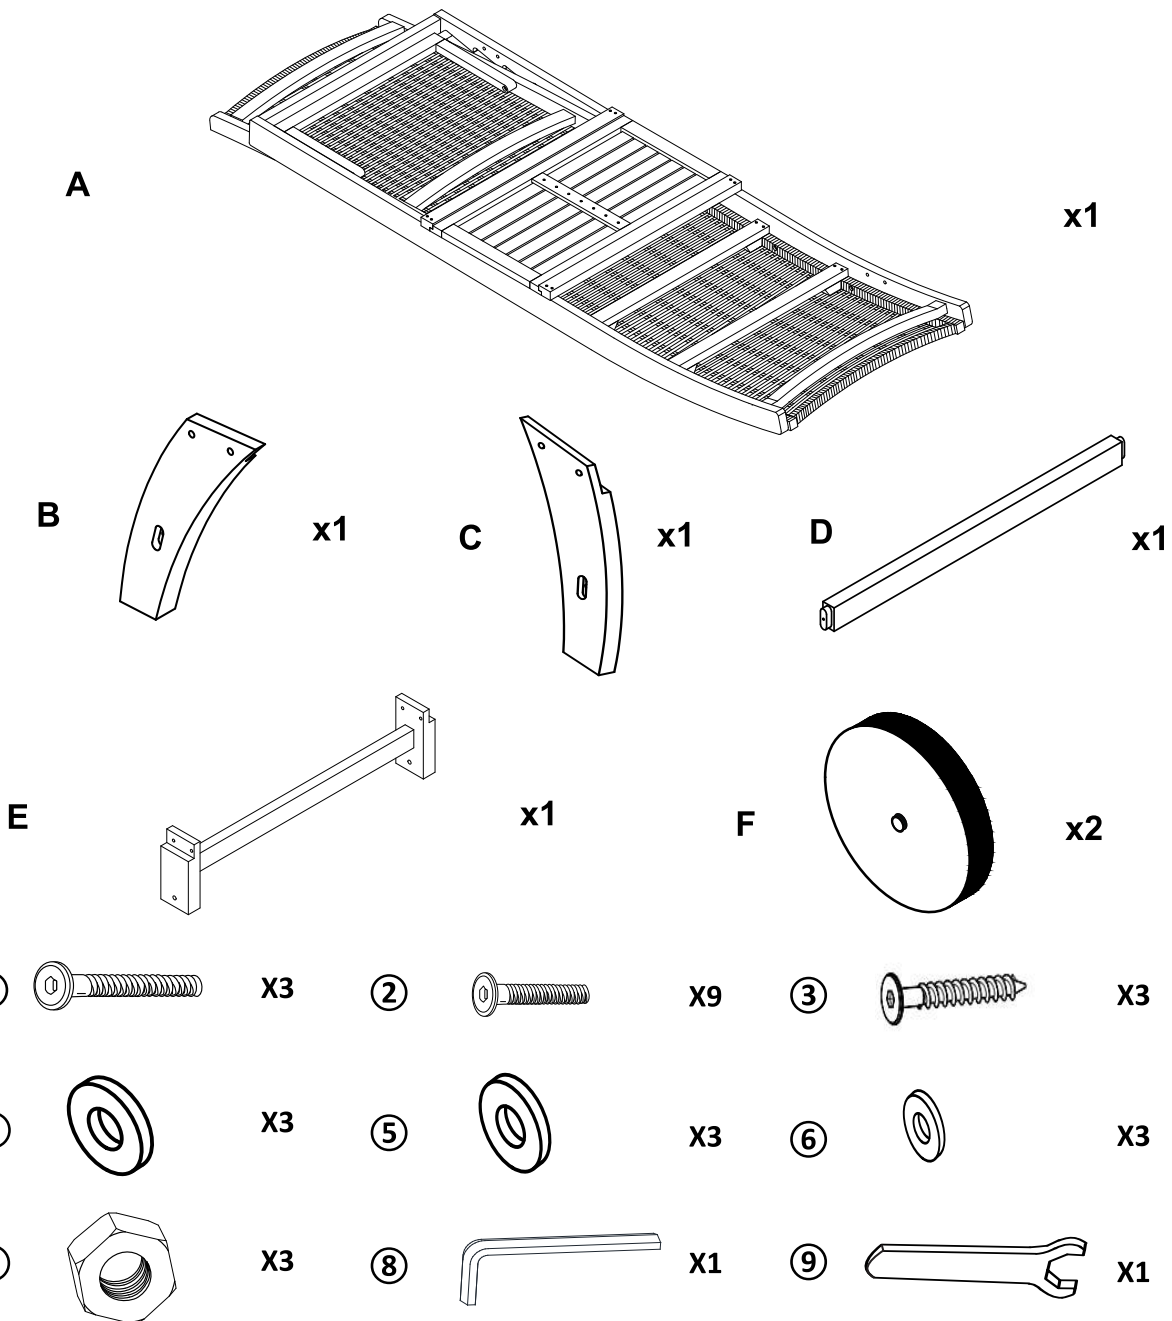



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps


Overview

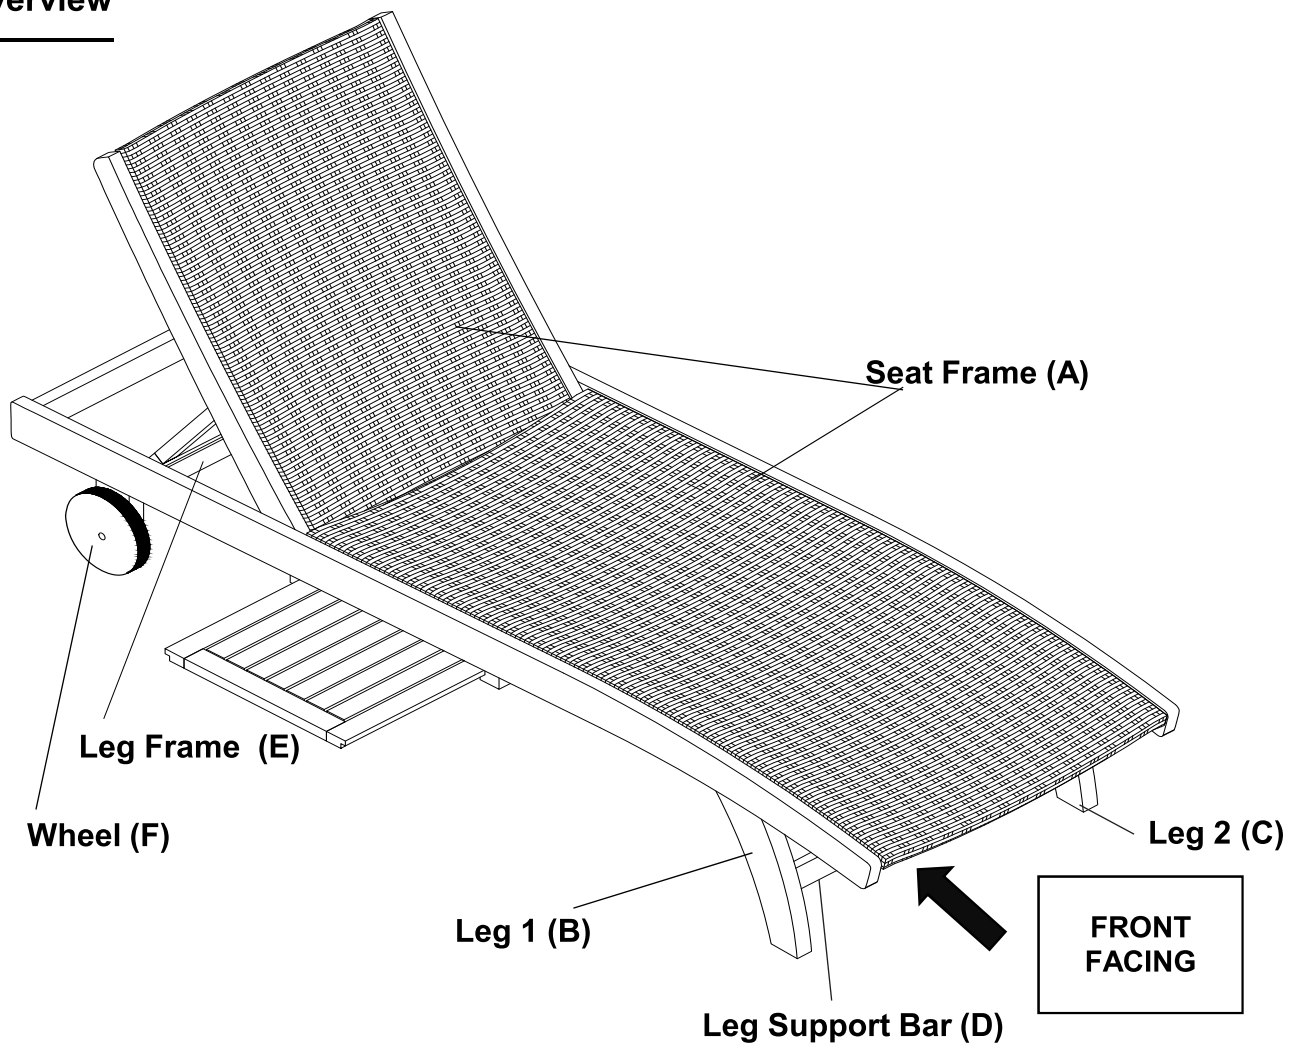

 Step 1:

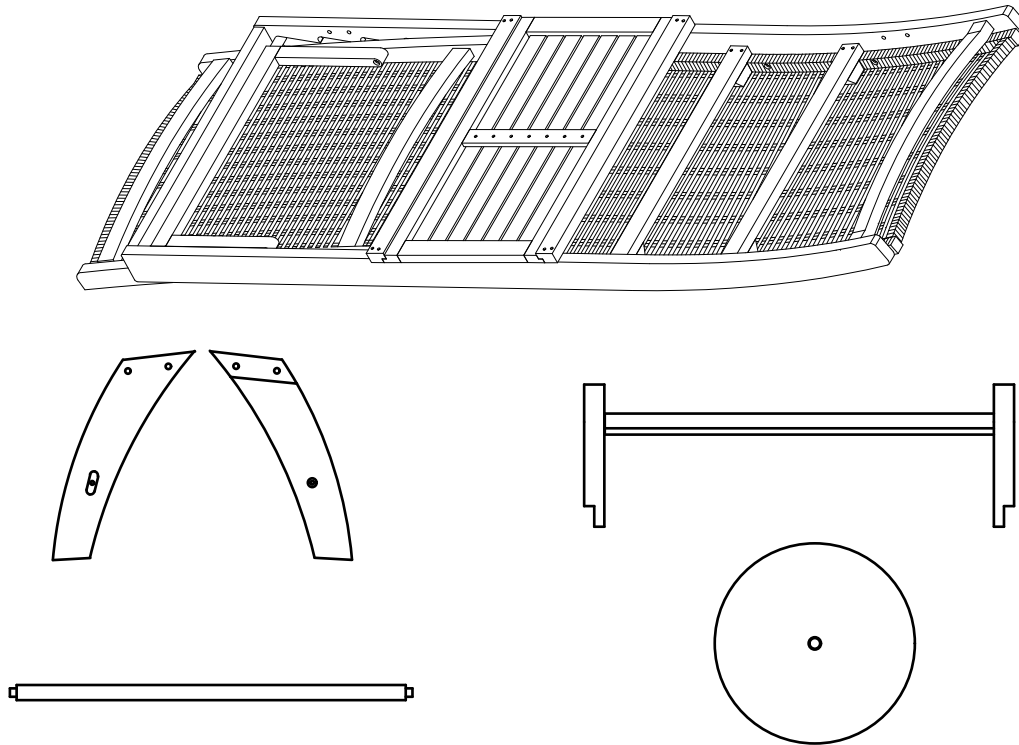


 Step 2:

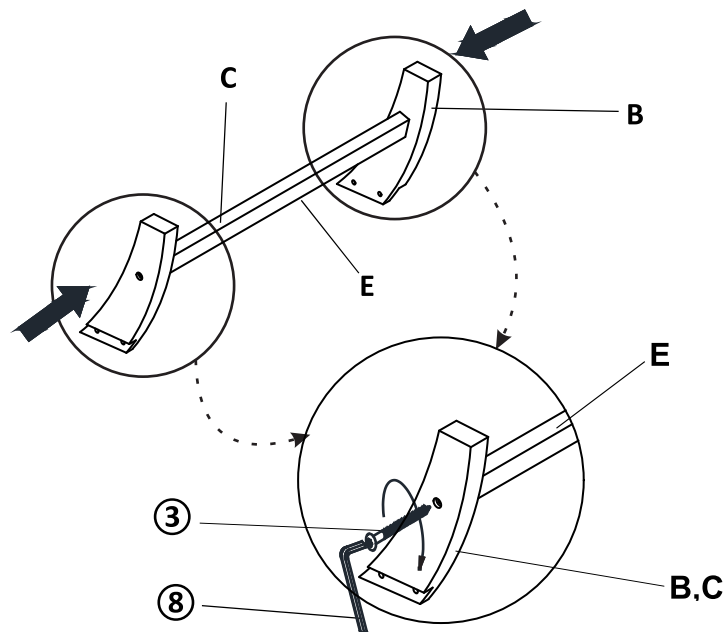


Do not fully tighten the Screws at this time .

 Step 3:

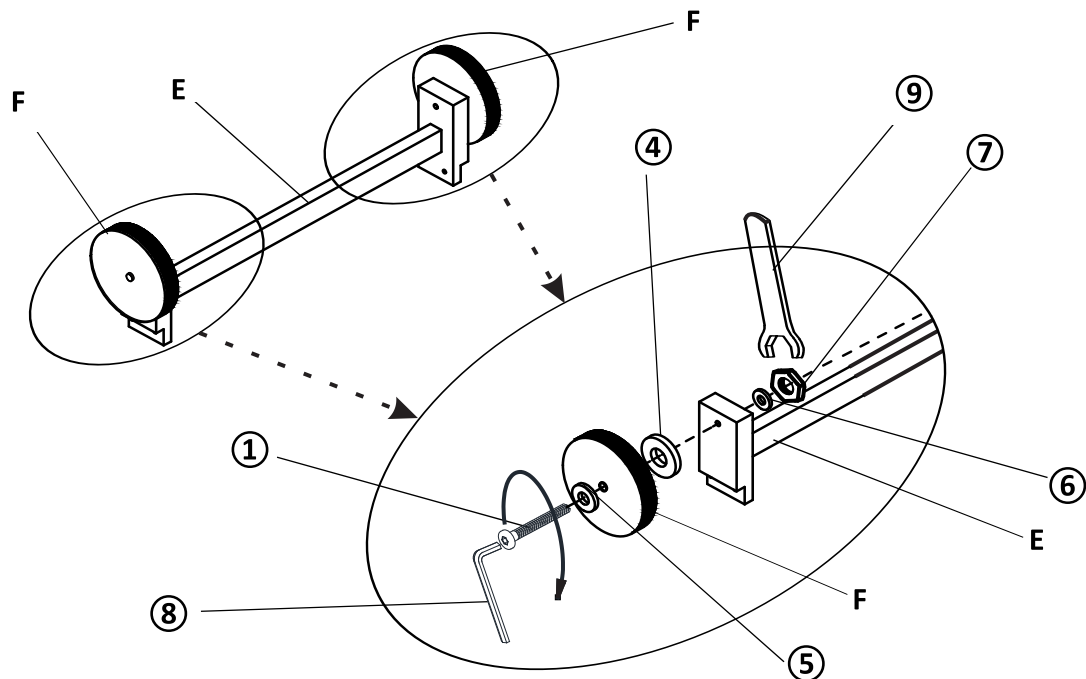

Place the Wheel (F) into the Leg Frame (E).
Attach the Wheel (F) to the Leg Frame (E) by using Bolt (1), Washer (5), Washer (4), Washer (6), Eruber (7) and the Allen wrench (8), Wrench (9) as shown above.
Do not fully tighten the Bolts at this time

 Step 4:

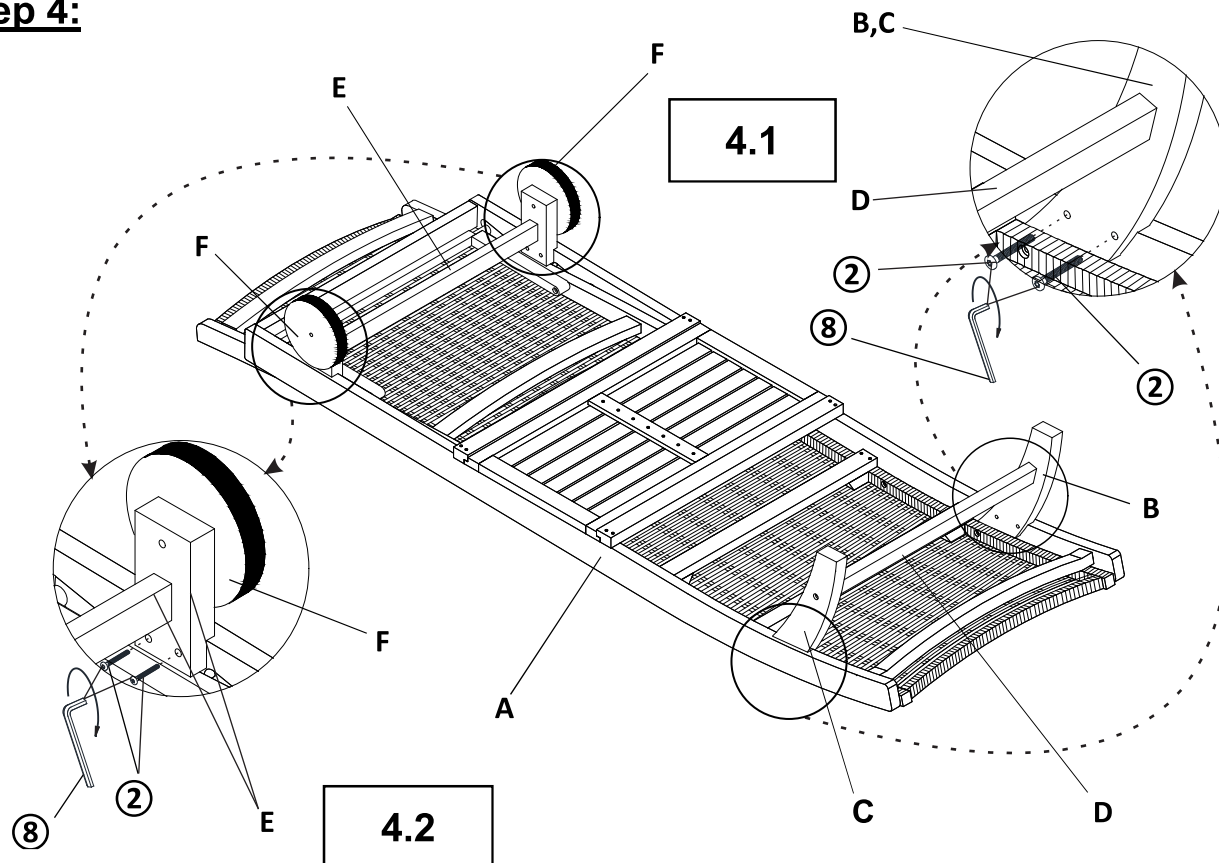


Attach the Seat Frame (A) to assembled part in Step 2 and Step 3.

4.1 Attach the Seat Frame (A) assembled part in Step 2 by using Bolts (②) and the Allen Wrench (⑧).

4.2 Attach the Seat Frame (A) assembled part in Step 3 by using Bolts (②) and the Allen Wrench (⑧).

Do not fully tighten the Bolts at this time

 Step 5:

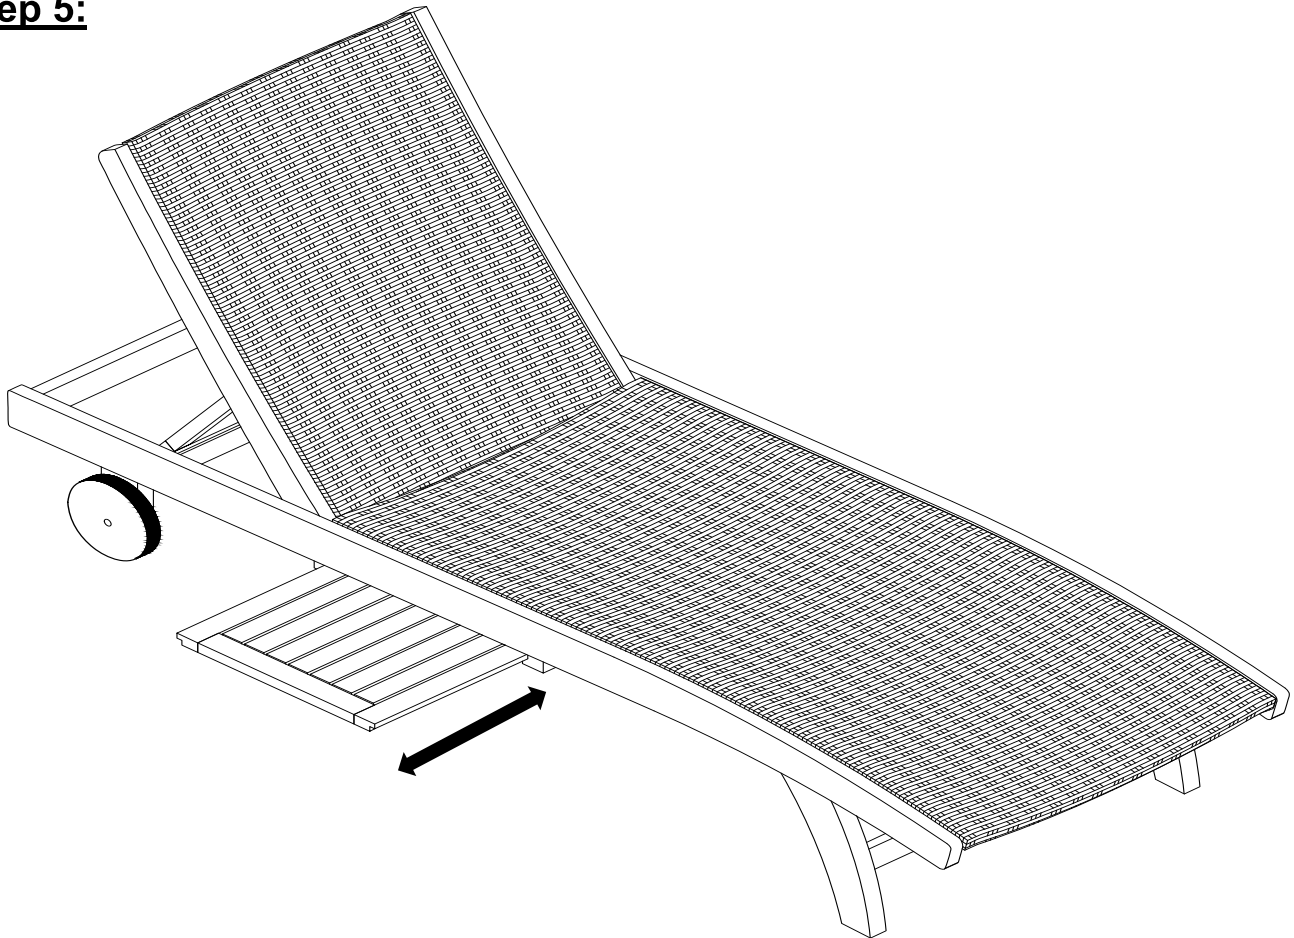

Stand the Chaise Lounge up, with assistance from your adult partner.

Exert pressure floorwards, onto the Chaise Lounge with both your hands.

This pressure will help the Legs and Chaise Lounge Top reach full alignment status.

Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts and Screws in a sequential manner, until evenly secured.

When tightening the Bolts and Screws tighten sequentially.

Do not tighten any Bolt or Screw fully and then move on towards the next one.

If there are still wobbles, loosen the Bolts and Screws and execute the same above process.

Your Chaise Lounge is ready for use.

This Chaise Lounge can only be used on a flat, level surface.