 
 
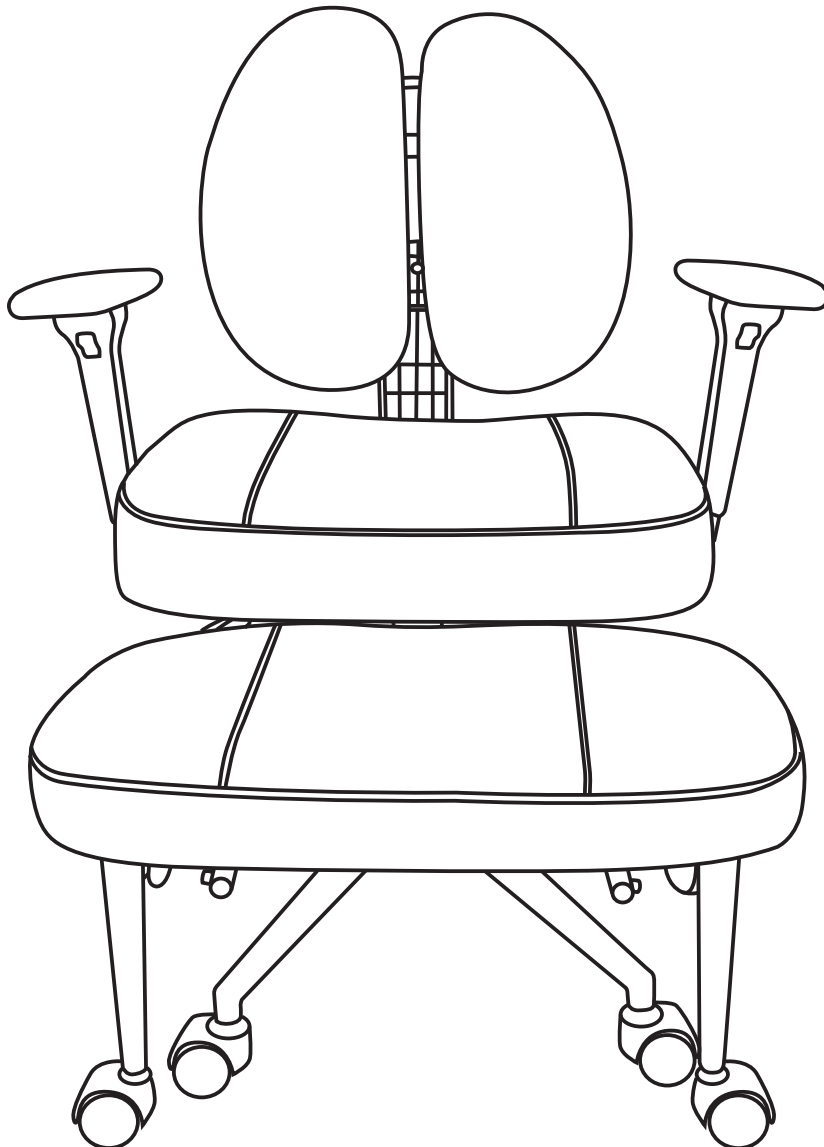 
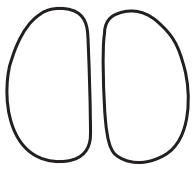 
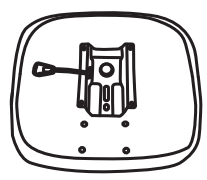 
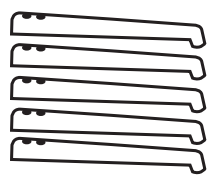 
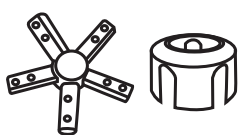 
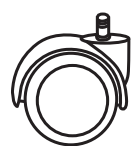 
 
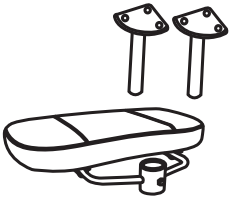 



 
 
 


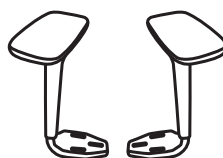


YG04

Assembly Instruction

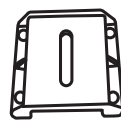

Accessories List

(1) Backrest	(2) Seat Cushion	(3) Split Base Tube	(4) Central Base Tube	(5) 7 Castors
				
(6) Air Rod	(7) Foot Ring	(8) Handrails	(9) Backrest Connected Base	(10) Backrest Connected Rod
				
(11) Backrest Connected Wing	(12) 16 Screws (M6X18mm)	(13) 6 Screws (M6X30mm)	(14) 2 Screws (M8X20mm)	(15) 4 Screws (M6X25mm)
				
(16) Hexagon Wrench	(17) 2 Backrest Knobs	(18) Gas Rod Knob		
				

Warning

Please check if the quantity of product part is complete. You can make a reference to the above accessories list. If there're any broken or wrong parts, please kindly contact us to exchange.

Notice

- This is a single chair, so please do not seat 2 or more persons
- Do not stand on the chair
- Do not sit reverse or sit outside of the seat cushion
- Check the screws once every 6 months, to make sure the screws are tight.
- Do not use the chair when the screws are loose
- *It is important to assemble all parts so that the directional "Arrows" point in the same direction. Make certain that all screws are FULLY tightened before using the chair.

Assembly Instruction


Please assemble in a wide and flat place.

Step 1


Take out Split Base Tube (3) and Central Base Tube (4). Insert Split Base Tube (3) into Central Base Tube (4) as shown. You can see there are screw holes. Align with the holes, tighten Screws M6X18mm (12) with Hexagon Wrench (16) to fix 5 Split Base Tube (3) to Central Base Tube (4). Repeat it five times.

(12) 10 Screws
(M6X18mm)

(3) Split Base Tube

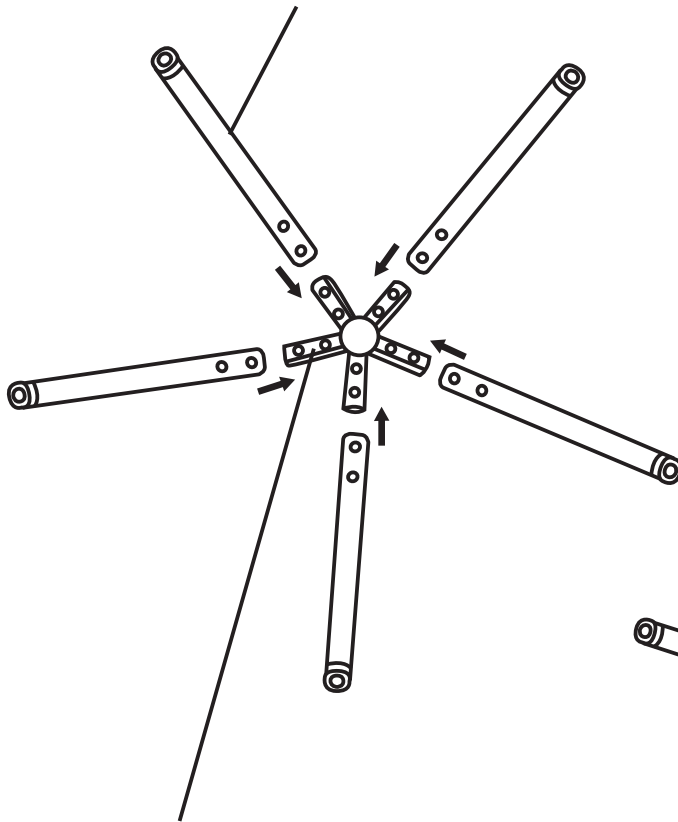


(4) Central Base Tube

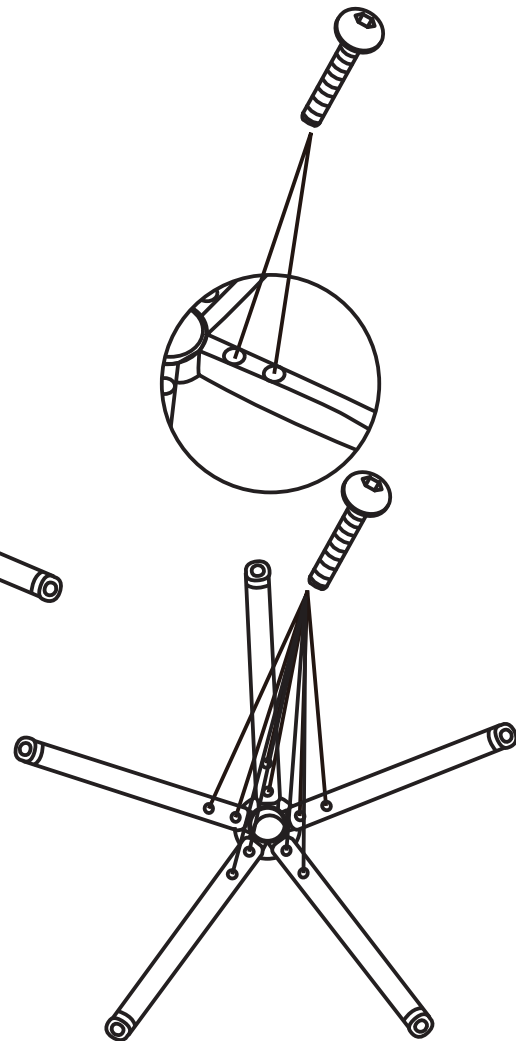

Step 2

Take out Castors (5). Insert Castors (5) into part of Step 1 as shown. There are 5 Castors (5) need to be inserted. Fit the plastic protective cover into the central base. Take out Air Rod (6). Put Air Rod (6) into the hole of Central Base Tube (4) as shown.


* Caution: Confirm Castors (5) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

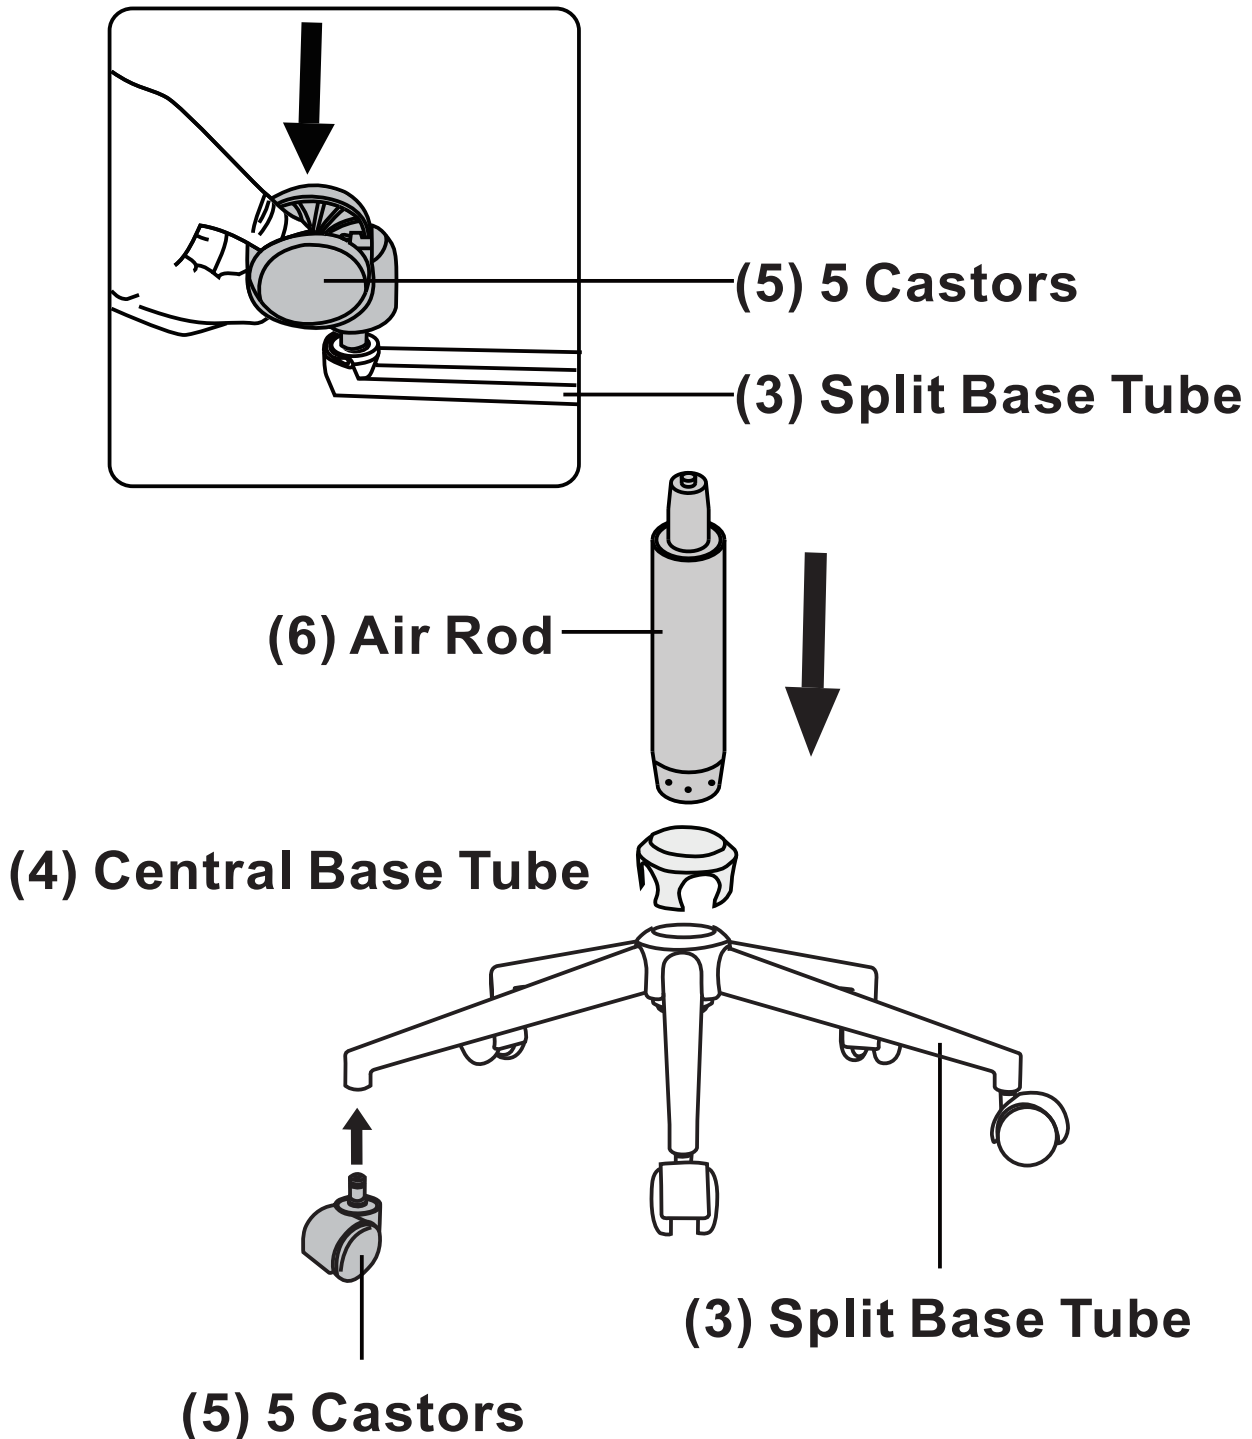

Step 3


As shown, secure the Foot Ring (7) with 6 Screws (M6X18mm)(12) and attach 2 Castors (5). Insert it into the assembled Air Rod (6) at your desired height, ensuring it is at least 1 inch below the top. Tighten the knob on the Foot Ring (7) by hand until it is fixed. Set aside for Step 9.

(7) Foot Ring

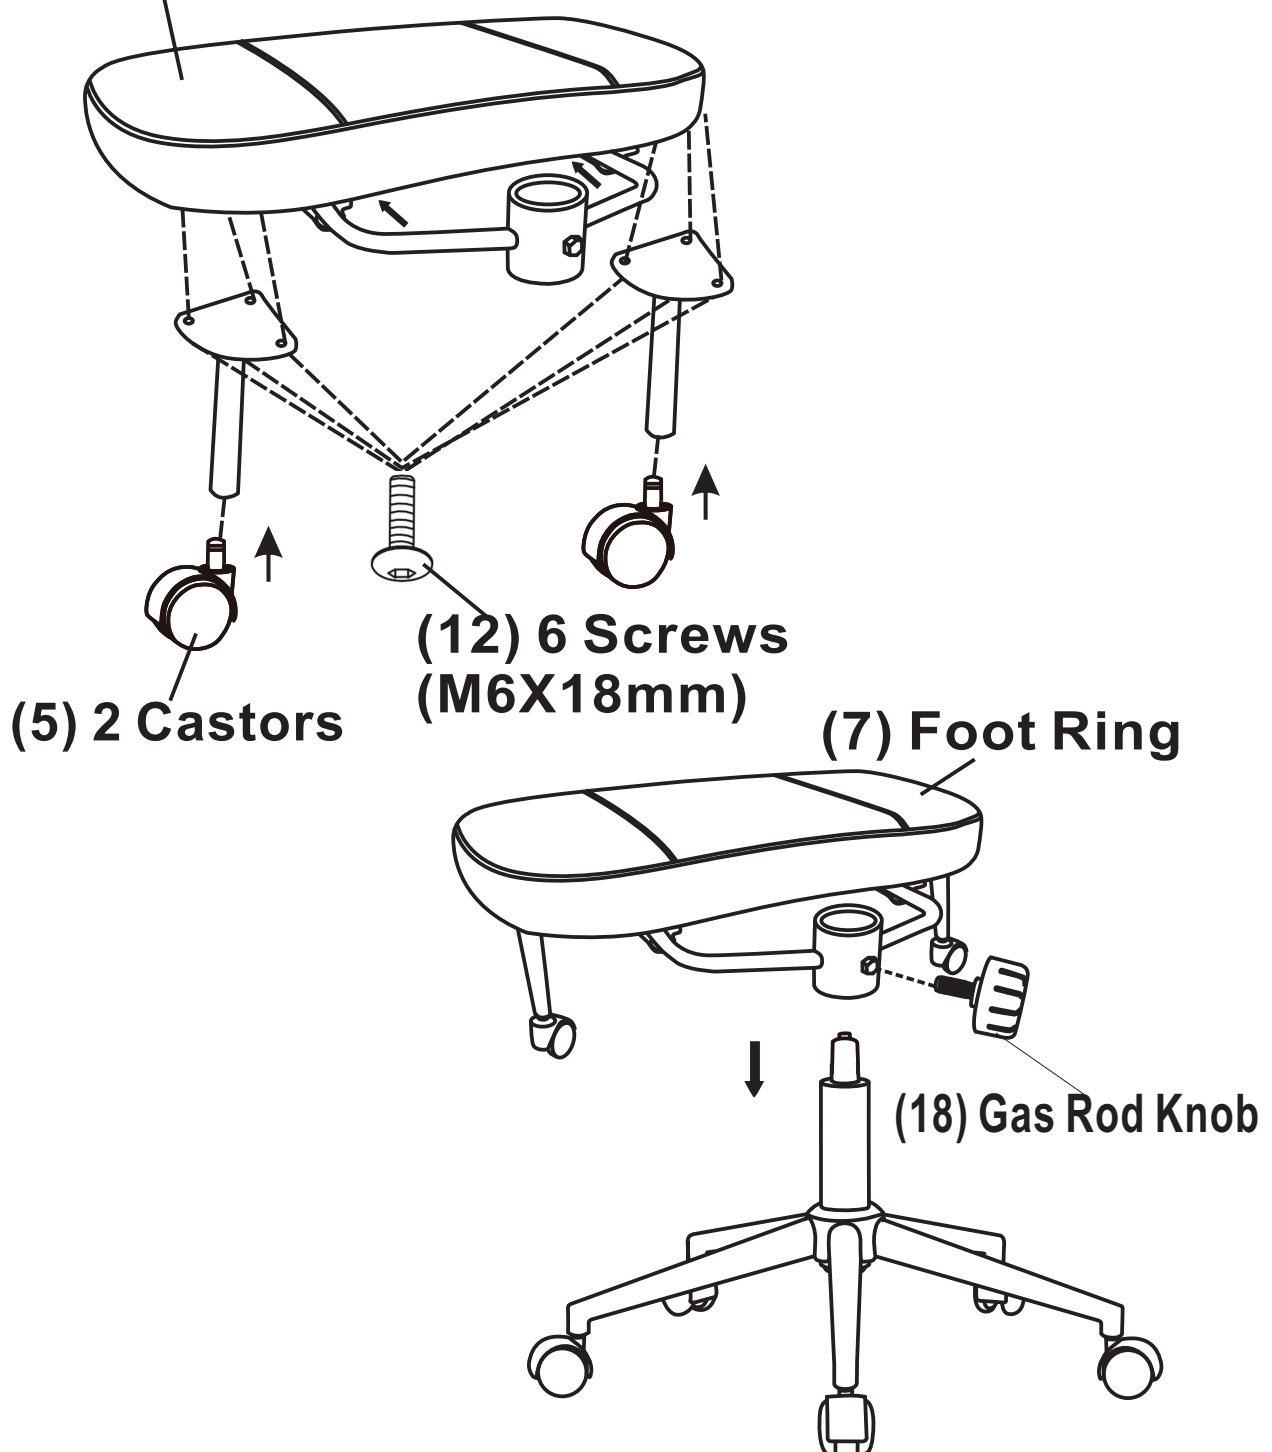


Step 4

Align the 2 Handrails(8) with the 6 holes on both sides beneath the Seat Cushion(2), and then use 6 Screws (M6×30mm) (13) to fasten the Handrails(8) and the Seat Cushion(2) together.

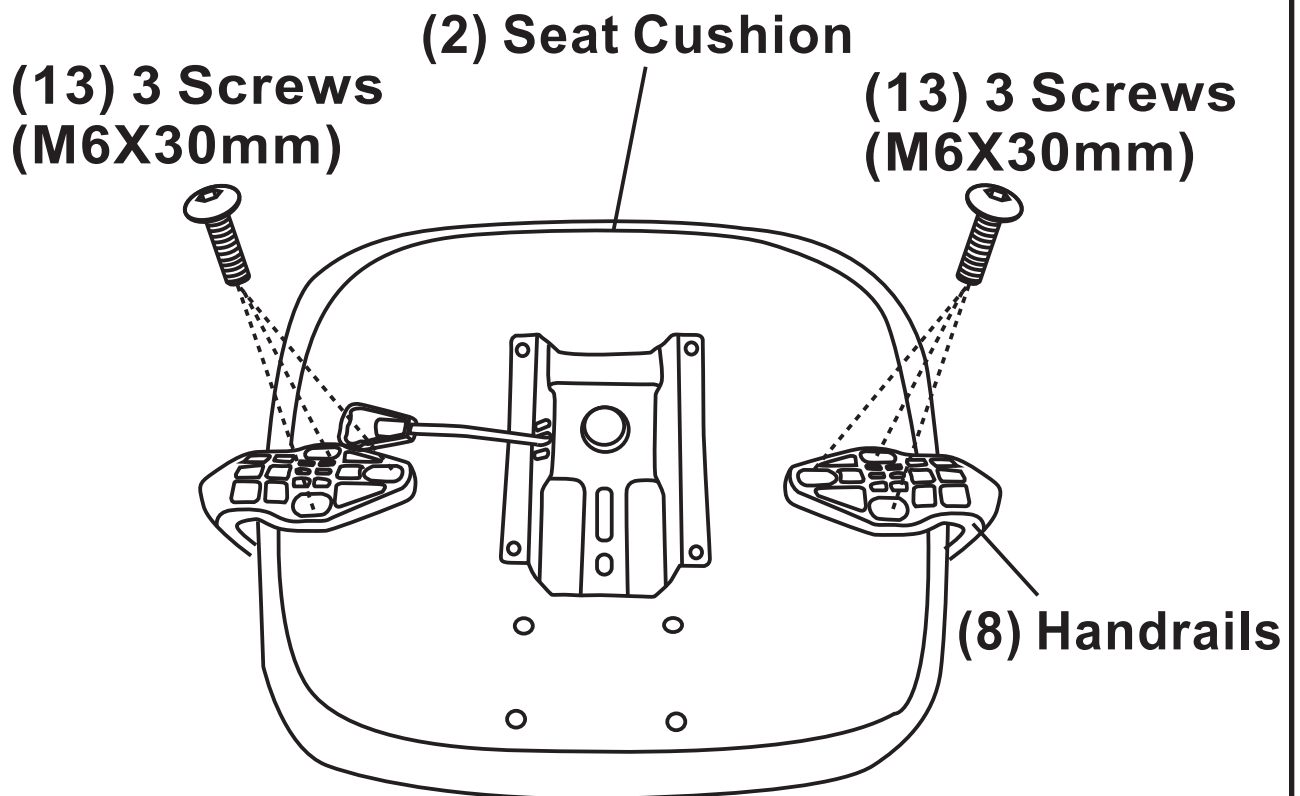


Step 5

Connect the Backrest Connected Base(9) and Seat Cushion (2) by the 4 screws (M6×25mm)(15).

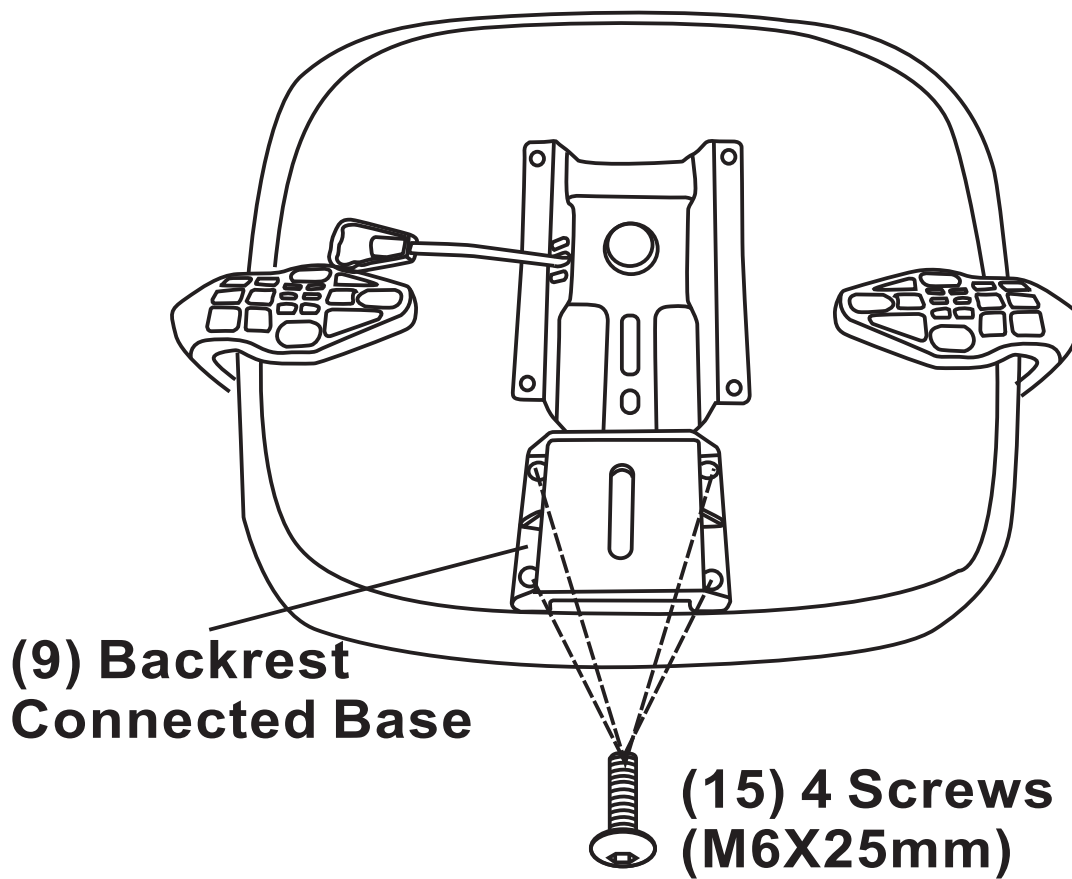


Step 6

Connect the Backrest Connected Rod (10) to the Backrest Connected Base (9), then align the Backrest Knob (17) with the base hole and rotate it to integrate them.

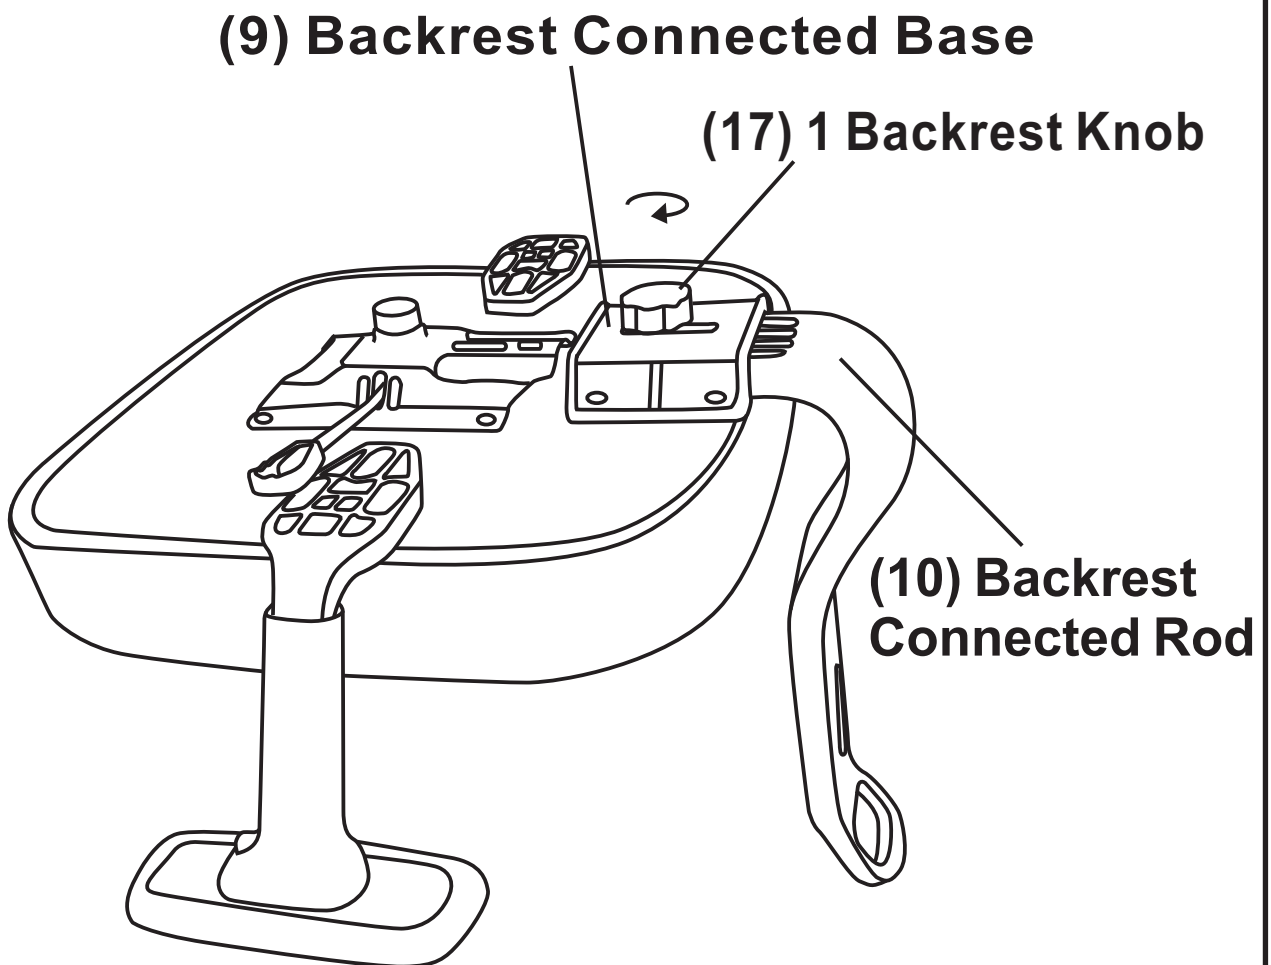


Step 7

Connect the Backrest Connected Wing(11) and the Backrest Connected Rod(10) by 2 Screws (M8X20mm)(14).

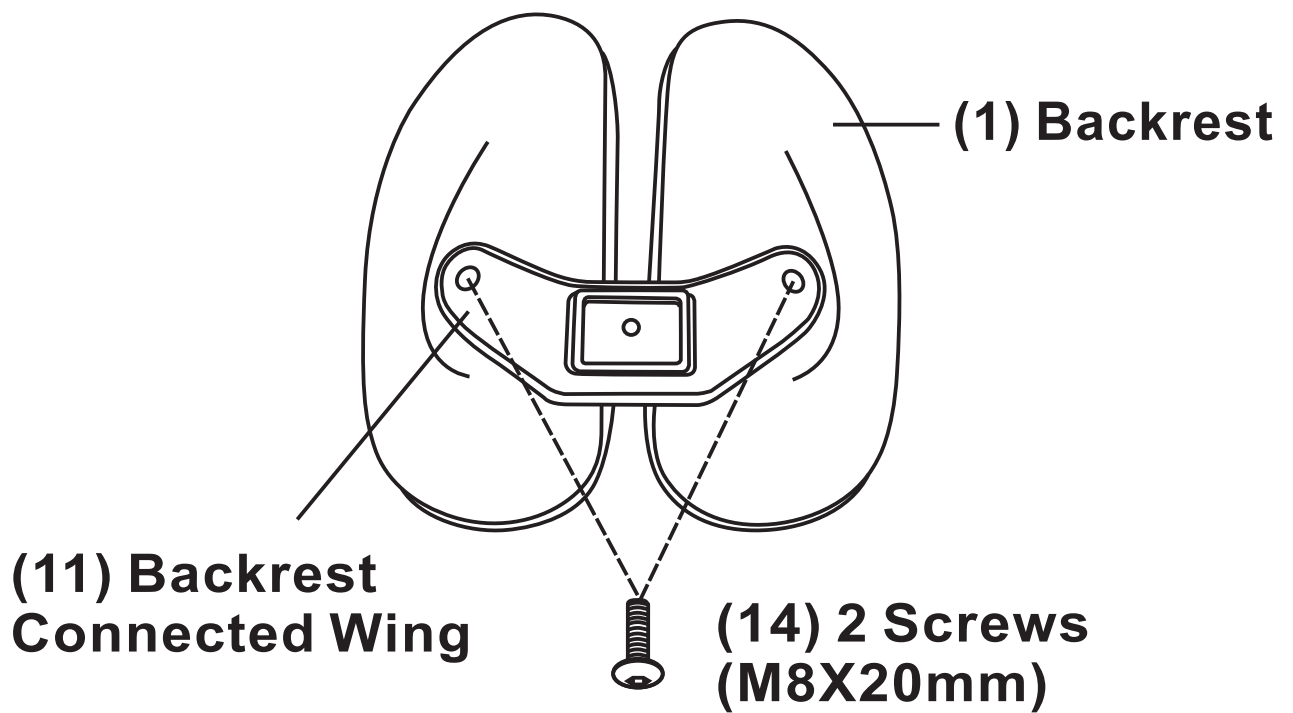


Step 8

Align the hole positions of the **Backrest Connected Wing(11)** and the **Backrest Connected Rod(10)**, and rotate the **Backrest Knob(17)** into the hole of the **Backrest Connected Rod(10)**.

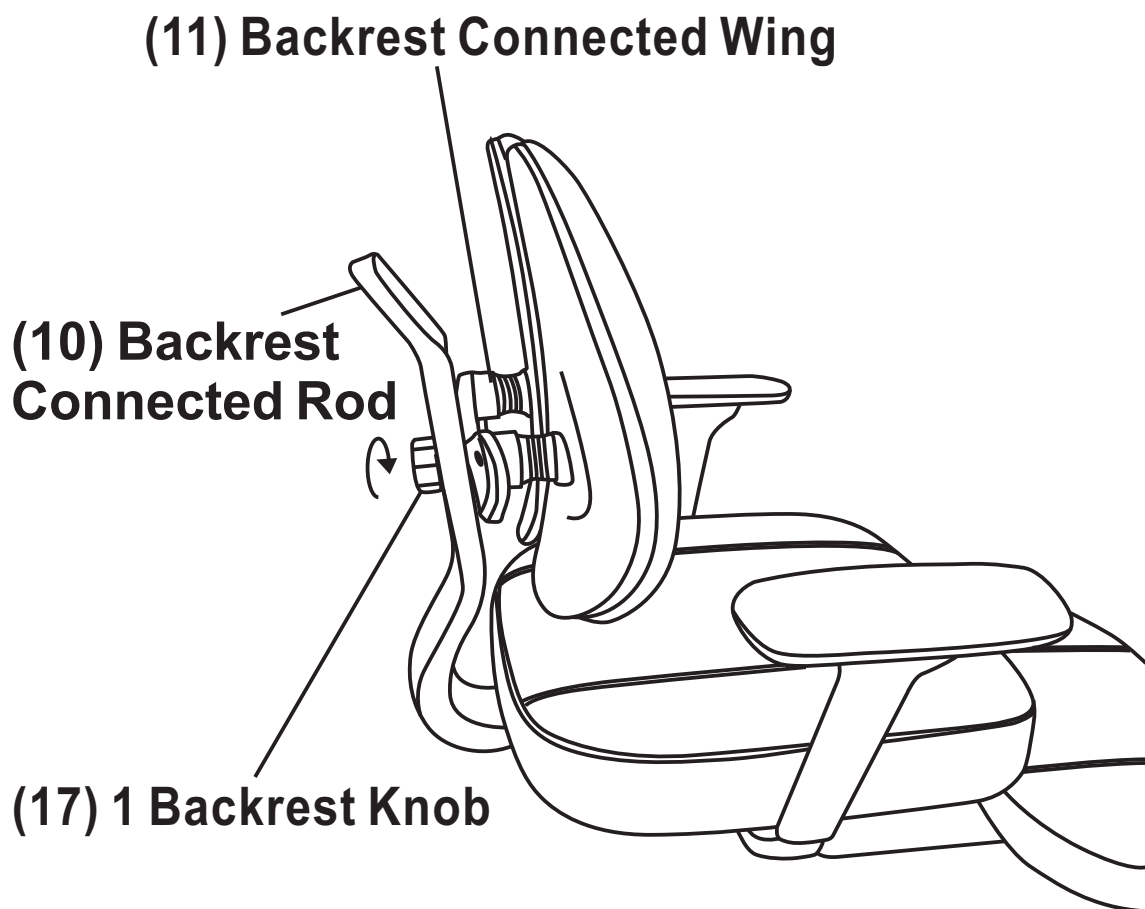

Step 9

Pick up the Step 3's Air Rod (6). Insert the Air Rod (6) into Step 6's base plate under Seat Cushion (2). There's a hole in the middle of the base plate. Press from top to bottom, use your whole body's strength to insert it firmly, and the assembly is complete now.

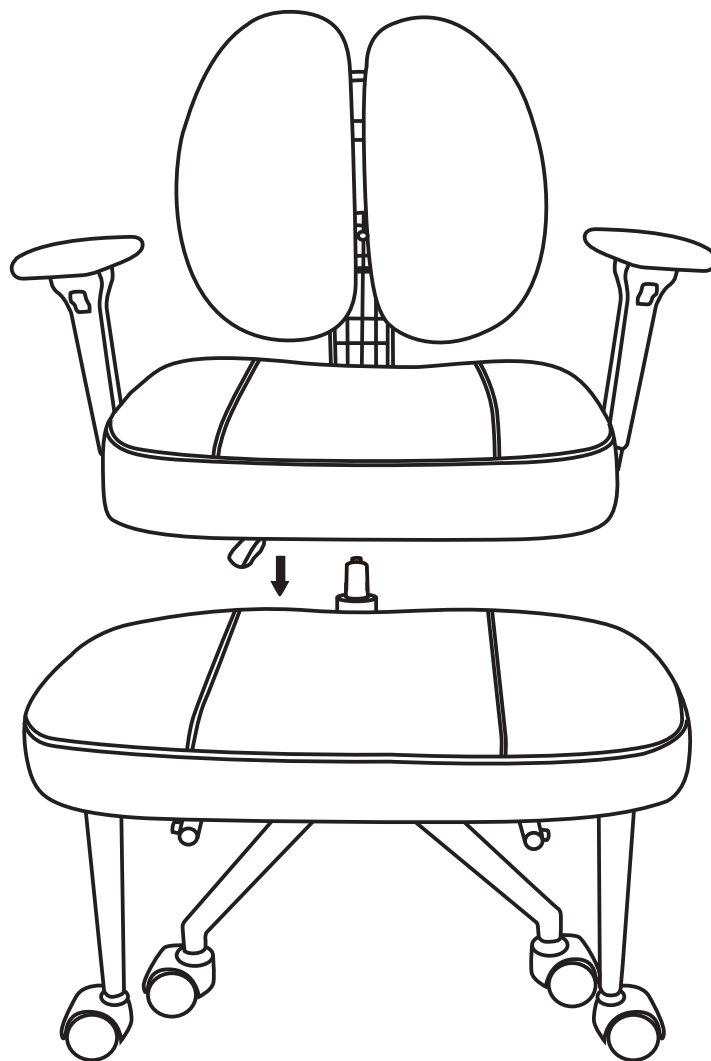

WARRANTY



3-YEAR Warranty Program

- 1 For a period of one (3) years after date of purchase, the Manufacturer will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between the Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.
- 2 The manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only and is not intended for commercial use. The Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by the Manufacturer). Warranty return is limited to only the single affected component.
- 3 This limited warranty covers only manufacturing defects and does not cover normal wear and tear, damage due to acts of nature (such as, but not limited to freezing or high winds), abuse or misuse, including chemical damage from suntan oil or other chemicals, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is void if the product is not used for its intended purpose. The Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component.

HELP CENTER

Question about your product?

We are here to help, contact us by

outdoorlifejoy@gmail.com



Support Service

Email