 
 
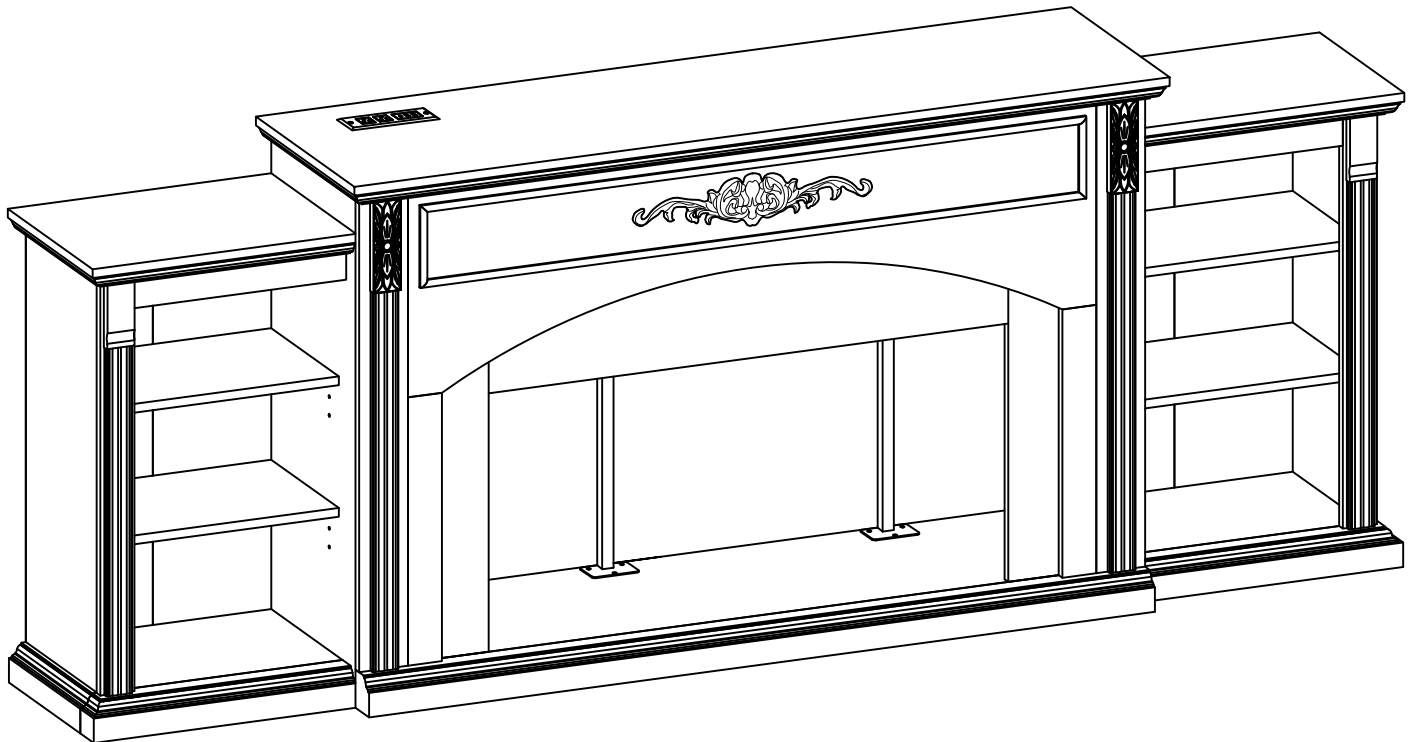 


100-inch ASSEMBLY INSTRUCTIONS

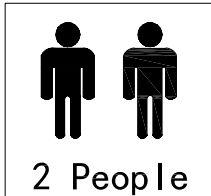 


ServiceSupport2008@126.com


How to use the cam lock system

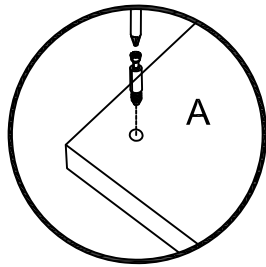


1. Screw cam bolt into panel

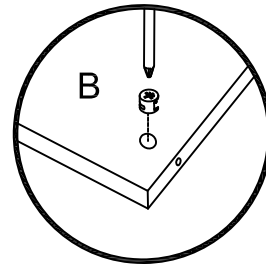

 
2. Push cam into panel - arrow feature on cam top points to panel edge

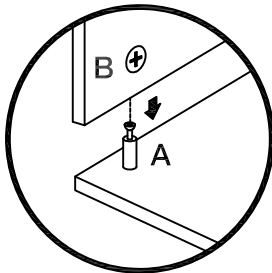

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-board hole(s)




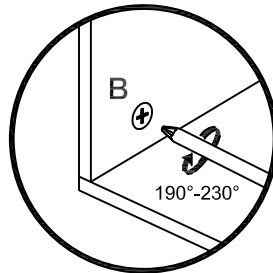


 4. Rotate cam(s) clockwise 190°-230° to lock panels together

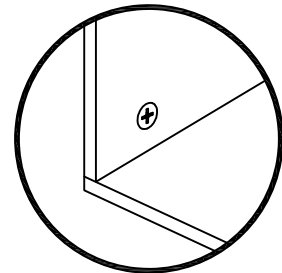

5. Panels should be tighten against each other and connection should be rigid

    
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

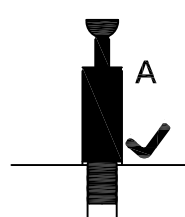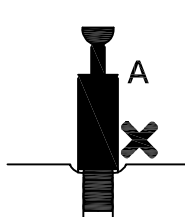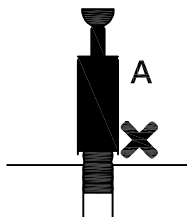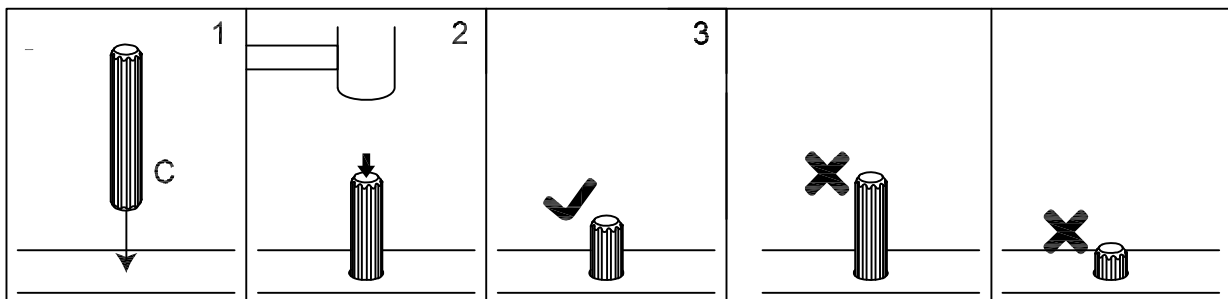













⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.





 
PACKAGE INCLUDE

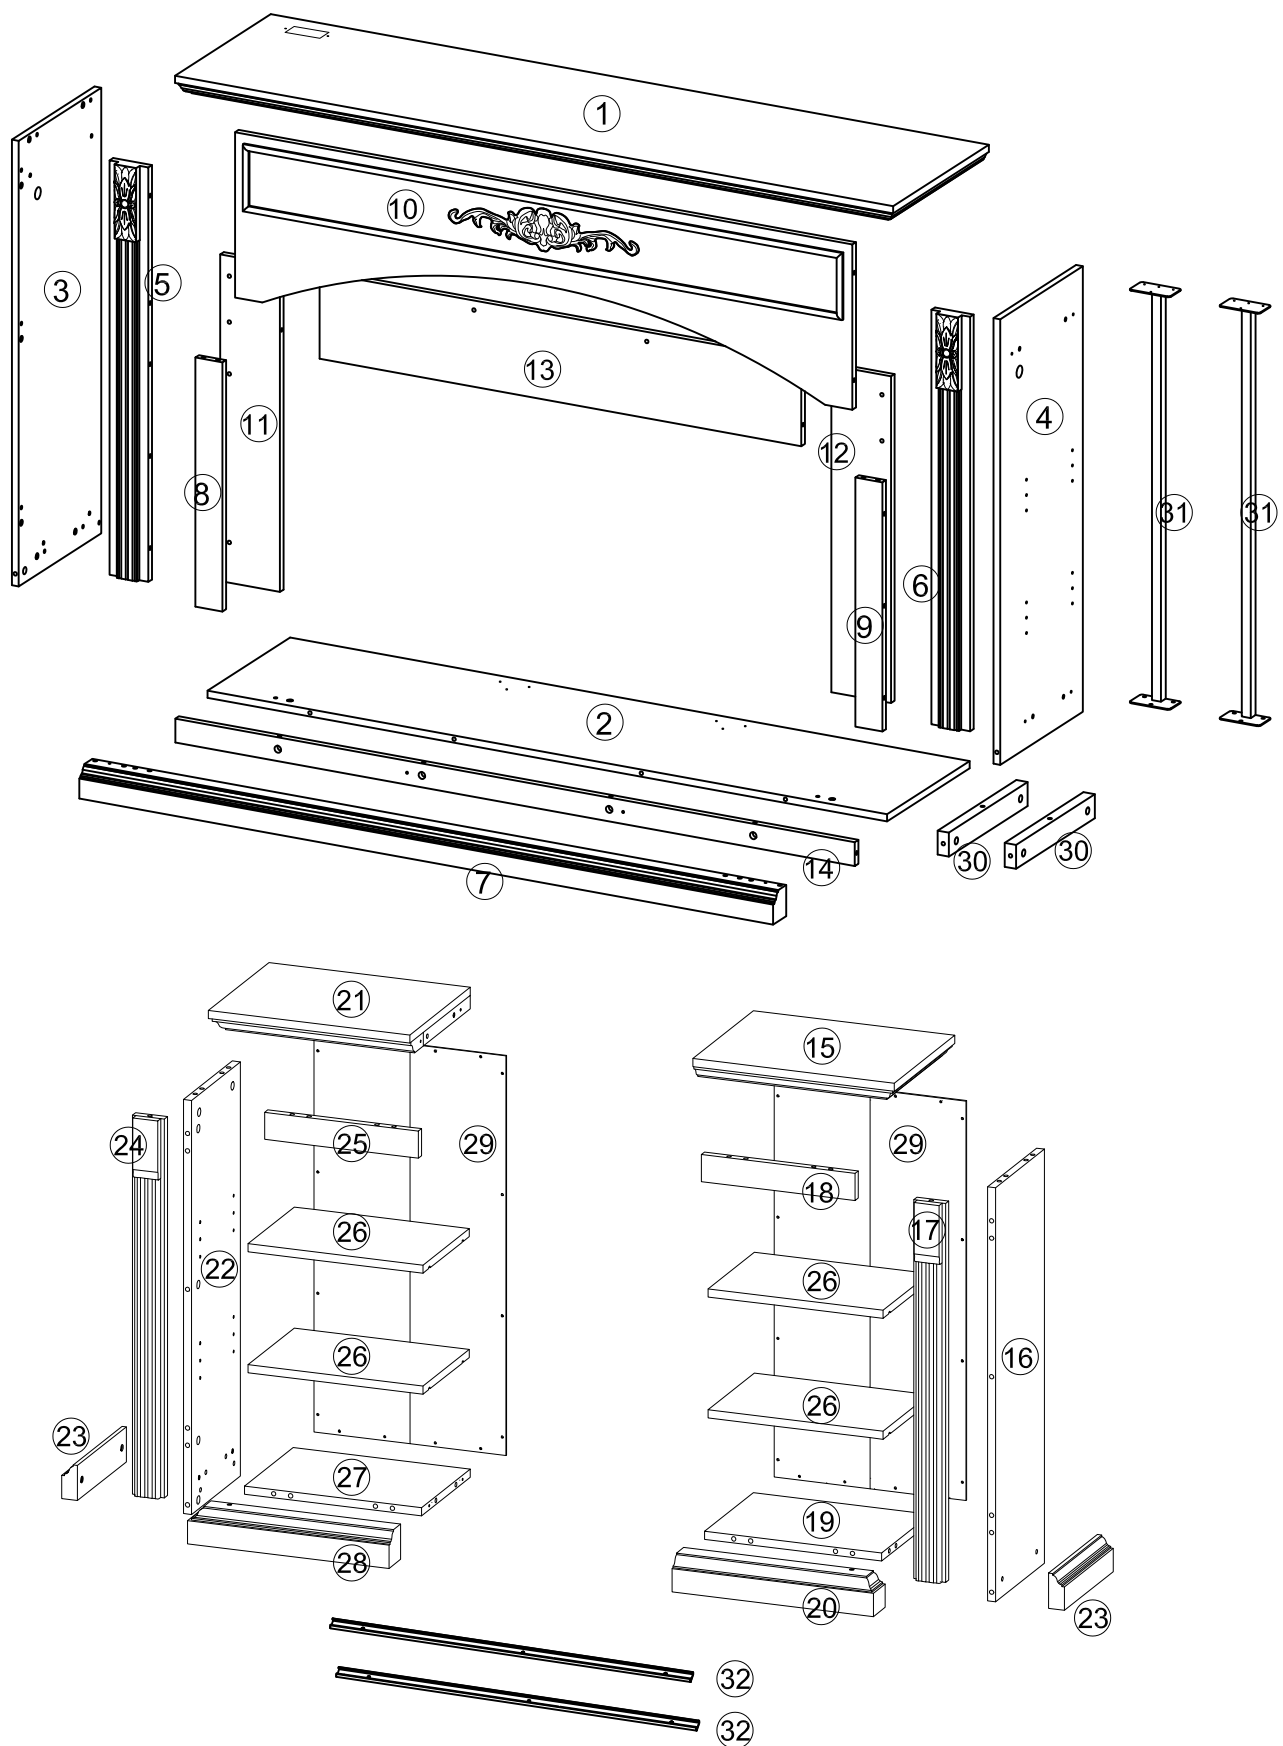



PACKAGE CONTENT

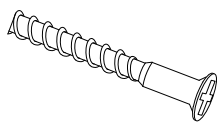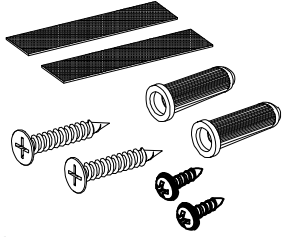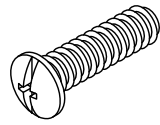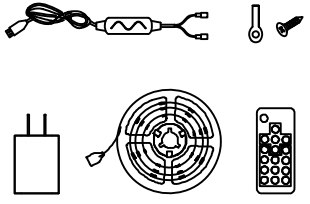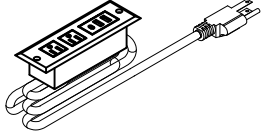             A 40X+2	 B 40X+2	Ø8X30MM  C 62X+2	 D 19X
M6*12mm  E 38X+1	Ø3.5X12MM  F 66X+2	 G 14X	 H 16X+1
Ø4.5X38mm  I 8X	 J 1X	M6*25mm  K 16X+1	 L 1X
 M 1X	Ø3.5X12MM  N 14X		

   
 
 
STEP 1

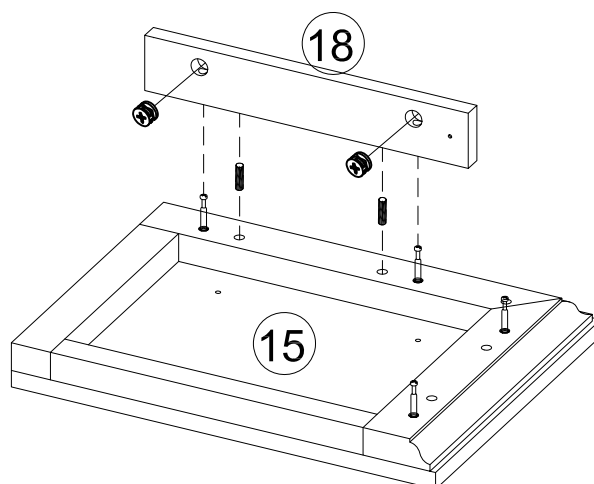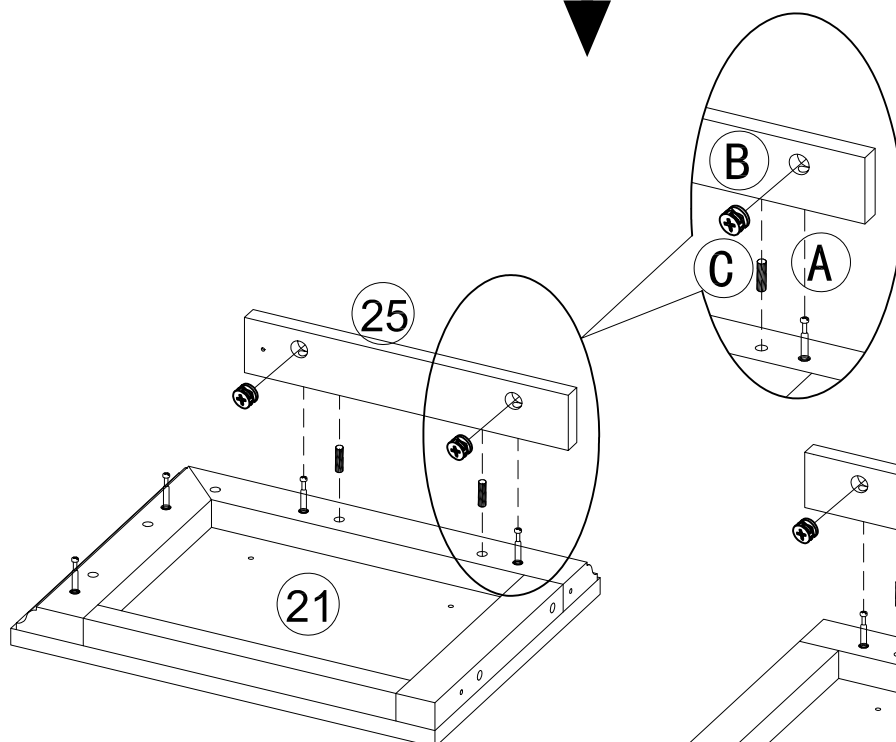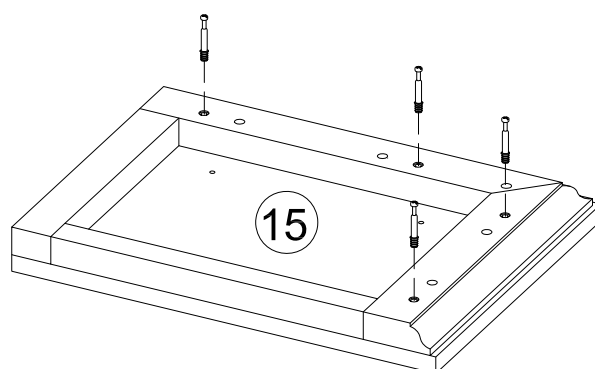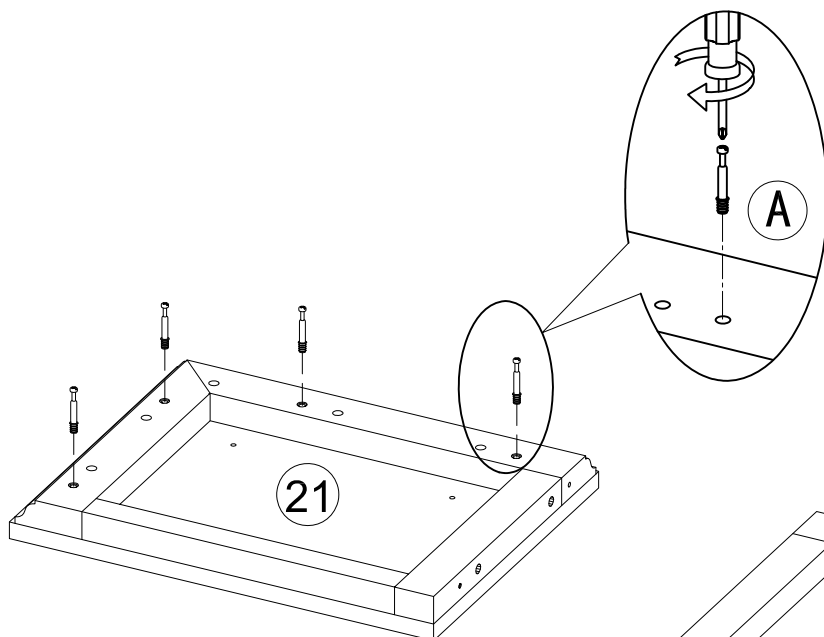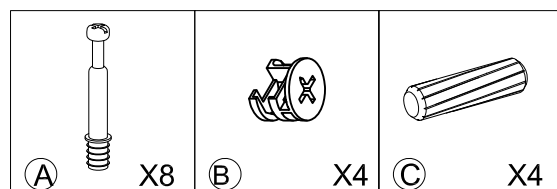




 
 
STEP 2

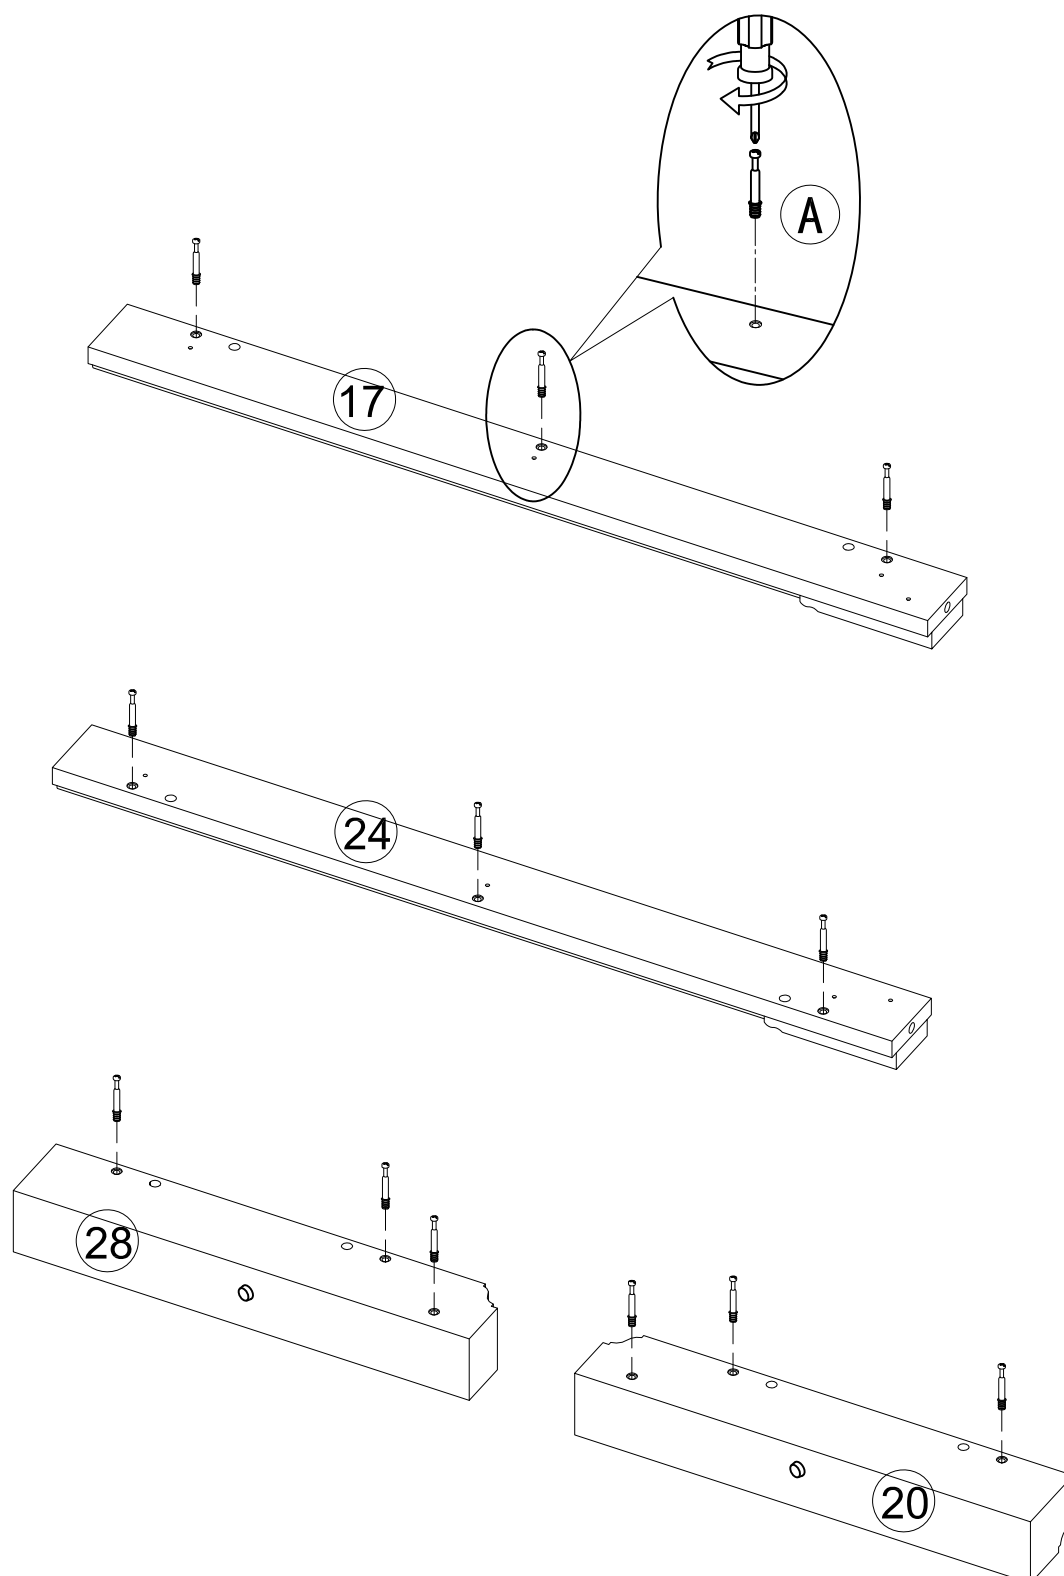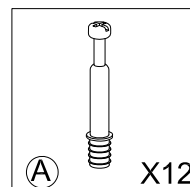

   STEP 3

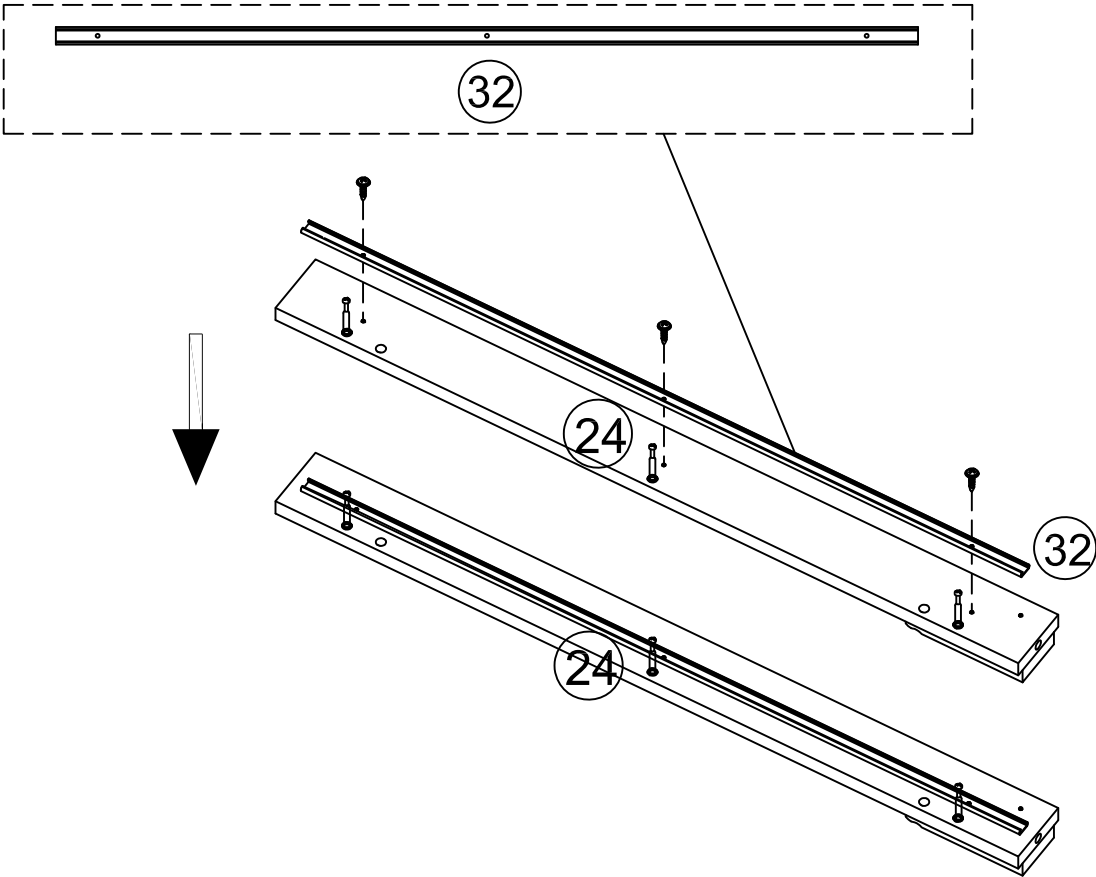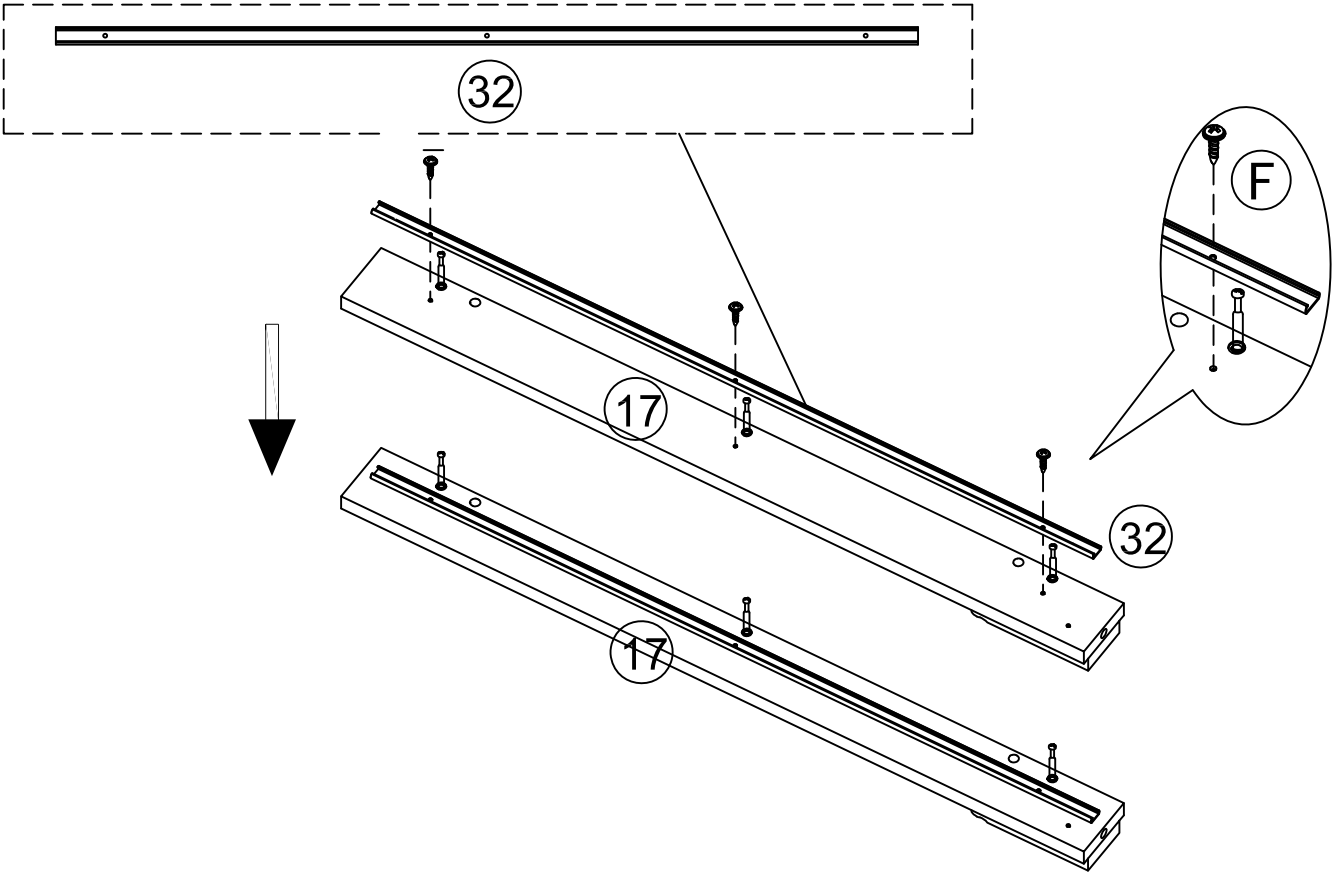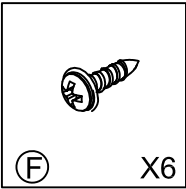


     STEP 4

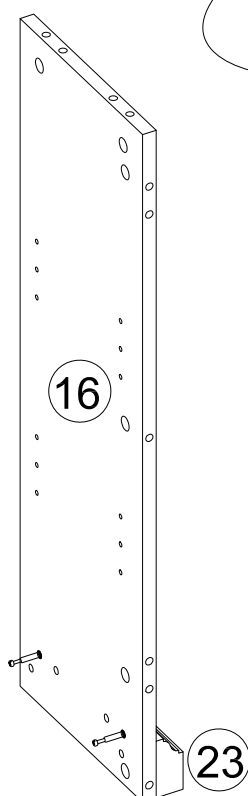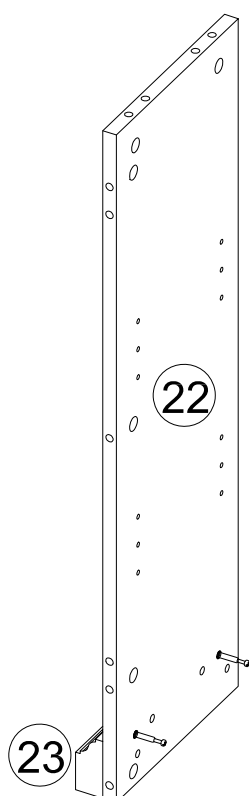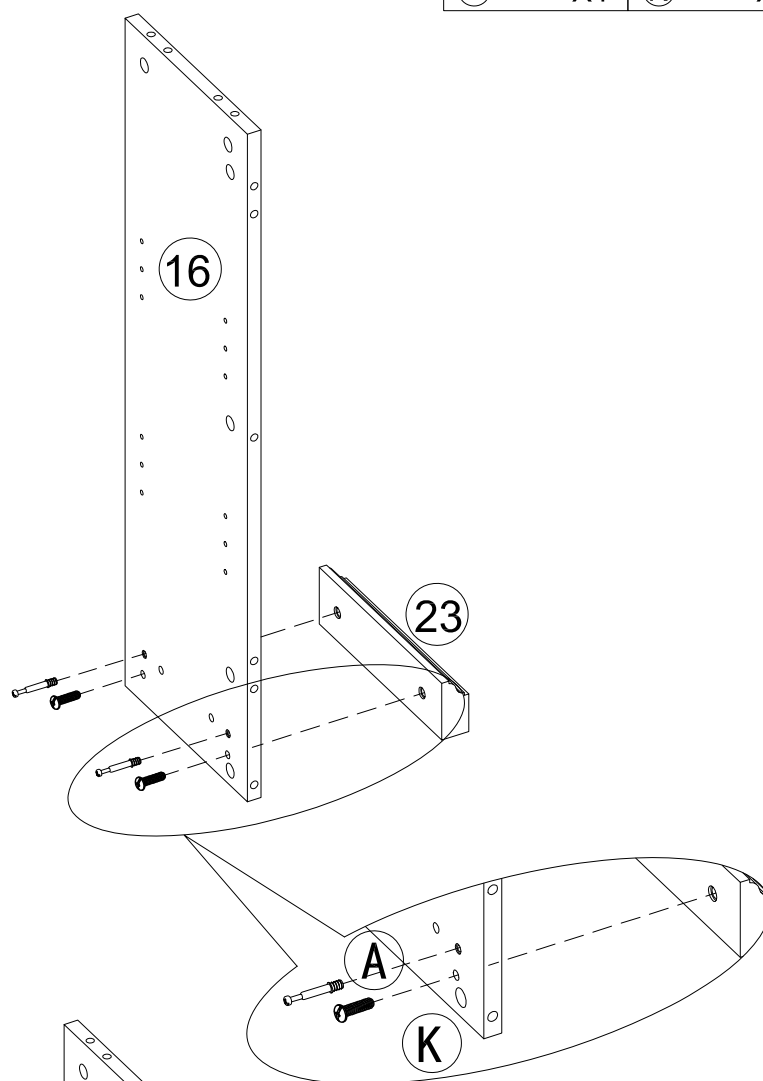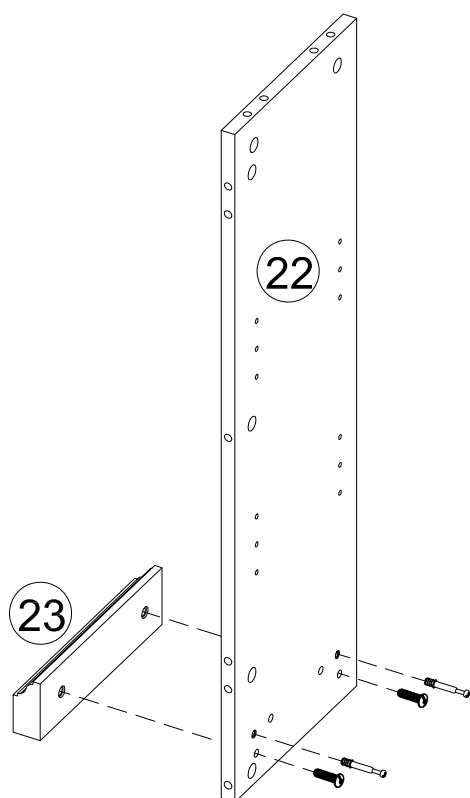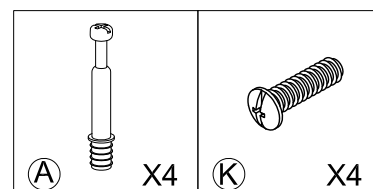


STEP 5

	
(B) X4	(C) X4

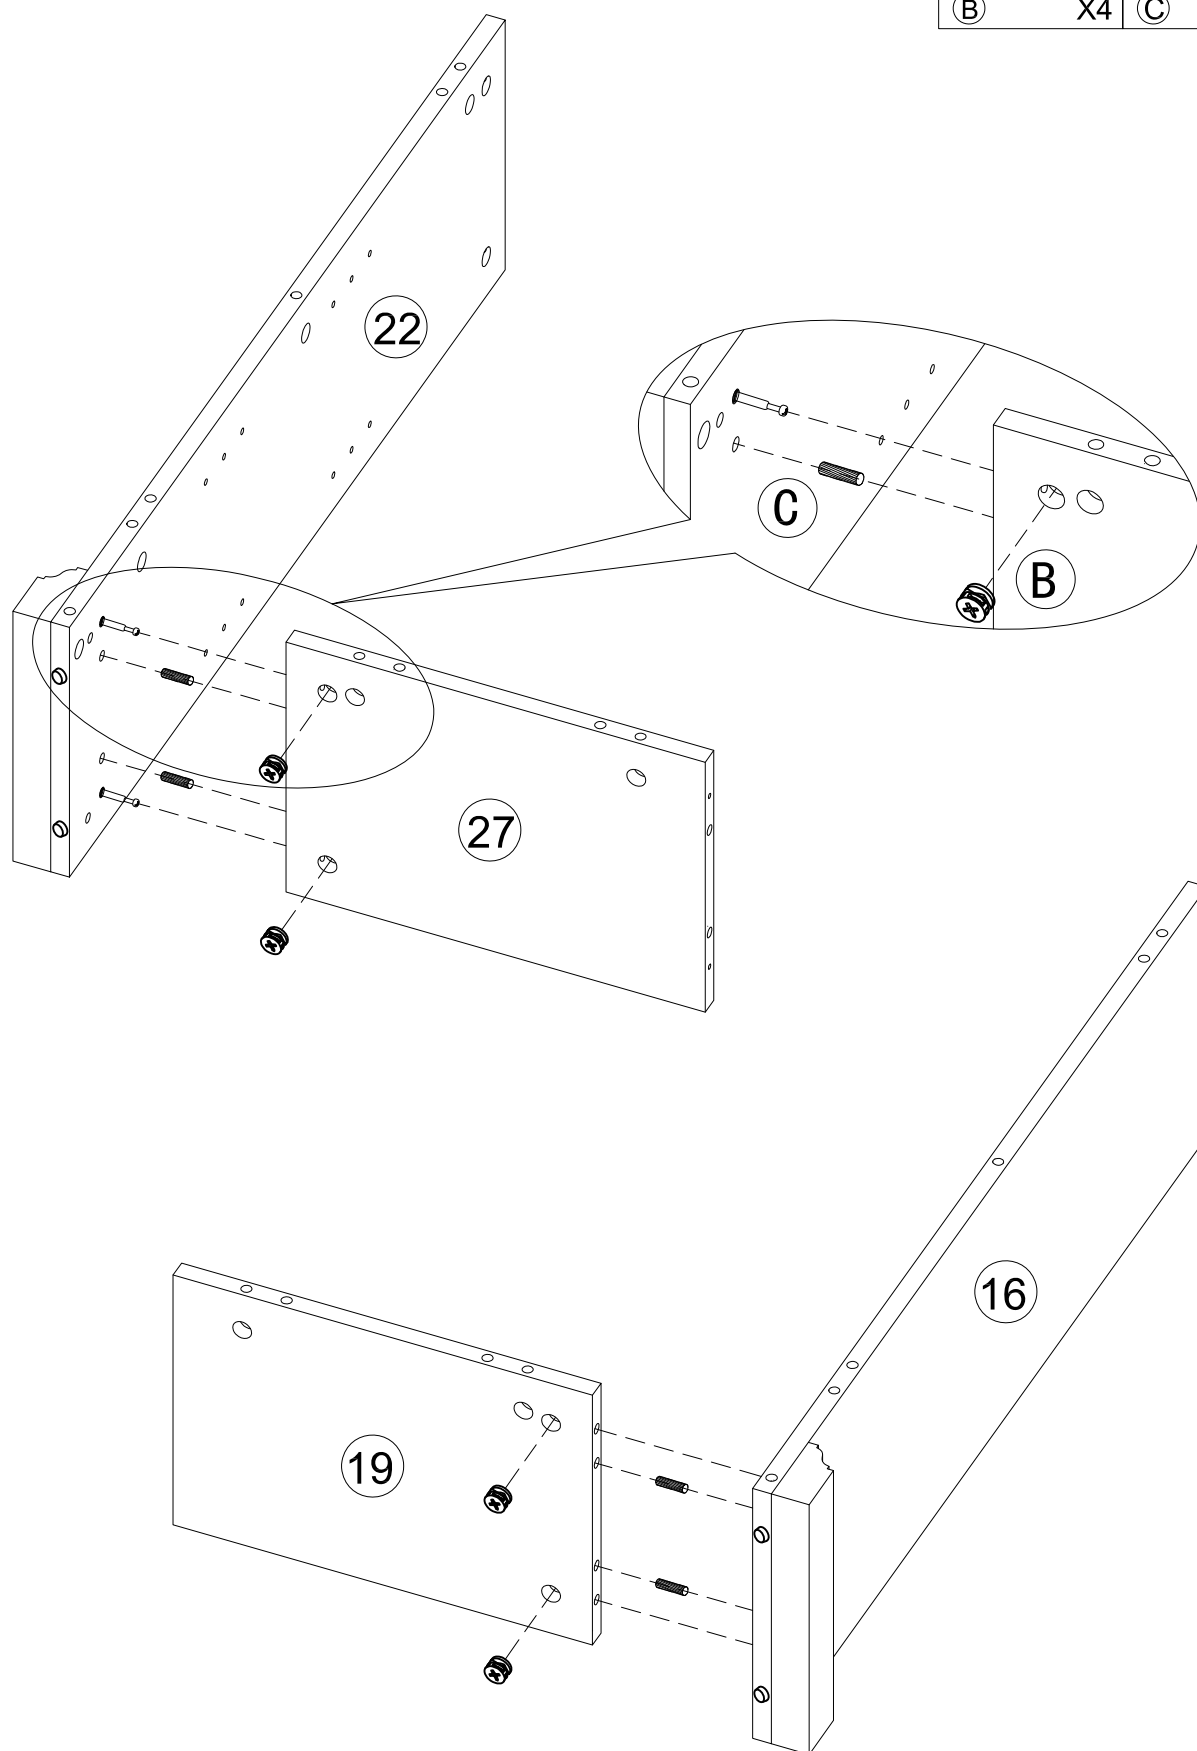 



STEP 6

	
(B) X6	(C) X5


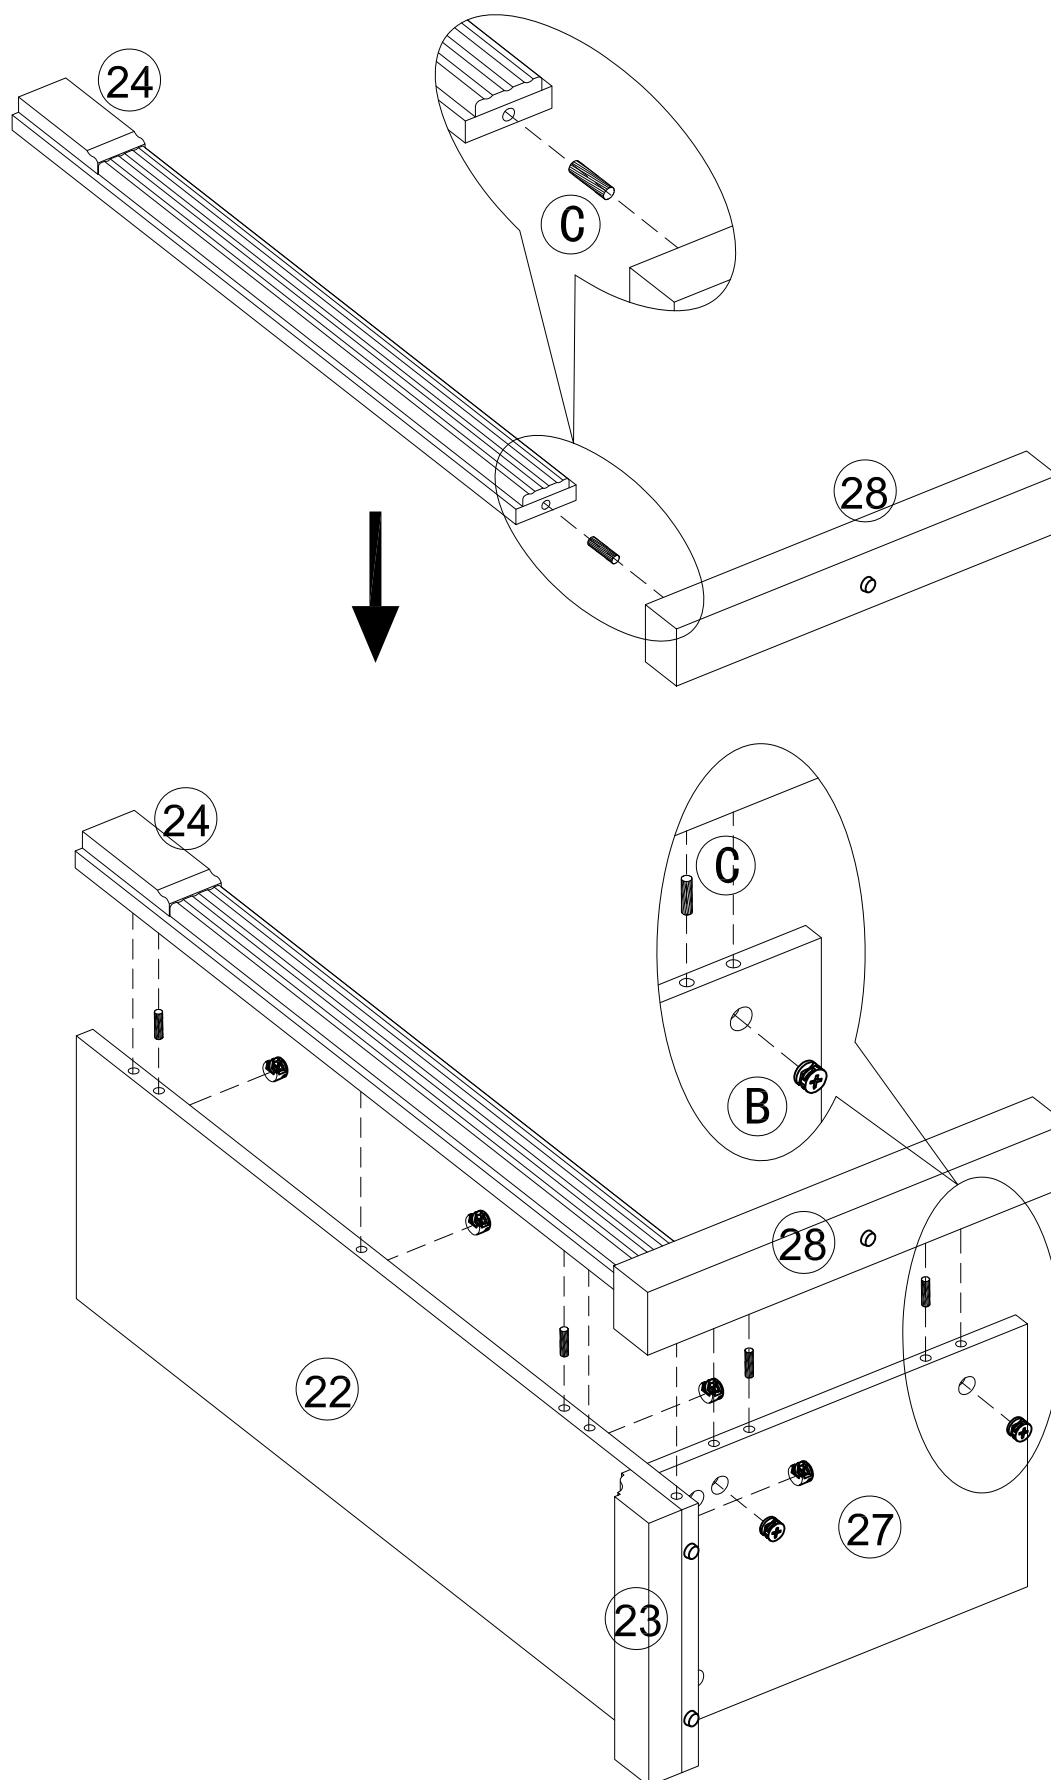 


STEP 7




	
(B) X6	(C) X5

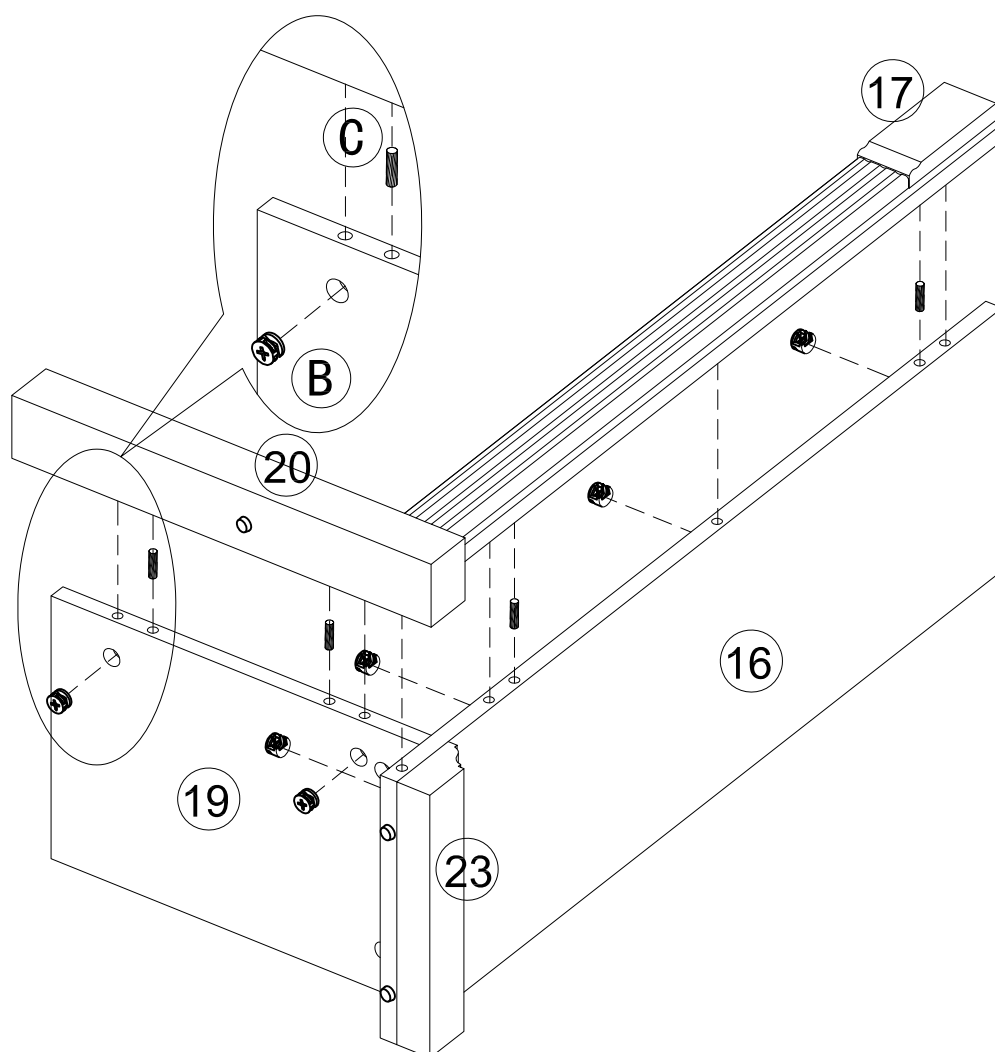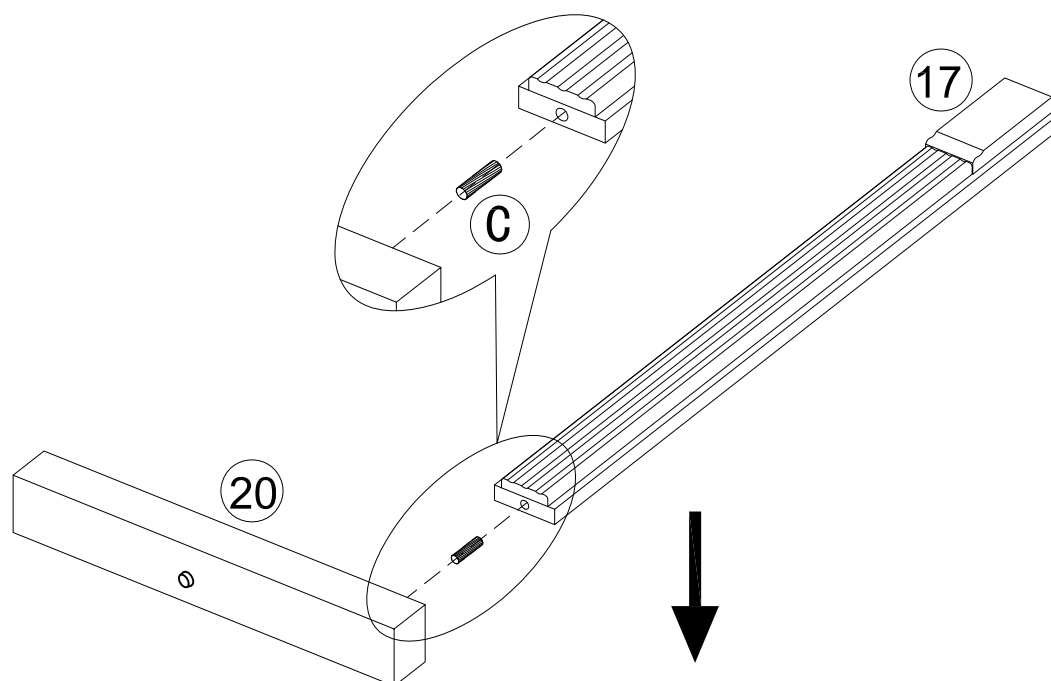  


 
 
STEP 8

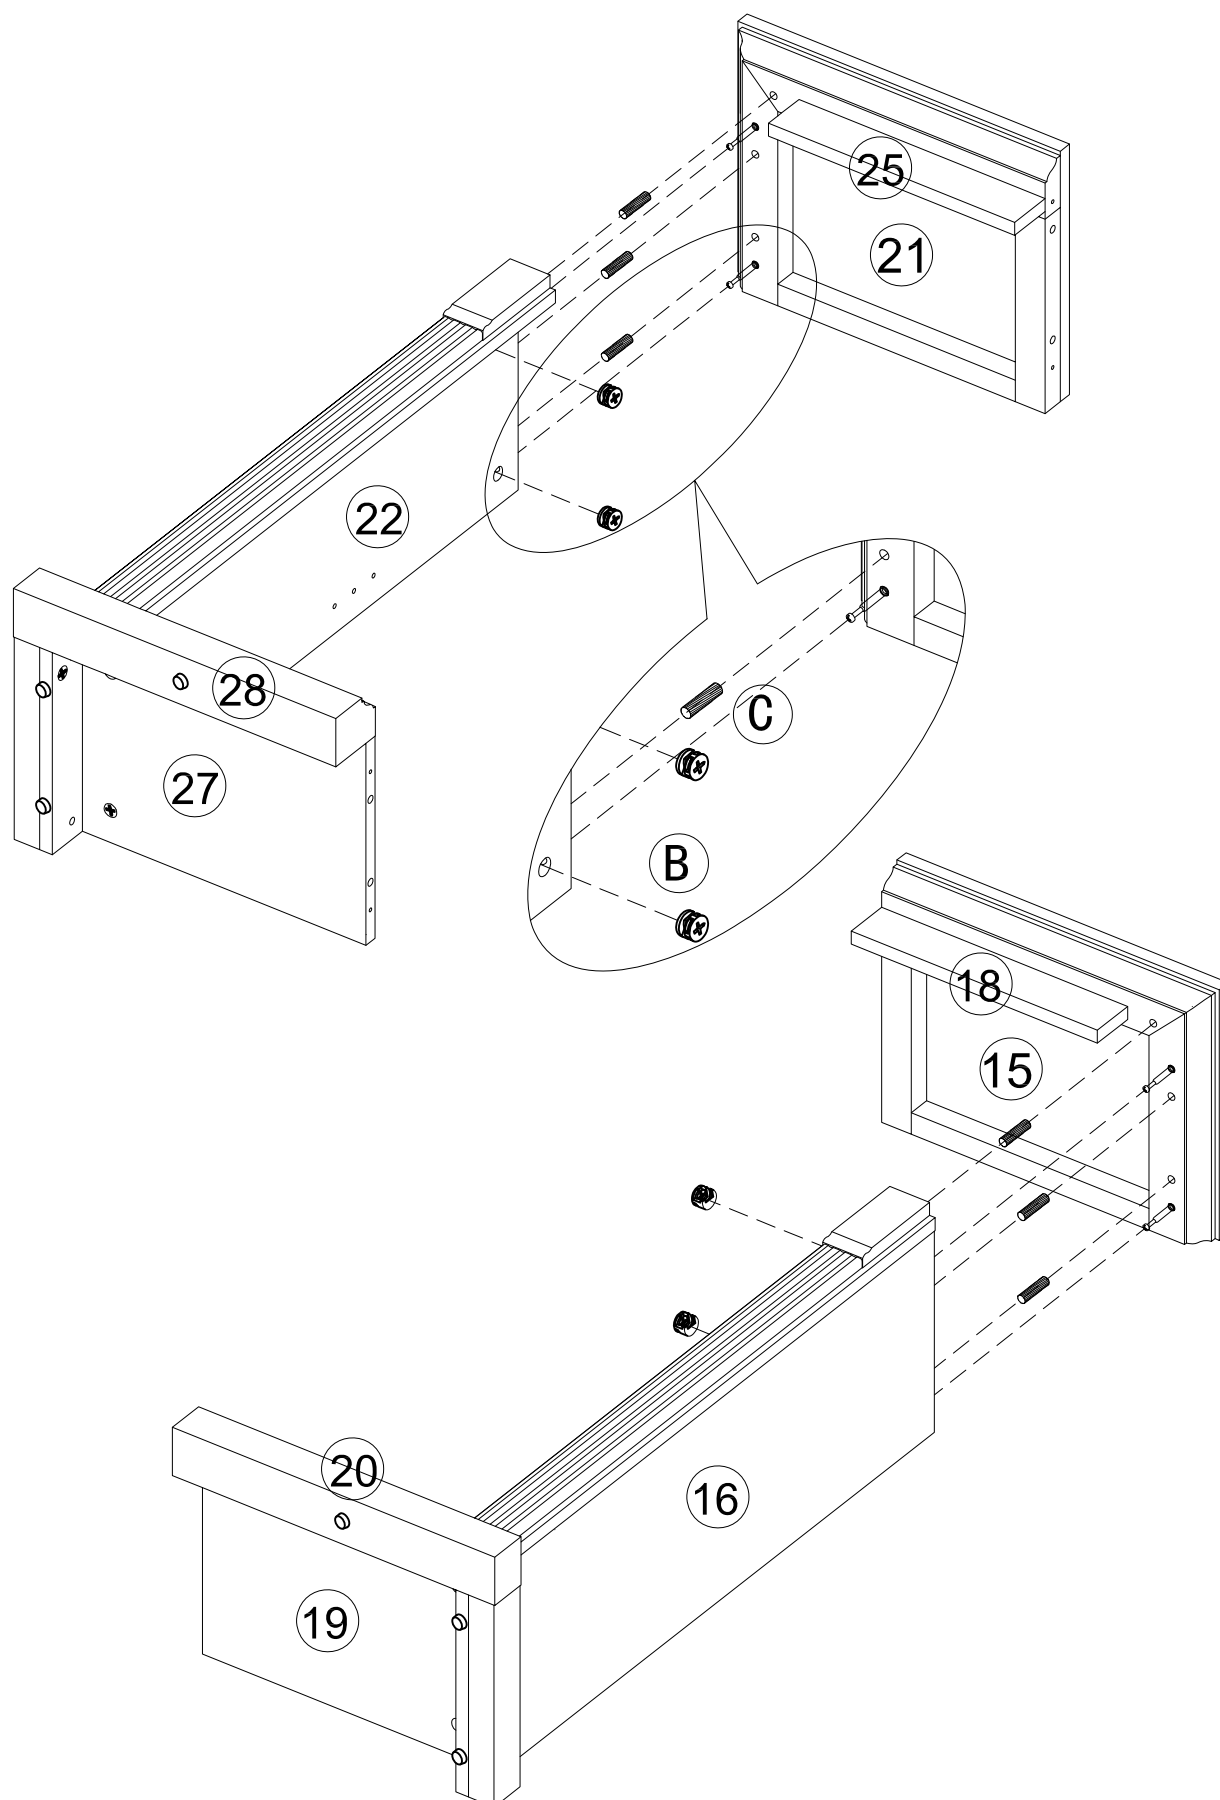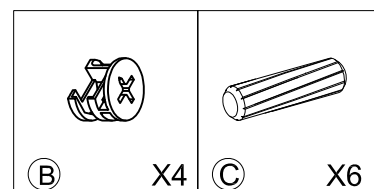

  
 
STEP 9

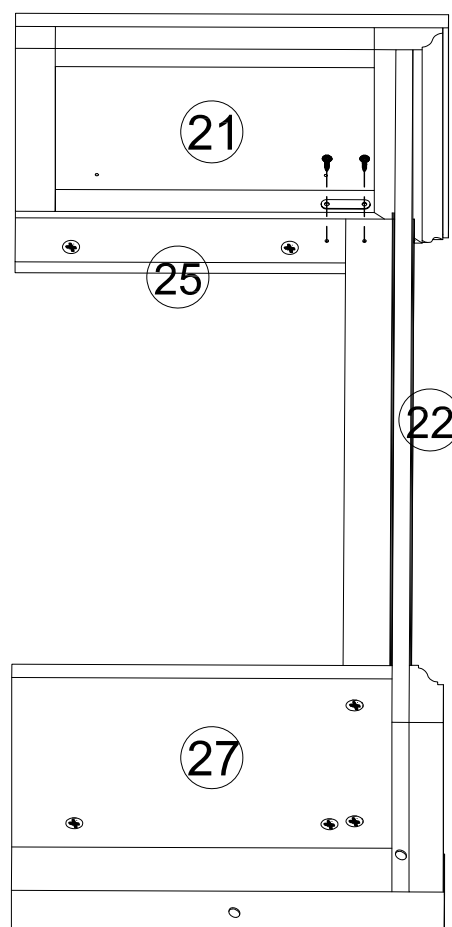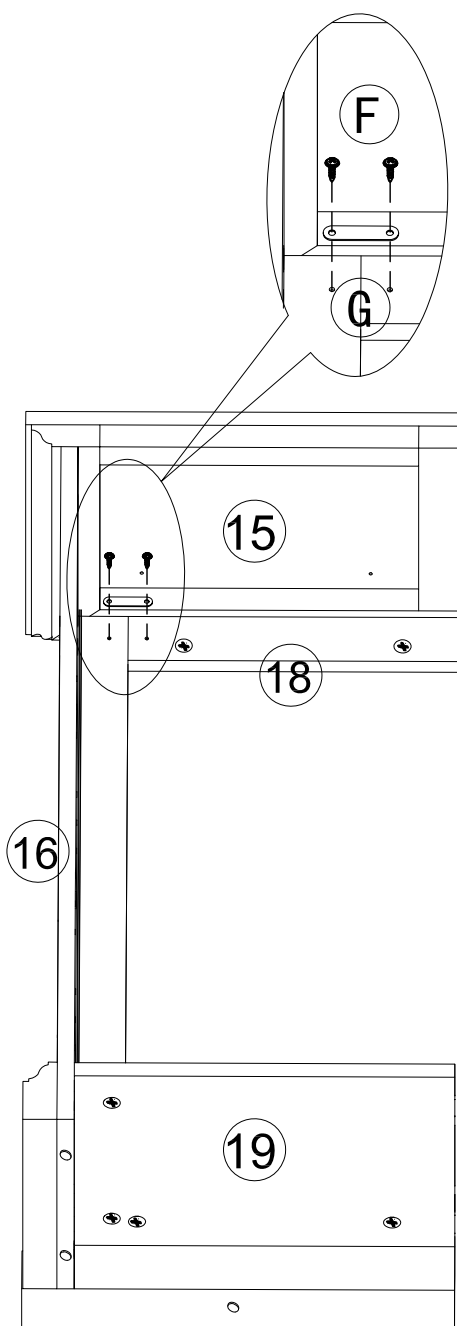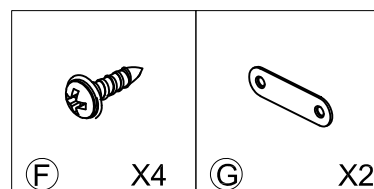

 
 
 
STEP 10

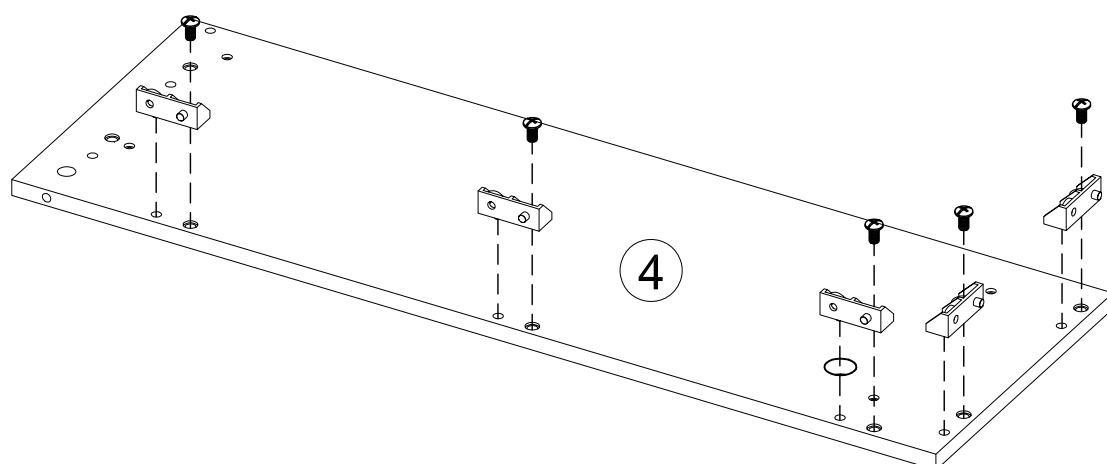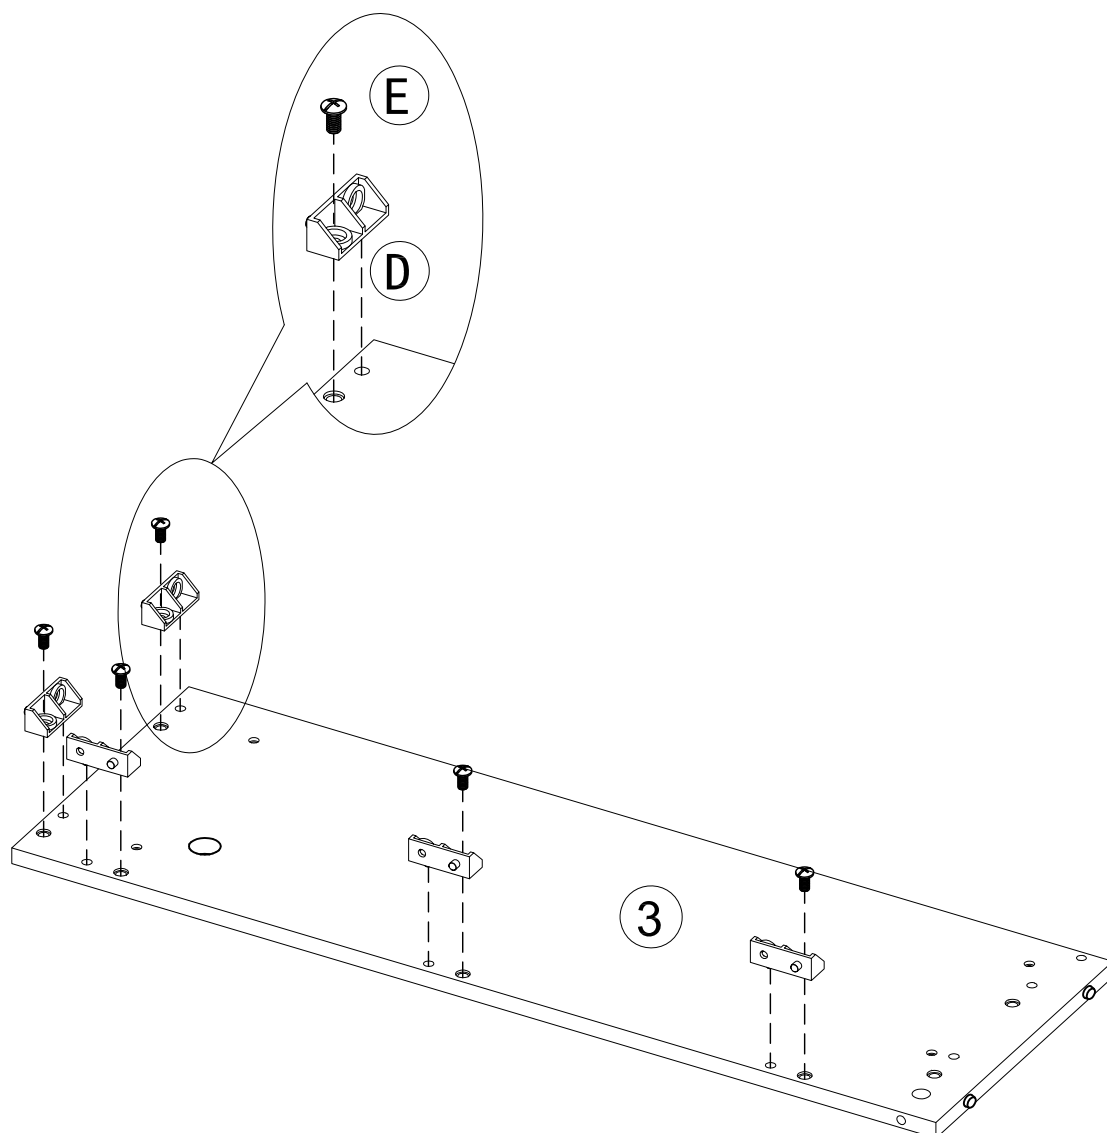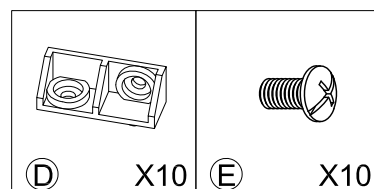

  STEP 11

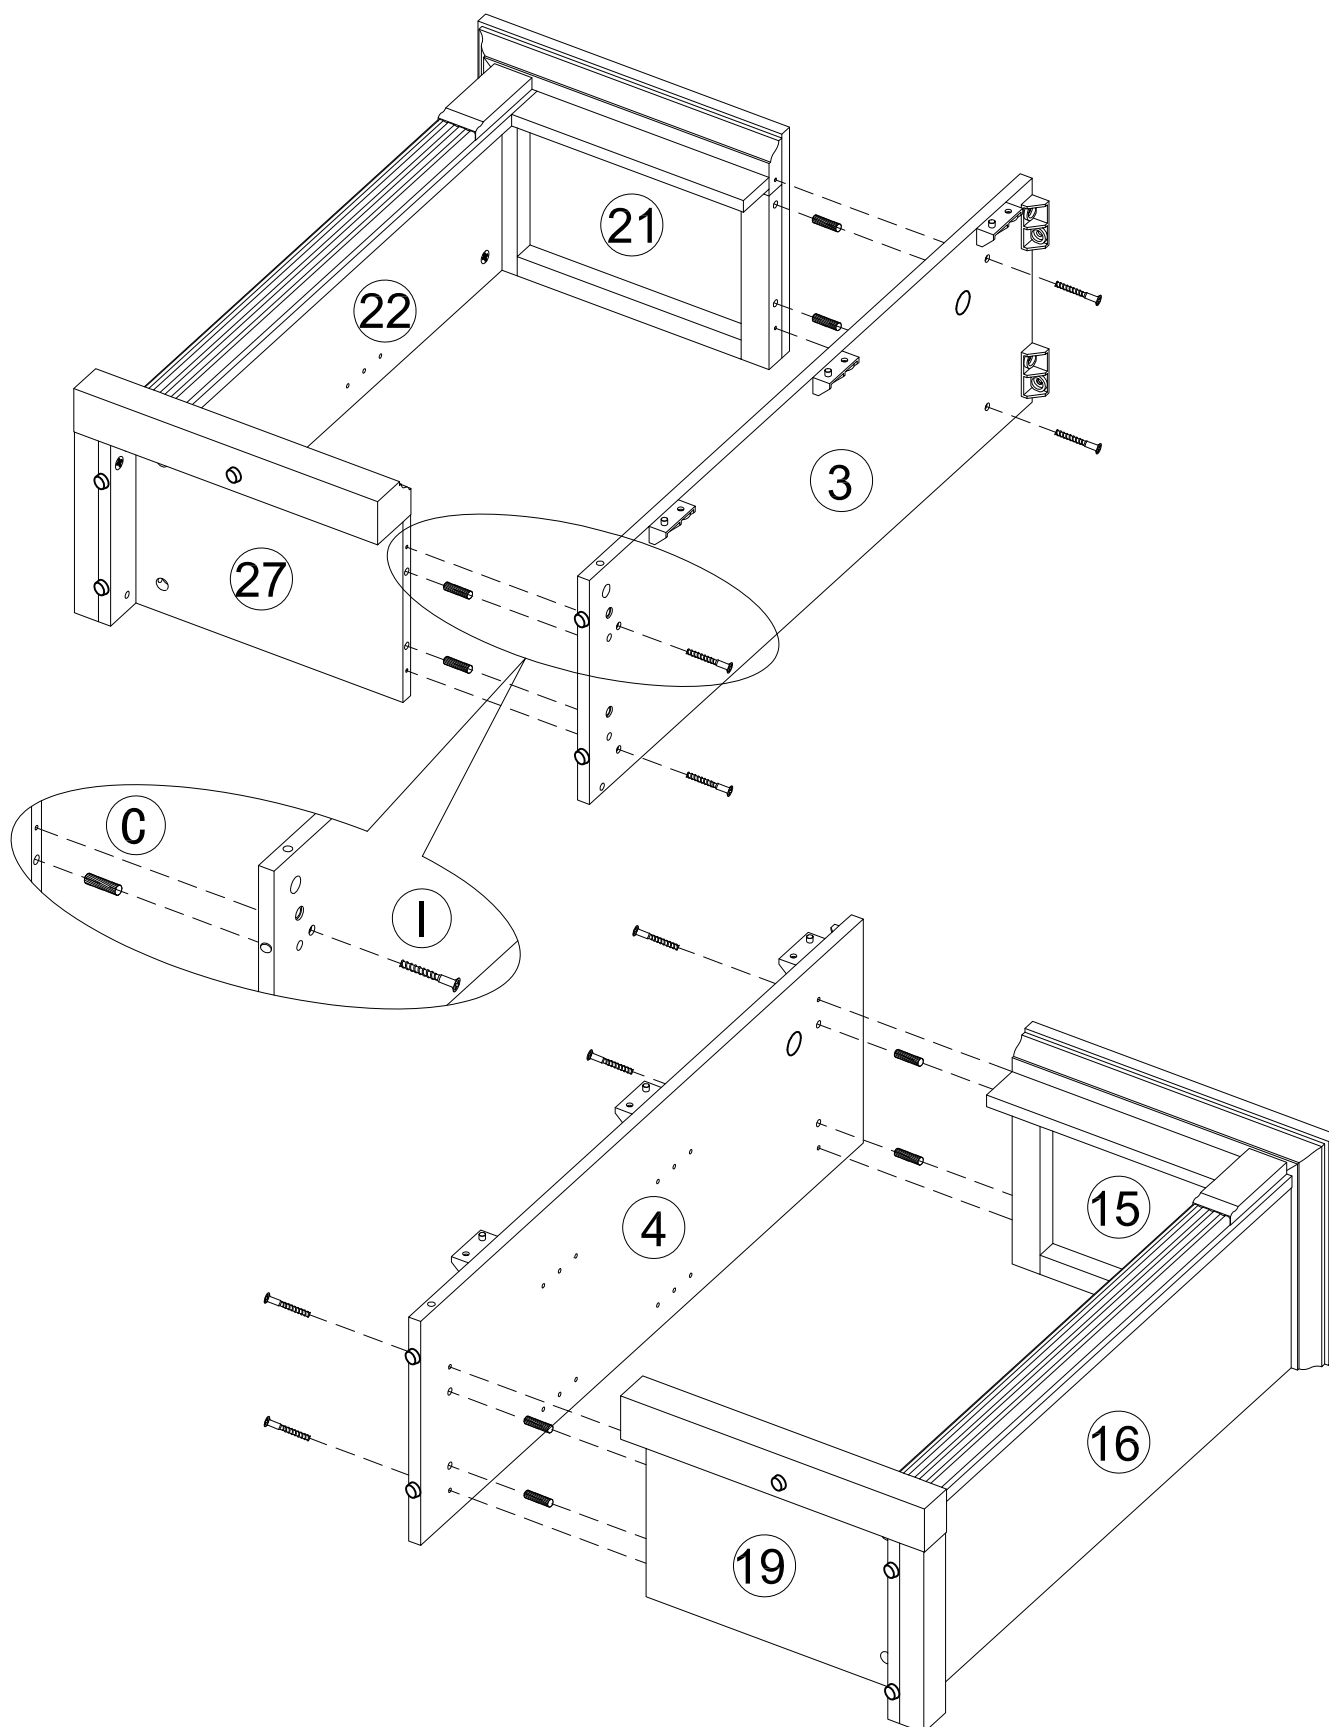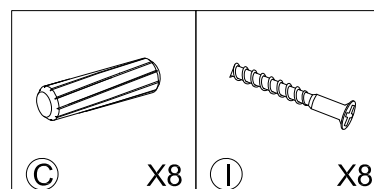


   STEP 12

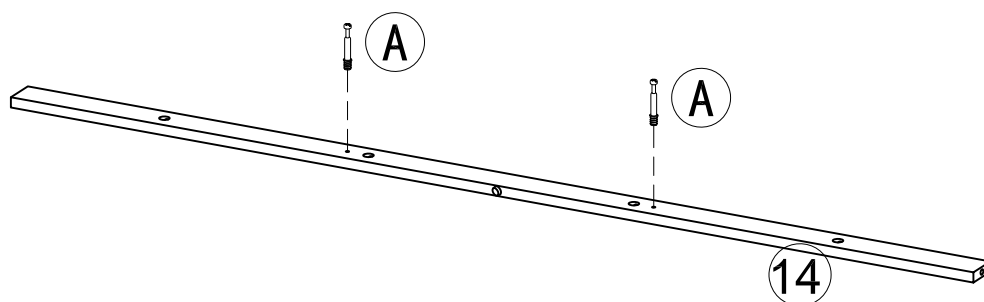
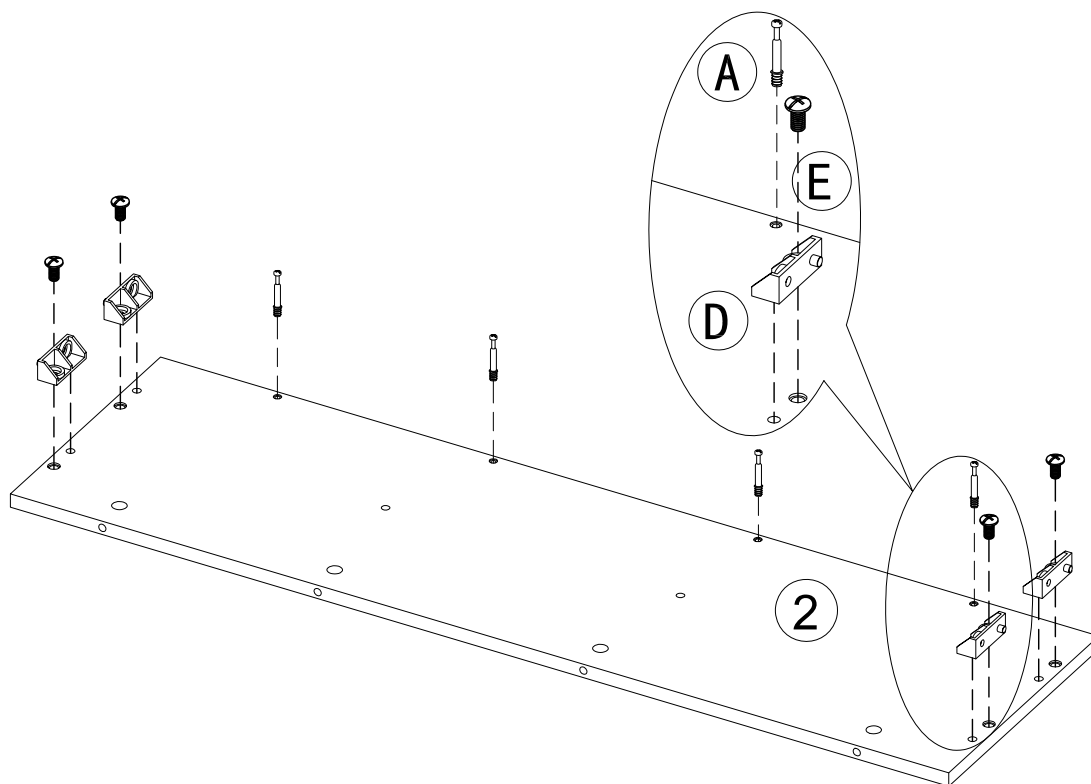
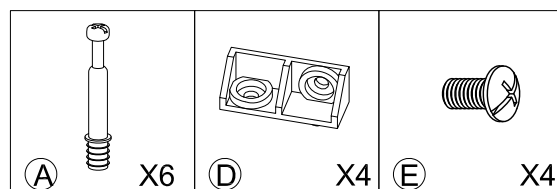


STEP 13



	
(B)	X6
(C)	X2

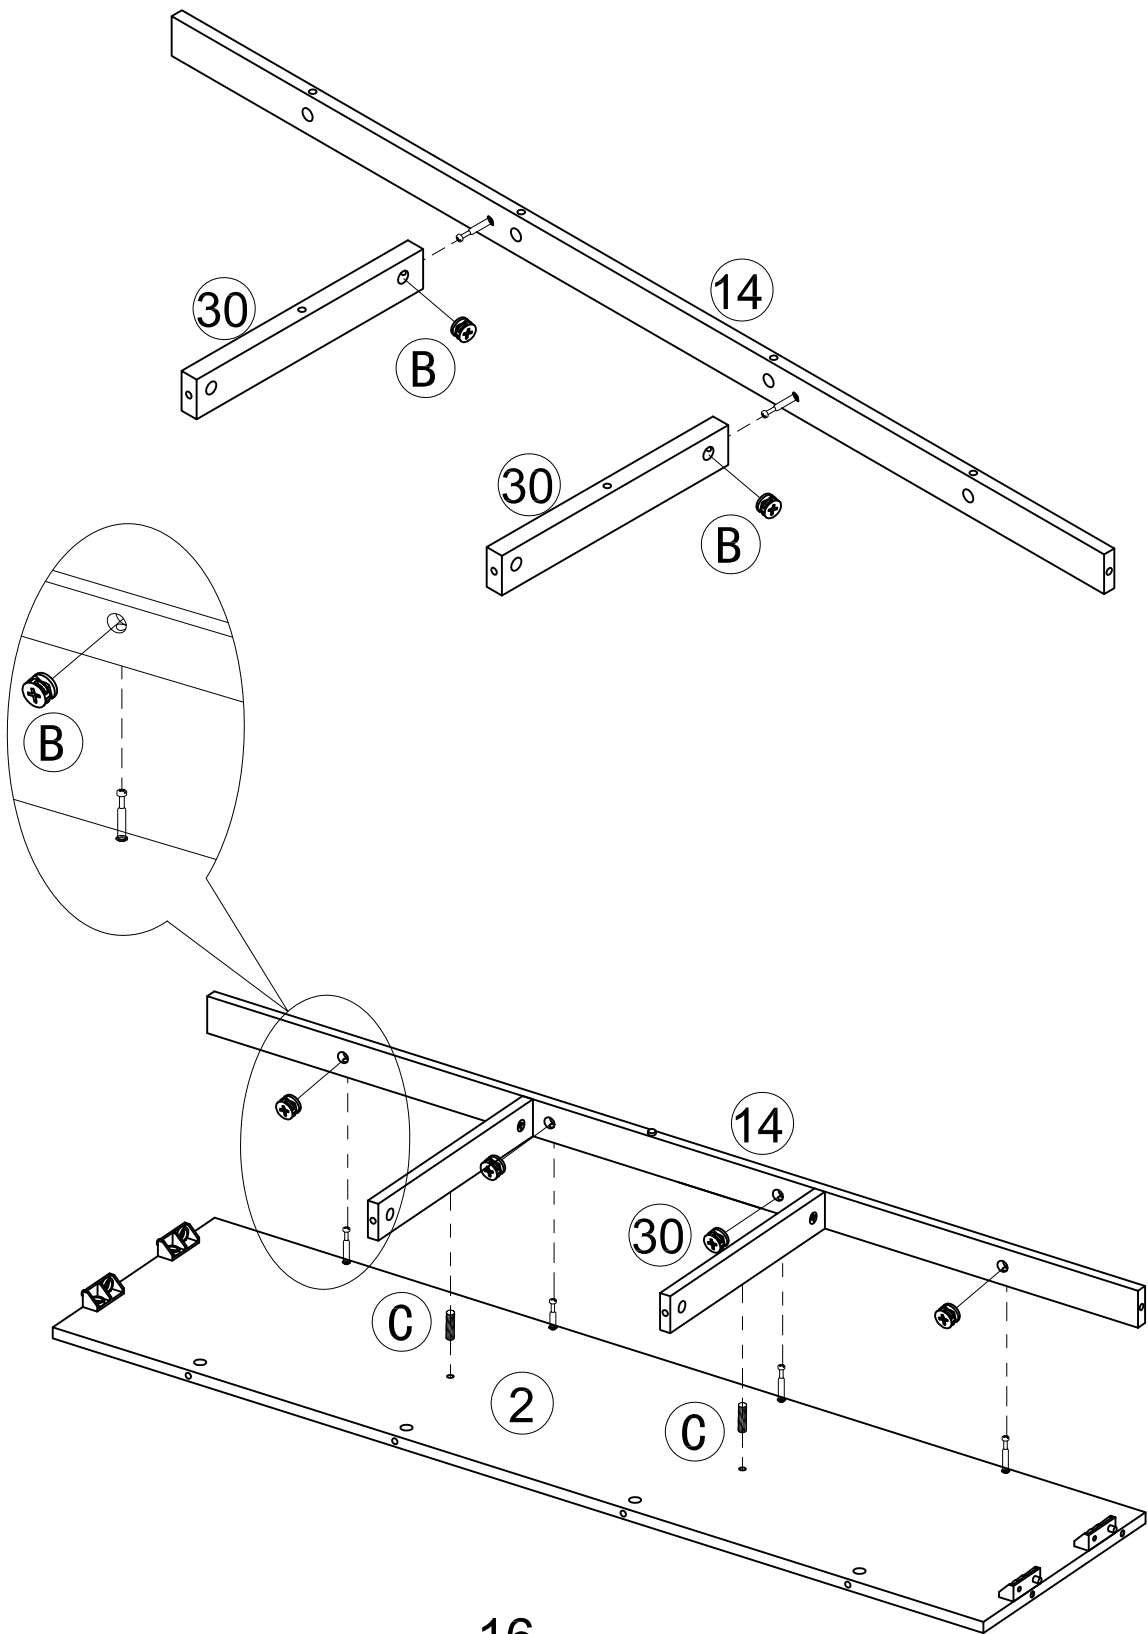 

 
 
 
STEP 14

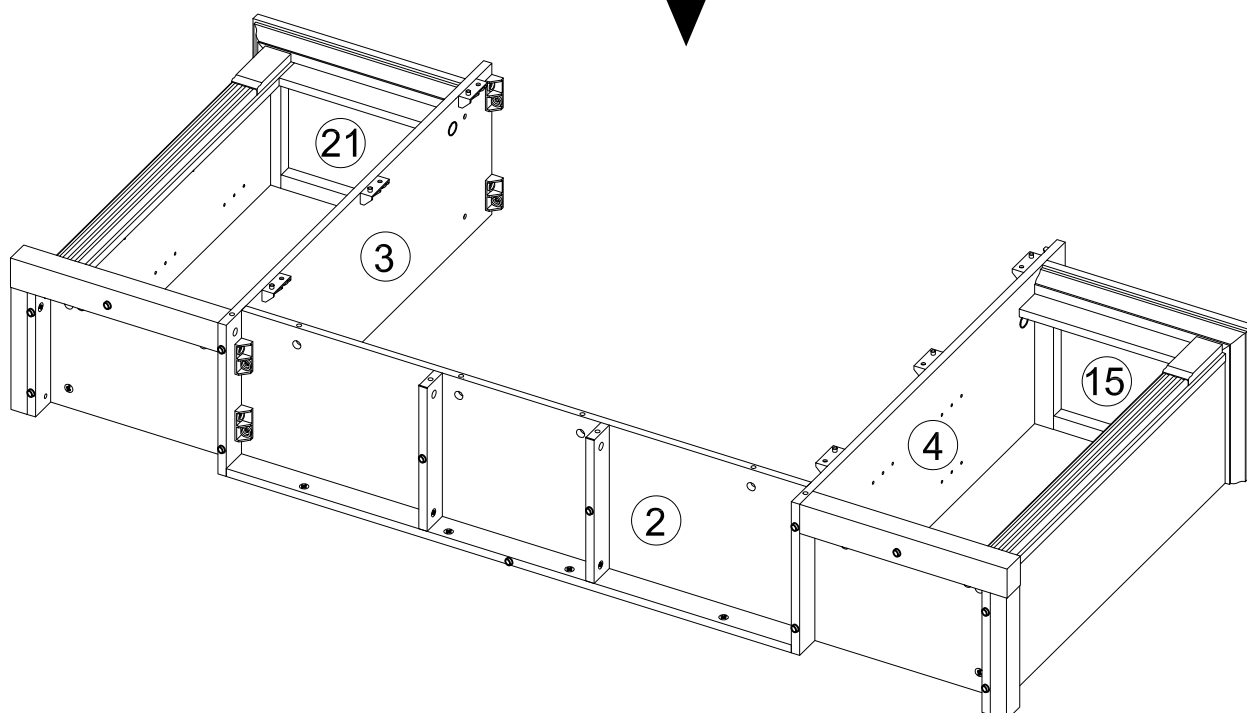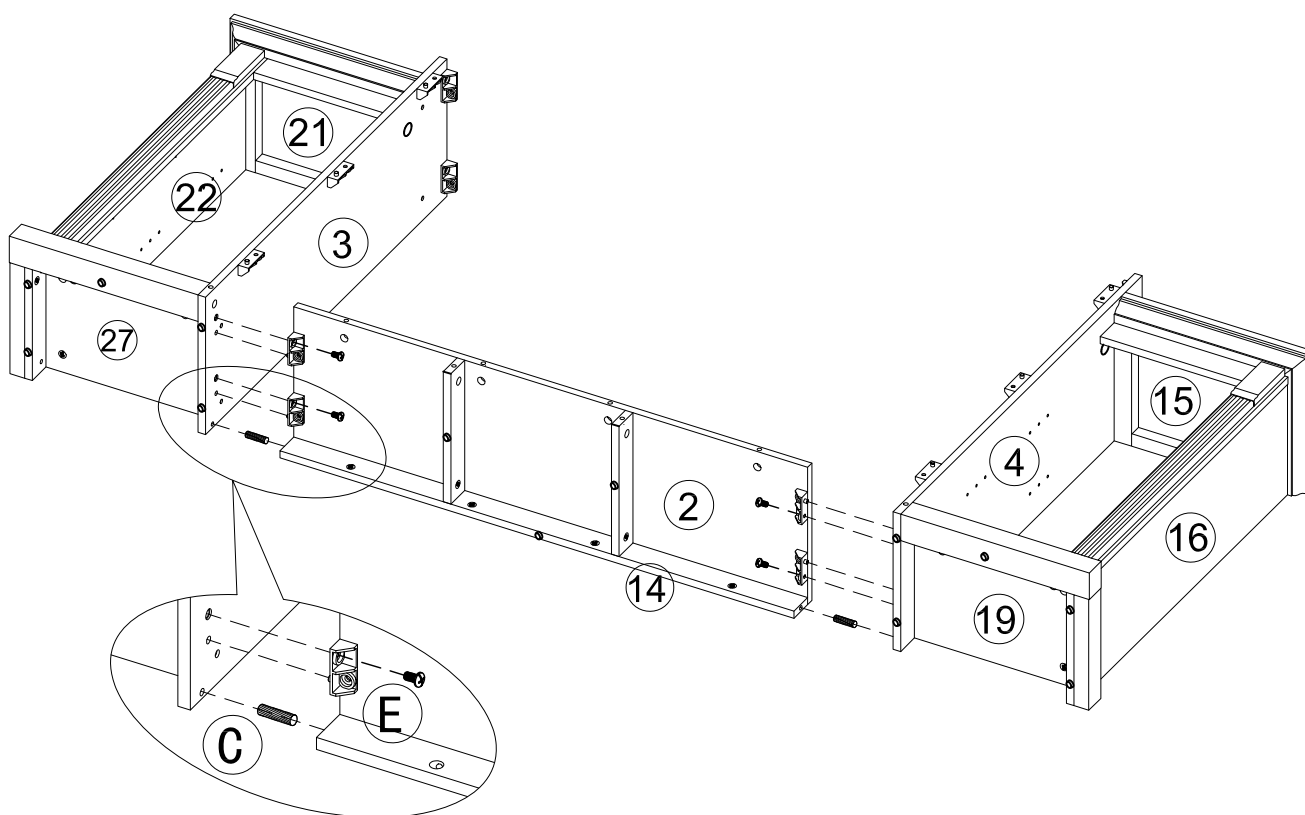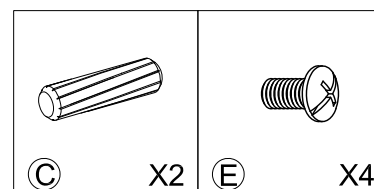

  STEP 15

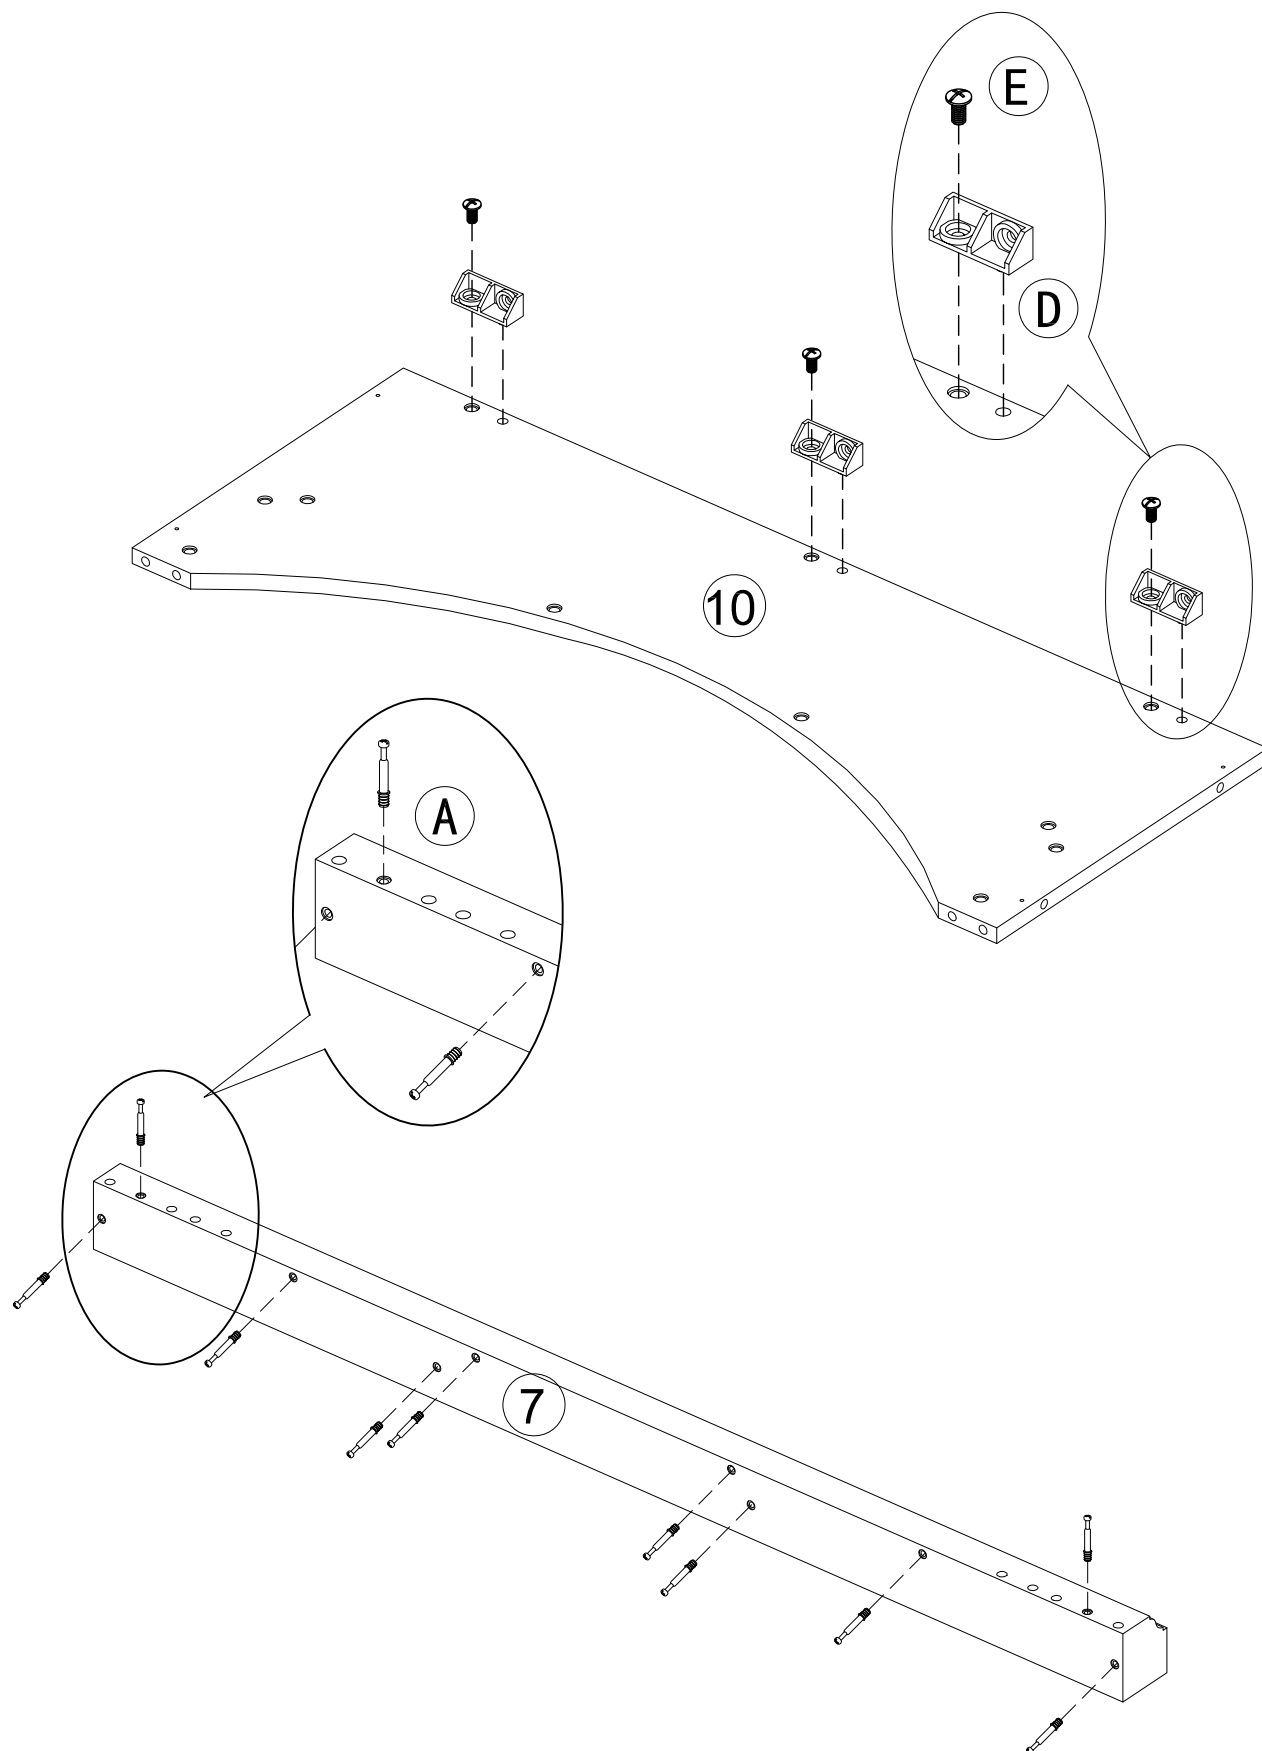
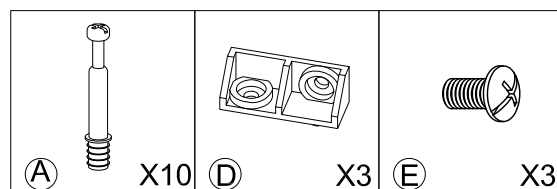


   STEP 16

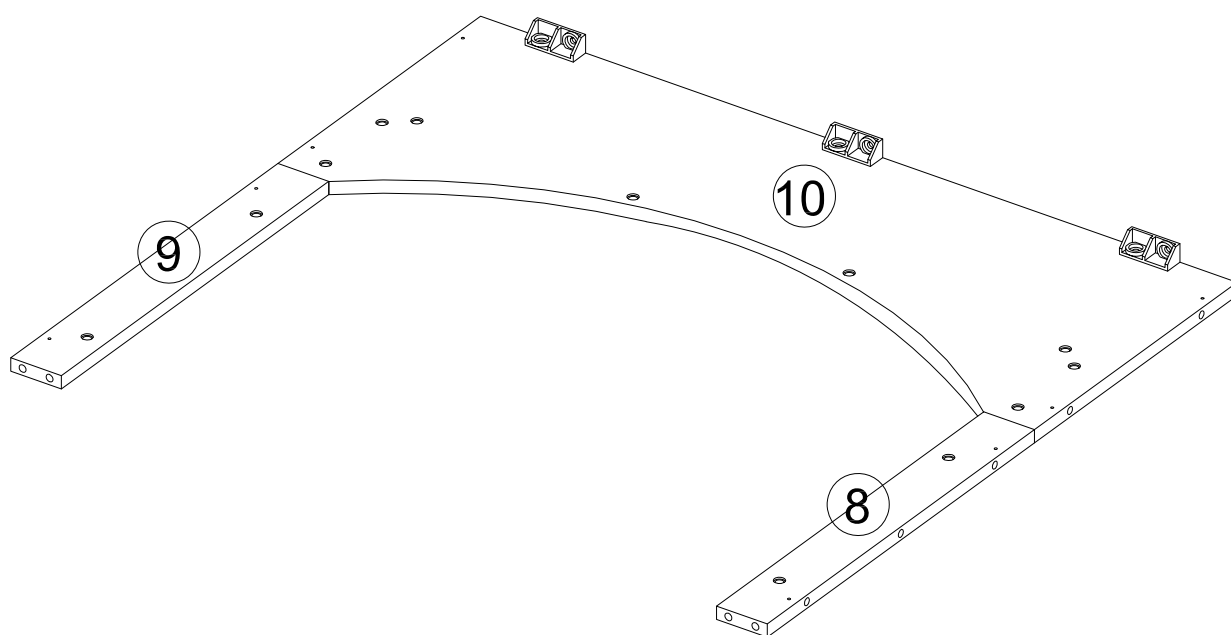
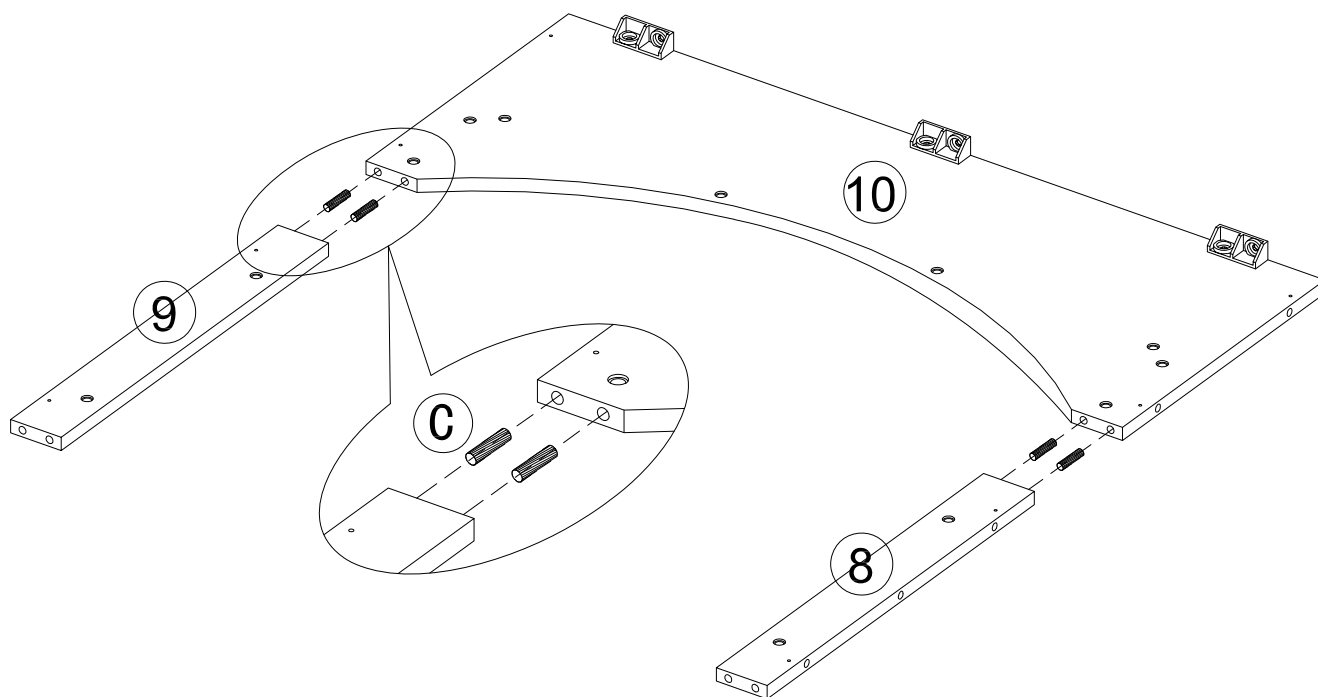
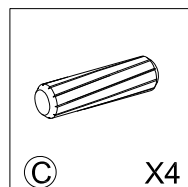


STEP 17





		
Ⓒ	Ⓕ	Ⓖ
X10	X16	X8

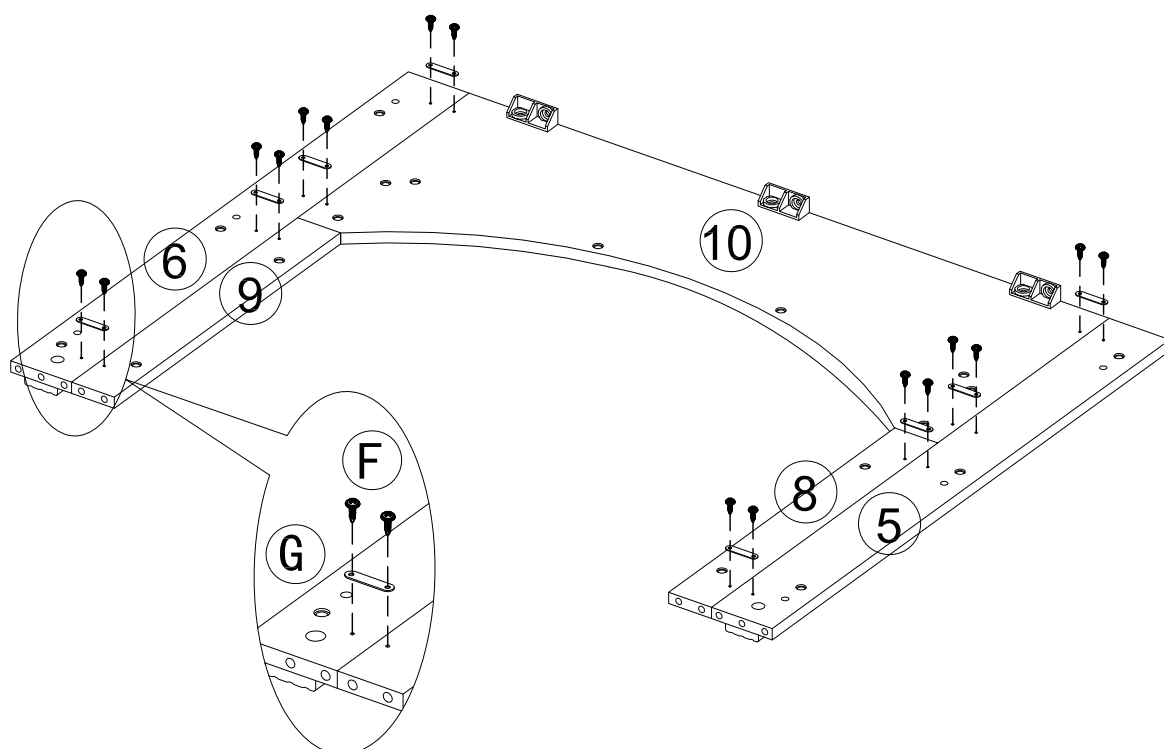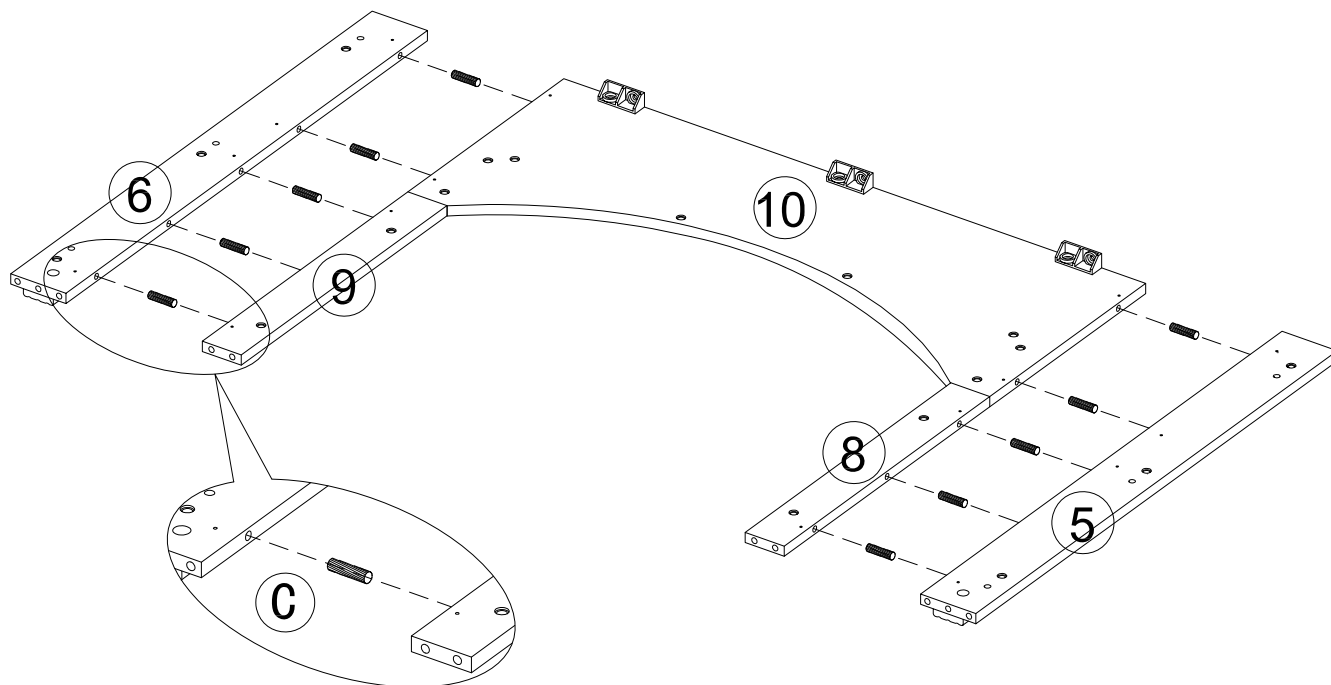  

 
 
 
STEP 18

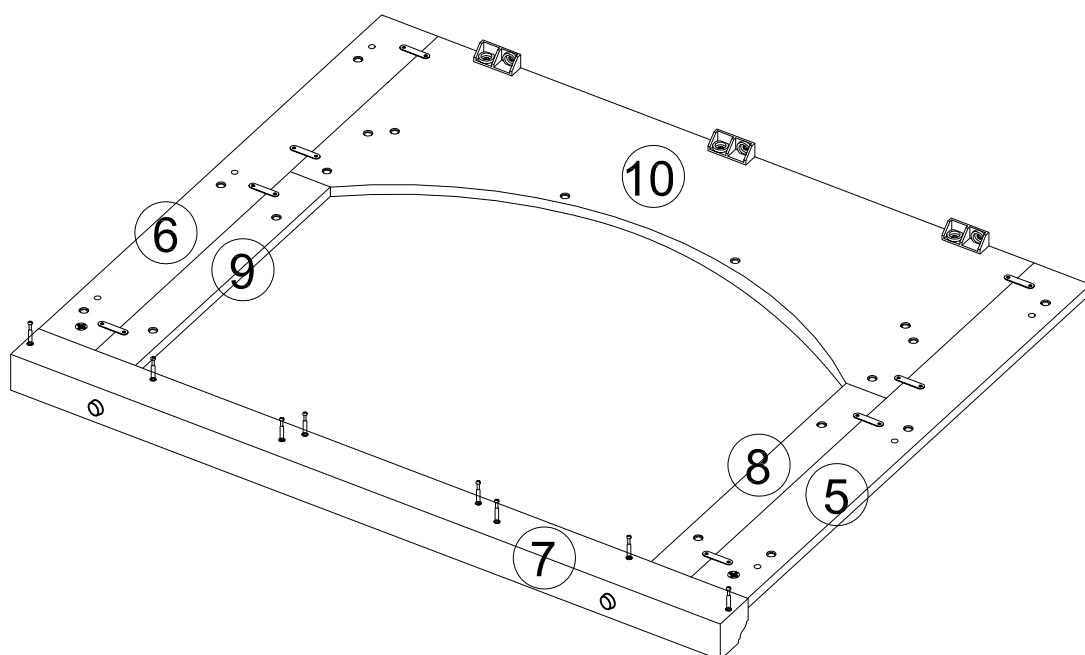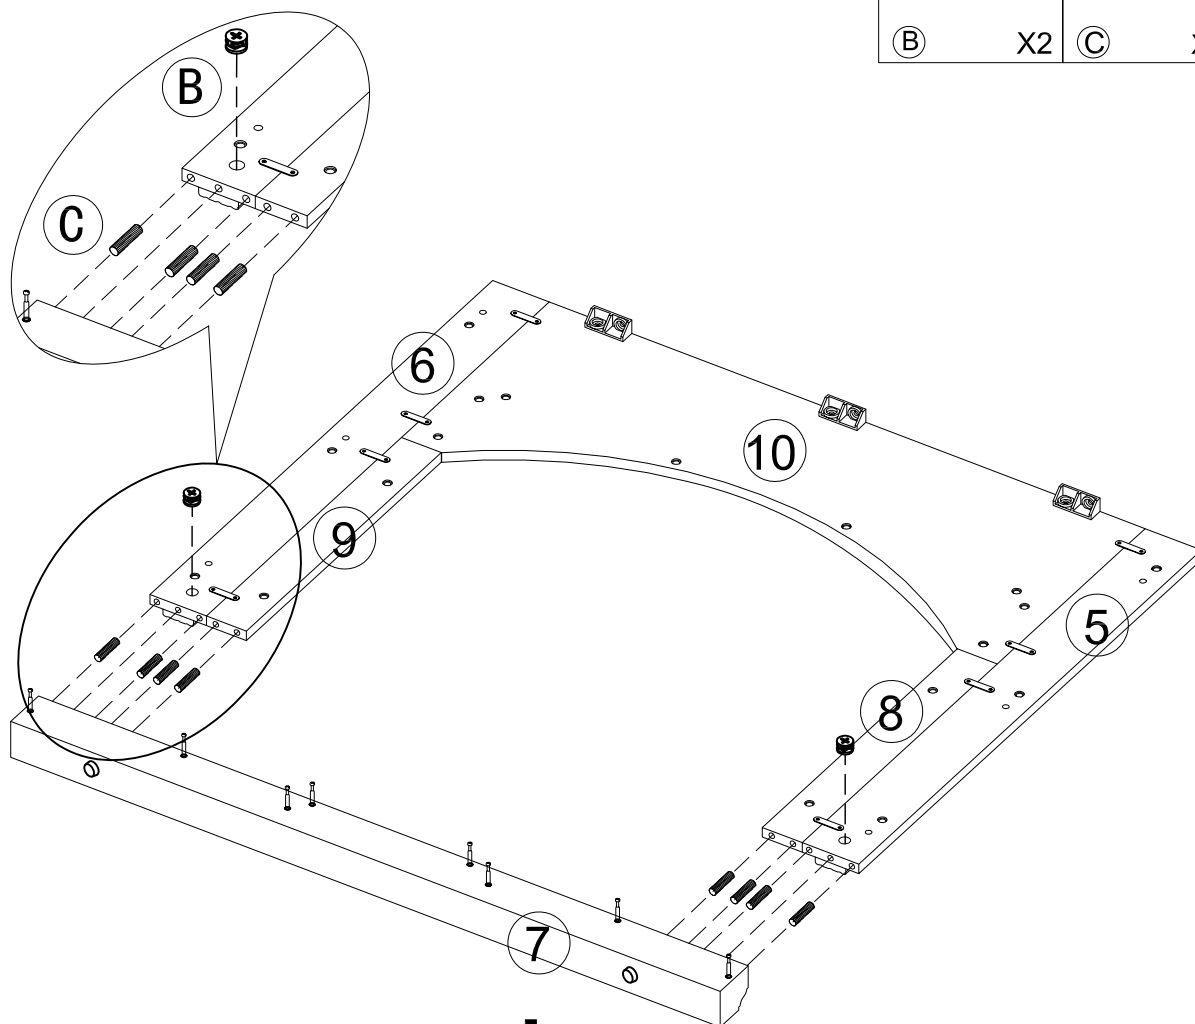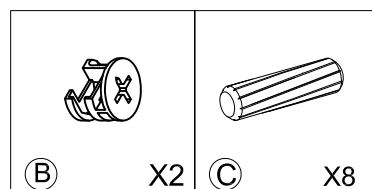

   
 
STEP 19

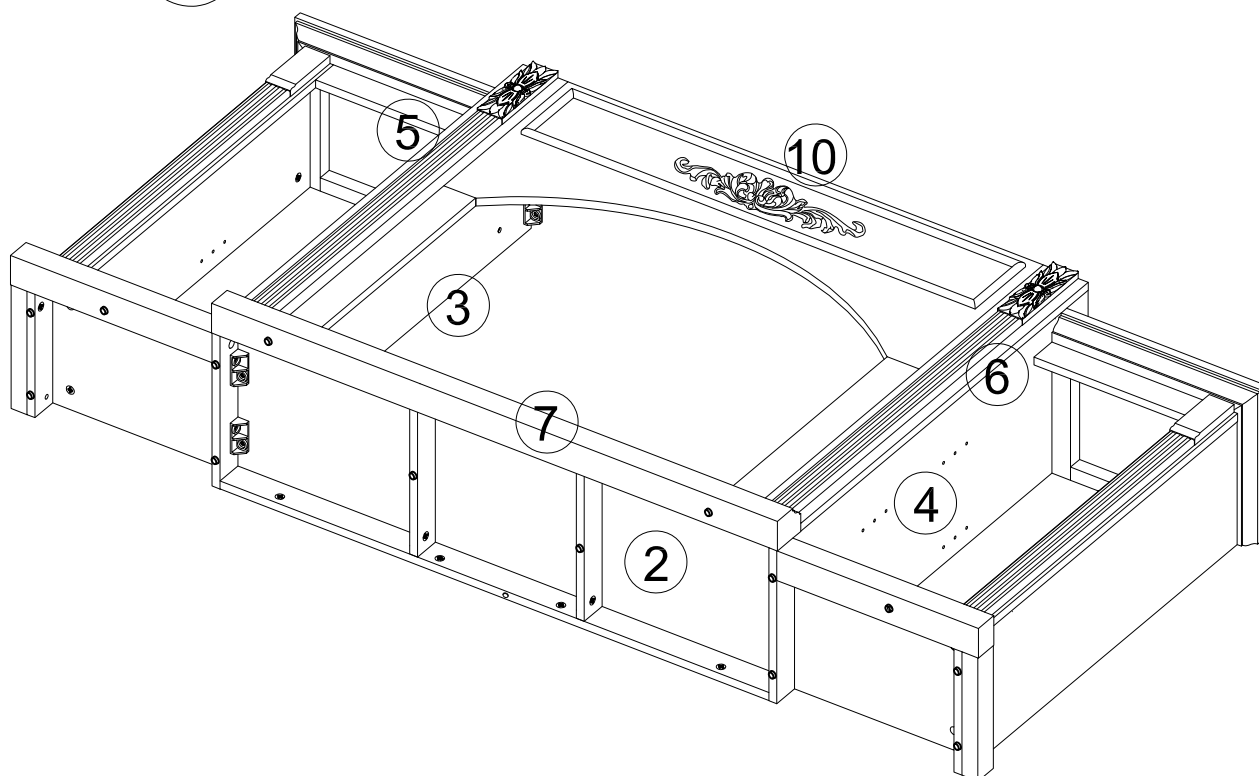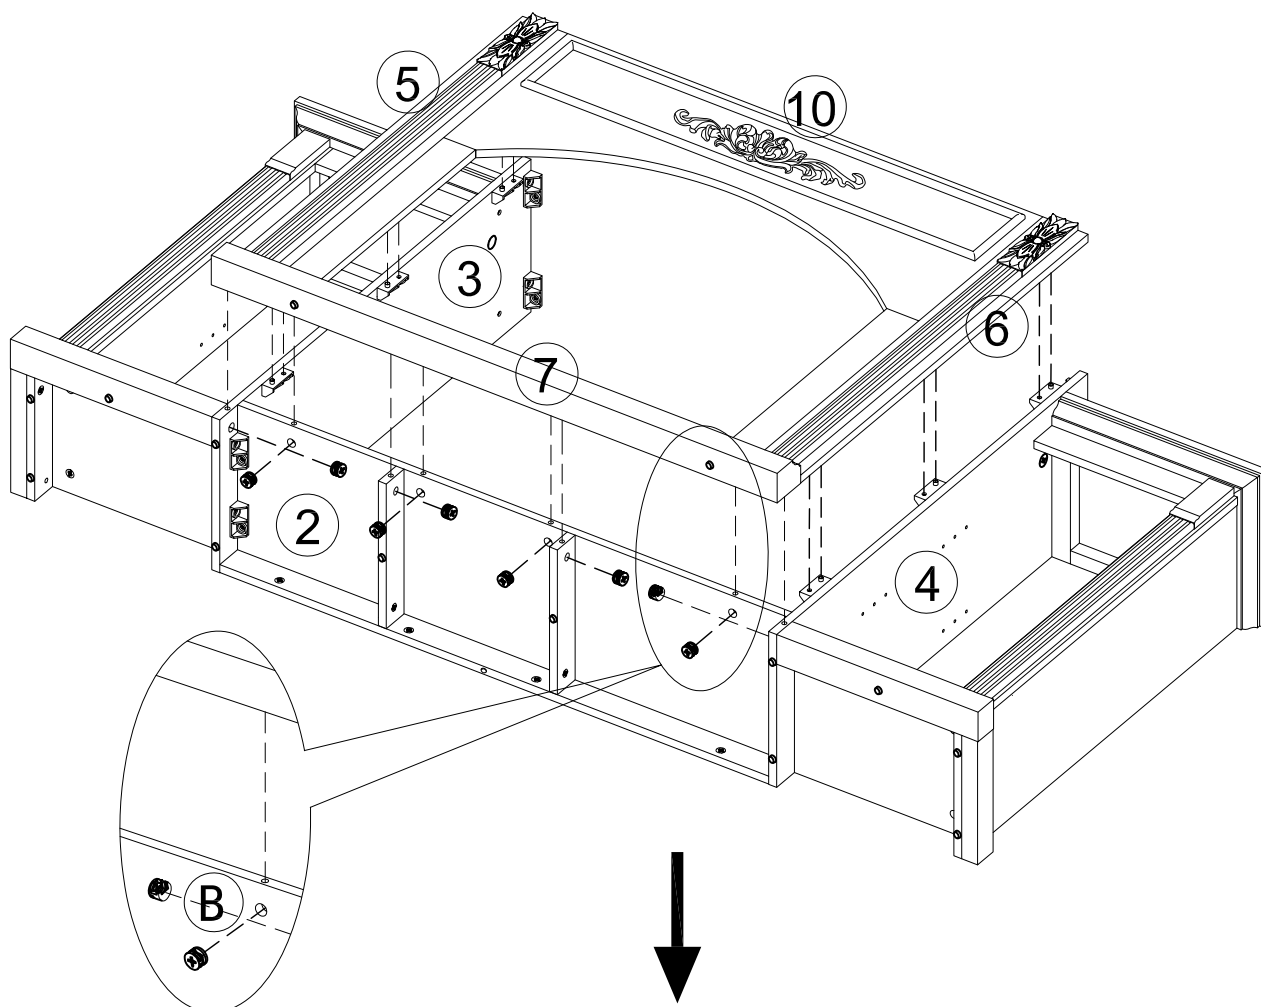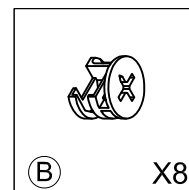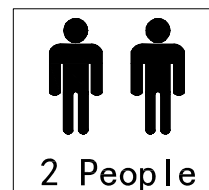

   
STEP 20

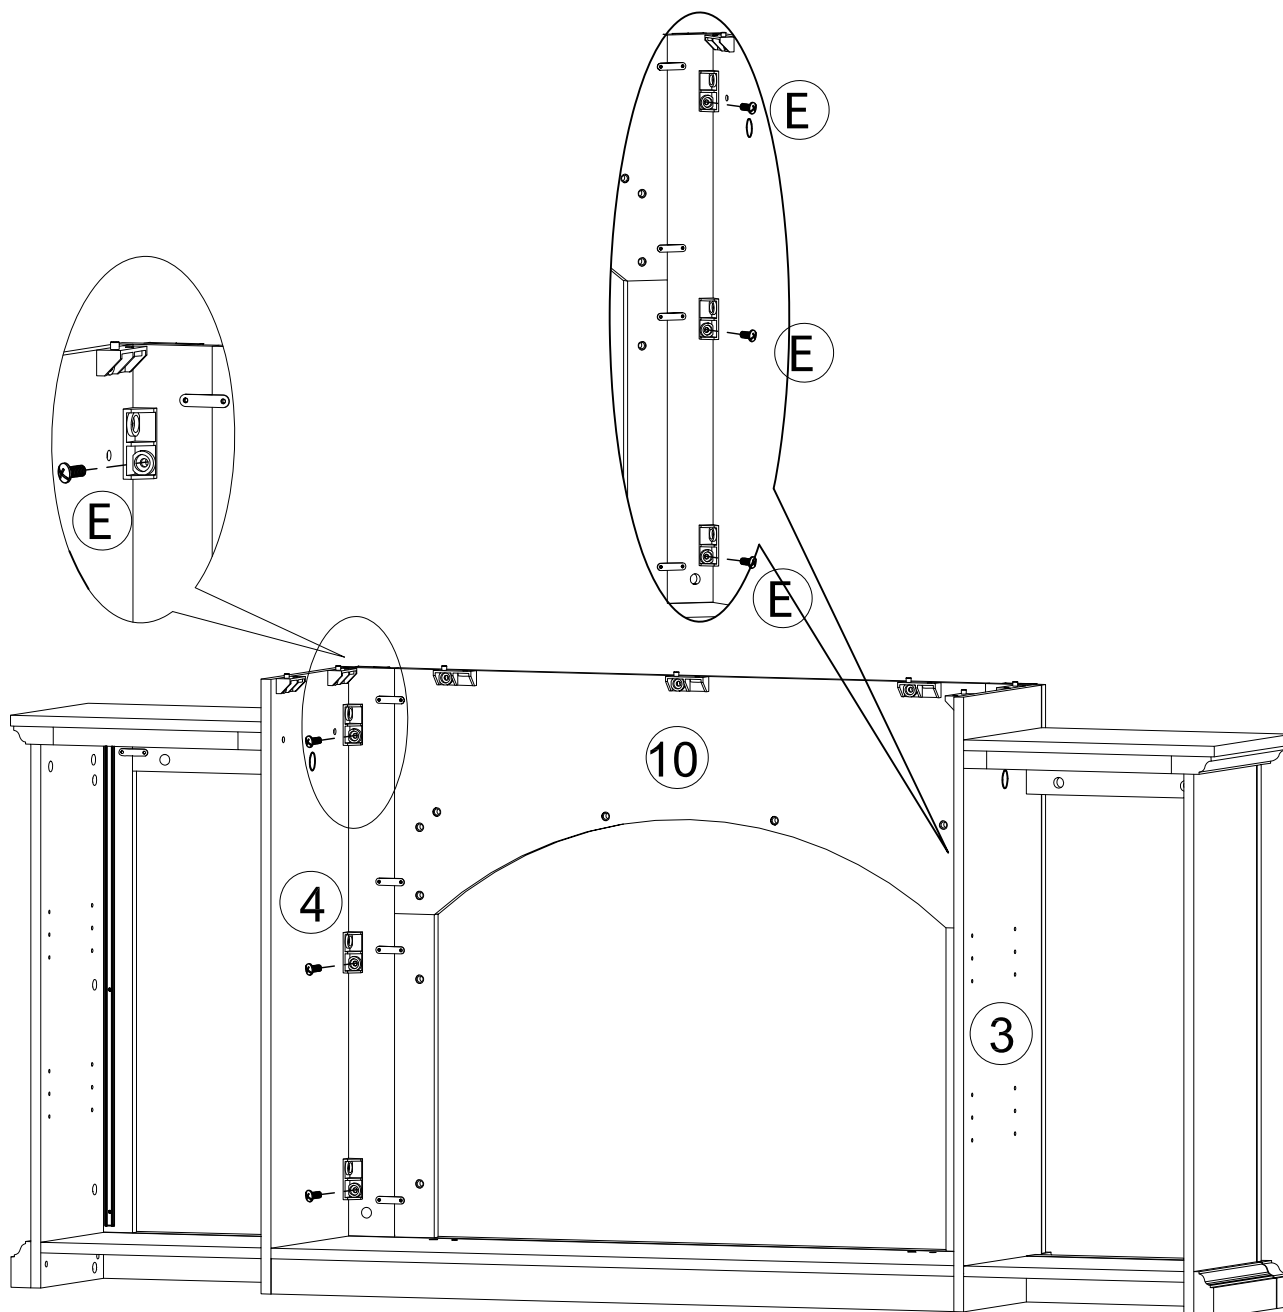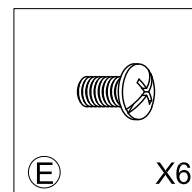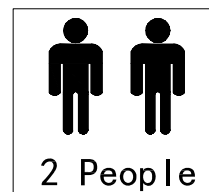


  STEP 21

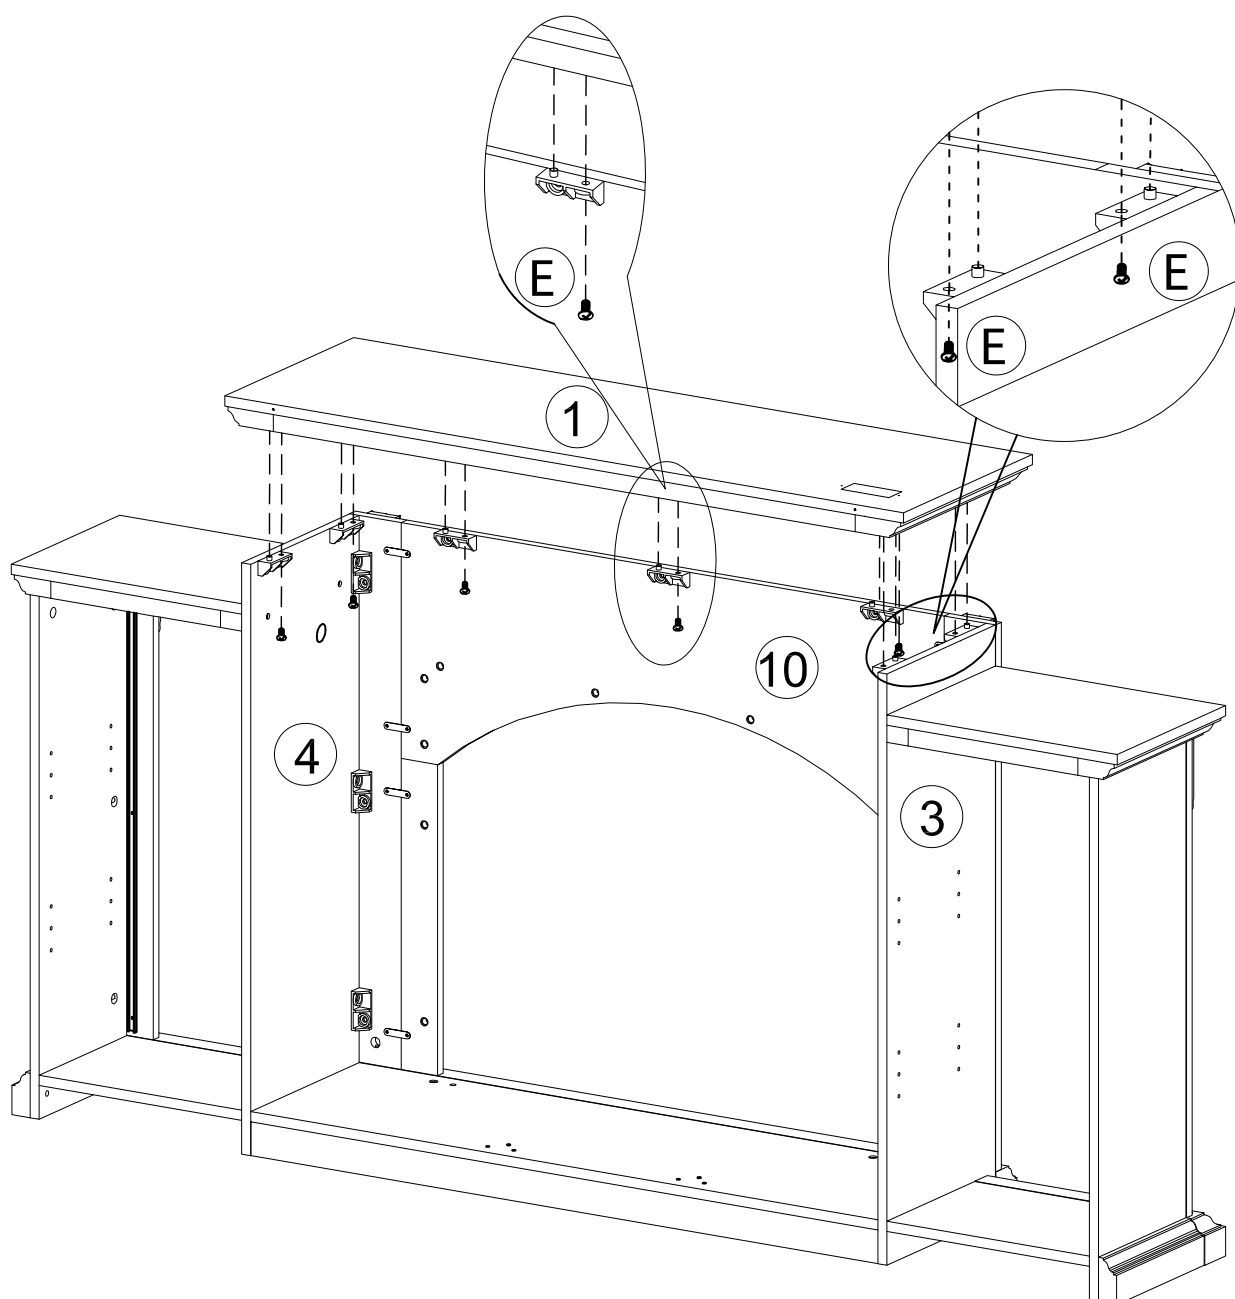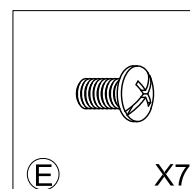

 
STEP 22

				
(C)	(D)	(E)	(F)	(G)
X4	X2	X2	X8	X4



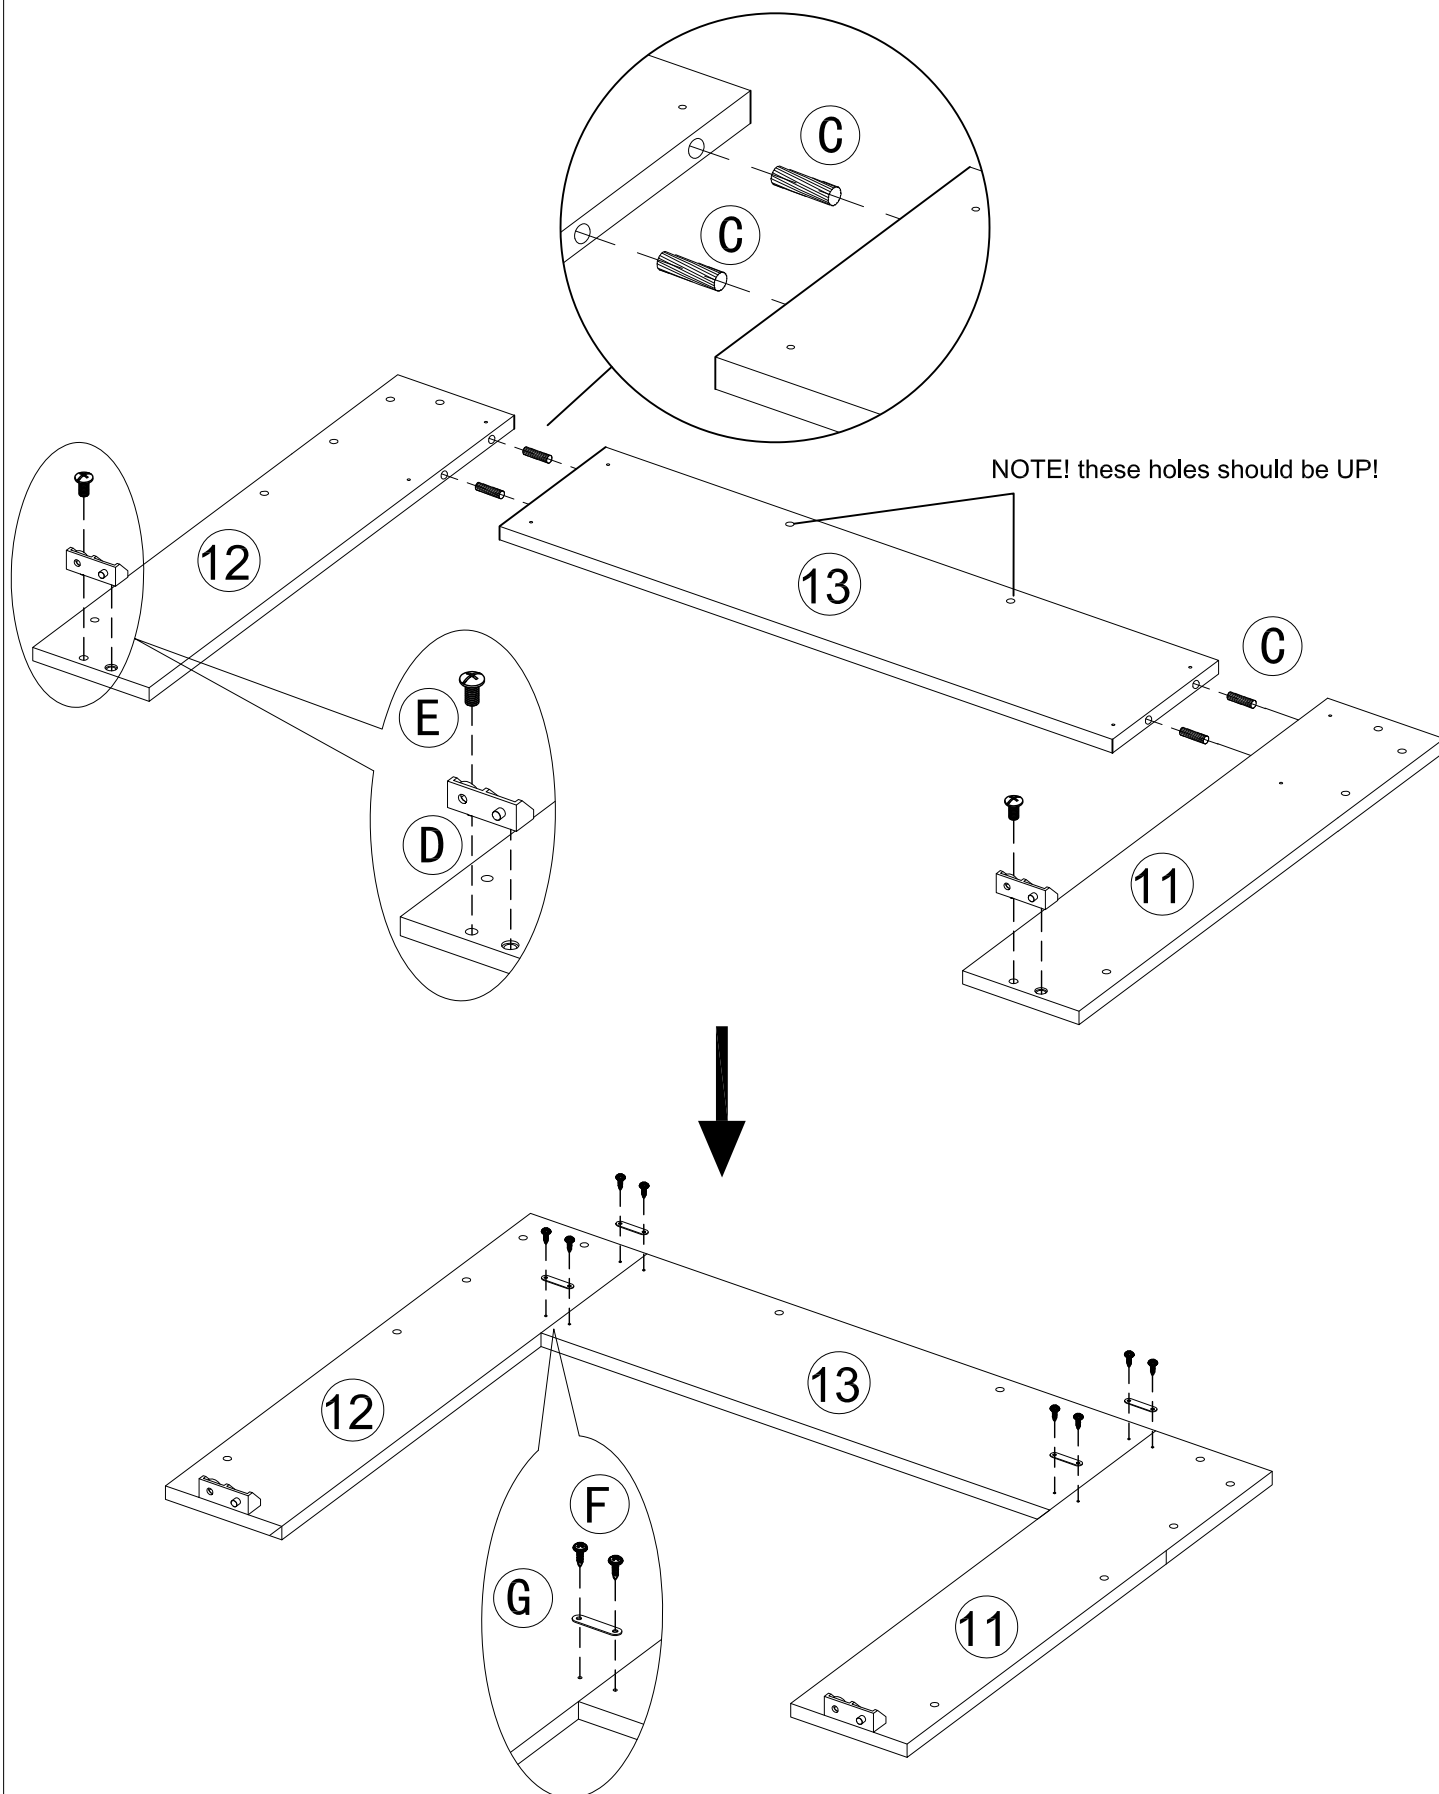 


STEP 23



	
(K) X12	(E) X2

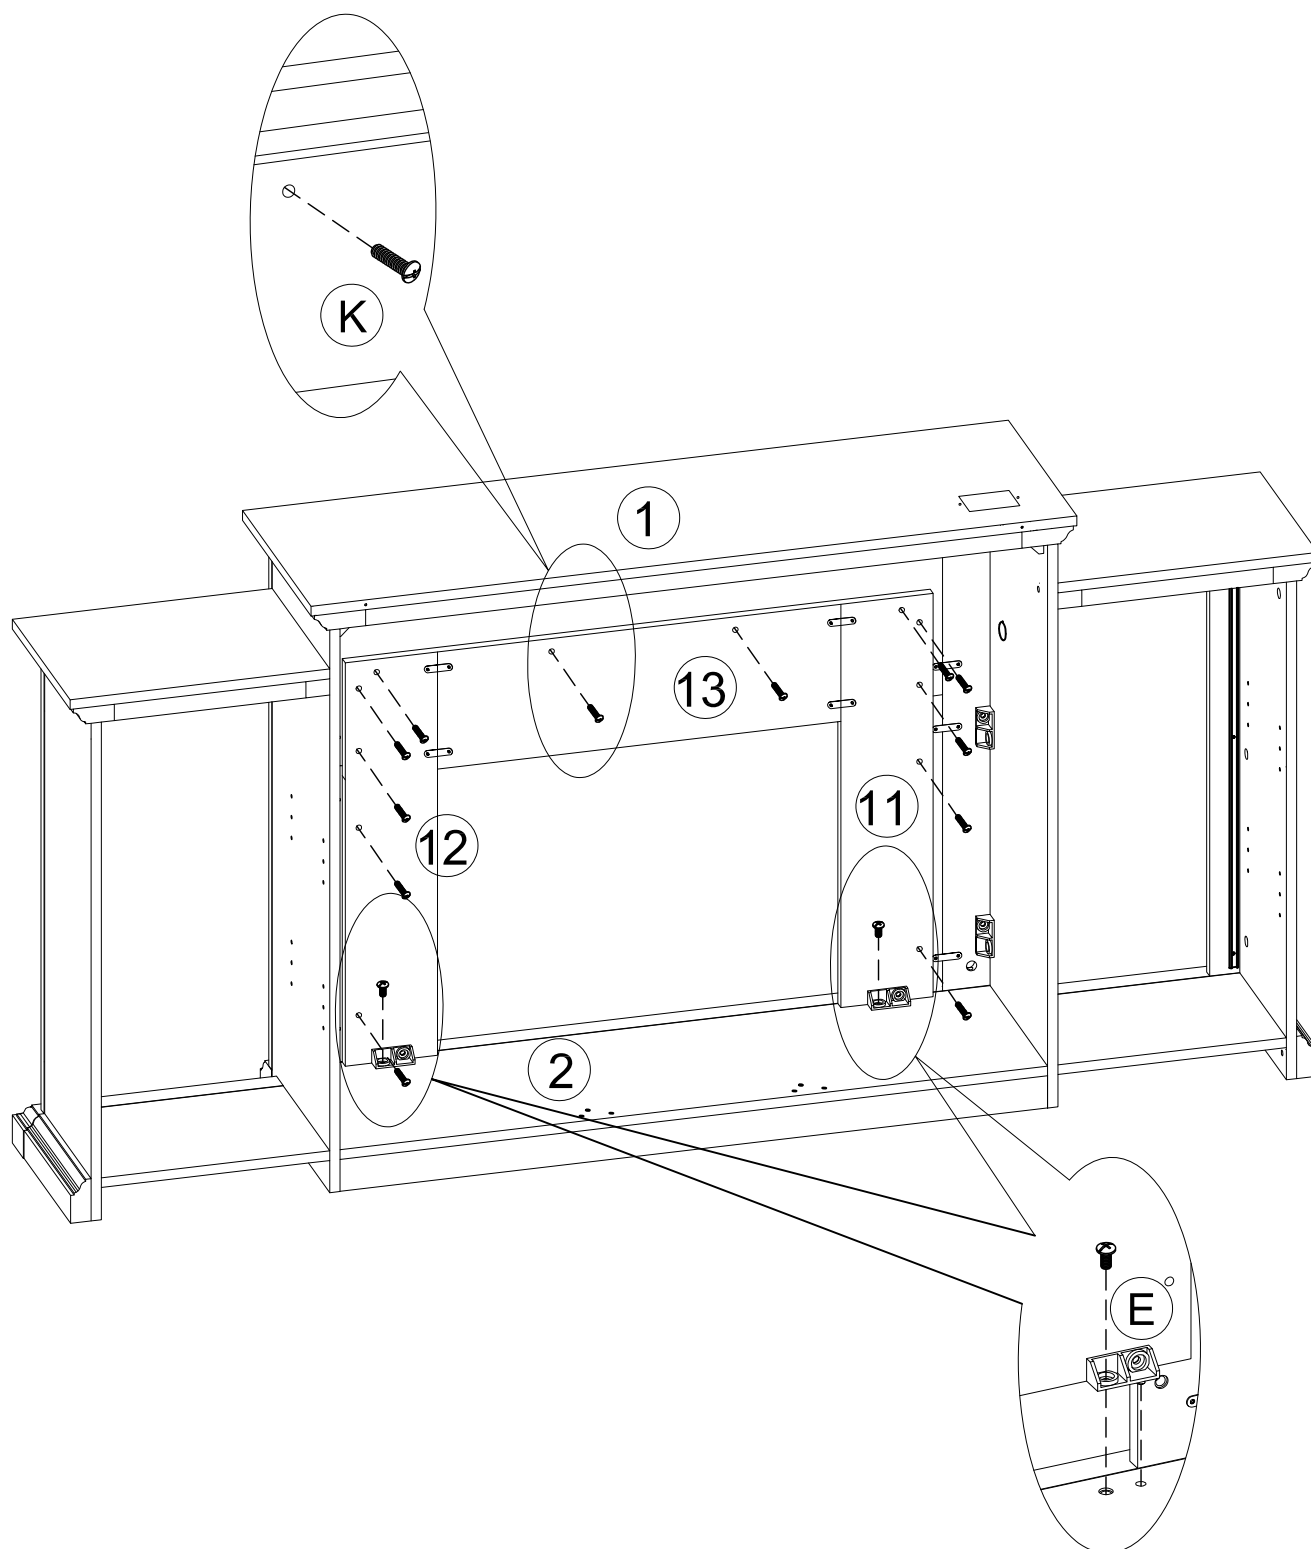 

   STEP 24

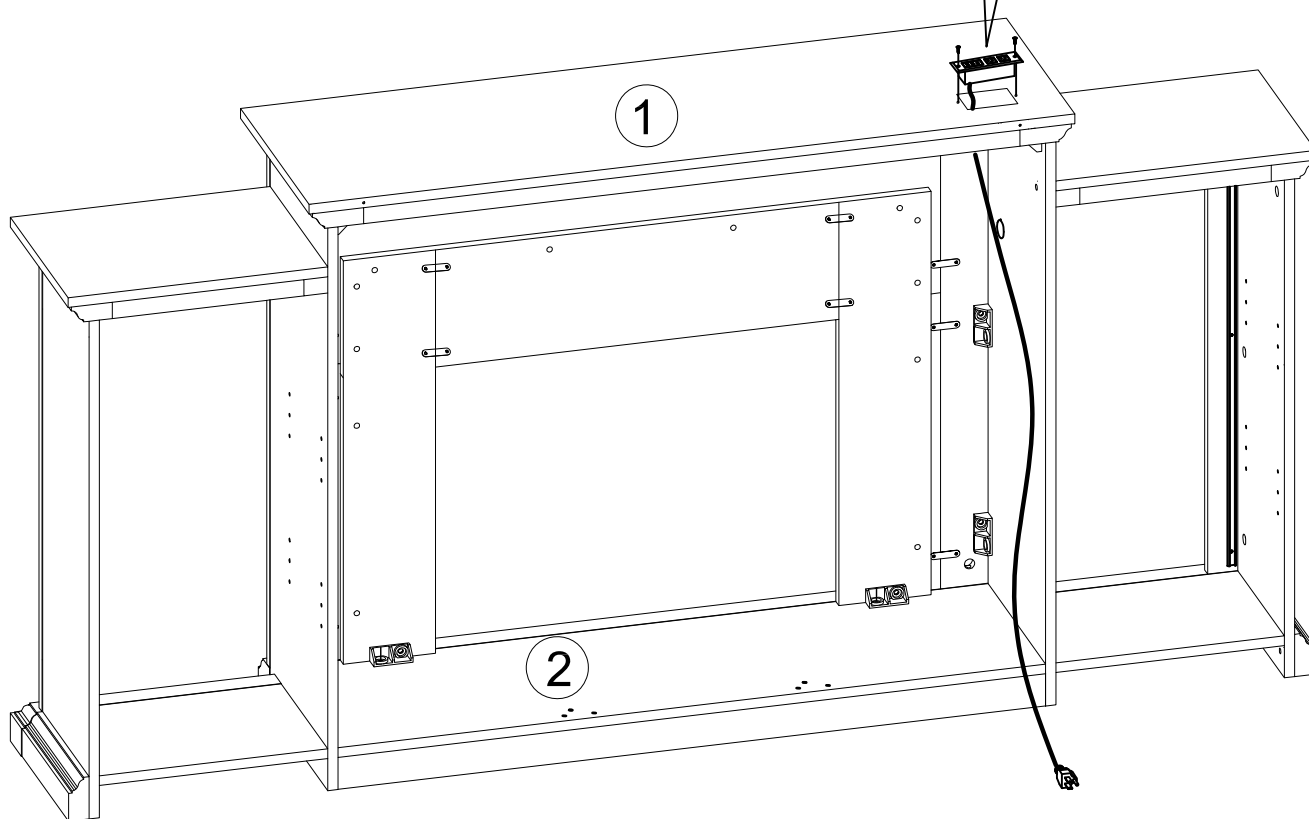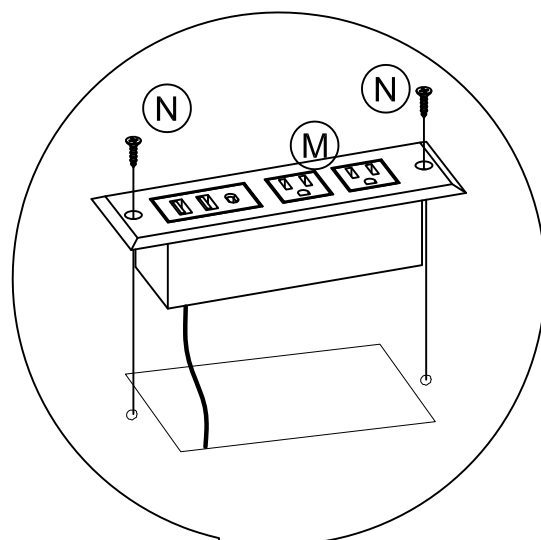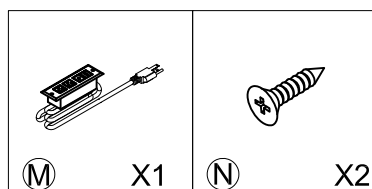

  STEP 25

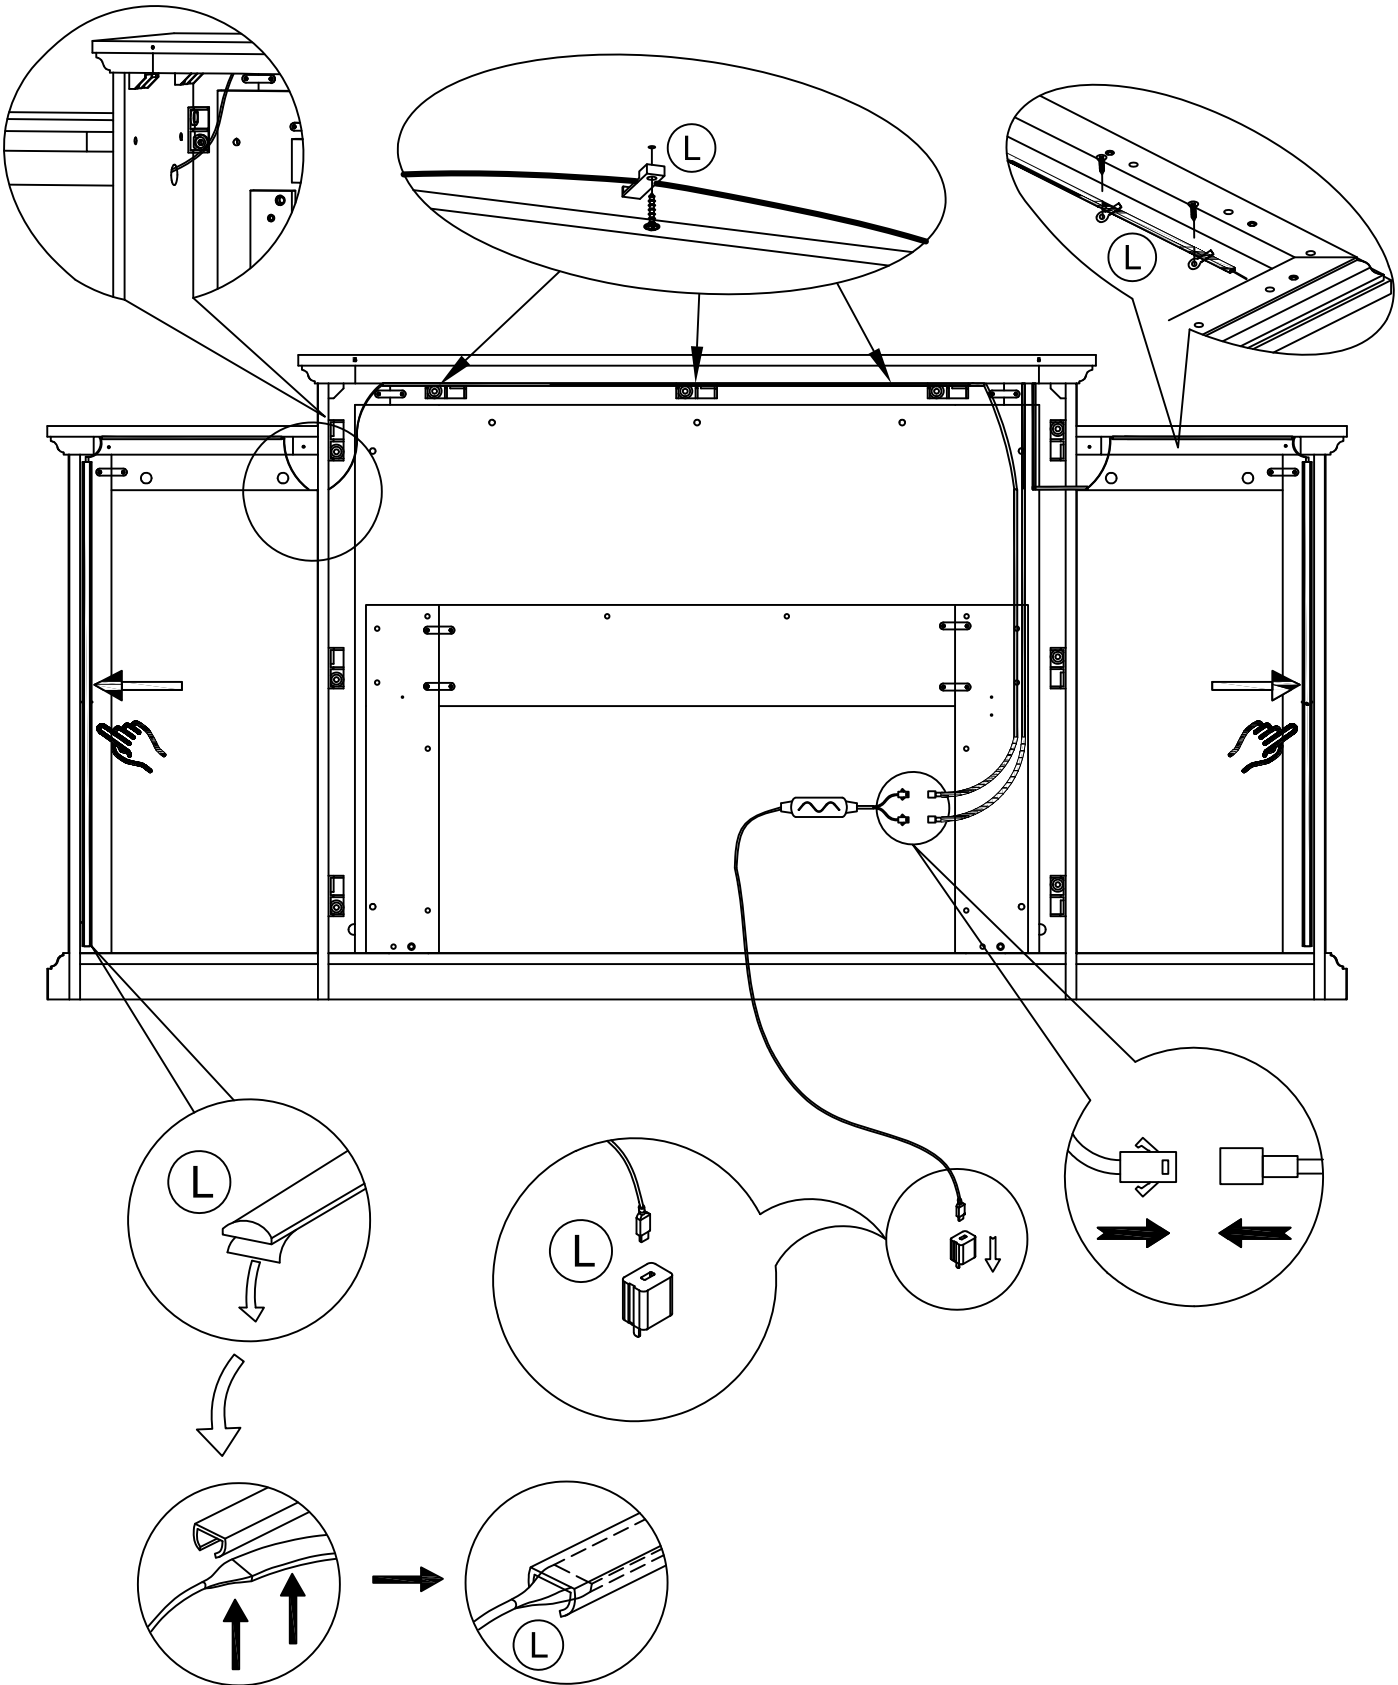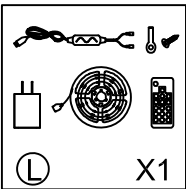


STEP 26





(F)

 X32

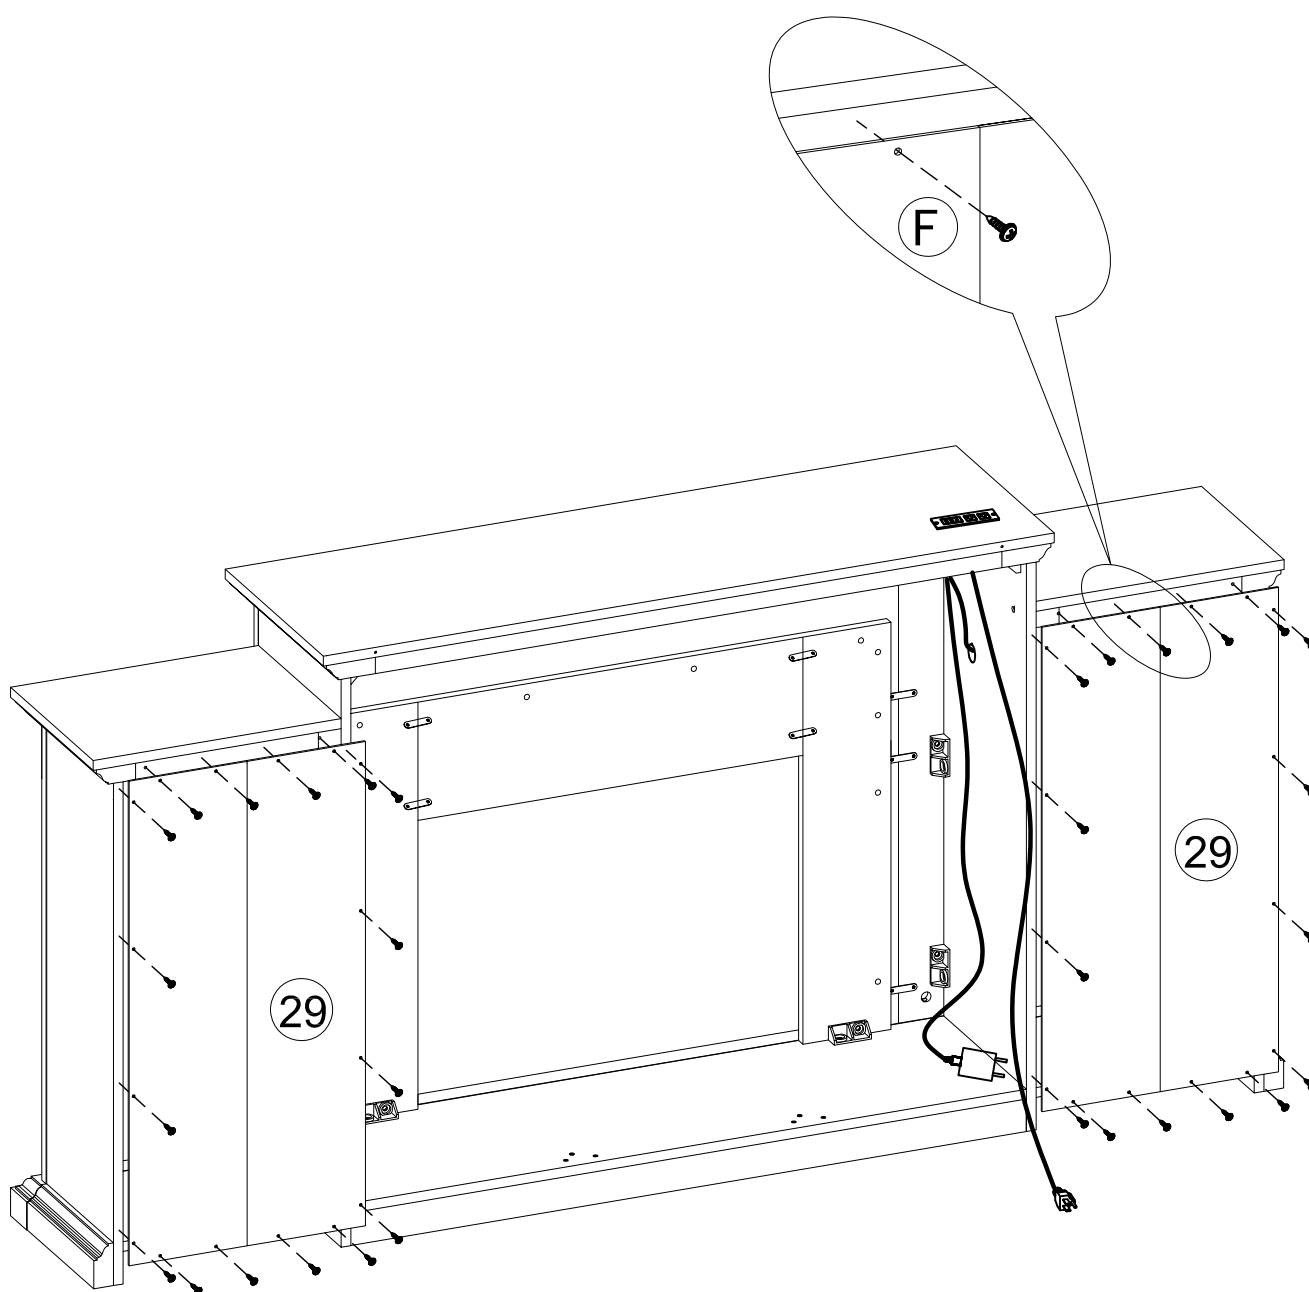


  STEP 27

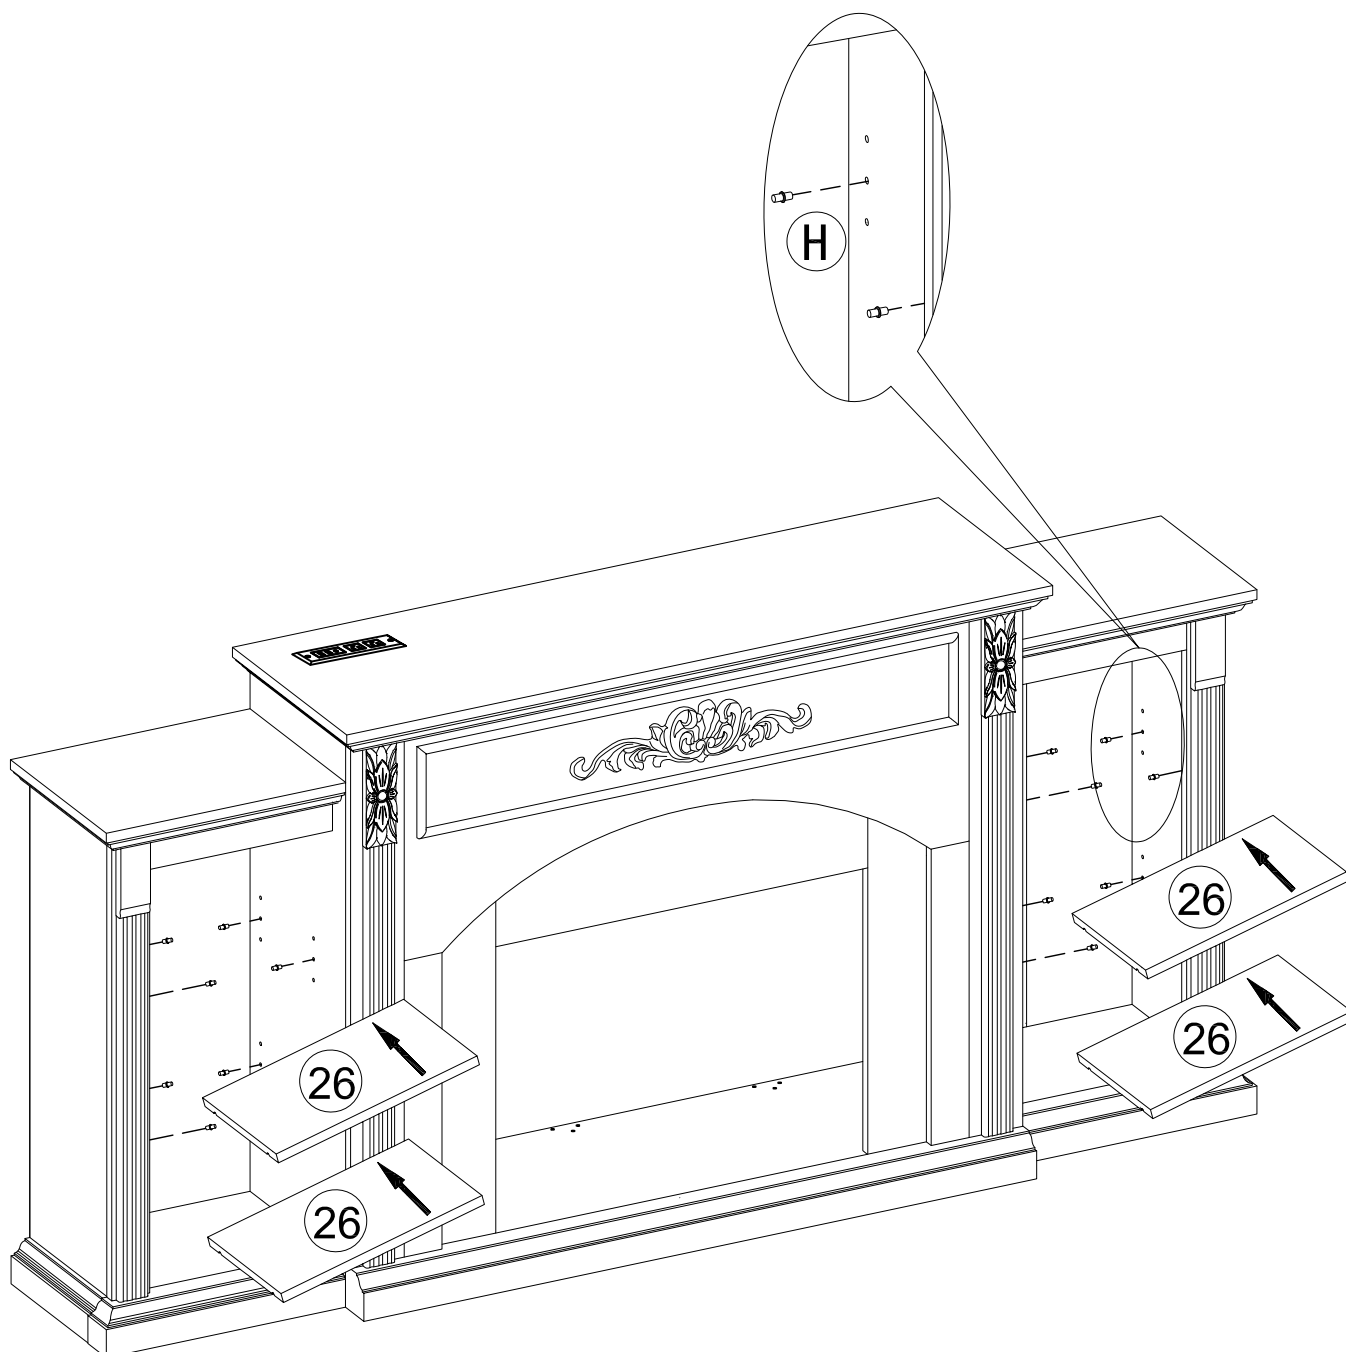
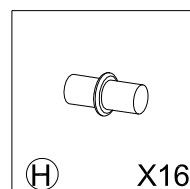


STEP 28


 
- In this step, we need to put the fireplace insert into the stand as instruction (fireplace insert) shows.
- Make sure we fix the insert properly then move to the next step.

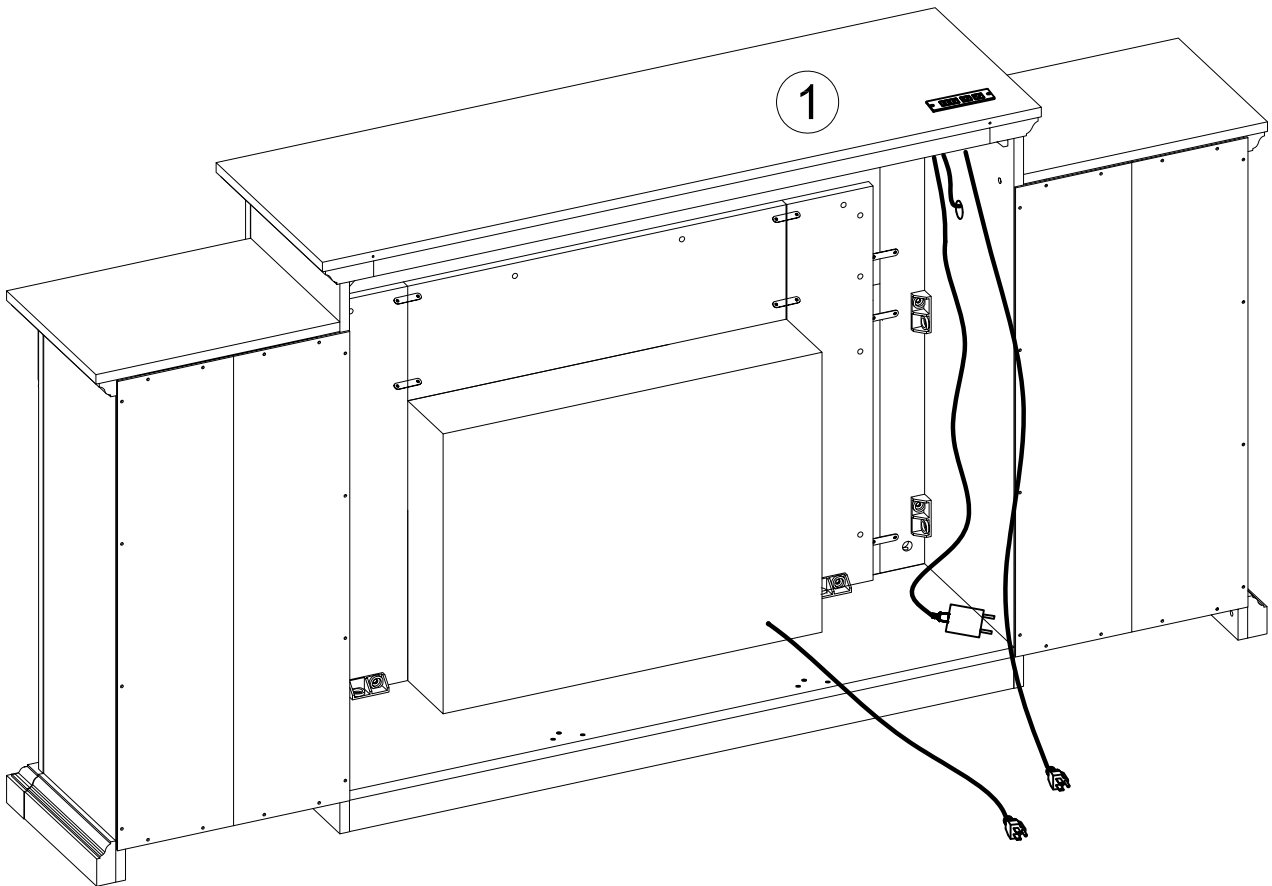

  STEP 29

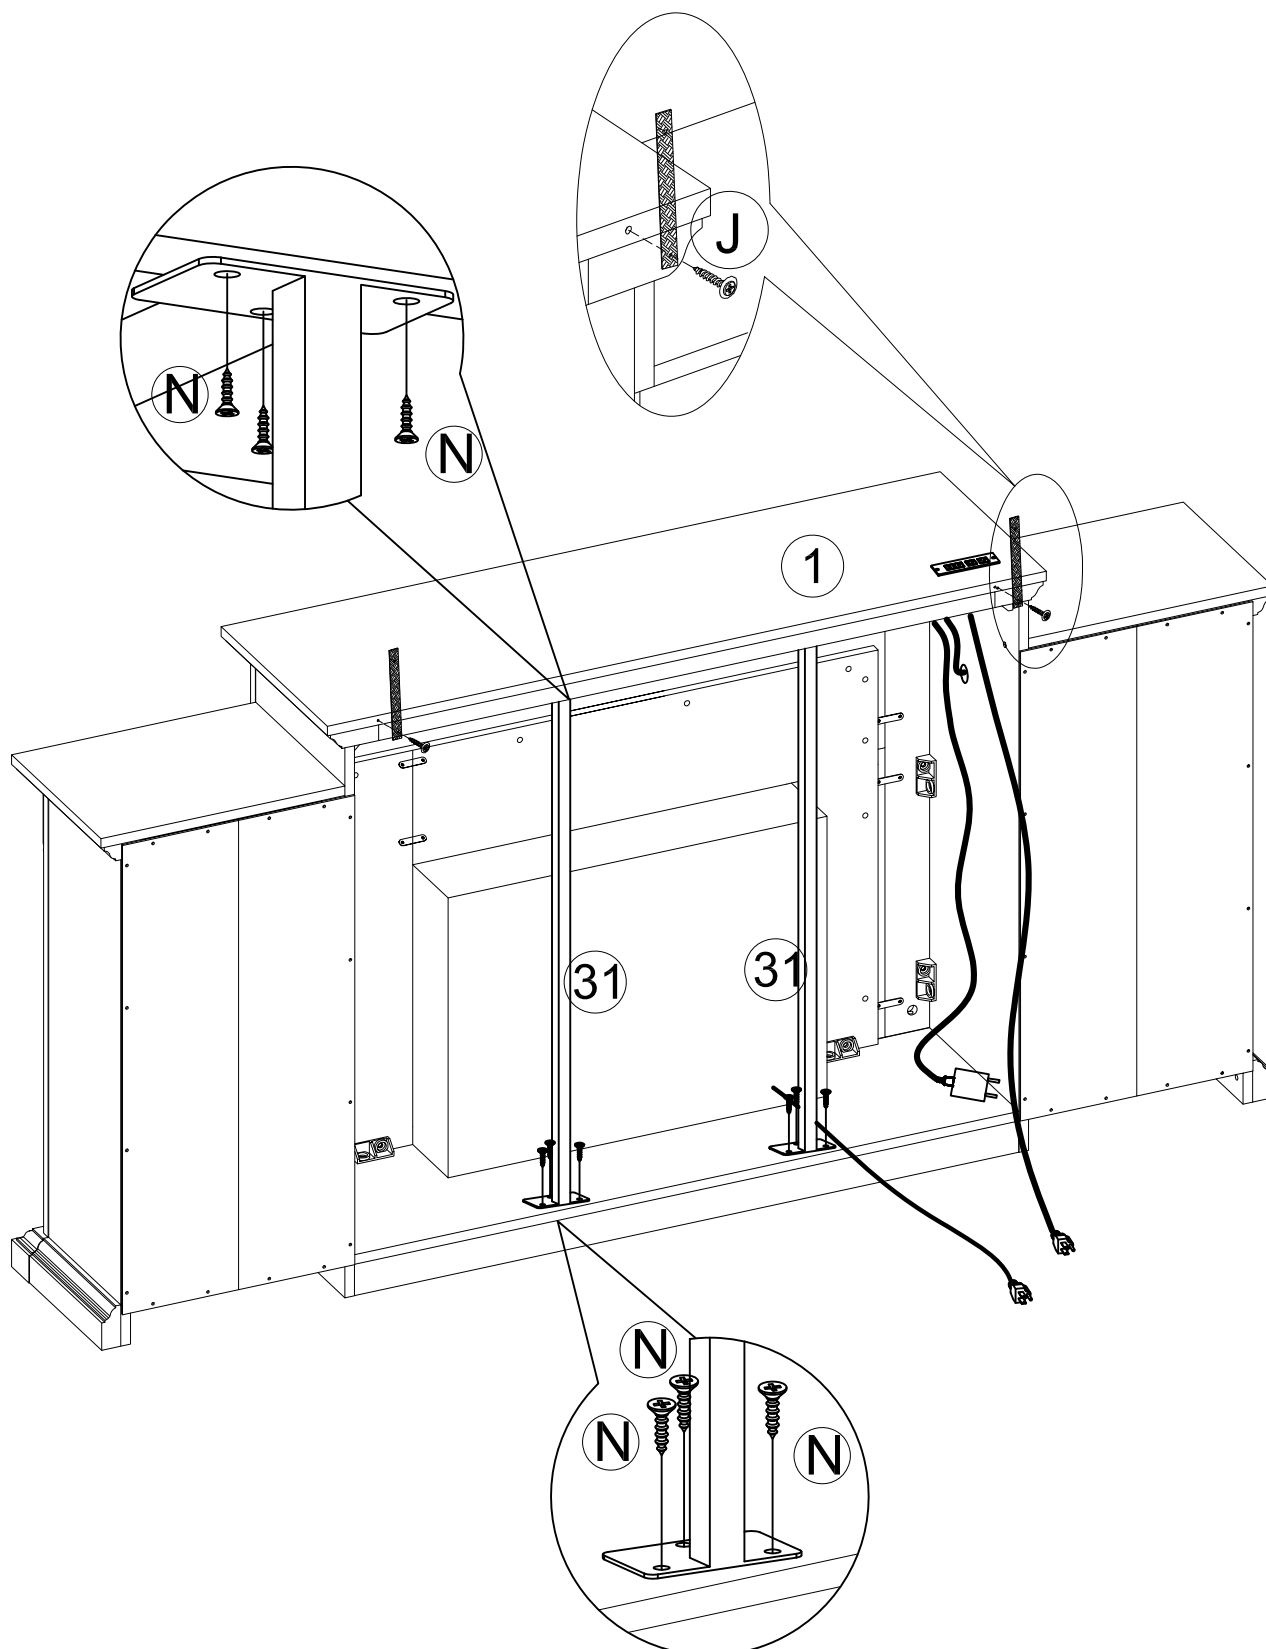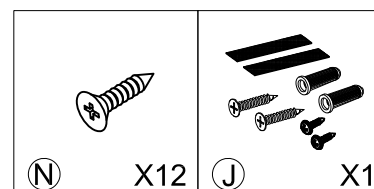

  STEP 30

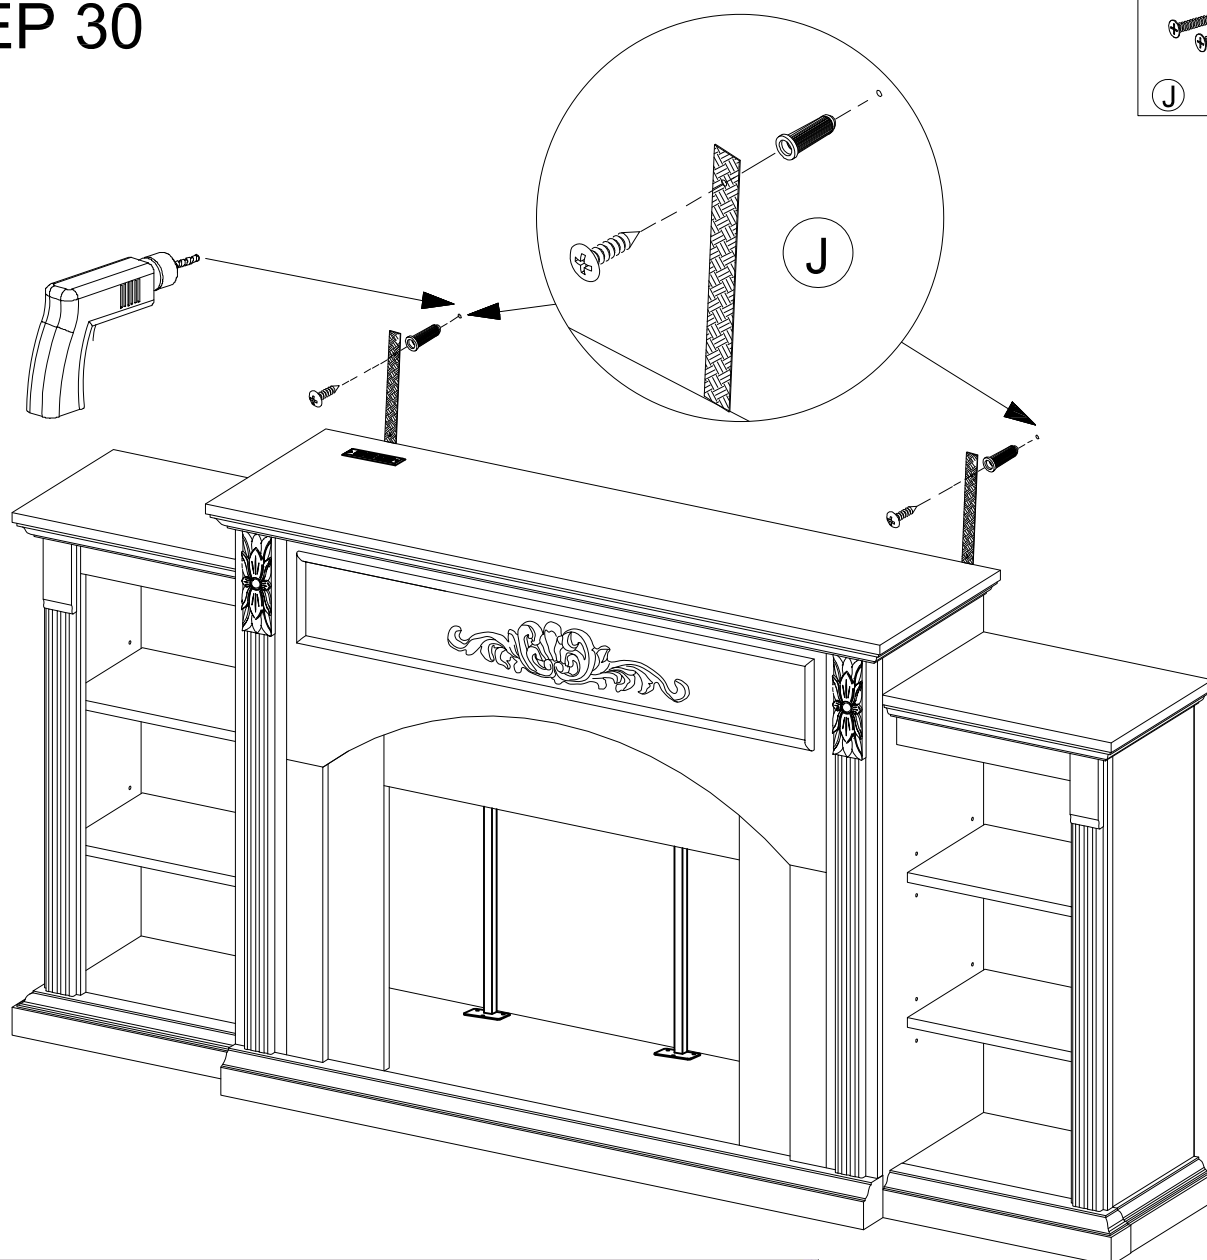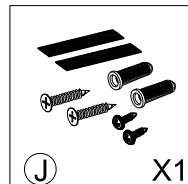

⚠ WARNING



**Children have died from furniture tipover.
To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

