



INSTRUCTION MANUAL

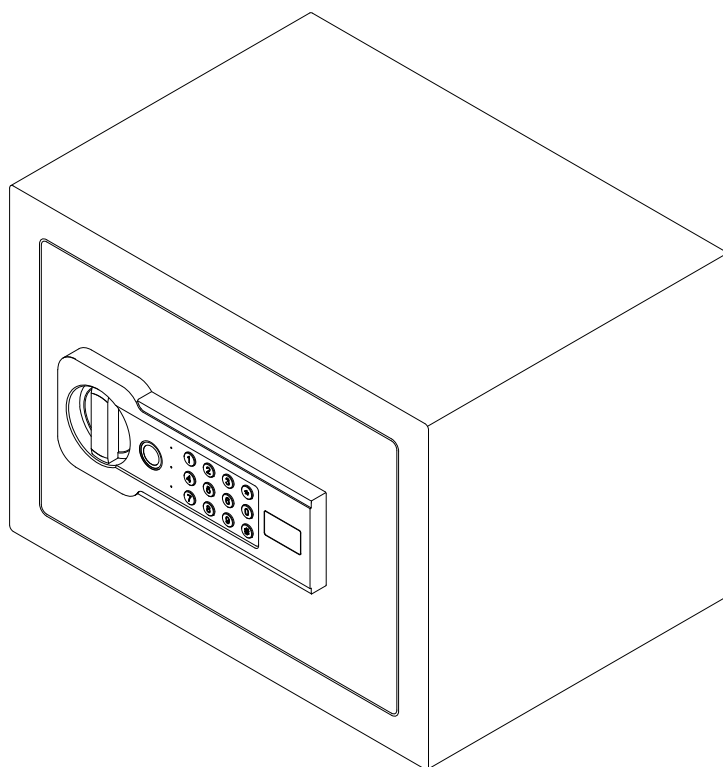


Never keep emergency keys in your safe !

Component Description


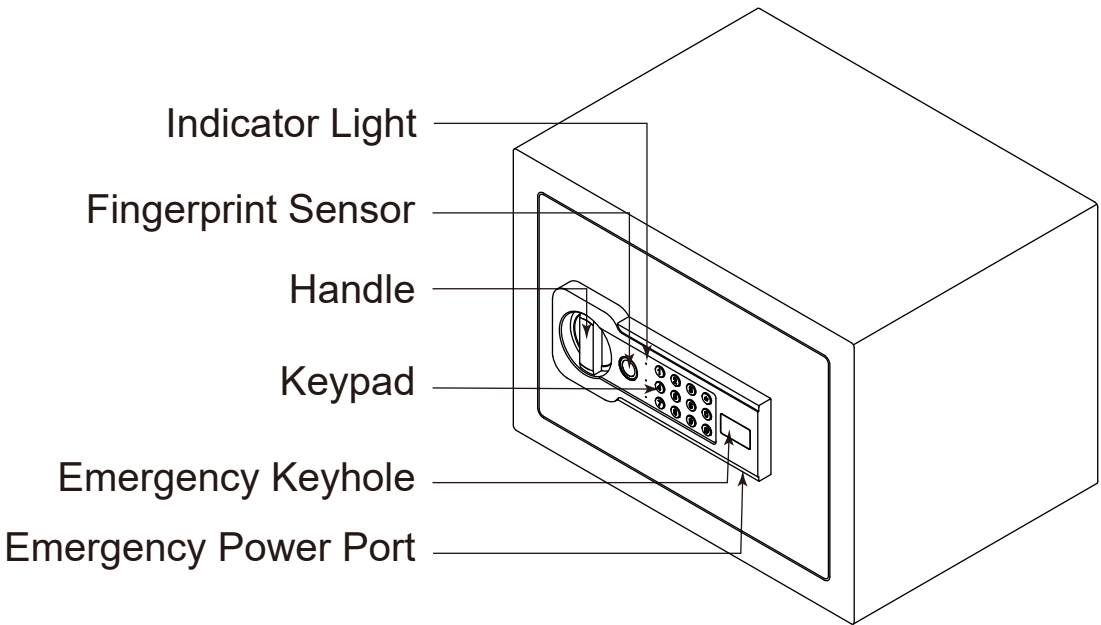


Schematic Drawing of Control Panel

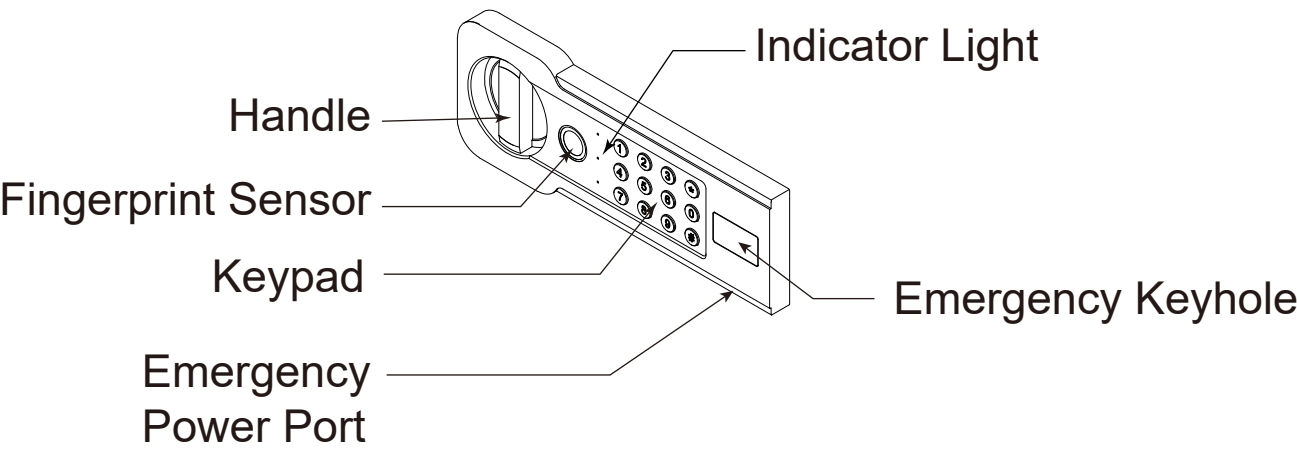


Thank you for choosing our product! Please take a moment to carefully read the following pages and familiarize yourself with the proper operating procedures.

Parts List

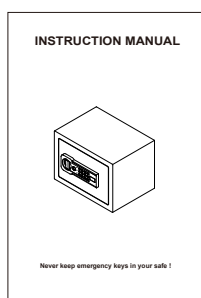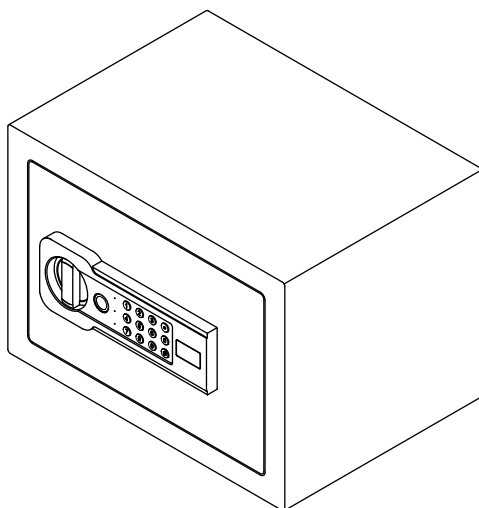

Instruction Manual*1

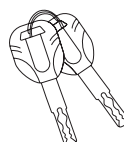

Emergency Key*2

Lighting

When entering the correct password or correct fingerprint to open the door, the lighting inside the box will be on for 25 seconds.

Operation Manual

1、Unlocking

- ① Enter the correct user password. The electromagnetic lock will disengage for 6 seconds, and the green LED will stay on for 6 seconds, allowing normal unlocking.
(Default factory password: 1234)
- ② Enter a registered fingerprint. The electromagnetic lock will disengage for 6 seconds, and the green LED will stay on for 6 seconds, allowing normal unlocking.
(Unregistered fingerprints cannot unlock the safe.)

Strong Recommendation:

After unpacking, install the batteries first, then register fingerprints and change the password before using the product normally.

2、Setting the User Password

Enter the correct user password and press the # key. After hearing two short beeps, the green LED will stay on for 6 seconds and the electromagnetic lock will disengage for 6 seconds.

During these 6 seconds, press the * key once. After hearing two short beeps and seeing the yellow LED flash twice, enter a 3–8 digit password within 10 seconds and press the # key.

After hearing two short beeps and seeing the green LED flash twice, the new user password has been successfully set.

Note:

If the operation is incorrect (less than 3 digits or more than 8 digits), the buzzer will beep three times and the yellow LED will flash three times before exiting the setup process.

3、Fingerprint Registration

(Unregistered fingerprints cannot unlock the safe.)
(Up to 28 fingerprints can be registered.)

Press the setup button once. After hearing two short beeps and seeing the yellow LED flash twice, scan the same fingerprint five consecutive times.

After successful registration, you will hear two short beeps and the green LED will flash twice, indicating that the fingerprint has been successfully registered.

Note:

If the operation is incorrect or the registration fails, the buzzer will beep three times and the yellow LED will flash three times.

4、 Restore Factory Settings

Press and hold the reset button for 3 seconds until you hear one long beep and see the green LED light up once. This indicates the system has been restored to factory settings:

Password: 1234

Fingerprints: Cleared

5、 Mute Function

Press and hold the 1 key for 3 seconds until the green LED flashes twice, indicating that mute mode has been enabled.

Note:

To turn the sound back on, there are two methods:

- ① Press and hold the 1 key for 3 seconds until you hear two short beeps and see the green LED flash twice. This indicates that sound has been restored.
- ② 2)Power off the device and restart it. The sound will return to normal automatically.

6、 Alarm Function

- ① After entering the wrong password three consecutive times, the alarm will sound for 20 seconds and the system will lock for 20 seconds. (Operations are disabled during the lock period.)
- ② After entering the wrong fingerprint five consecutive times, the alarm will sound for 20 seconds. During the alarm period, the safe can still be unlocked using the correct password or fingerprint.
- ③ Press and hold the * key for 3 seconds until you hear two short beeps and see the green LED flash twice. This indicates that the vibration alarm function has been activated. When vibration alarm is enabled, shaking the safe will trigger a 20-second alarm. During the alarm period, the correct password or fingerprint can be used to unlock the safe and disable the alarm.

7、Interior Lighting Function

When the correct password or fingerprint is entered to unlock the safe, the interior light will remain on for 25 seconds.

8、Low Battery Warning

After entering the correct password or fingerprint, if the buzzer beeps five consecutive times after the electromagnetic lock disengages, it indicates low battery power. Please replace the batteries promptly.

Product Specifications

- Operating Voltage: 4.5–6V
- Low Voltage Warning: 4.8V (+/-0.2V)
- Operating Current: 380mA (+/-20%)
- Standby Current: 25uA (+/-20%)

After-sales service

Hello there!

We're excited to offer you seamless service.

- ① Comprehensive installation videos
- ② Activate warranty options
- ③ Expert post-sales support
- ④ Exclusive discounts
- ⑤ And more additional services



**Our goal is to enhance your shopping experience.
We look forward to hearing from you.**

whenever you need us!

Thank you!
