

封面

12.5 cm

19 cm

LED INSTRUCTIONS

Pressing the timer button can turn on the timer, the GREEN timer indicator LED is on. Pressing again can turn off the timer, the GREEN timer indicator LED is off. 6 hours on & 18 hours off

Power on: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100

Power off: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100

SMART REMOTE CONTROL

SINCERE GRATITUDE

As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, please contact us and we guarantee you complete satisfaction. Please attach your user name, order ID, where you buy this product, details of your problem, you can mark the broken/missing parts on the instruction book, and take a photo to show us, so that we can assist you better.

STORAGE:

Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.

Assembly Instruction

New Year

封底

NOTICE

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- If you use other light product to decorate the Christmas tree, please use it safely.
- Do not use this product for other than its intended use.

HARDWARE

1 BASE SCREW
3 PCS

LADDER (REQUIRED)
2 PERSON ASSEMBLY
UP TO 80 MIN ASSEMBLY

PARTS

A TOP SECTION (1 PC)
B MIDDLE SECTION (1 PC) FOR 5FT/6FT/7FT
B2 MIDDLE SECTION II (1 PC) FOR 7.5FT/8FT/9FT
B3 MIDDLE SECTION III (1 PC) ONLY FOR 12FT TREE
B4 MIDDLE SECTION IV (1 PC) ONLY FOR 12FT TREE
C BOTTOM SECTION (1 PC)
D BASE (1 PC)

NOTE: Wires may come wrapped around frame pieces. Locate and unwrap wires before assembly.

Please be careful at the connection, the interface at the top is different from other parts.

PRODUCT ASSEMBLY

Assemble the tree.
NOTE: Bottom section is wider than the middle section. Make sure sections are arranged in the correct order.

Please remove the caps on the end of the poles before assembly.

FOR 5FT/6FT/7FT TREE FOR 7.5FT/8FT/9FT TREE ONLY FOR 12FT TREE

FLUFFING INSTRUCTIONS

For an optimum appearance and satisfaction, this product MUST be fluffed according to the following directions
NOTE: start from the interior and work outward

- Find the innermost branch tips and pen them in a "V" shape
- Open the next set of (3) branch tips with pointing outward, and one pointing up
- Open the next set of (4) branch tips with two pointing outward, and two in a wide "V" shape.
- Open the next set of (5) branch tips in a five-pointed "star" shape.

FLUFF TIME (APPROXIMATE)

Christmas Trees	15-80 min.
Wreaths	15-30 min.
Garlands	10-20 min.