


ASSEMBLY TIPS

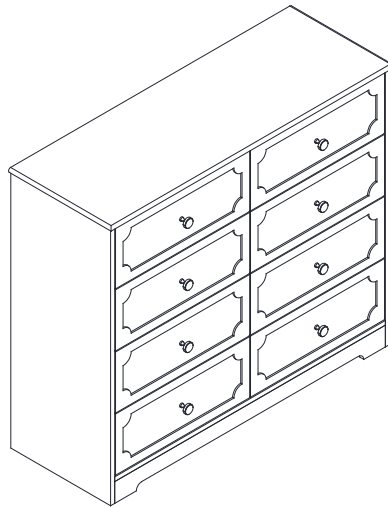

WARNING:




- Do not allow children to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- Avoid sharp objects or corrosive chemicals to prevent damage to the product
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards

Caution:

1. This product is designed for home use and not intended for commercial use.
2. This product contains small components. Please ensure that they are kept away from small children.
3. Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.


IDENTIFY PARTS

One unit per box

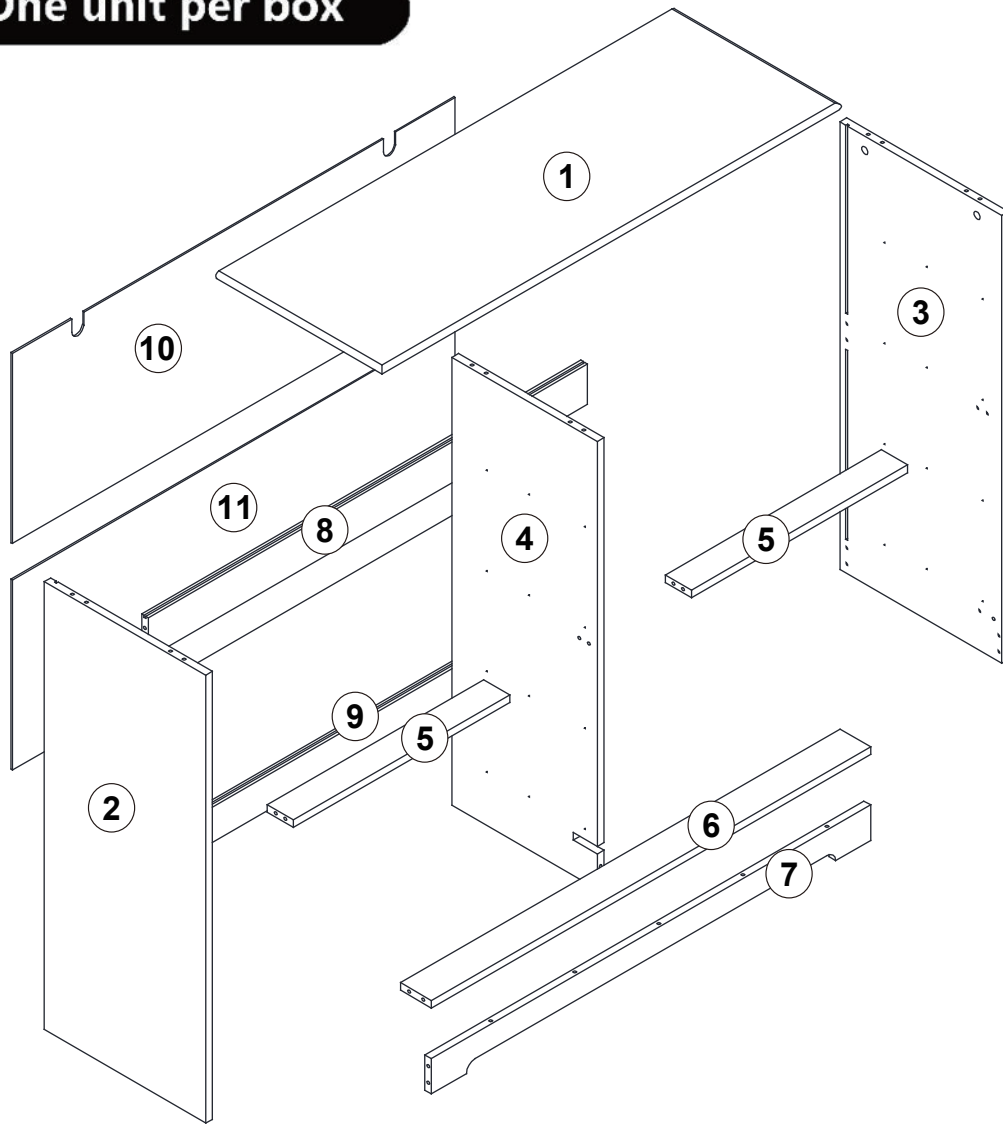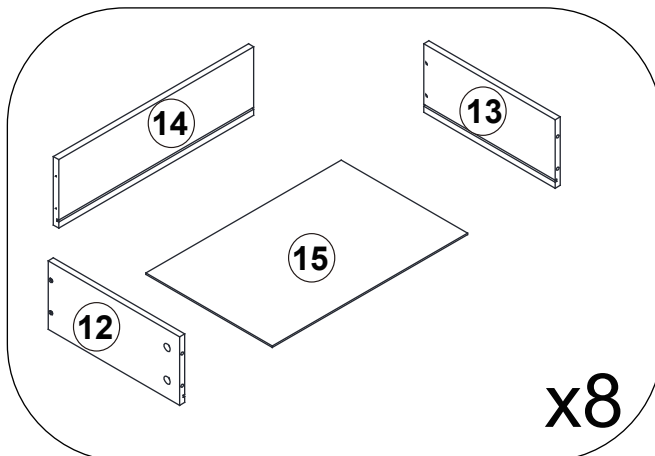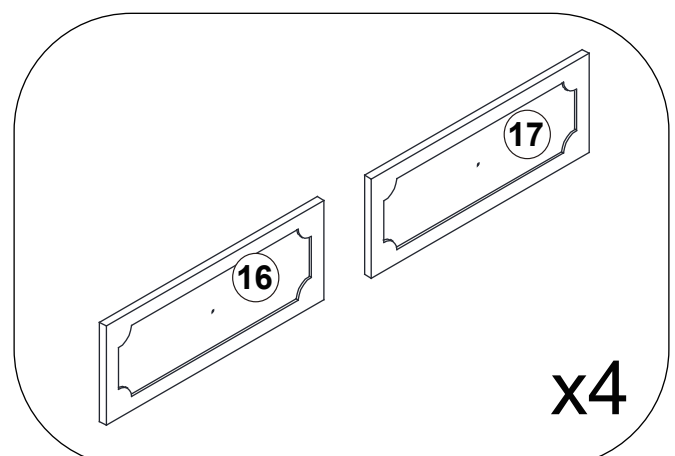

COMPONENTS


1

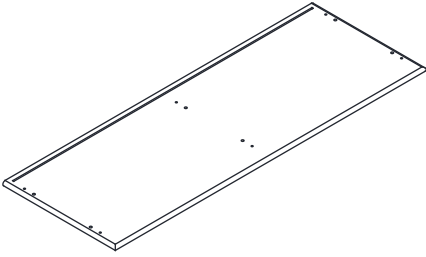

1050x380x15mm

Top Panel x1


2

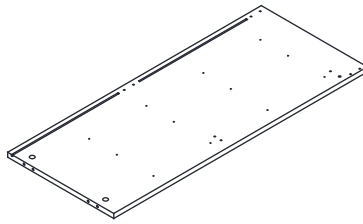

885x370x15mm

Left Side Panel x1


3

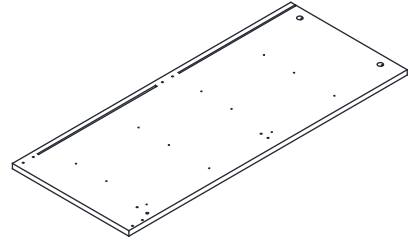

885x370x15mm

Right Side Panel x1


4

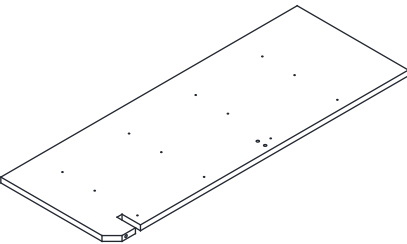

885x332x15mm

Neutral Panel x1


5

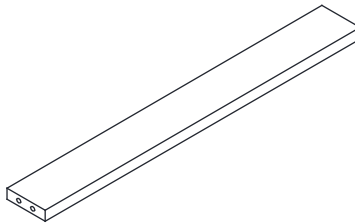

494x60x15mm

Connect the Panel x2


6

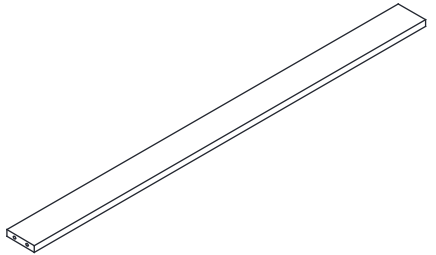

1003x70x15mm

Down the Connectin Panel x1


7

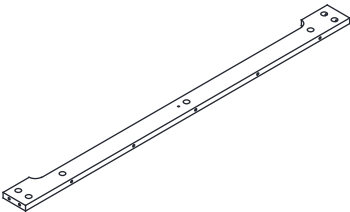

1003x70x15mm

Front skirting strip x1


8

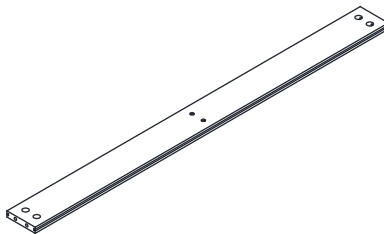

1003x80x15mm

Upper back slate x1

9

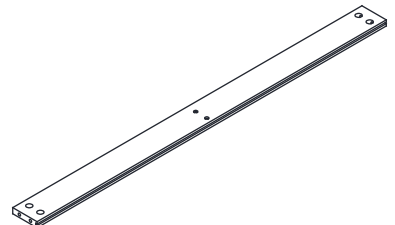


1003x70x15mm

Back pull-down bar x1

COMPONENTS


10

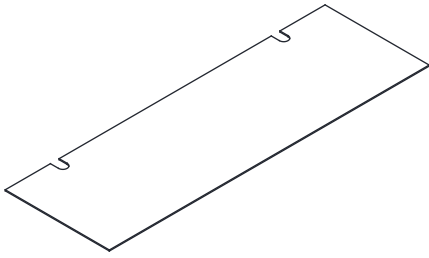

1011x375.5x3mm

Back and backboard x1


11

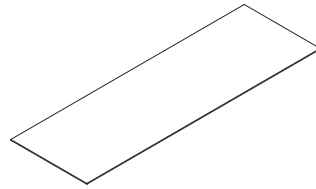

1011x375.5x3mm

Back and lower backbanel x1


12

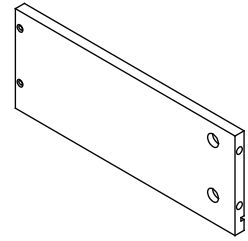

300x135x12mm

Drawer Left Side Panel x8


13

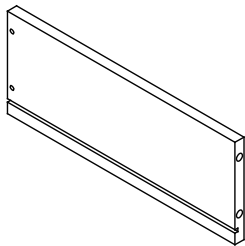

300x135x12mm

Drawer Right Side Panel x8


14

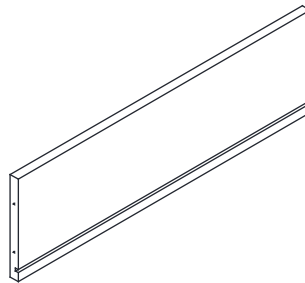

446x135x12mm

Drawer Back Panel x8


15

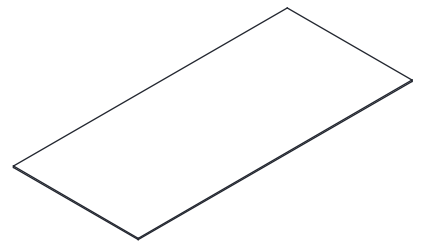

454x135x3mm

Drawer Back Panel x8


16

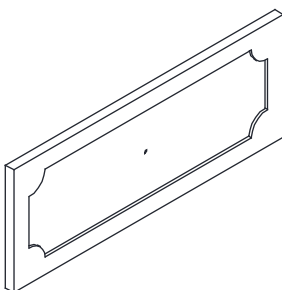

497x196x15mm

Left pull Panel x4

17

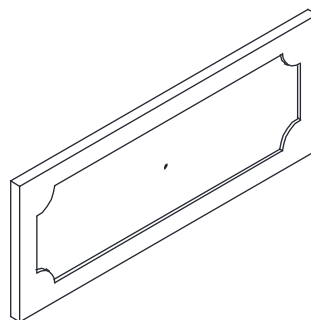

497x196x15mm

Right drawer panel x4

COMPONENTS

A



+1(spare)

M6x35mm

Cam Bolt x59

B




+1(spare)

M15x10mm

Cam Lock x63

C

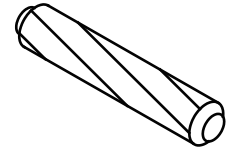


+1(spare)

M8x30mm

Wood Dowel x10

 D




+1(spare)

M3x12mm

Screw x80

E

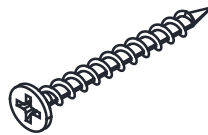


+1(spare)

M4x35mm

Screw x36


F

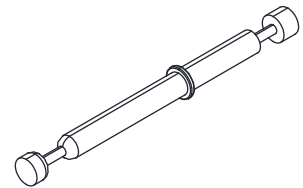

M6x71mm

Double-headed cam bolt x2


G

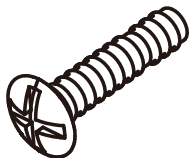

M4x14mm


Knob Screw x8

 H




Anti-dumping & Screw x2

I

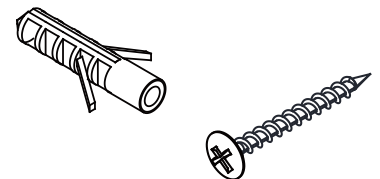

Plastic Anchor & Screw x2

 J



Mending Wedge & Screw x12


K



Knob x8

COMPONENTS


CL

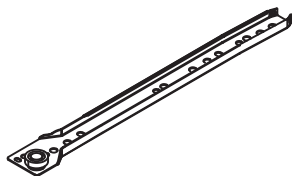

M300

Cabinet left Slide x8


DR

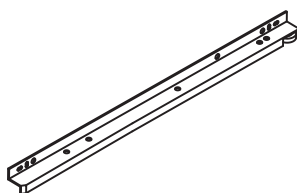

M300

Drawer Right slide x8


DL

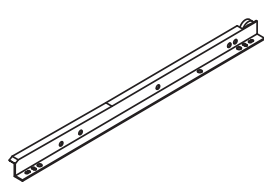

M300

Drawer Left slide x8

CR

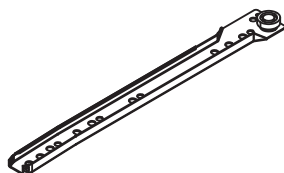

M300

Cabinet Right Slide x8


ASSEMBLY STEPS

A x 2



STEP 1

Screw the Cam Bolt (A) into the Panel (6).

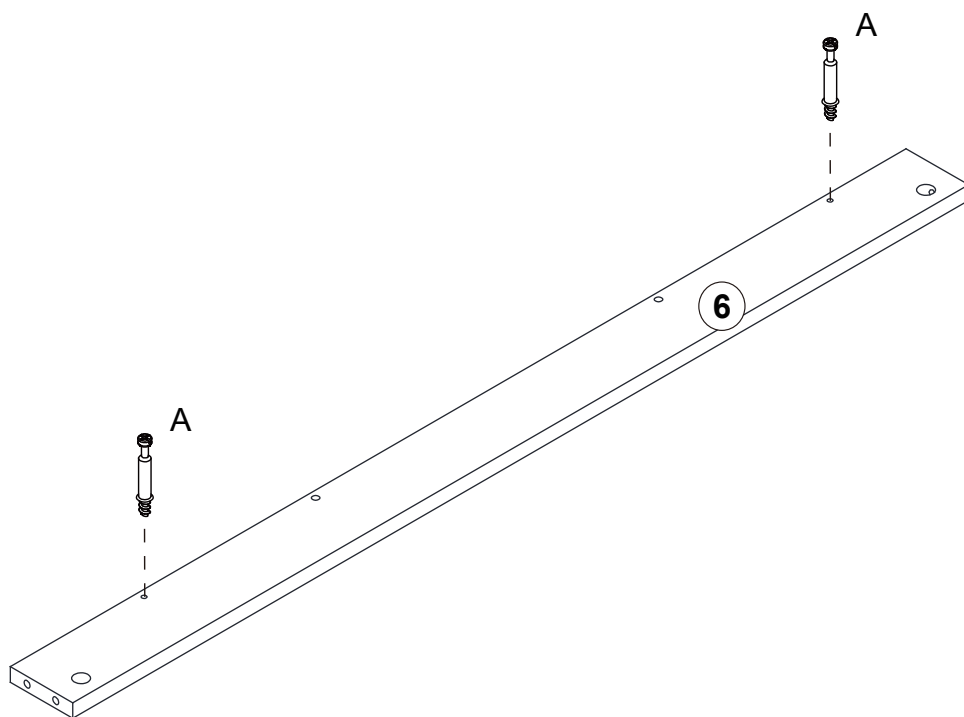


ASSEMBLY STEPS

B x 2		C x 2		A x 1	
-------	---	-------	---	-------	--

STEP 2

1. Screw the Cam Bolt (A) into the assembled Panel (7).
2. Use Wood Dowel (C) to secure Panel (7) to Panel (6), and then tighten with Cam Lock (B).

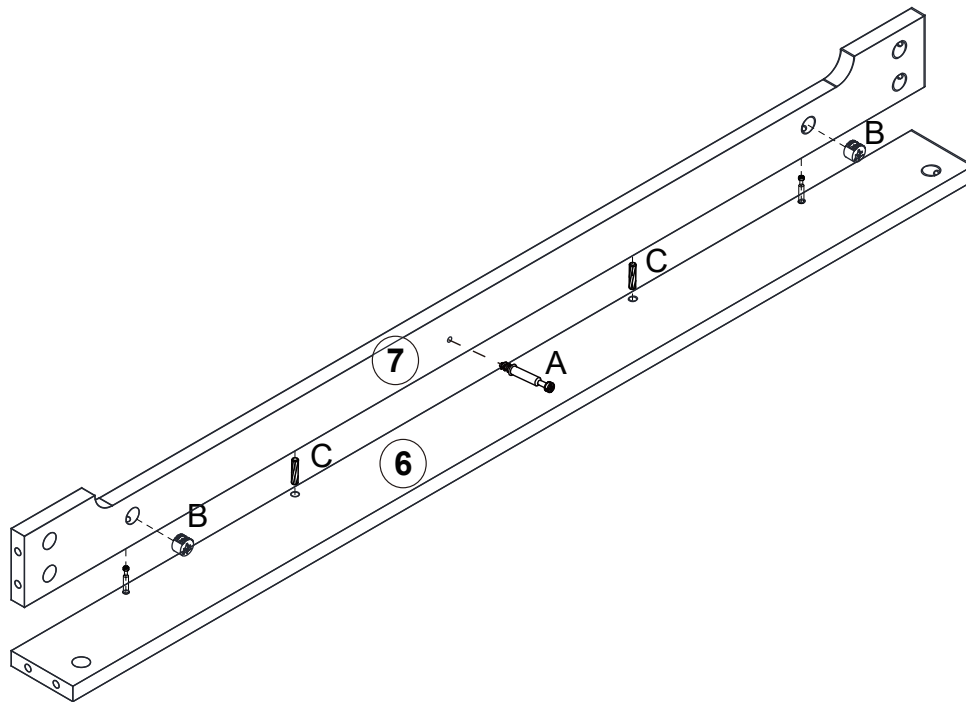

ASSEMBLY STEPS

D x 24



CR x 4




CL x 4



STEP 3

Align the holes on the drawer Slide (CL)(CR) with the holes on the assembled Panel (4), and then fix the drawer slide on Panel (4) with Screw (D).

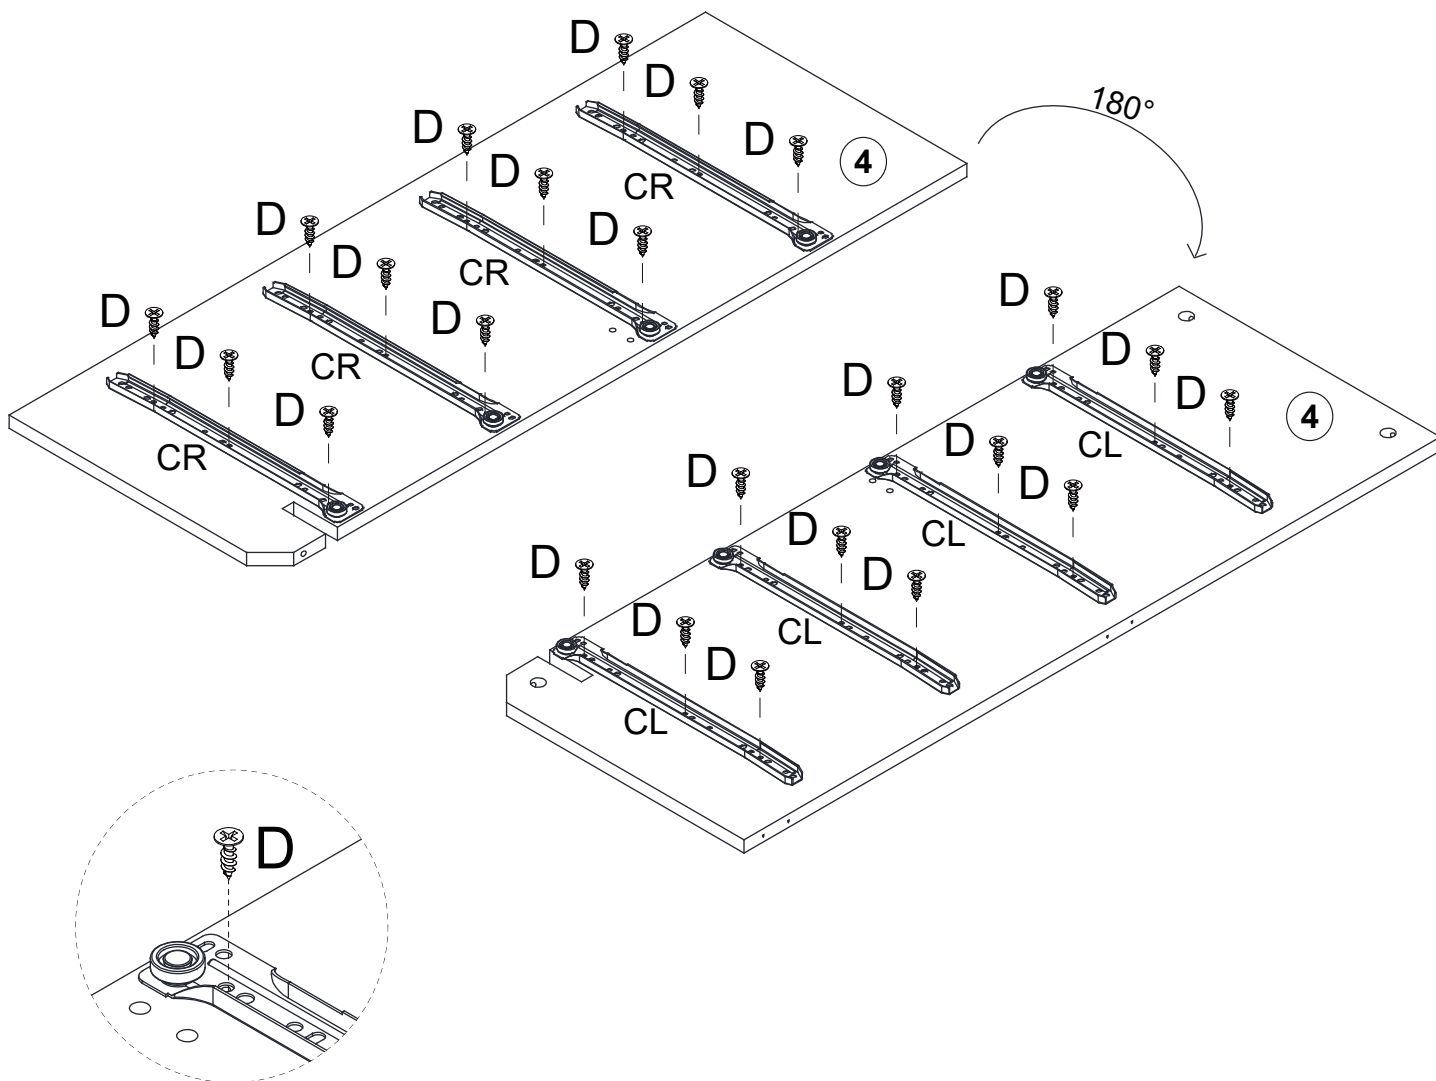

ASSEMBLY STEPS

F x 2






B x 5



STEP 4

1. Screw the Double-headed cam bolt (F) into the assembled Panel (5,4), and then tighten with Cam Lock (B).
2. Secure Panel (4) to Panel (6), and then tighten with Cam Lock (B).

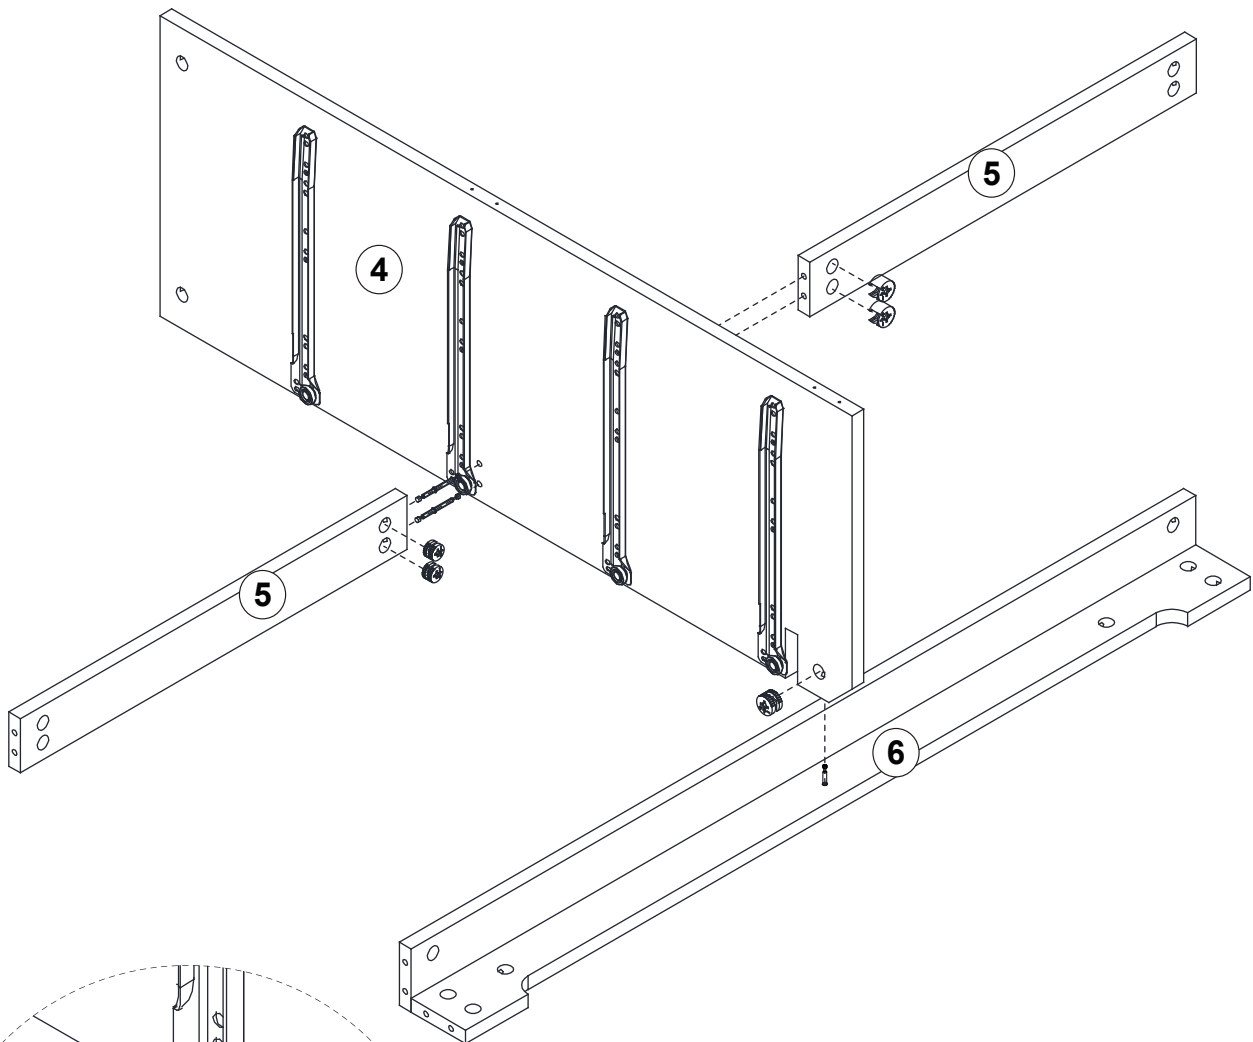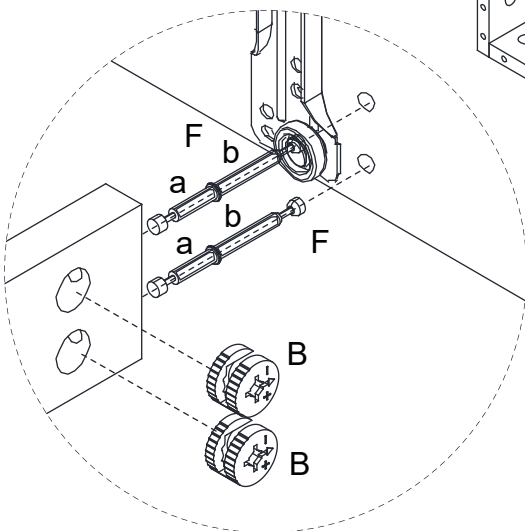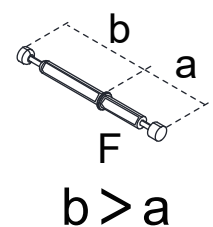


ASSEMBLY STEPS

E x 4



STEP 5

Connect the Panels (8,4) (9,4) with Wood Screw (E) .

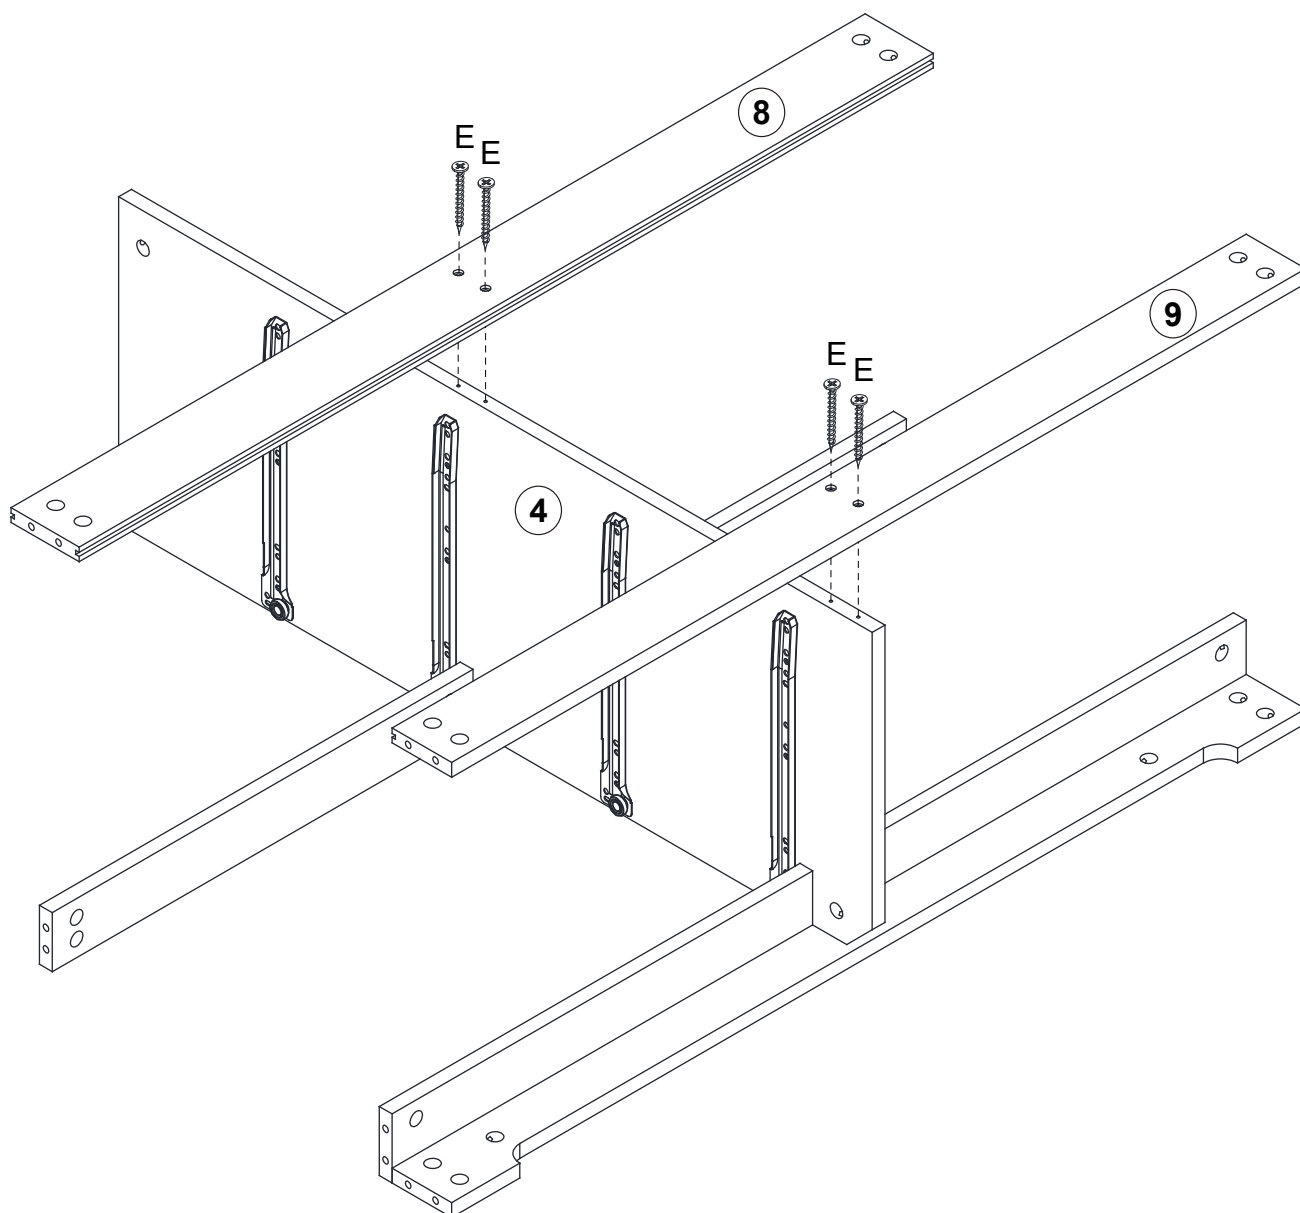


ASSEMBLY STEPS


D x 24



 CR x 4



CL x 4

 


A x 18



STEP 6

1. Screw the Cam Bolt (A) into the assembled Panel (2,3).
2. Align the holes on the drawer Slide (CL)(CR) with the holes on the assembled Panel (2) (3), and then fix the drawer slide on Panel (2,3) with Screw (D).

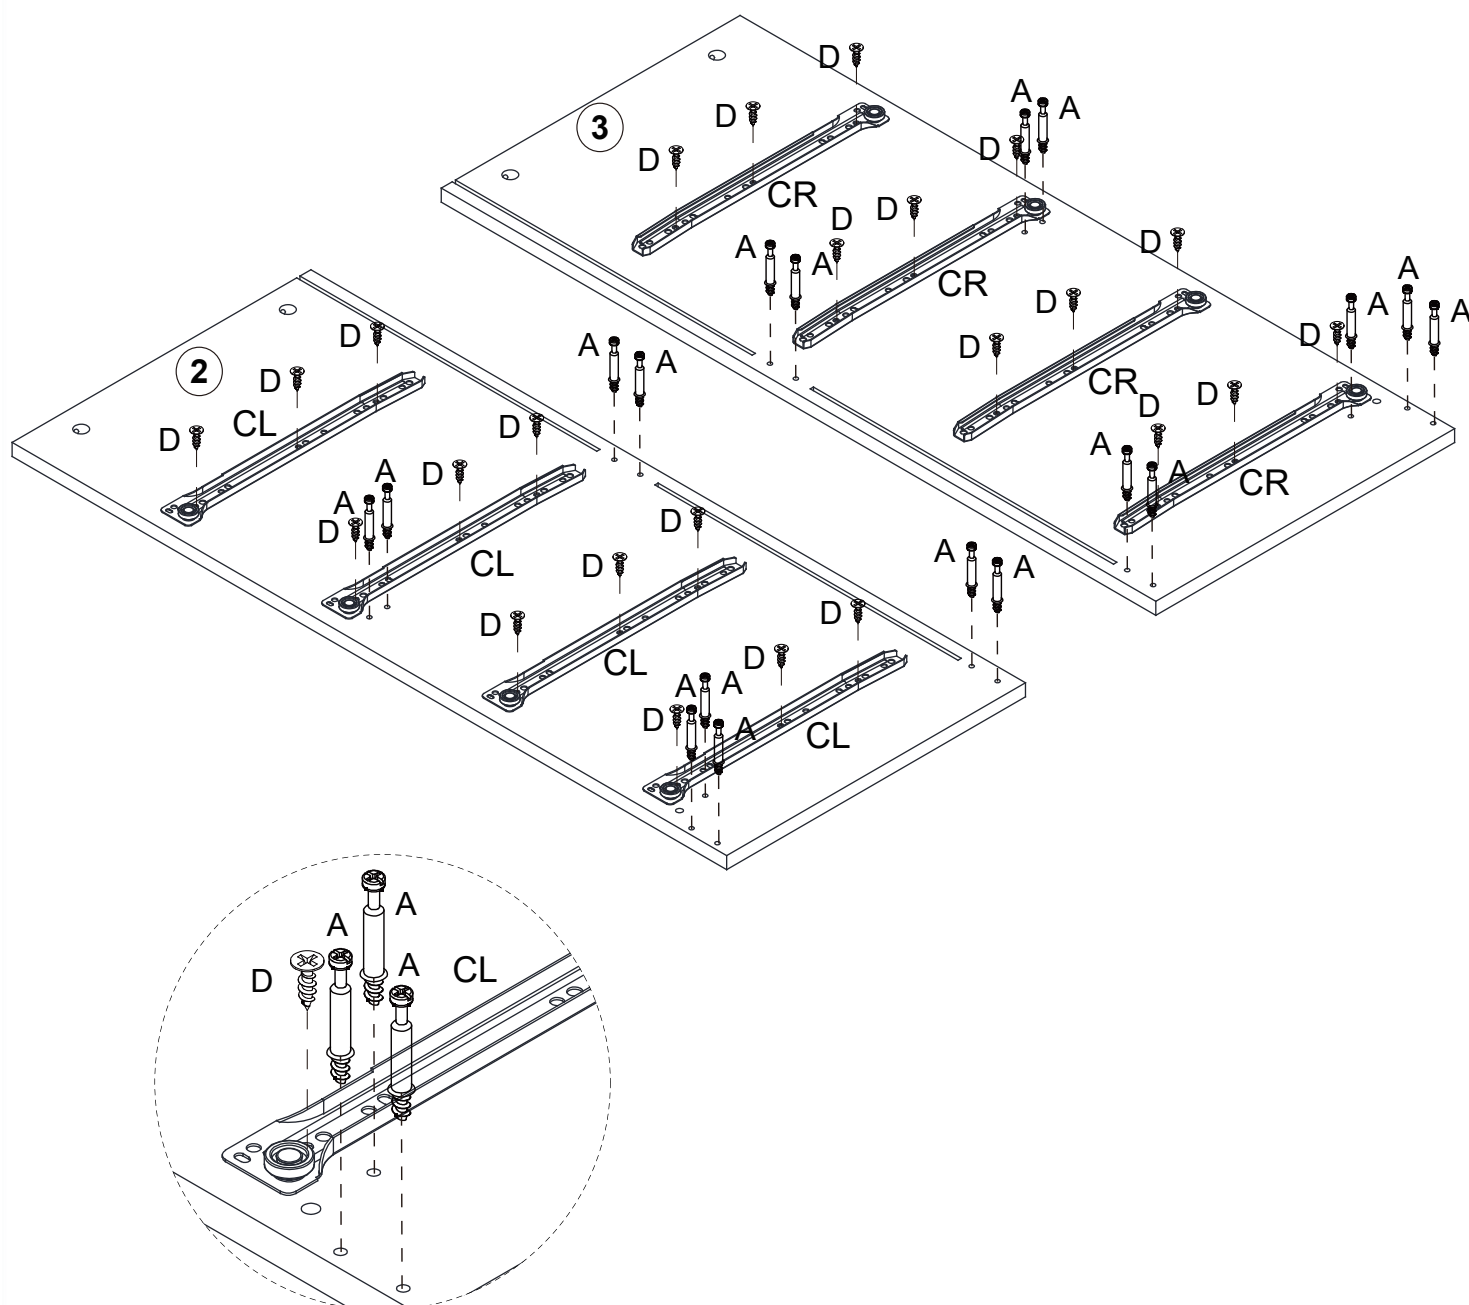

ASSEMBLY STEPS

B x 9




C x 1



STEP 7


Use Wood Dowel (C) to secure Panel (2) Panel (6) and connect the Panels (5,9,6,7,8) with Cam Lock (B).

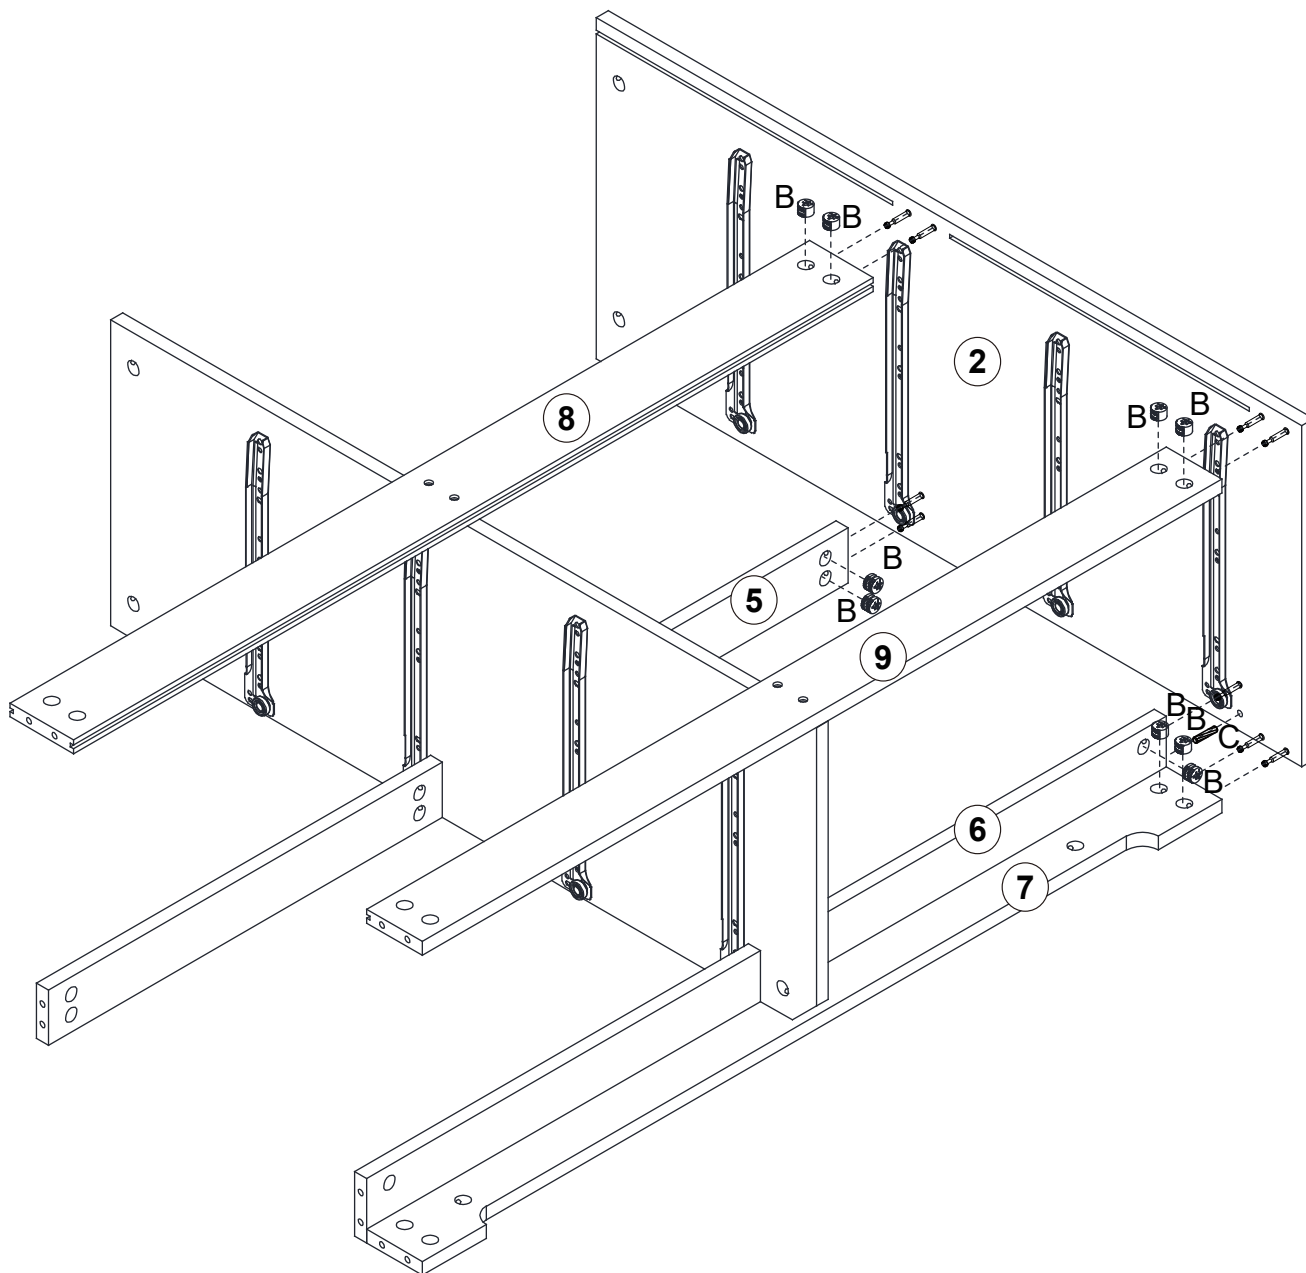

ASSEMBLY STEPS

STEP 8

Insert the Panel (11) along the groove.

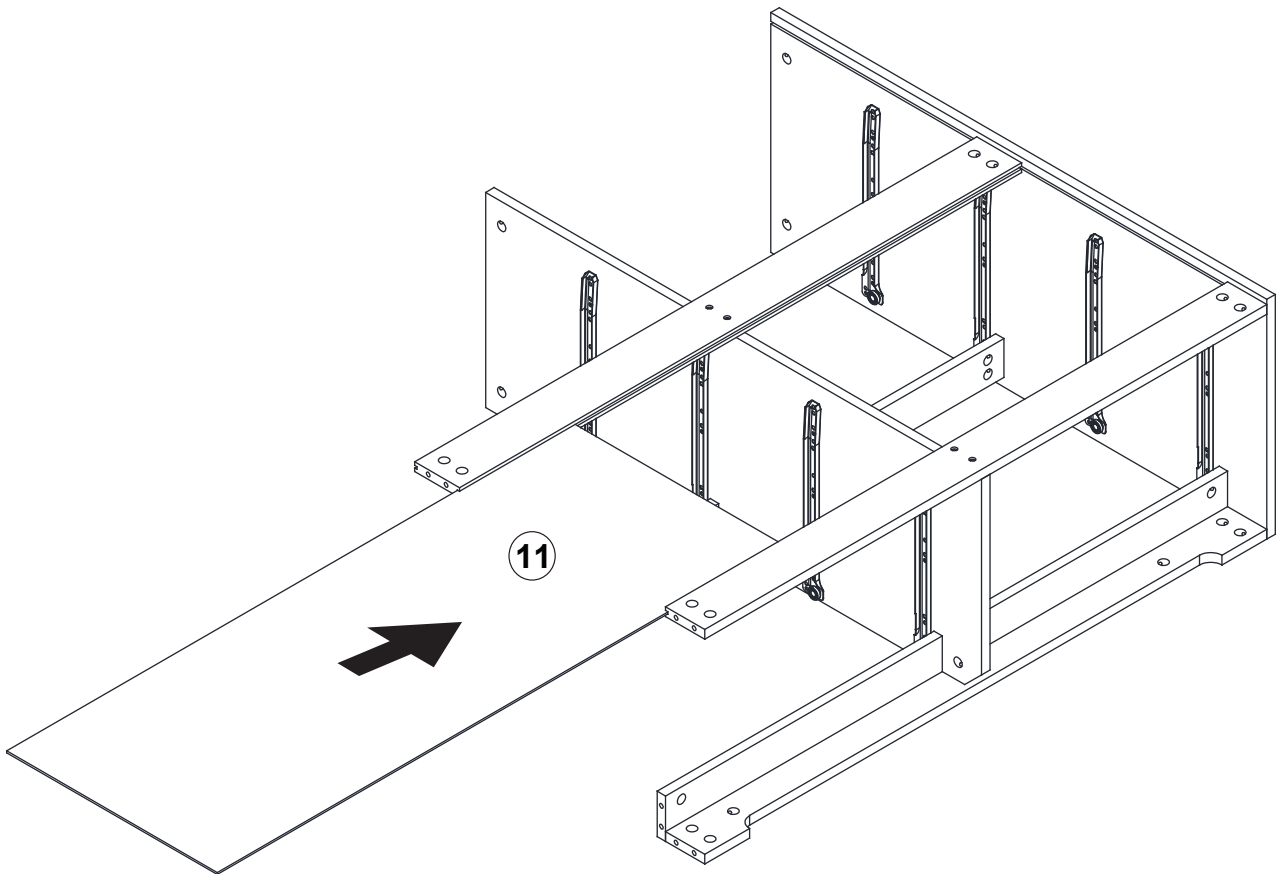

ASSEMBLY STEPS

B x 9




C x 1



STEP 9

Use Wood Dowel (C) to secure Panel (3) Panel (6) and connect the Panels (6,9,5,7,8) with Cam Lock (B).

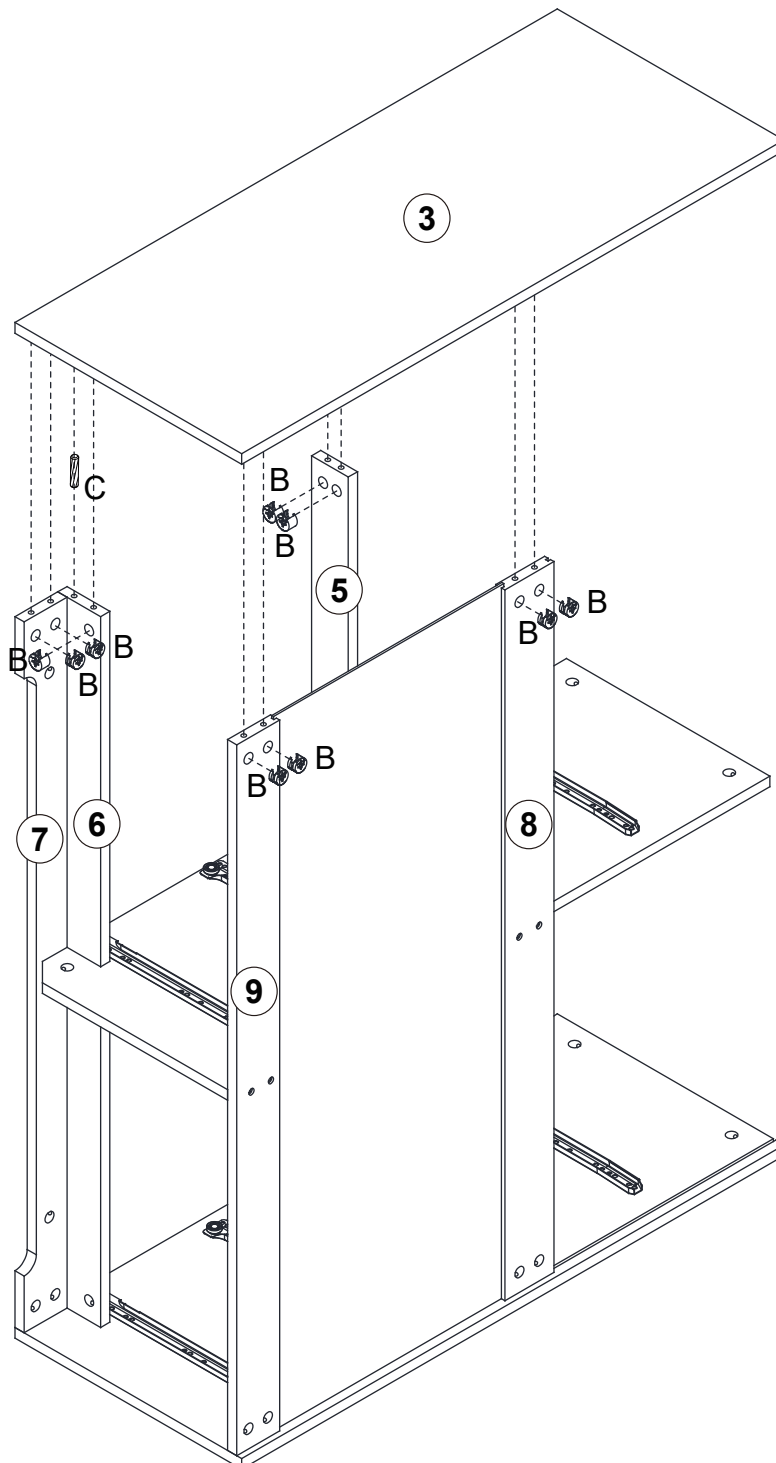


ASSEMBLY STEPS

A x 6




 H x 2



STEP 10


1. Screw the Cam Bolt (A) into the Panel (1).
2. Use Screw (H-2) to secure the Anti-Tipping Tape (H-1) to Panel (1).

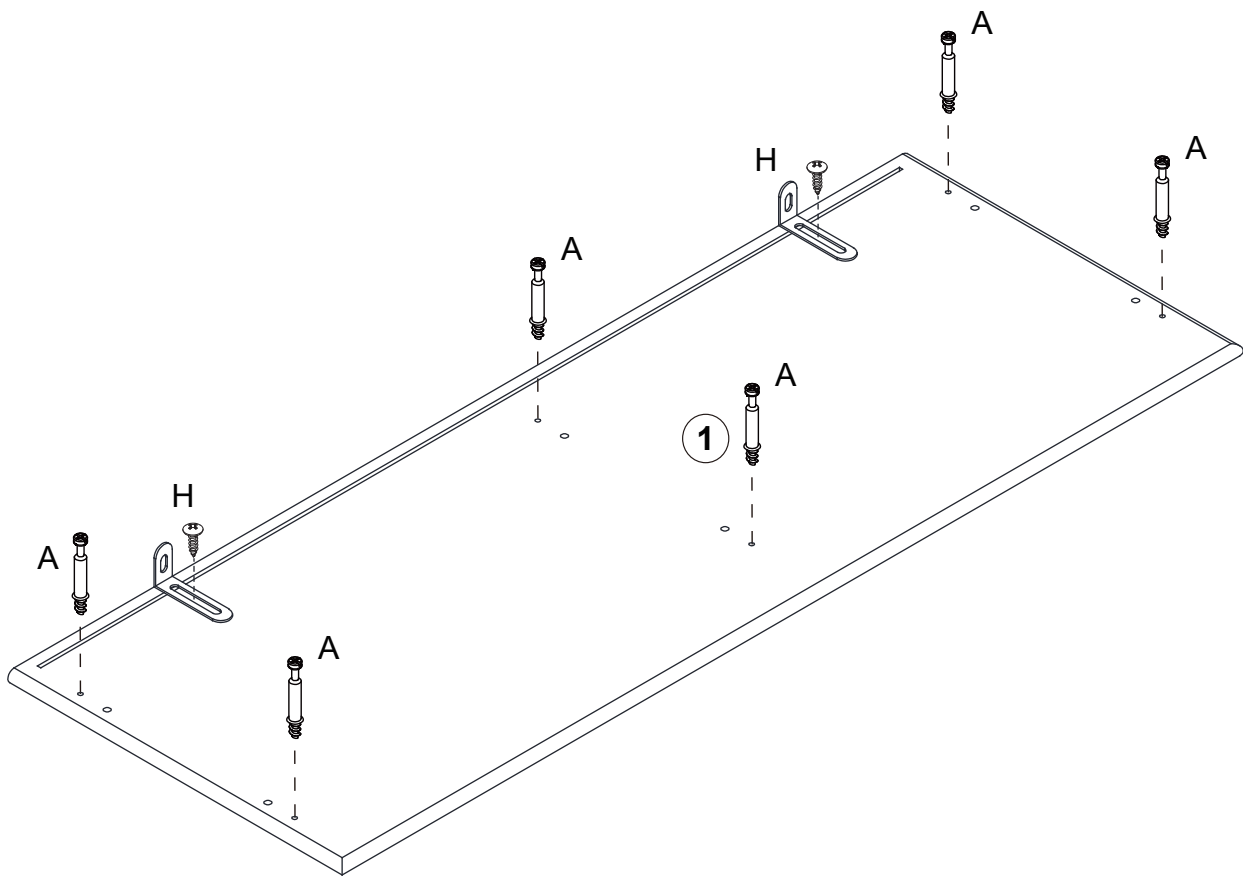

ASSEMBLY STEPS

STEP 11

Insert the Panel (10) along the groove.

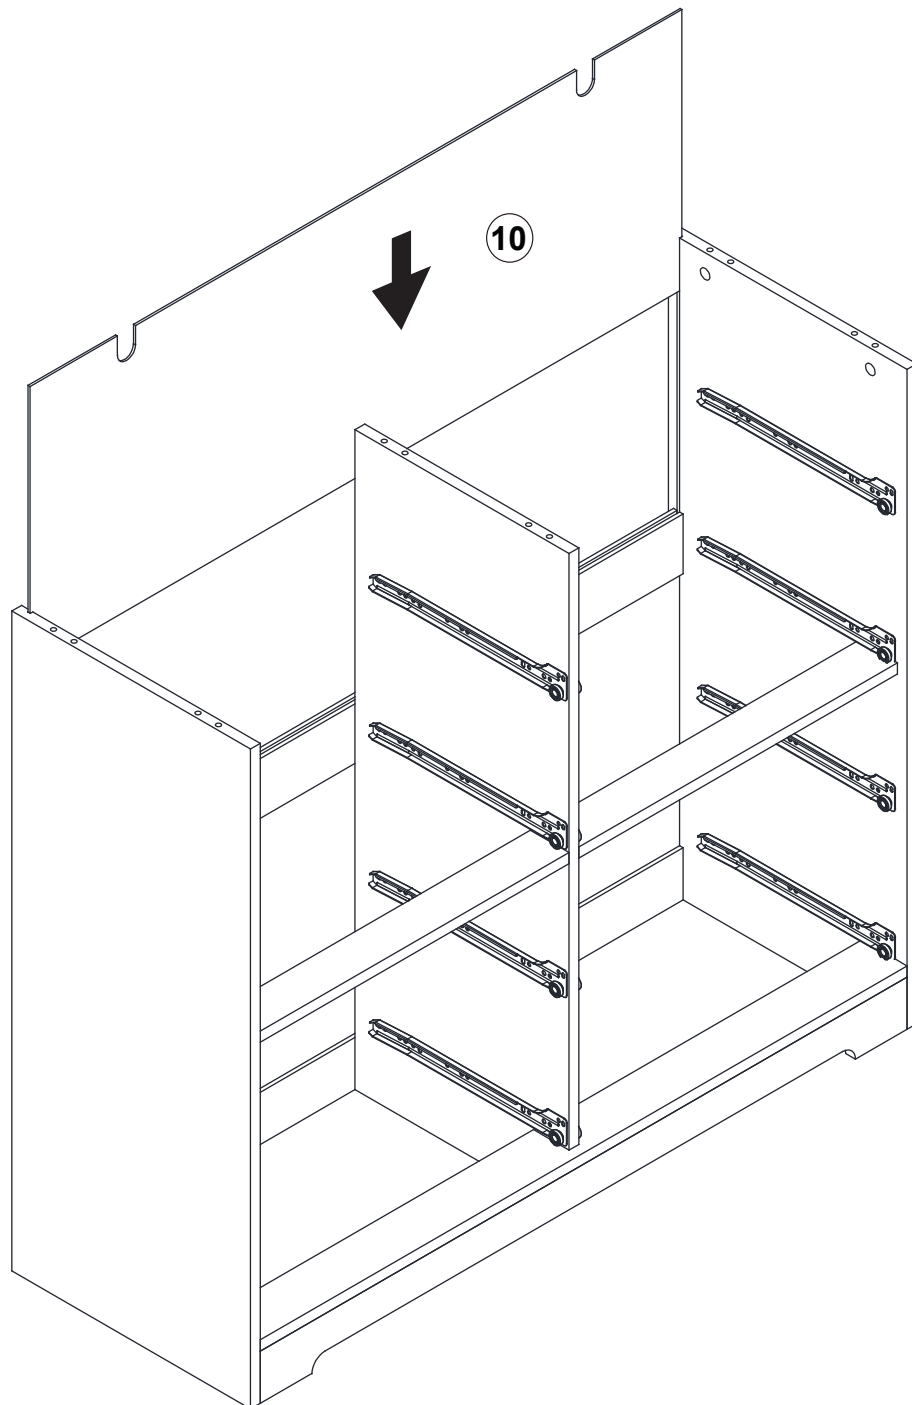

ASSEMBLY STEPS

B x 6




C x 6




STEP 12

Install the Panel (1) with Wood Dowel (C) and Cam Lock (B).

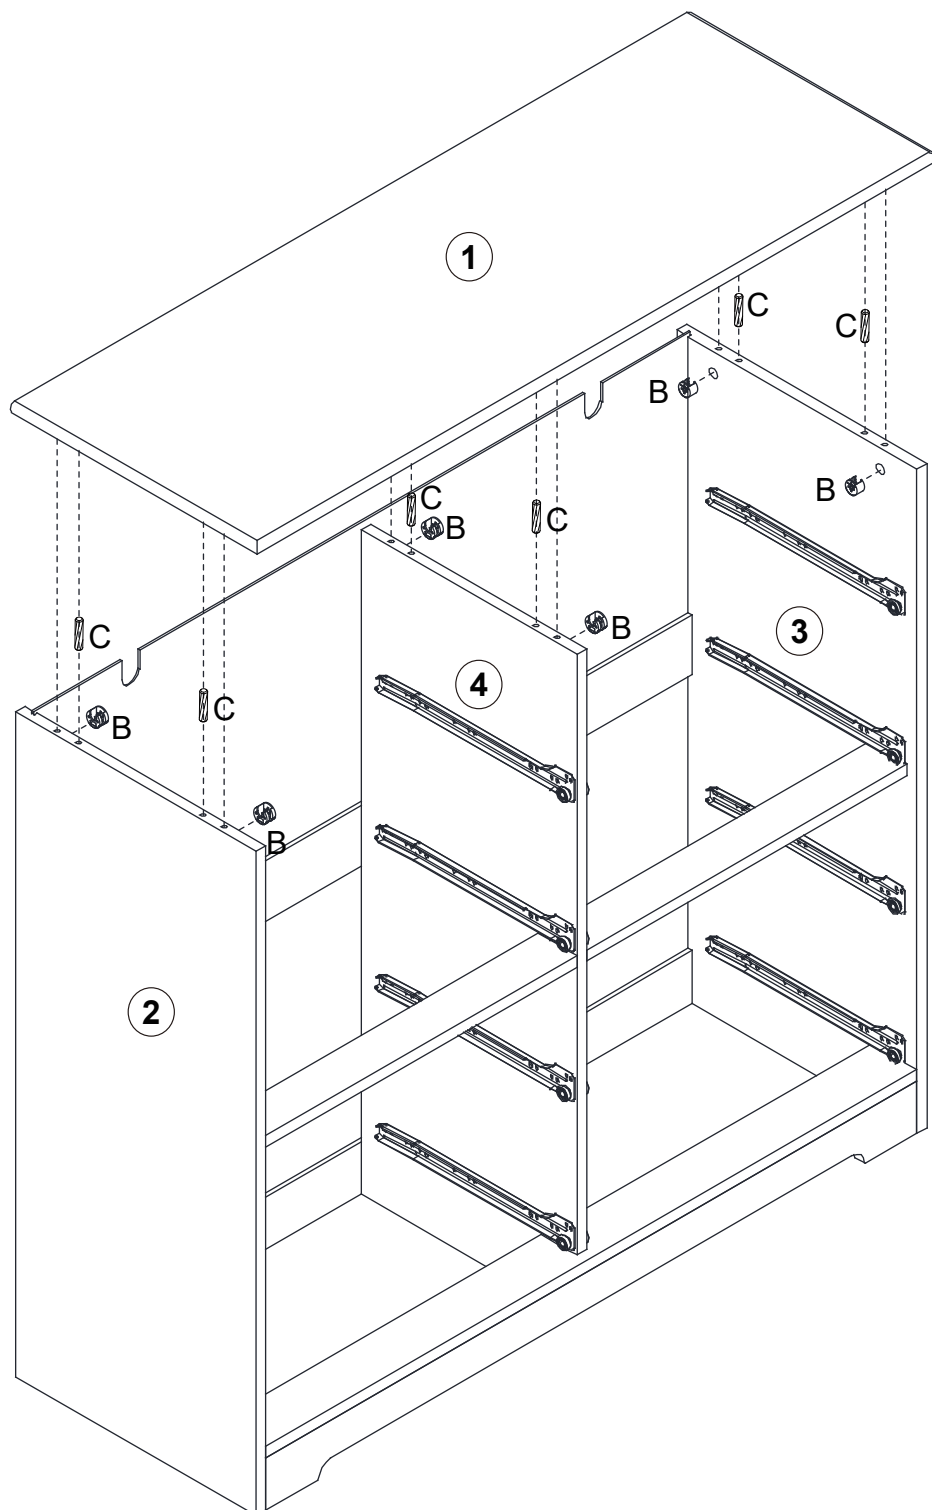



ASSEMBLY STEPS

 J x 12



STEP 13

Insert the Mending Wedge (J-1) into the gap in the back Panel and fix it with Screw (J-2).

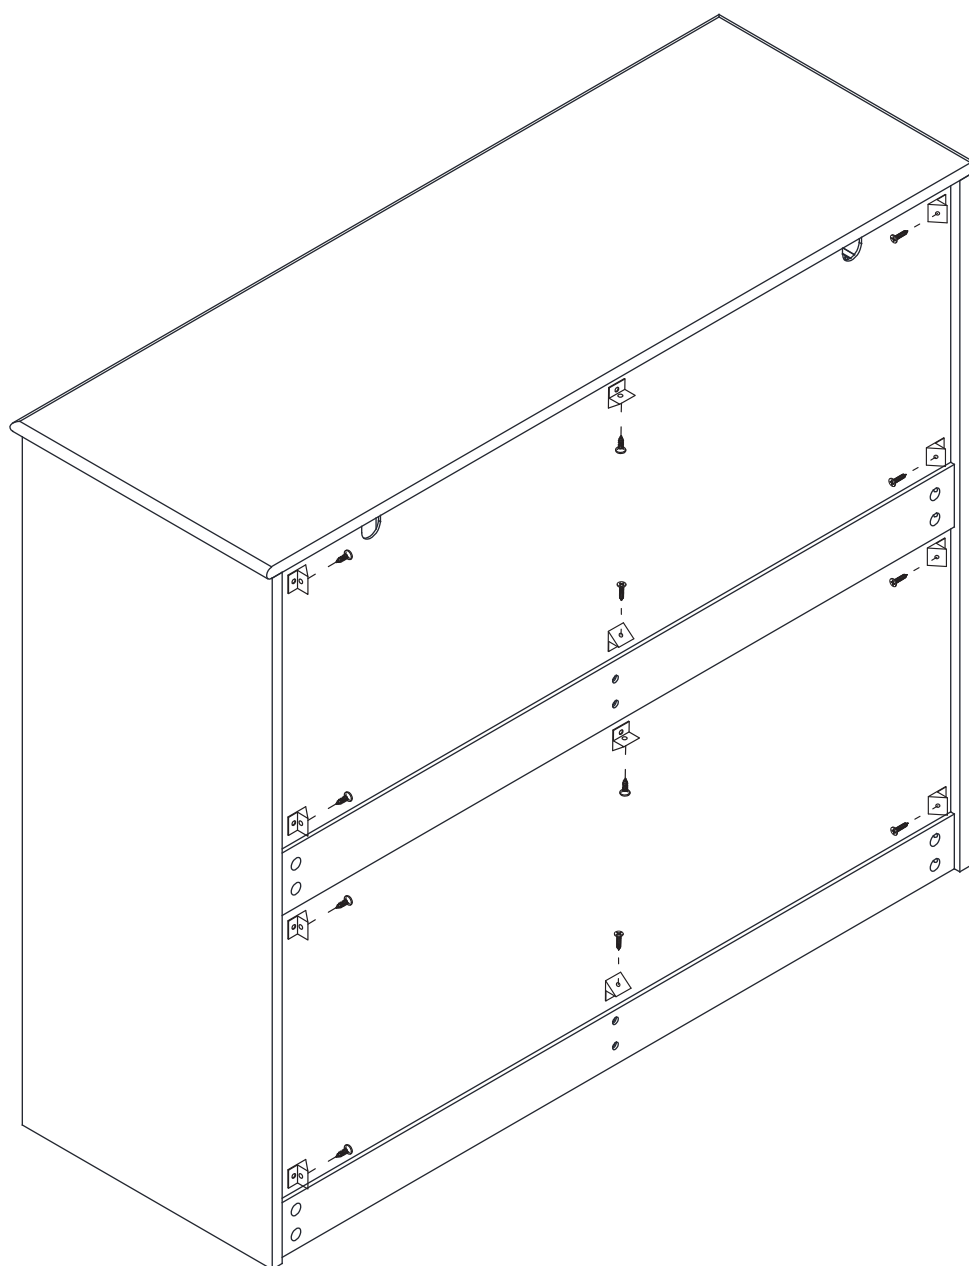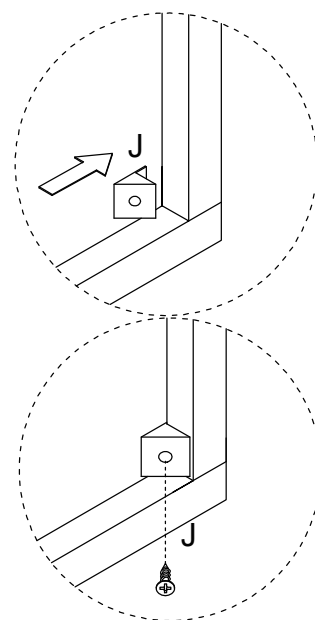



ASSEMBLY STEPS

I x 2



STEP 14

1. Drill two holes in the wall and insert the plastic anchor (I) into the holes.
2. Use the Screw (I) to pass through the Anti-Tipping Tape (N-1) and lock the cabinet onto the wall.

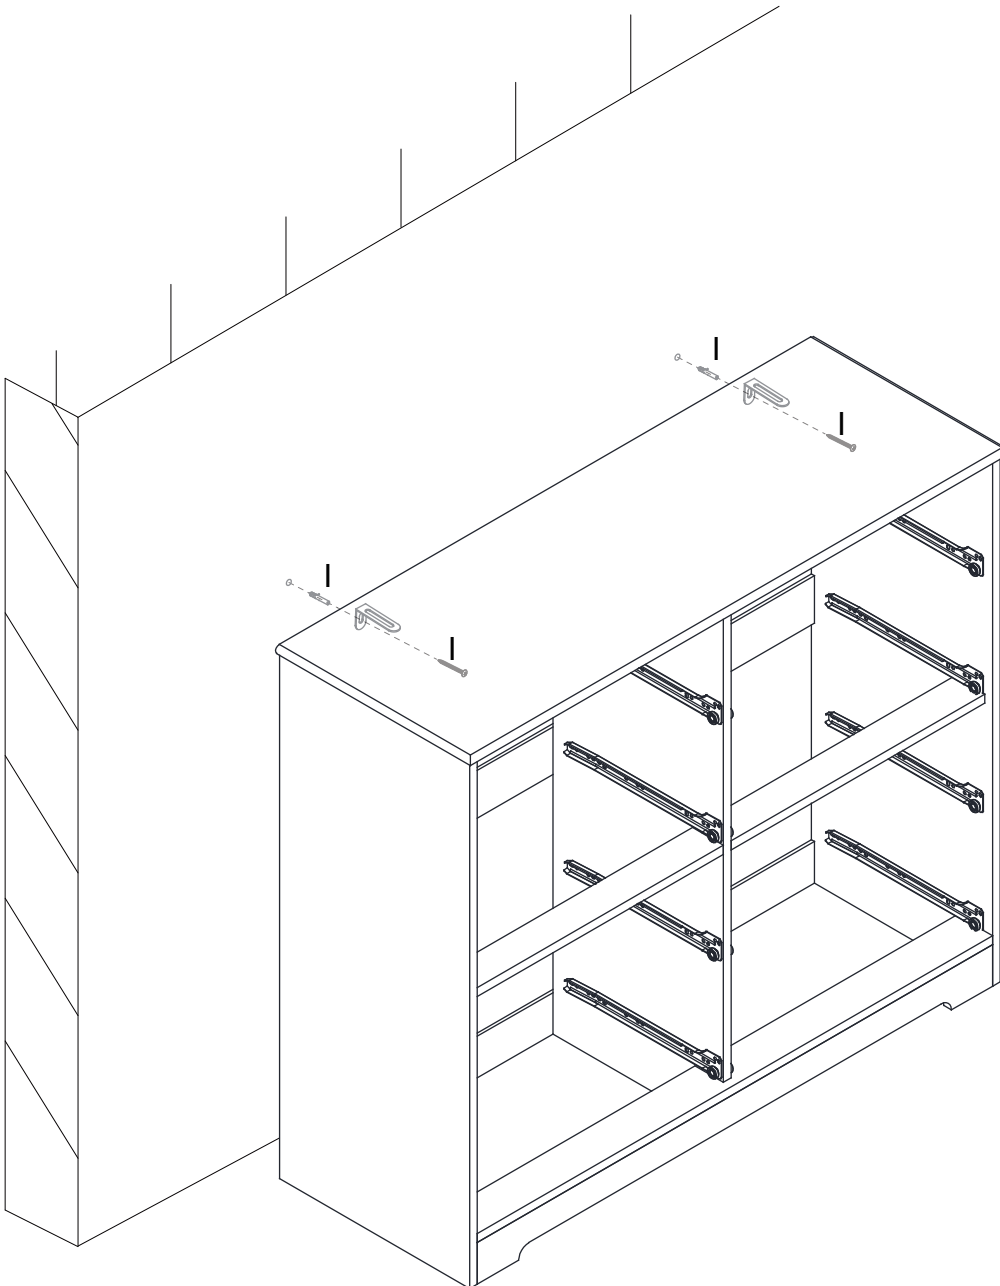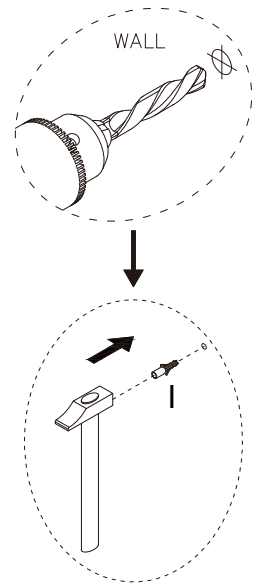

ASSEMBLY STEPS

A x 32



K x 8




G x 8



STEP 15

1. Screw the Cam Bolt (A) into the Panel (16,17).
2. Attach the Handle (G) to the Panel (16,17) with handle Screw (K).

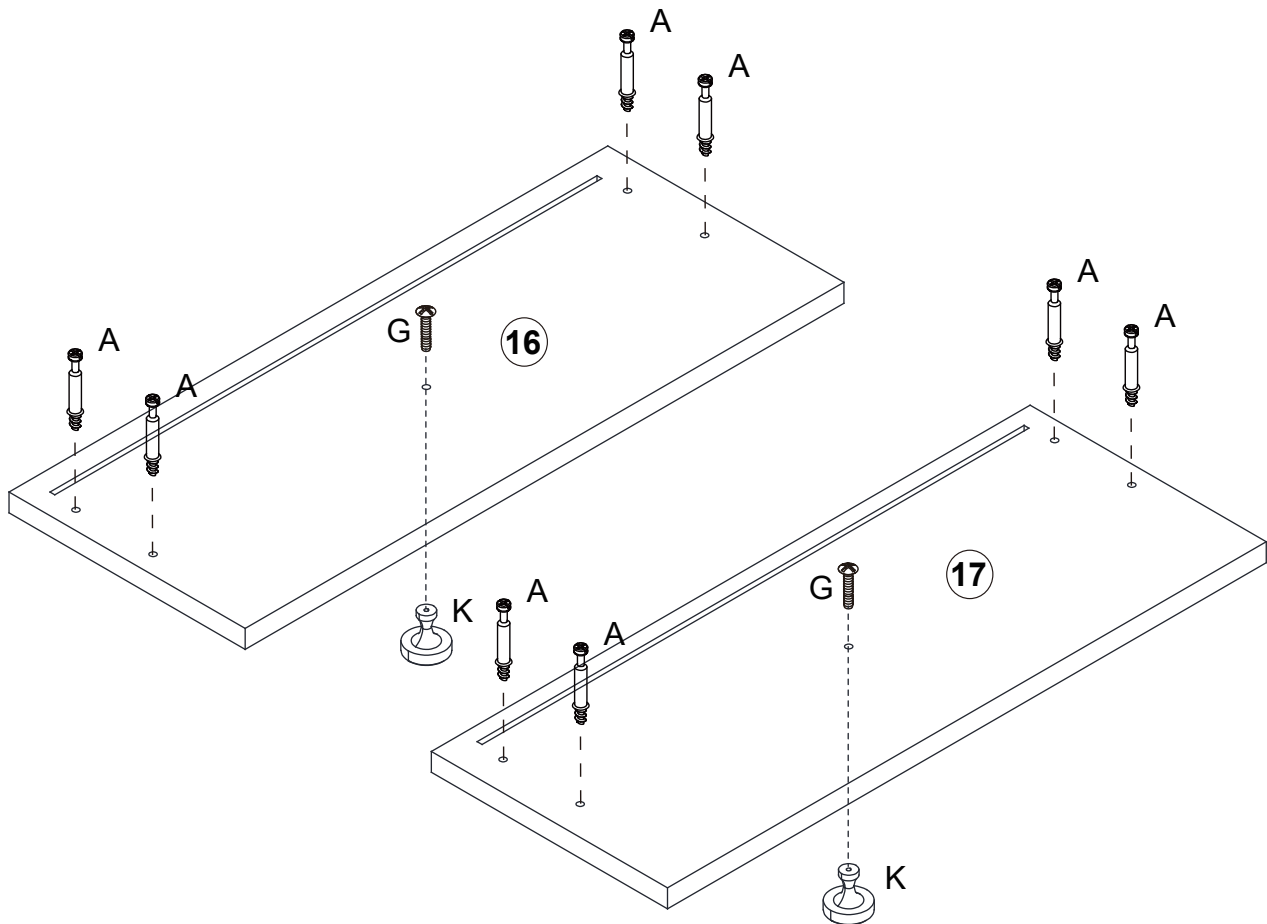

x4


ASSEMBLY STEPS

E x32



STEP 16

Connect the Panels (12,13,14) with Screw (E).

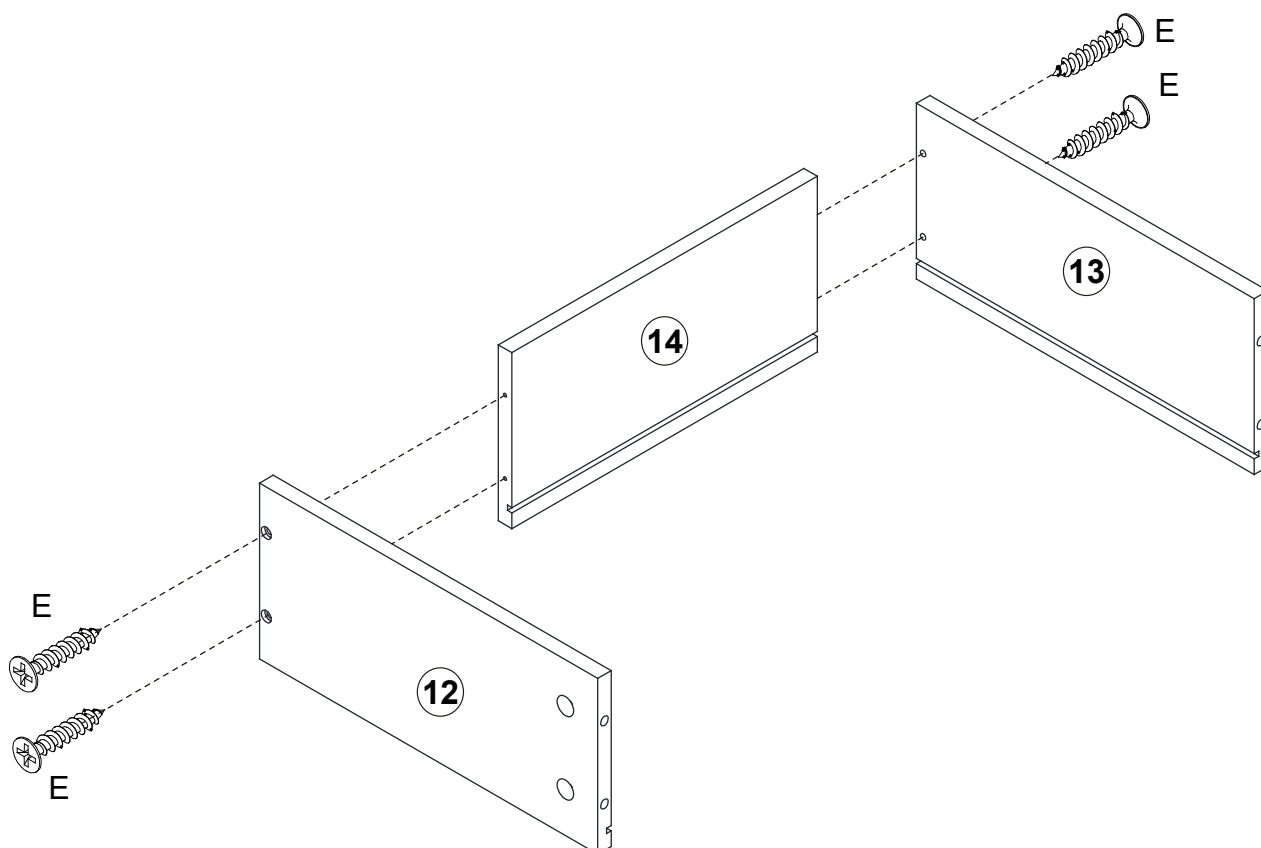


x8

ASSEMBLY STEPS

STEP 17

Insert the Panel (15) along the groove.

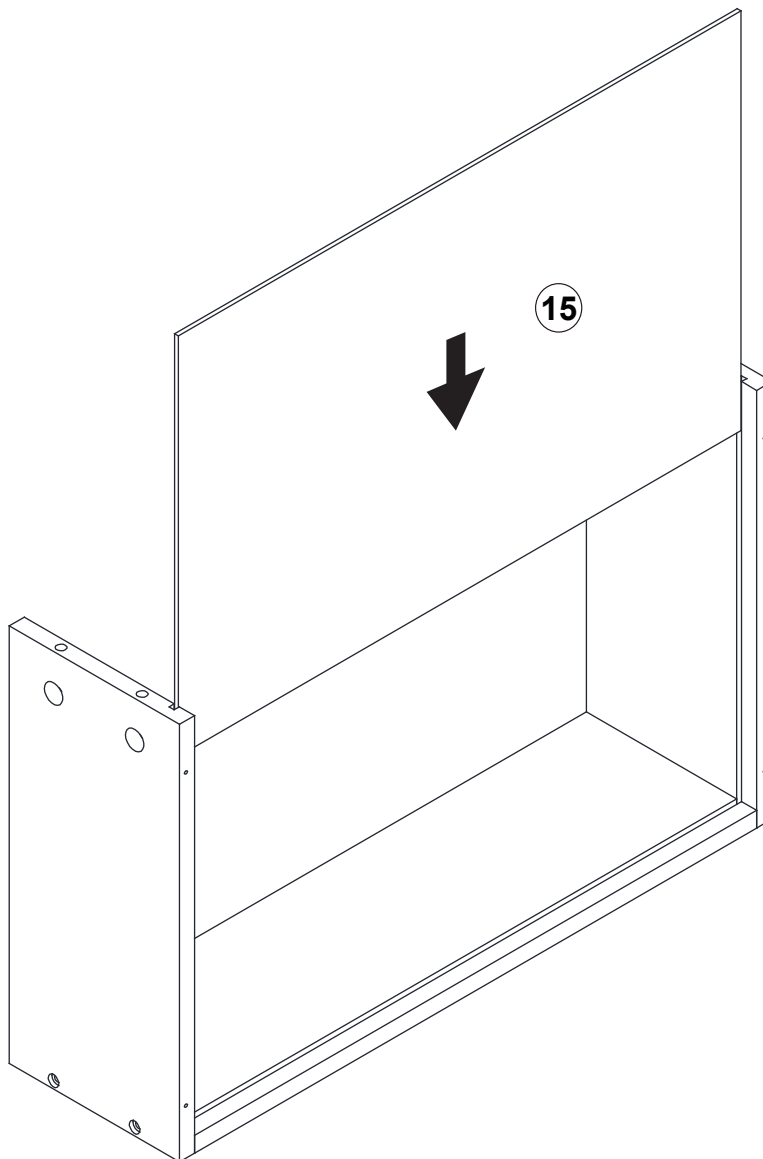

x8



ASSEMBLY STEPS

B x32



STEP 18


Install the Panel (16,17) with Cam Lock (B).

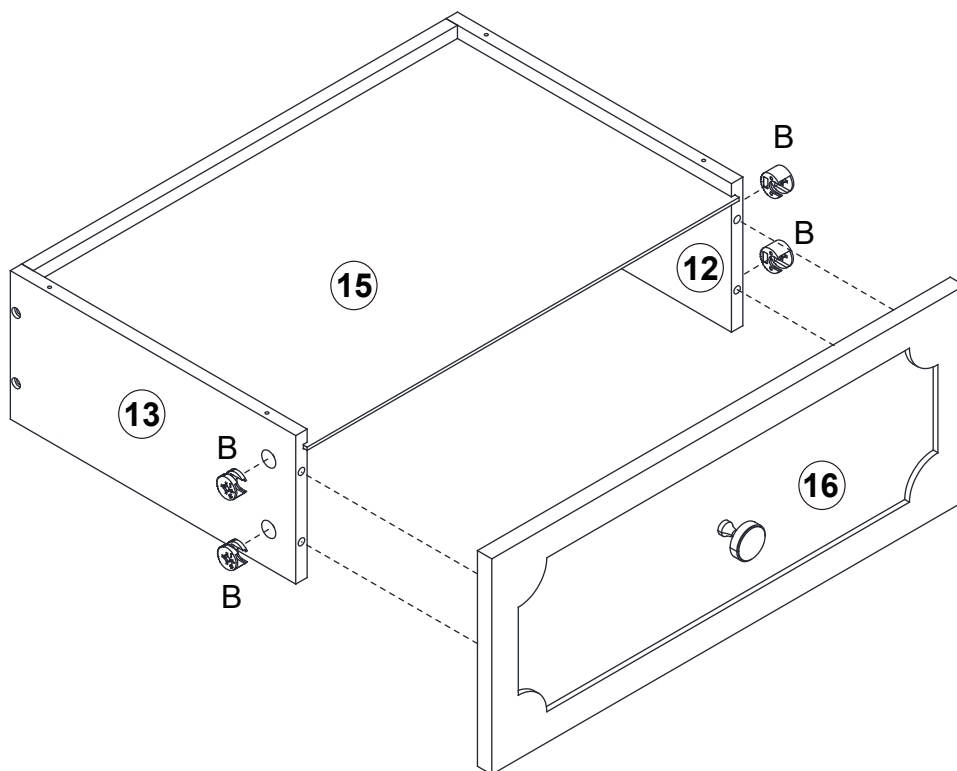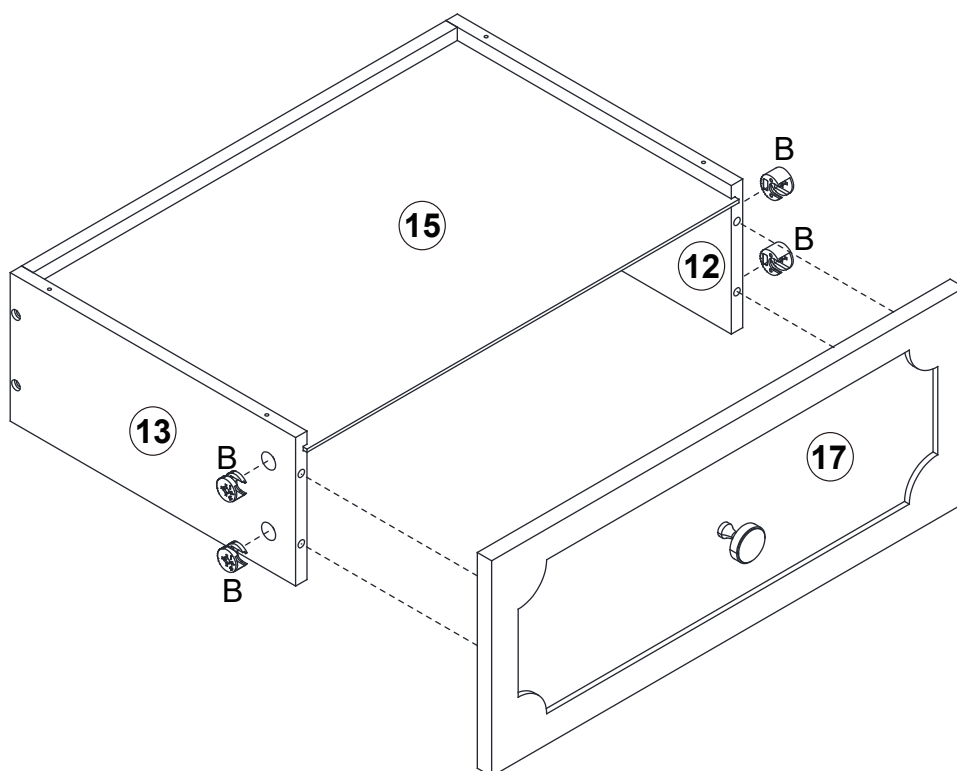


x4

ASSEMBLY STEPS

 DLx 8



DRx 8



 


D x32



STEP 19

Align Slide Rail (DR) with Panel (13) and Rail (DL) with Panel (12), then secure with Screw (D).

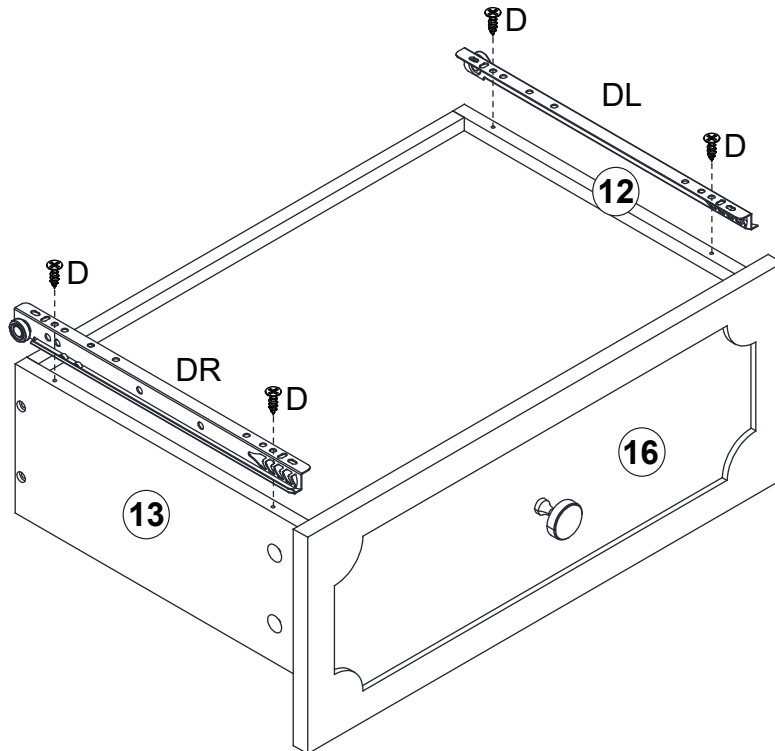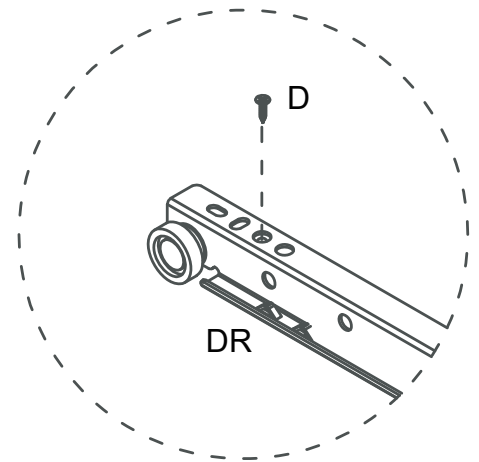
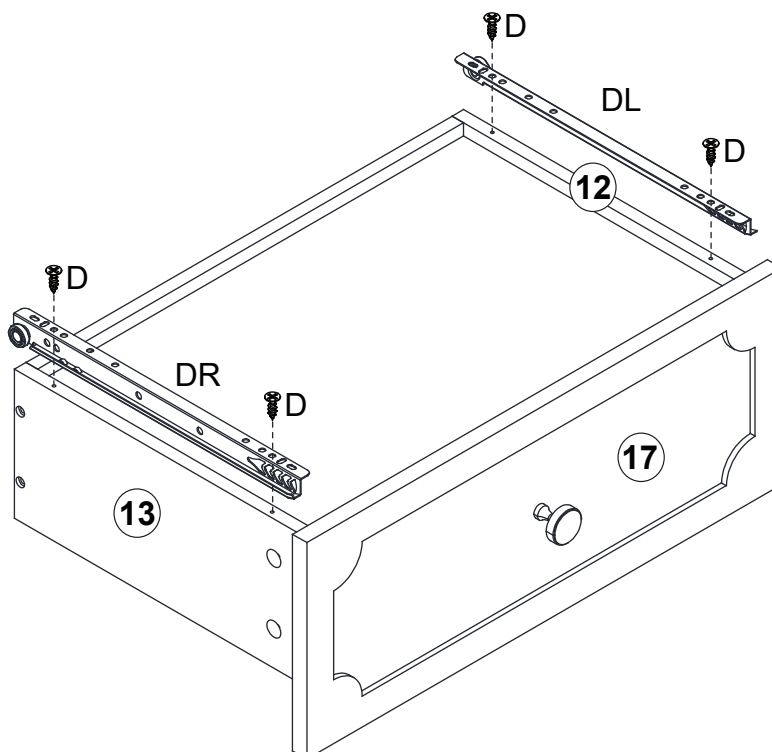


x4

ASSEMBLY STEPS

STEP 20

Align the slides on the drawer and cabinet, then push the drawer into the cabinet.

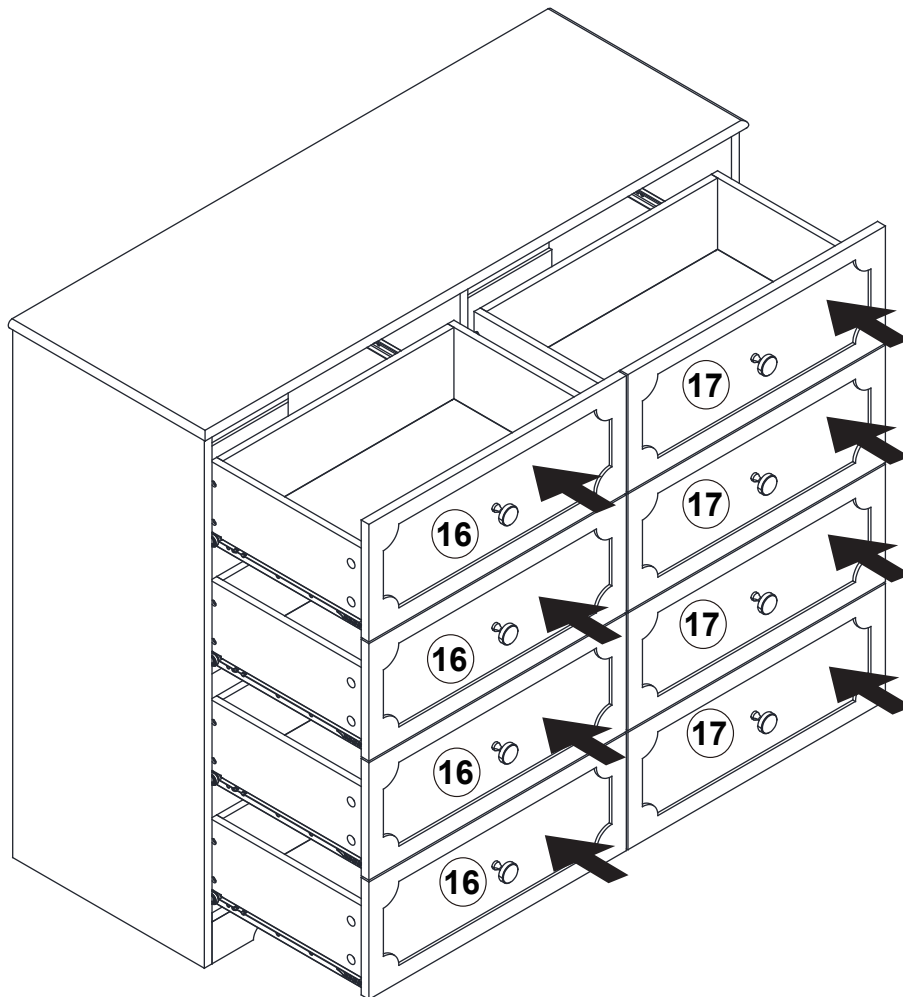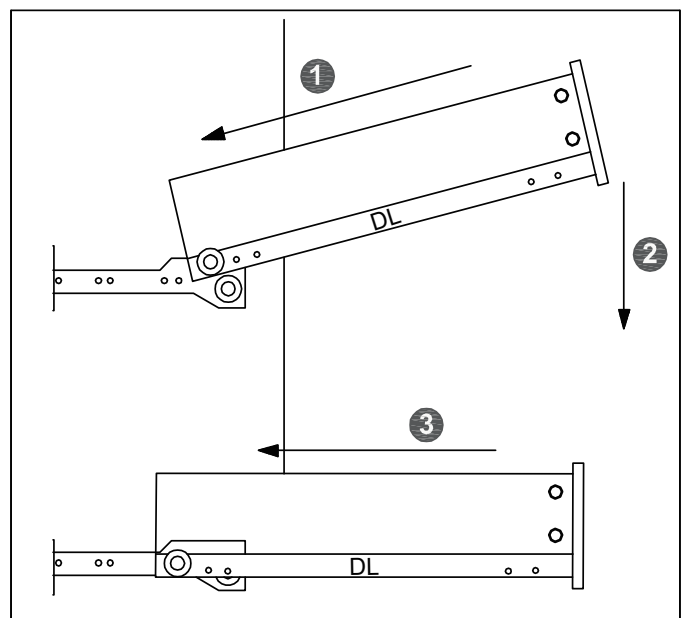

Supplementary Instructions for Safe Use

English

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!