


MODERN DINING CHAIR

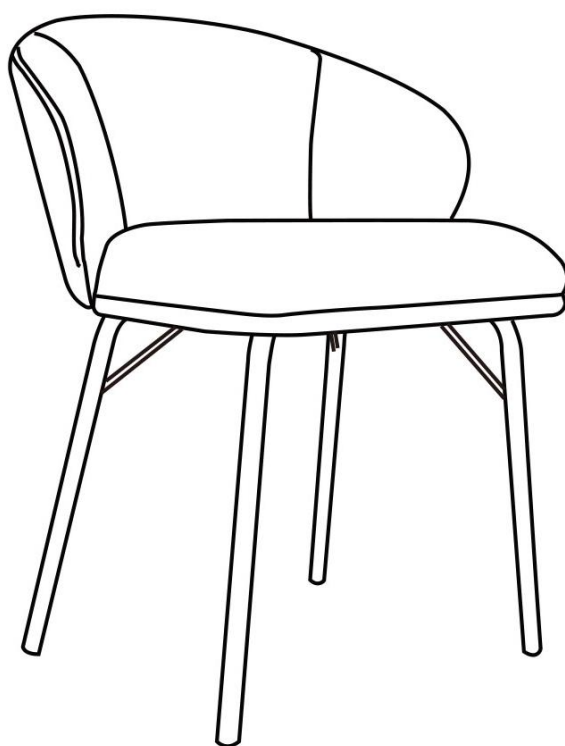

NOTICE

EN

Please keep these instructions for future reference.

Dear customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. If any parts are missing, please contact us promptly to request replacement parts.

● Then follow the entire installation instructions to install.

● Each part is crucial, so please be careful not to lose any.

It is recommended to store parts with different lettered identifiers in separate boxes or bags to avoid confusion during installation.

A. The outer box is damaged

B. The product is damaged / bent / cracked while you open the box

C. The parts / accessories / assembly tools are missing

D. The instructions are not clear and can not be referred

E. The product has functional problems

F. Other aspects that you are not satisfied with

WHAT'S IN THE PACKING BOX

1X Chair Seat & Backrest

1X Left Leg Assembly

1X Right Leg Assembly

6X Assembly Bolts

1X Hex Wrench (Allen Key)

STORAGE & CARE



Avoid Sunlight & Moisture

Keep the chair away from direct sunlight and humid areas to prevent fabric fading, aging and mildew.



Daily Dust Cleaning

Wipe dust regularly with a soft dry cloth or vacuum brush; do not use strong chemicals or bleach.



Stain Maintenance

Clean stains gently with mild detergent and a damp cloth, then let it air dry naturally.



Structural Inspection

Periodically check and tighten the leg screws to maintain the chair's stability and service life.

FOR YOUR SAFETY

Weight Limit Warning

Do not exceed the maximum weight capacity (typically 220-330 lbs / 100-150 kg). Only use as a single-seat chair; never stand, jump, or place heavy objects on it.

Proper Usage

Sit centered on the seat with your back against the backrest. Do not lean on the edges, armrests, or backrest excessively, as this may cause the chair to tip over.

Assembly & Stability Check


Ensure all screws and connections are fully tightened before use. Periodically inspect legs and hardware for looseness or damage; stop using immediately if the chair wobbles or shows signs of wear.

Child Safety

Keep small assembly parts away from children under 3 years old. Do not allow children to climb, stand, or play on the chair unsupervised to prevent falls or injuries.


Assembly Steps

CAUTION:Because of the edges of some parts
before assembly may be sharp ,please
handle unassembled parts carefully.

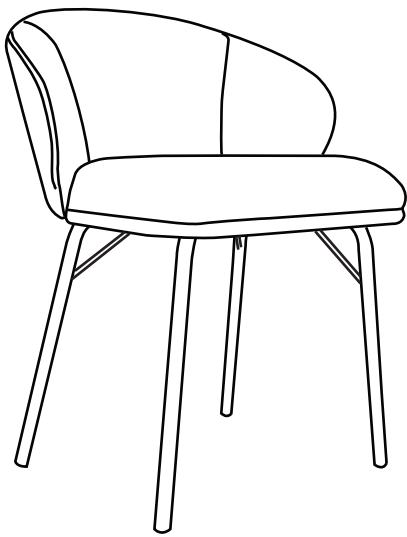


Part Lists		Qty
A		1
B		1
C		1
D		6
E		1

1

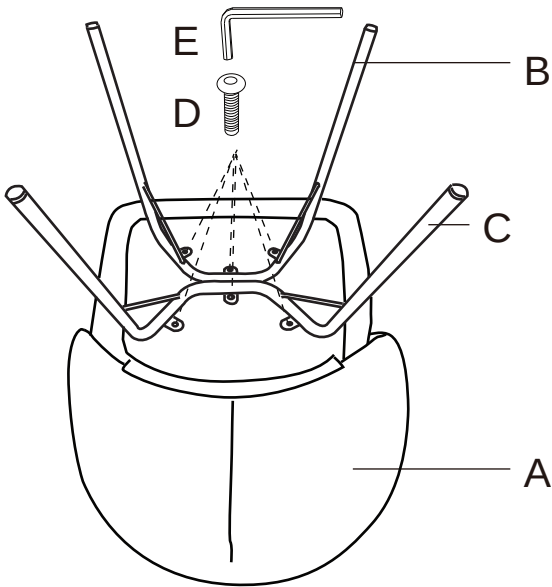

2

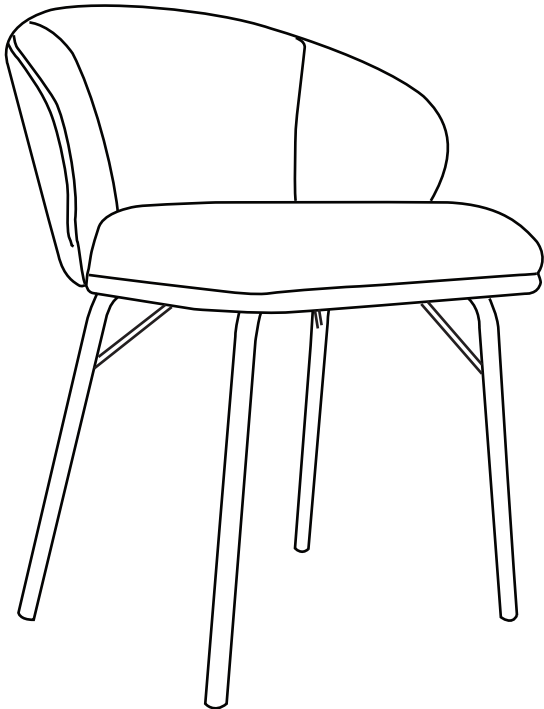

Never wave or bump the product fiercely
Never wipe with damp cloth or hard things.
Stock in door after cleaning when not used.