




| Parts List | | | |
|------------|---------|--------------------------------|-----|
| Label | Picture | Description | QTY |
| A | | Seat | 1 |
| В | | Front Leg (Labelled B) | 2 |
| С | | Left Back Leg (Labelled C) | 1 |
| D | | Right Back Leg (Labelled D) | 1 |
| Hardwar | ·e | | |
| Label | Picture | Description | QTY |
| 1 | | Bolt (M8*55) | 9 |
| 2 | Q | Spring Washer | 9 |
| 3 | | Washer | 9 |
| 4 | | Allen Key | 1 |

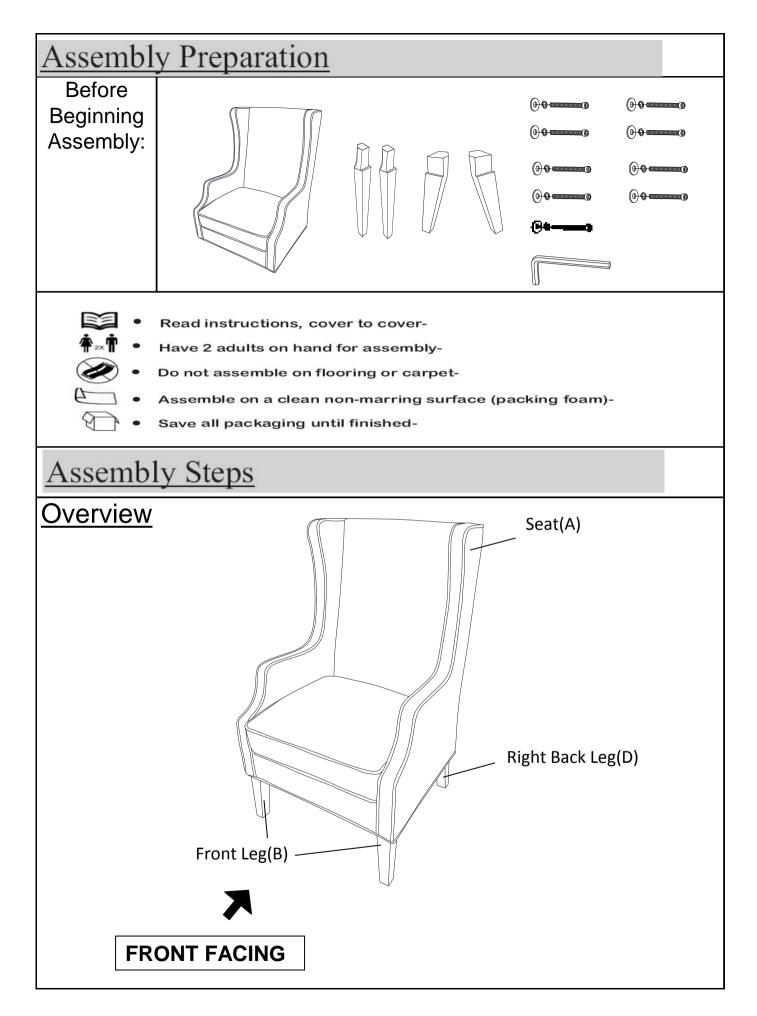

This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

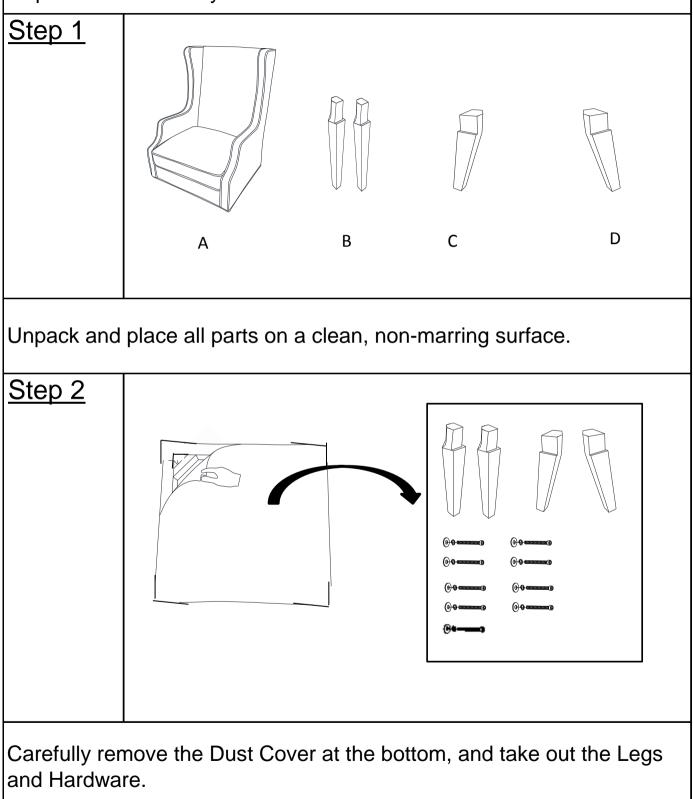

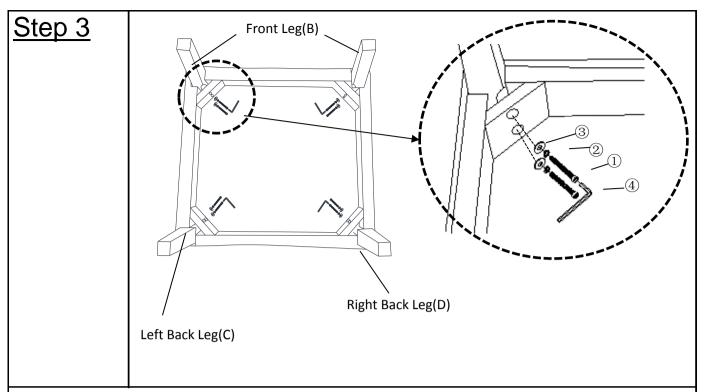


Note: There are two Front Legs(B), one Left Back Leg(C), and one Right Back Leg(D). Be sure to check labels and install each leg in the correct mounting position.


Insert Front Leg(B) into the front mounting position of Seat(A) and attach using Bolts(1), Spring Washers(2) and Washers(3) with Allen Key(4).

Do not fully tighten the Bolts.


Repeat the same process to attach the remaining three Legs.

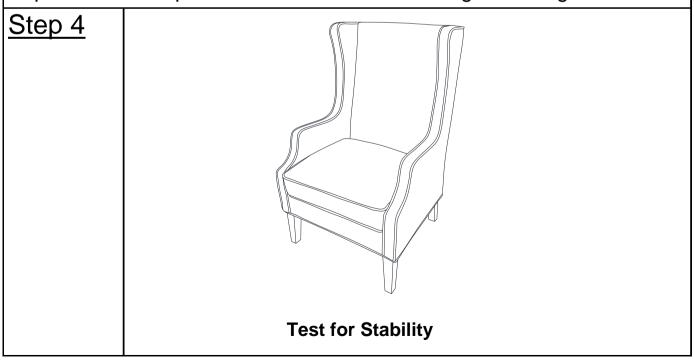

Stand the Club Chair up, and place it on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Gently and carefully, sit into to the Club Chair.
This would help to align all the parts at all joints.
Then get off the Club Chair, and place it facedown.
Proceed to tighten all Bolts in a sequential manner.
If there are still wobbles, loosen the Bolts and execute this same process.

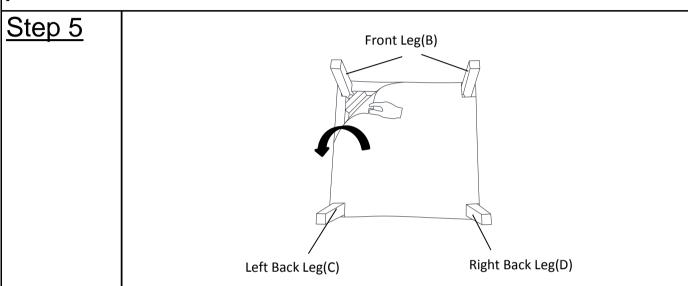

Finally, seal the Dust Cover back on to the underside of the Seat(A) and smooth the edges by hand.

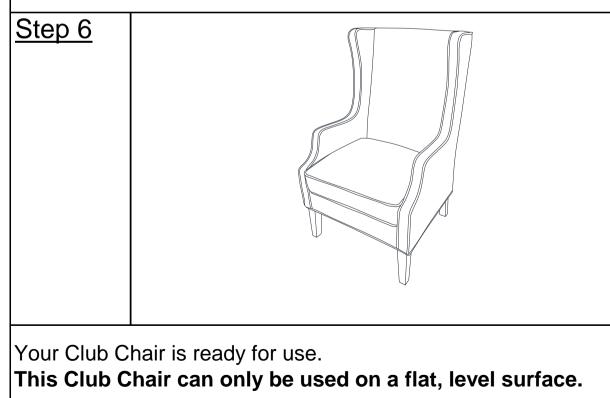

| 0 55 | Do not put hot items directly on furniture surface |
|-------|---|
| 0 - | Do not clean furniture with harsh cleansers or polish. |
| o Ö | Do not place fumiture under direct sunlight. |
| 0 | Do not place furniture near heating or cooling vents. |
| o L | Do not write on furniture without a padded barrier to protect the surface |
| ∞ ♀ | Do not place furniture outside . For indoor use only . |
| | Not for commercial use. For residential use only . |
| | Stains may be removed with mild soap solution and damp cloth. |
| 0 🟋 I | Children should not climb or jump on the fumiture. |

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning. **Should I worry?**

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

