 


TV Stand

Assembly Instructions - Please keep for future reference

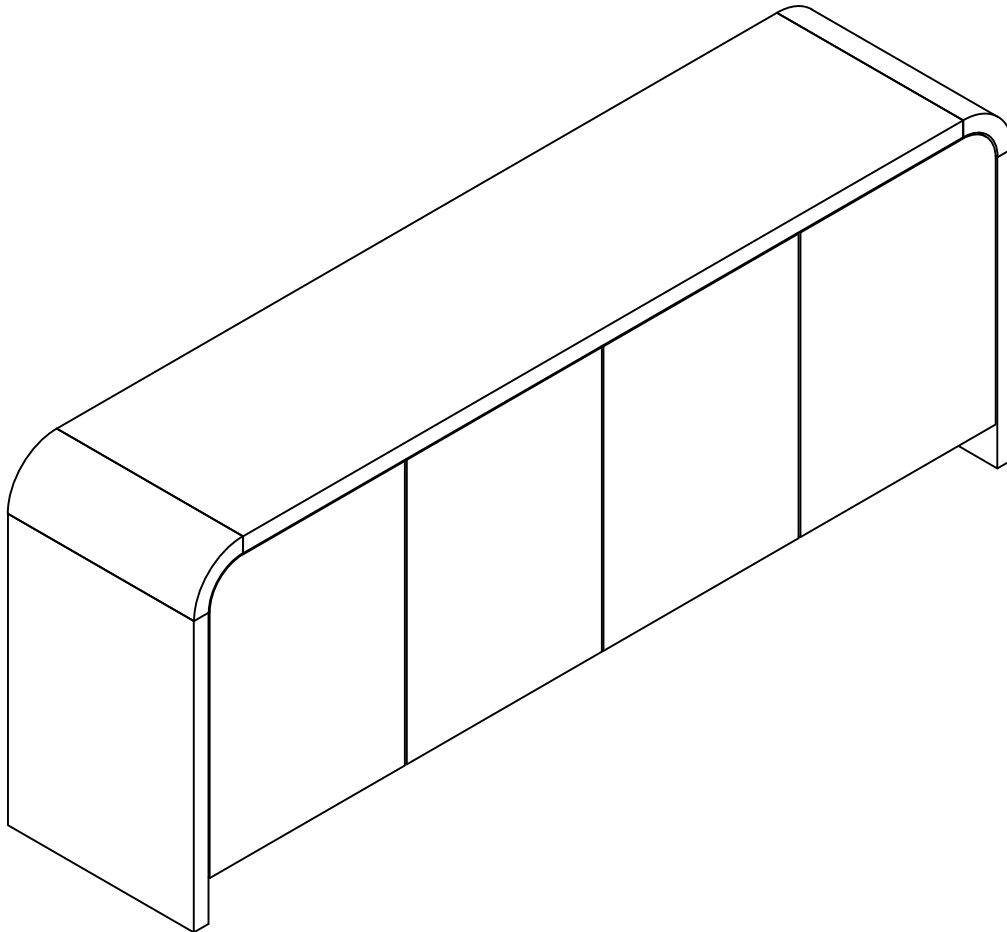

Dimensions

Width-65.748inch

Depth-14.961inch

Height-25.591inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

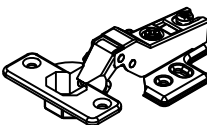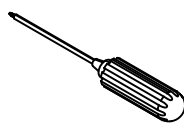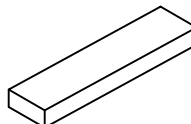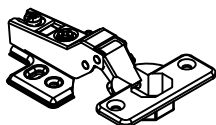(A)  6*35mm Cam Bolt x 22	(B)  15*10mm Cam Lock x 22	(C)  8*30mm Dowel x 20	(D)  4*40mm Screw x 4
(E)  3.5*14mm Screw x 82	(F)  Layer plate support x 8	(G)  Anti-tilting nylon tape x 2	(H)  Large bend hinge x 4
(I)  Phillips screwdriver x1	(J)  Back panel buckle x 20	(K)  Plastic expansion bolt x 2	(L)  EVA pad x 4
(M)  Pusher x 4	(N)  Medium bending hinge x4	(O)  Adjustable foot pads x 1	(P)  Connect the iron sheet x 1
(Q)  Pusher base x 4			

Tools required



Phillips screwdriver

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

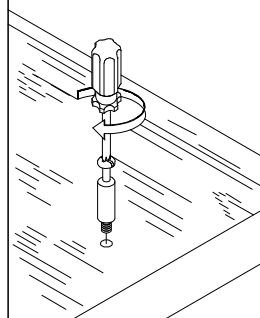

Step 2

Push the male camlock into the entry hole.

 2

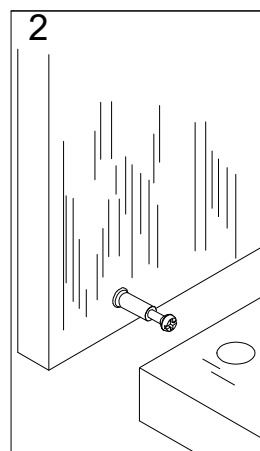


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

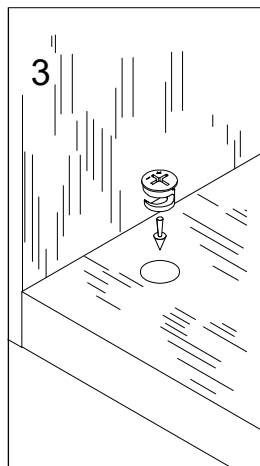


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.








The joint is now secure.

 4

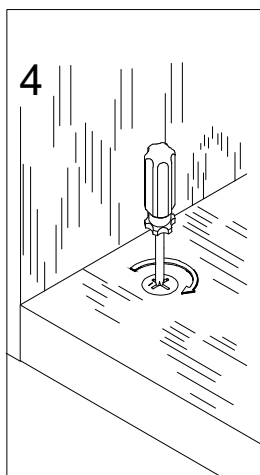


Assembly Instructions

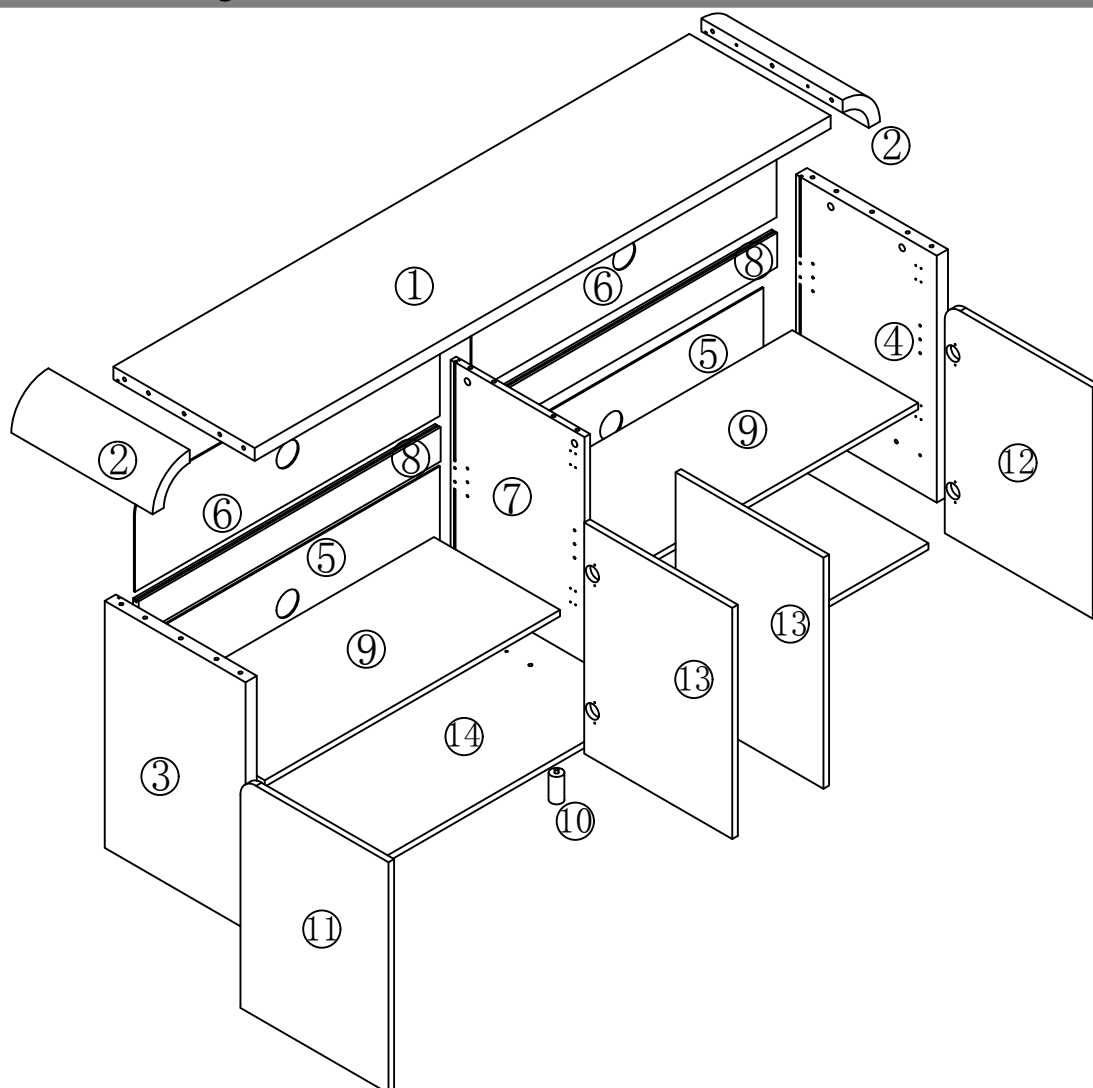 

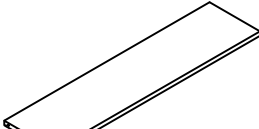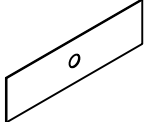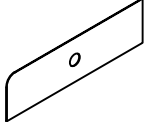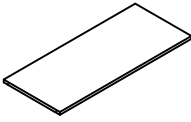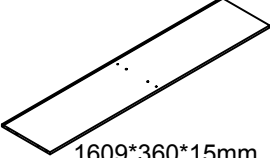       
 1469*380*30mm ①X1	 380*100*30mm ②X2	 550*379*30mm ③X1	 550*379*30mm ④X1
 805*231*3mm ⑤X2	 805*231*3mm ⑥X2	 525*360*15mm ⑦X1	 797*80*15mm ⑧X2
 794*339*12mm ⑨X2	 72*30*30mm ⑩ X1	 538*398*15mm ⑪ X1	 538*398*15mm ⑫X1
 538*398*15mm ⑬ X2	 1609*360*15mm ⑭ X1		

Assembly Instructions

 Step 1

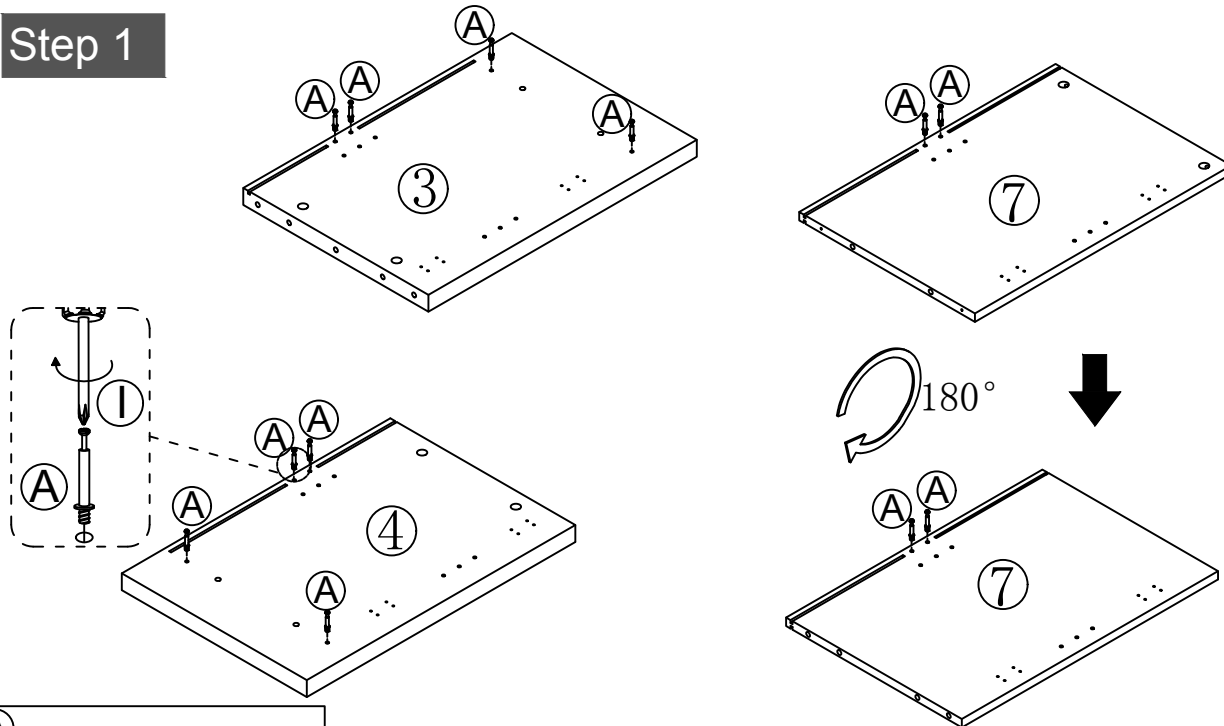


(A)

 

6*35mm Cam Bolt x 12

 Step 2

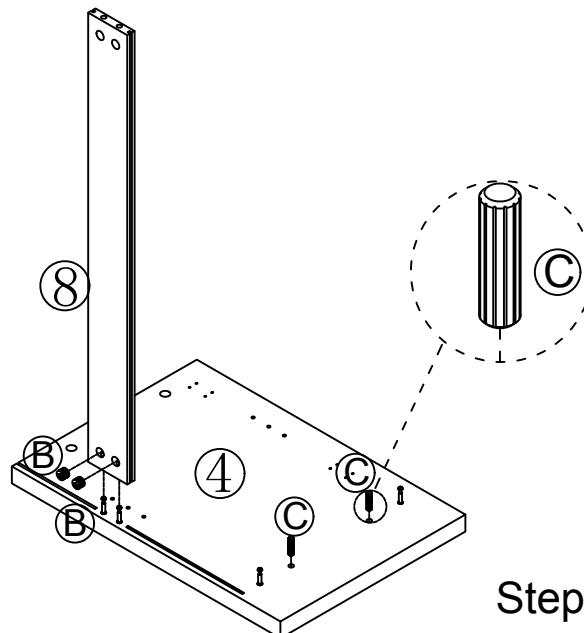

(B)



 
15*10mm Cam Lock x 2

(C)




8*30mm Dowel x 2


Step 1

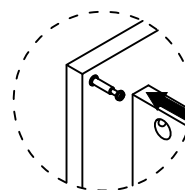

 Step 2

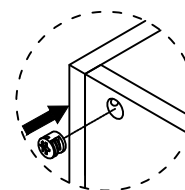


 Step 3

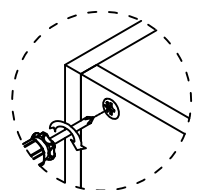

Assembly Instructions

 Step 3

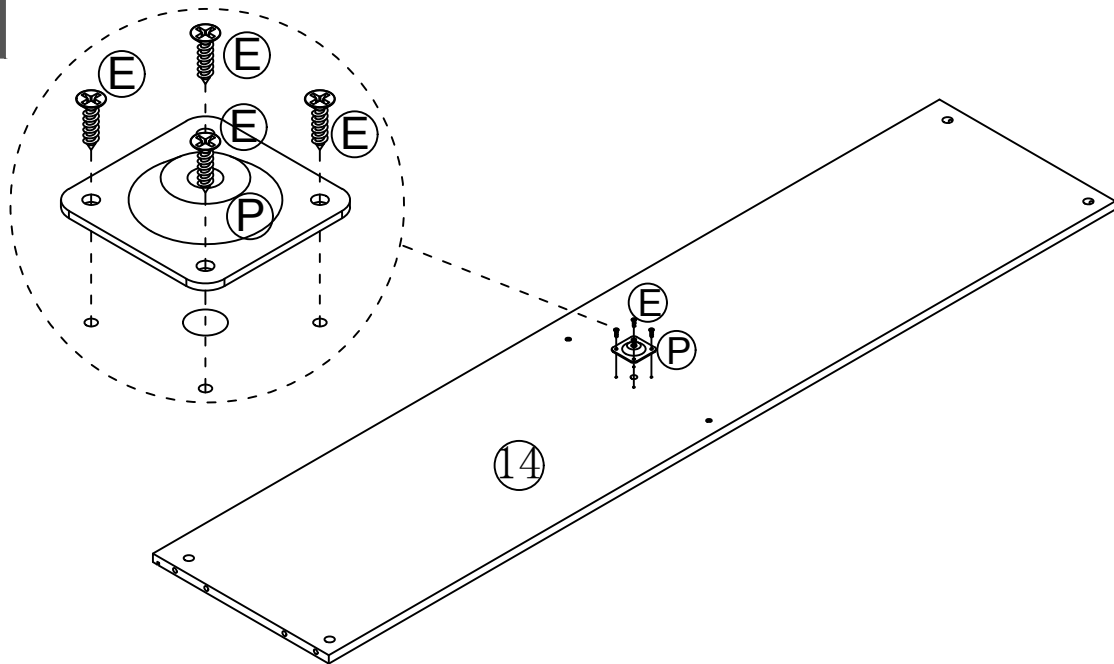


(E)




3.5*14mm Screw x 4

 (P)




Connect the iron sheet x 1

 Step 4

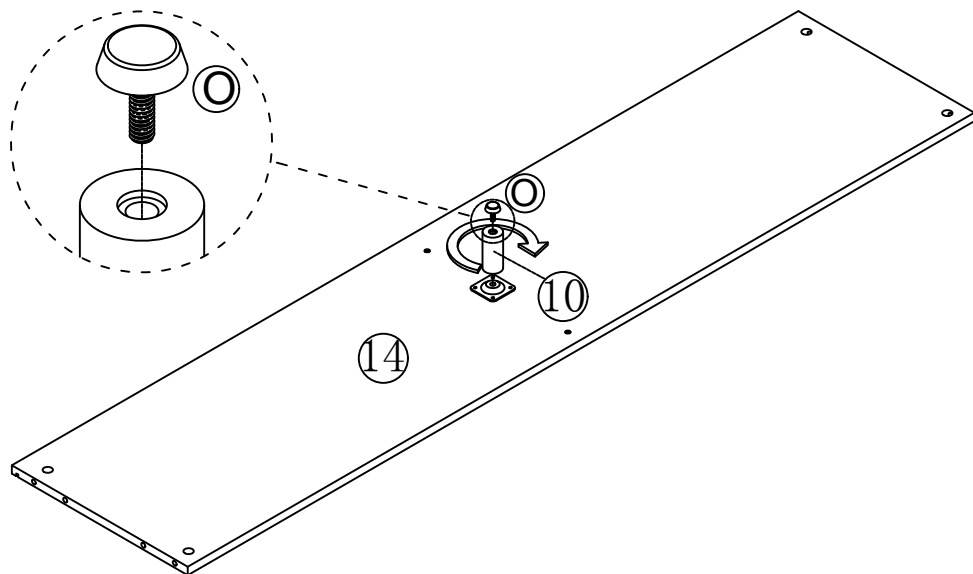



(O)

 


Adjustable foot pads x 1

Assembly Instructions

  Step 5

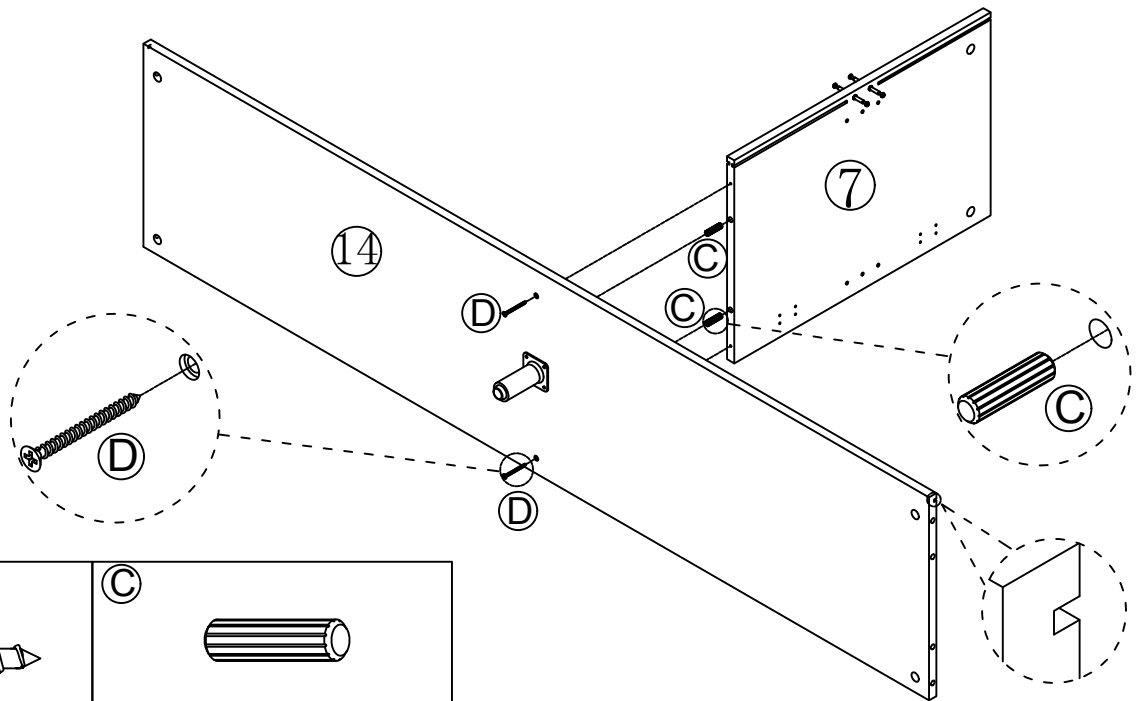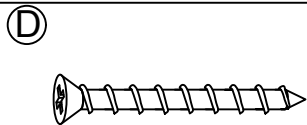


4*40mm Screw x 2

 


8*30mm Dowel x 2

 
Step 6

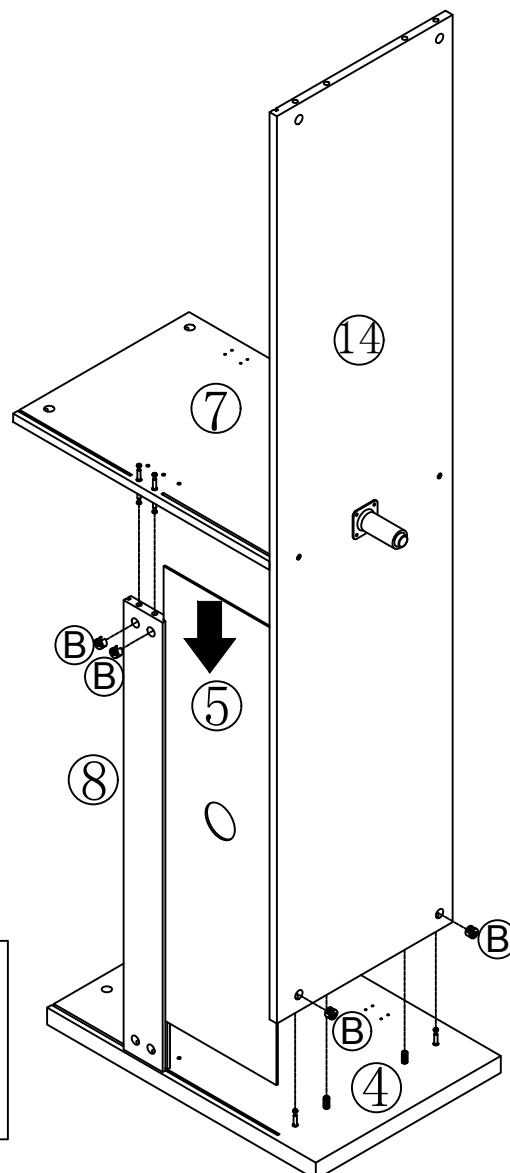

 
Caution Notice
At least two people need to
complete it simultaneously

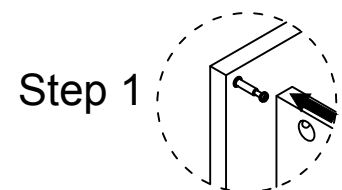

 
Step 1

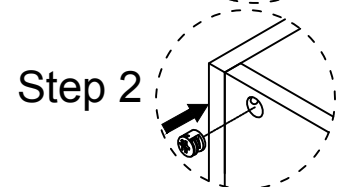

 Step 2

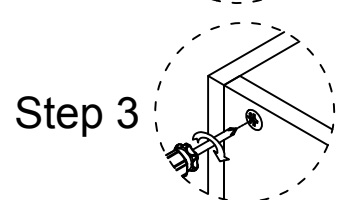

 
Step 3

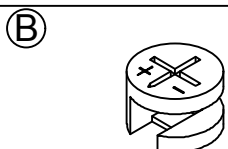


15*10mm Cam Lock x 4

Assembly Instructions

 
Step 7

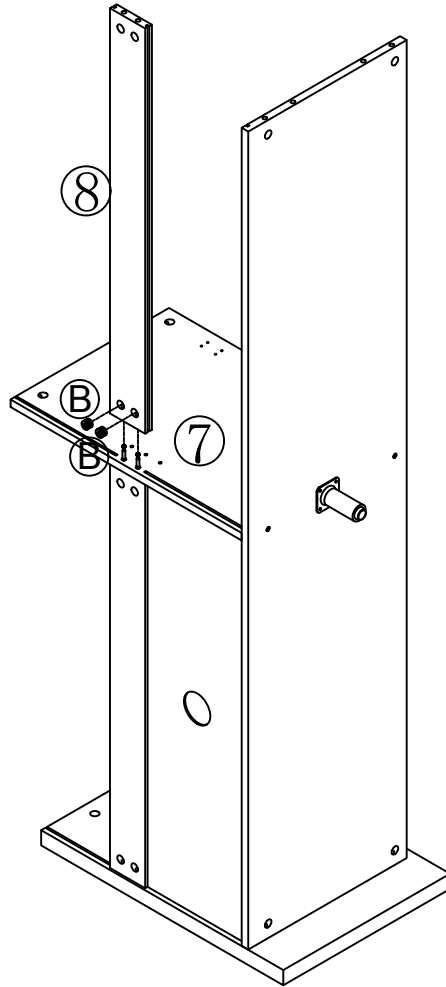

 
Step 1

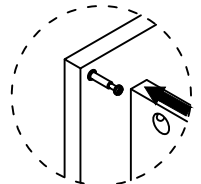

 Step 2

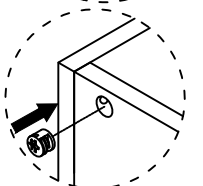

 Step 3

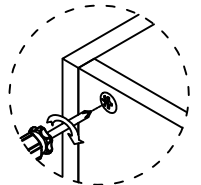


Ⓑ



15*10mm Cam Lock x 2

 Step 8

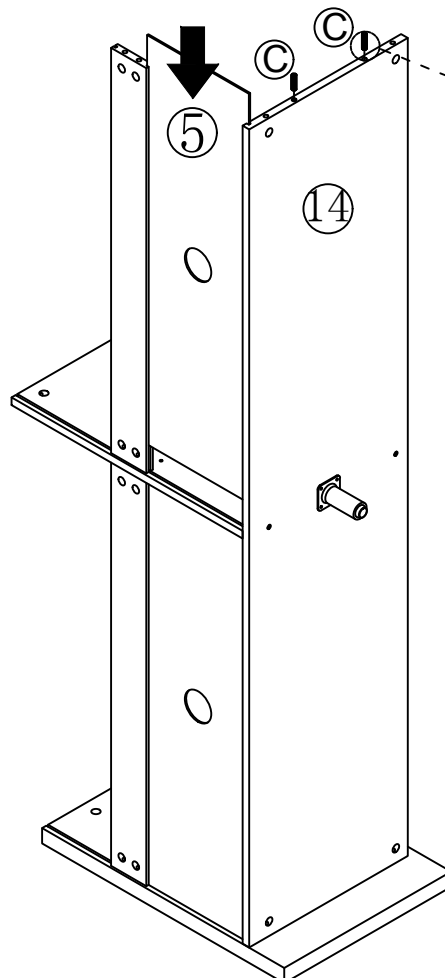


Ⓒ



8*30mm Dowel x 2

Assembly Instructions

 Step 9

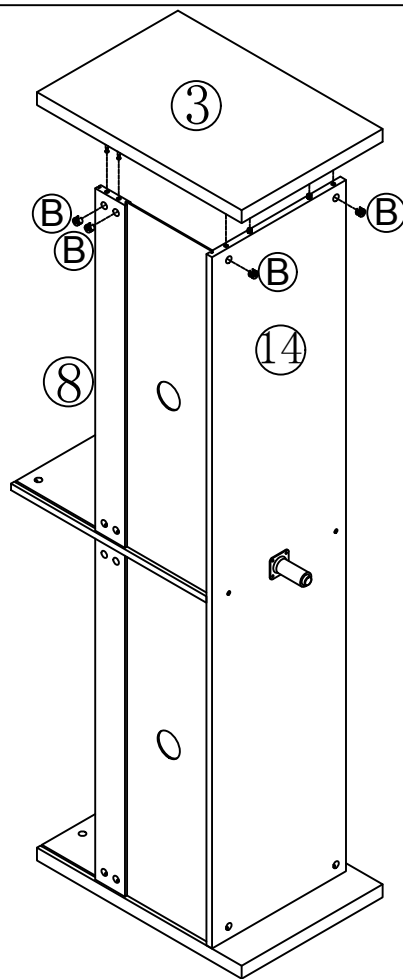


(B)




15*10mm Cam Lock x 4

 
Step 1

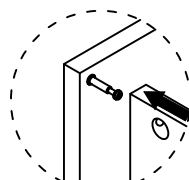

 
Step 2

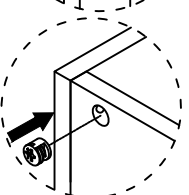

 
Step 3

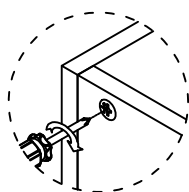


 
Step 10

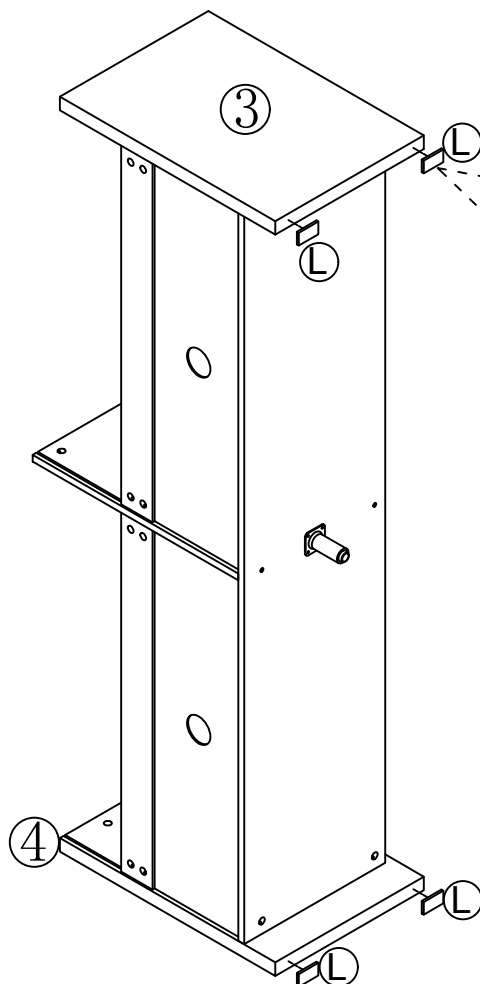


(L)

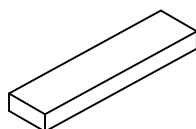 

EVA pad x 4

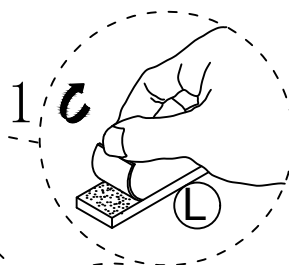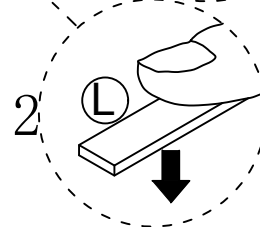  

 Be careful! At least two people are required here.

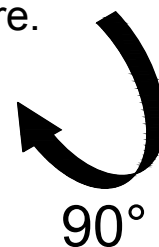


90°

10

Assembly Instructions

 Step 11

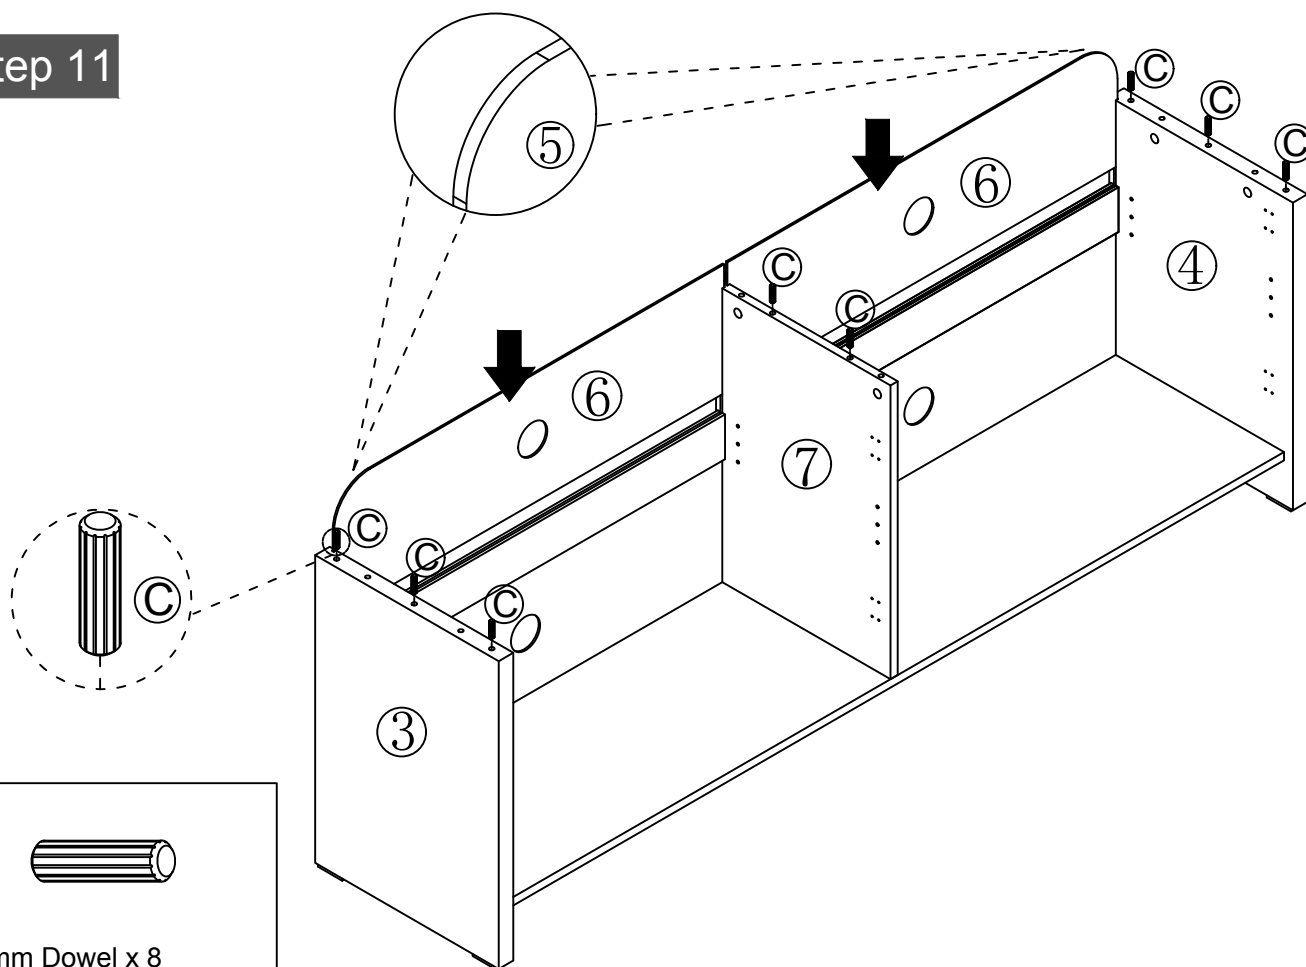


(C)




8*30mm Dowel x 8

 Step 12

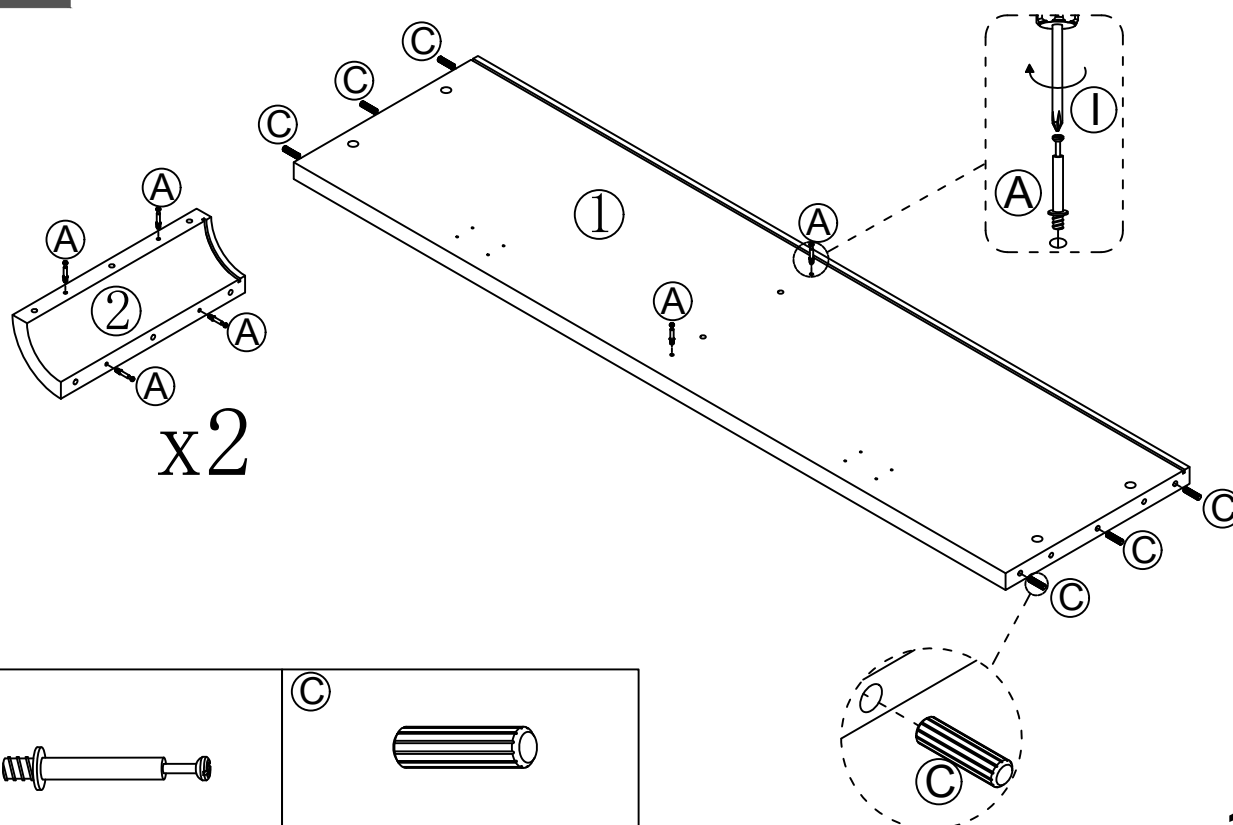

(A)

 

6*35mm Cam Bolt x 10

 
(C)




8*30mm Dowel x 6

Assembly Instructions


Step 13

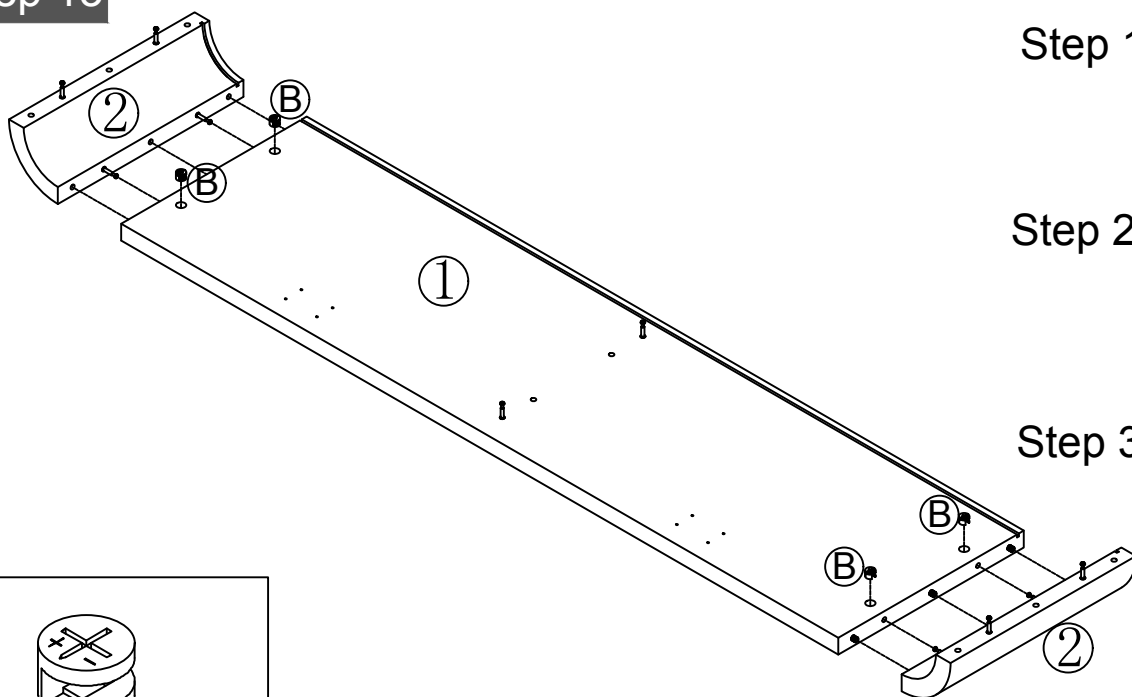

 
Step 1

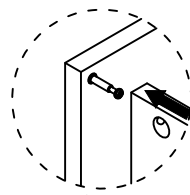

 Step 2

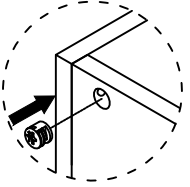

 Step 3


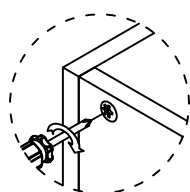


B




15*10mm Cam Lock x 4

  Step 14

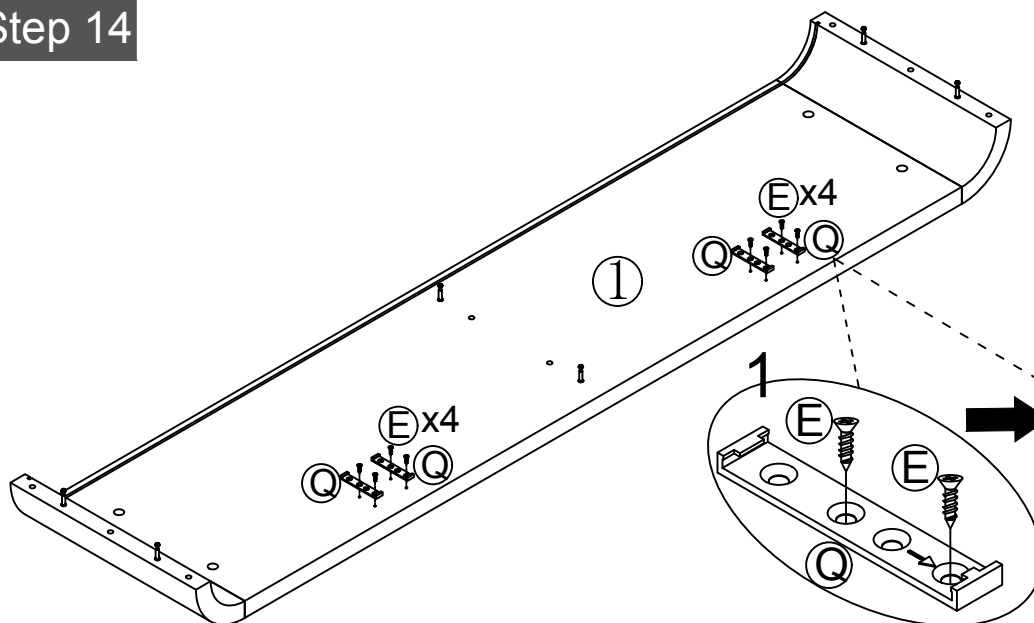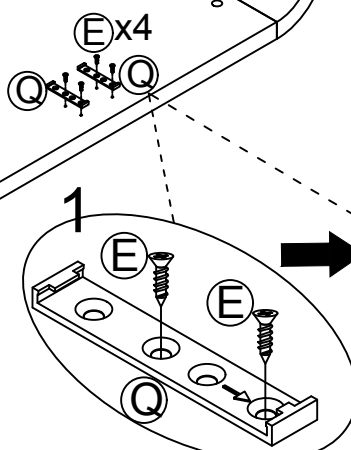

 As shown in the figure, the arrow on the base of the thruster points outward

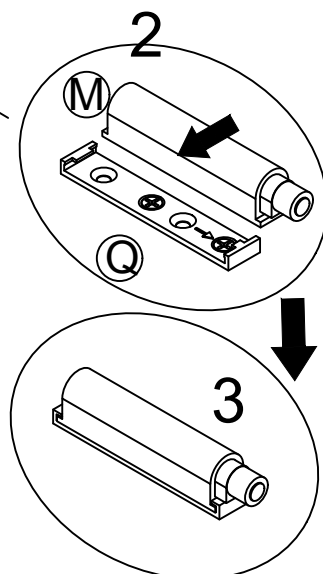


E




3.5*14mm Screw x 8

 M



Pusher x 4

 Q




Pusher base x 4


Assembly Instructions

Step 15

 
Step 1

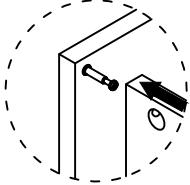

 Step 2

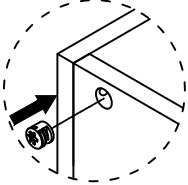

 
Step 3

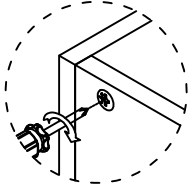



(B)



 15*10mm Cam Lock x6

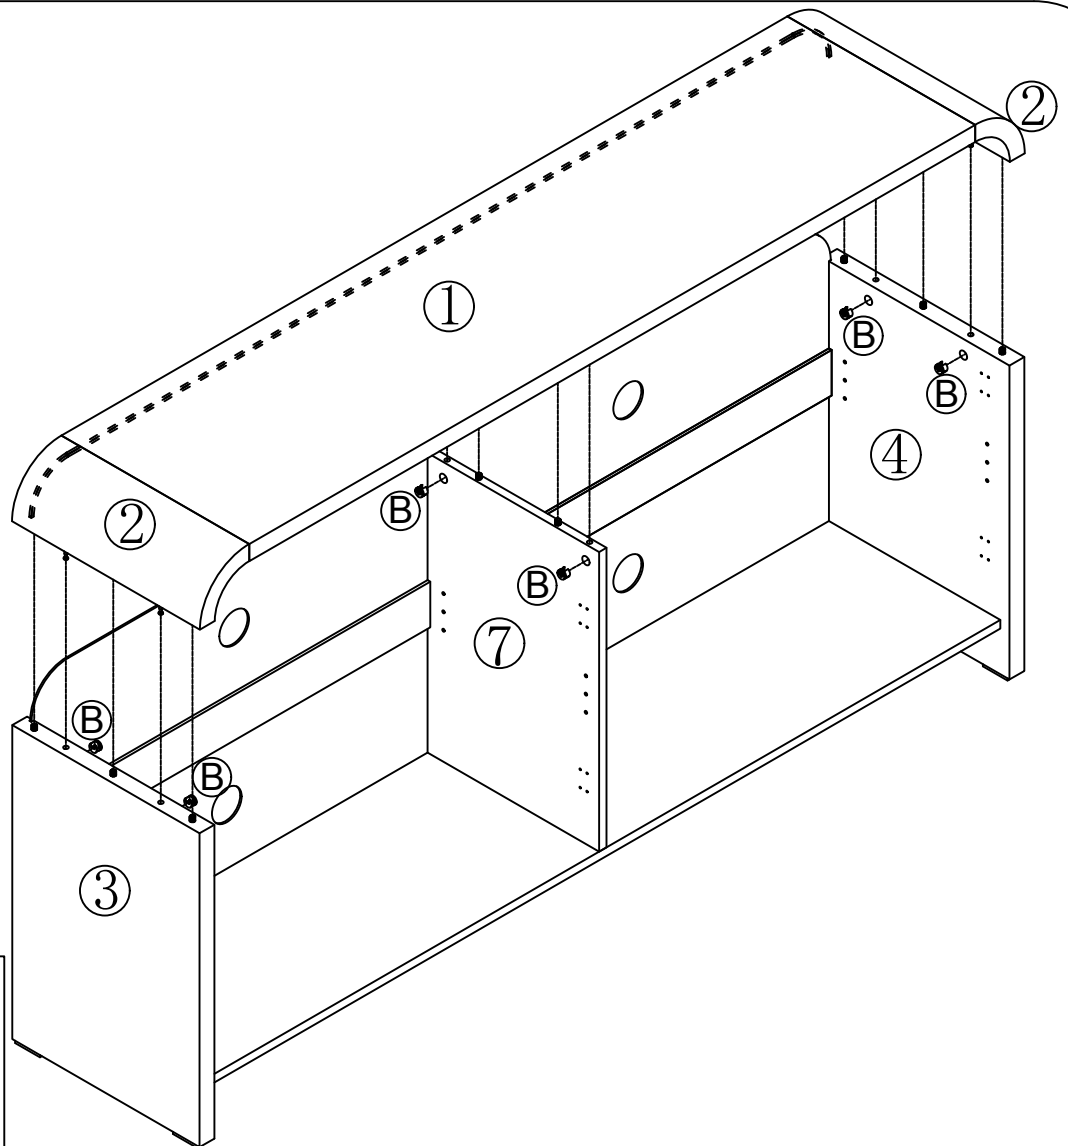

  Step 16

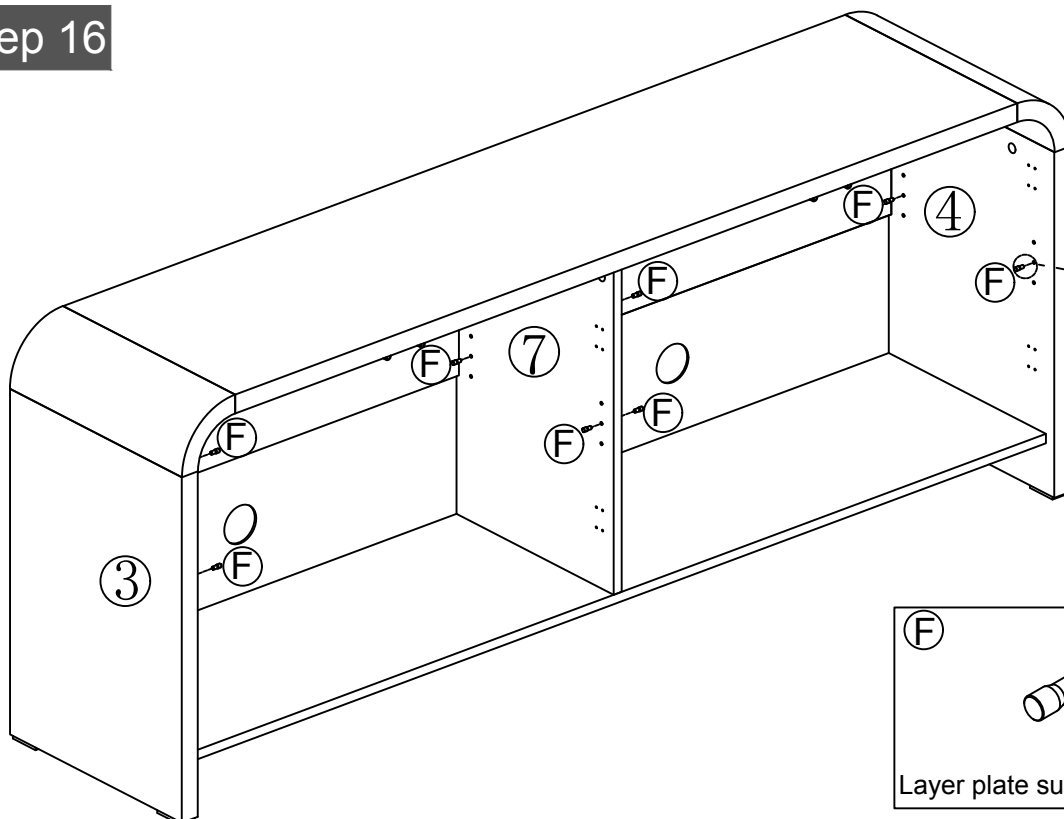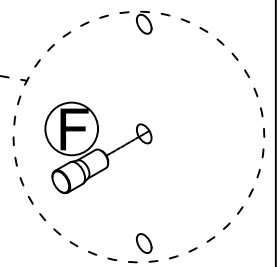


(F)




Layer plate support x 8

Assembly Instructions

 Step 17

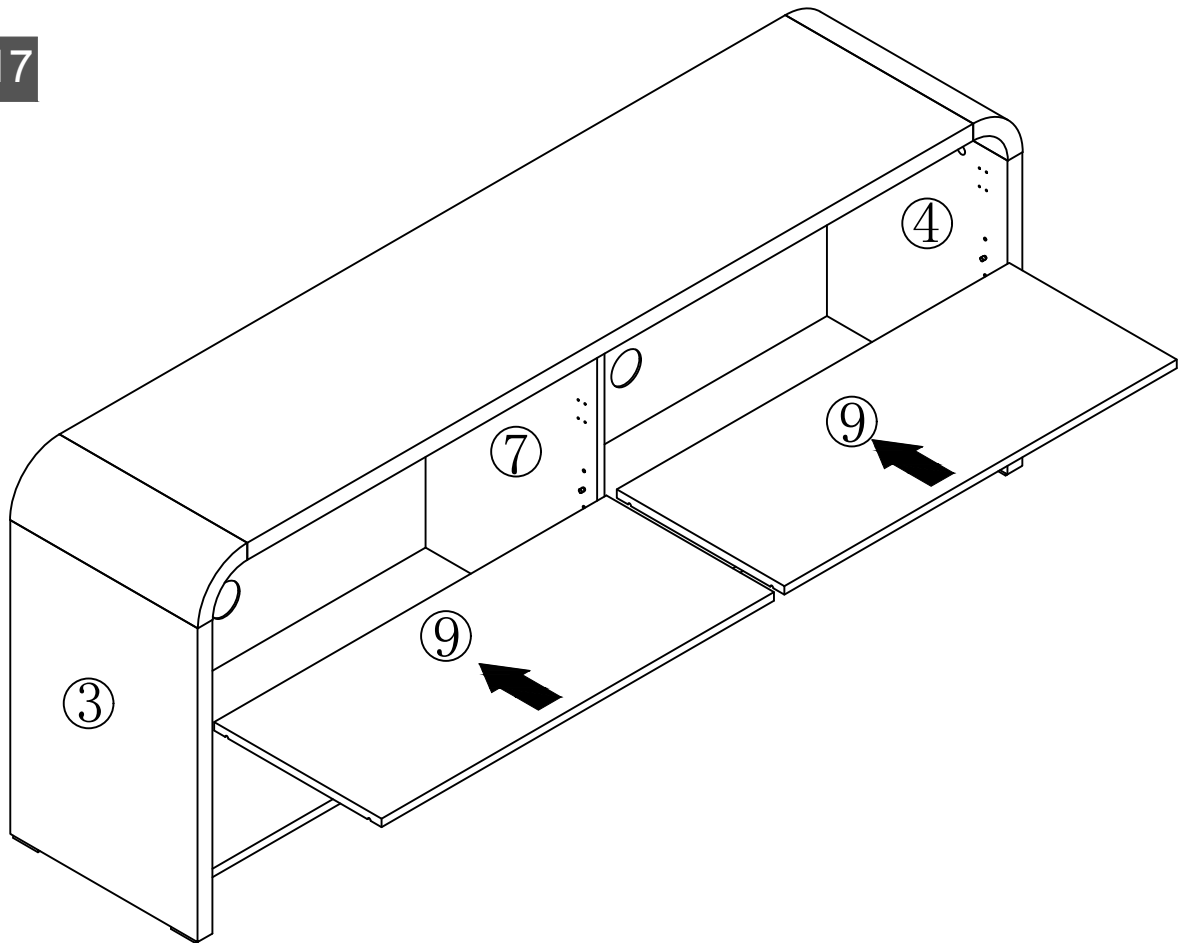

 Step 18

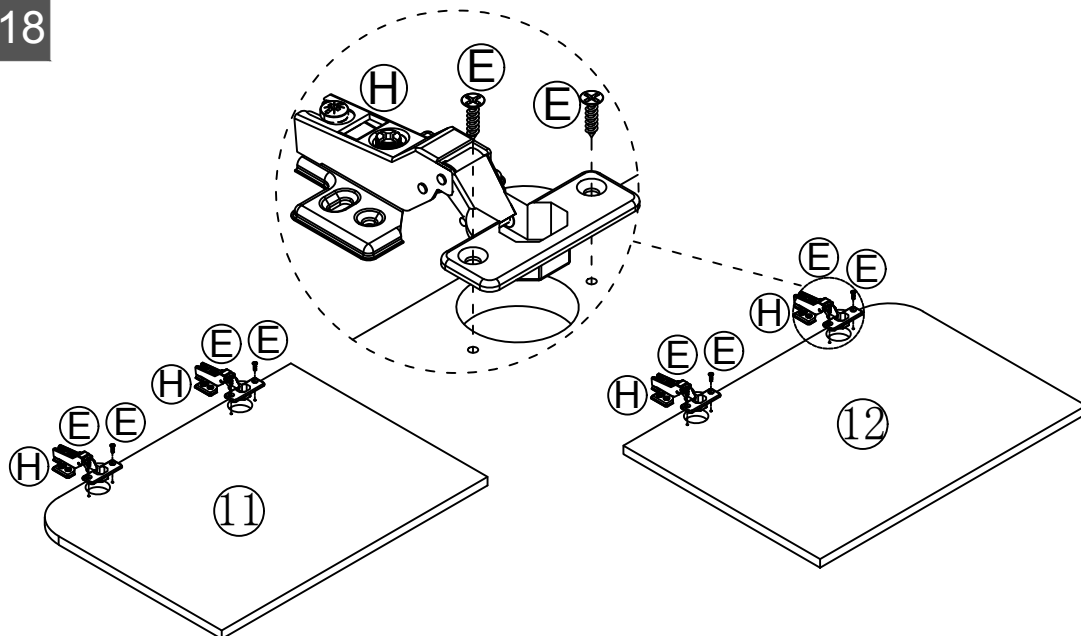


(E)



3.5*14mm Screw x 8

 (H)

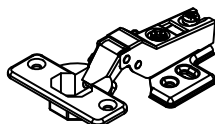


Large bend hinge x 4

Assembly Instructions

Step 19

 The following steps are for installing the hinge H

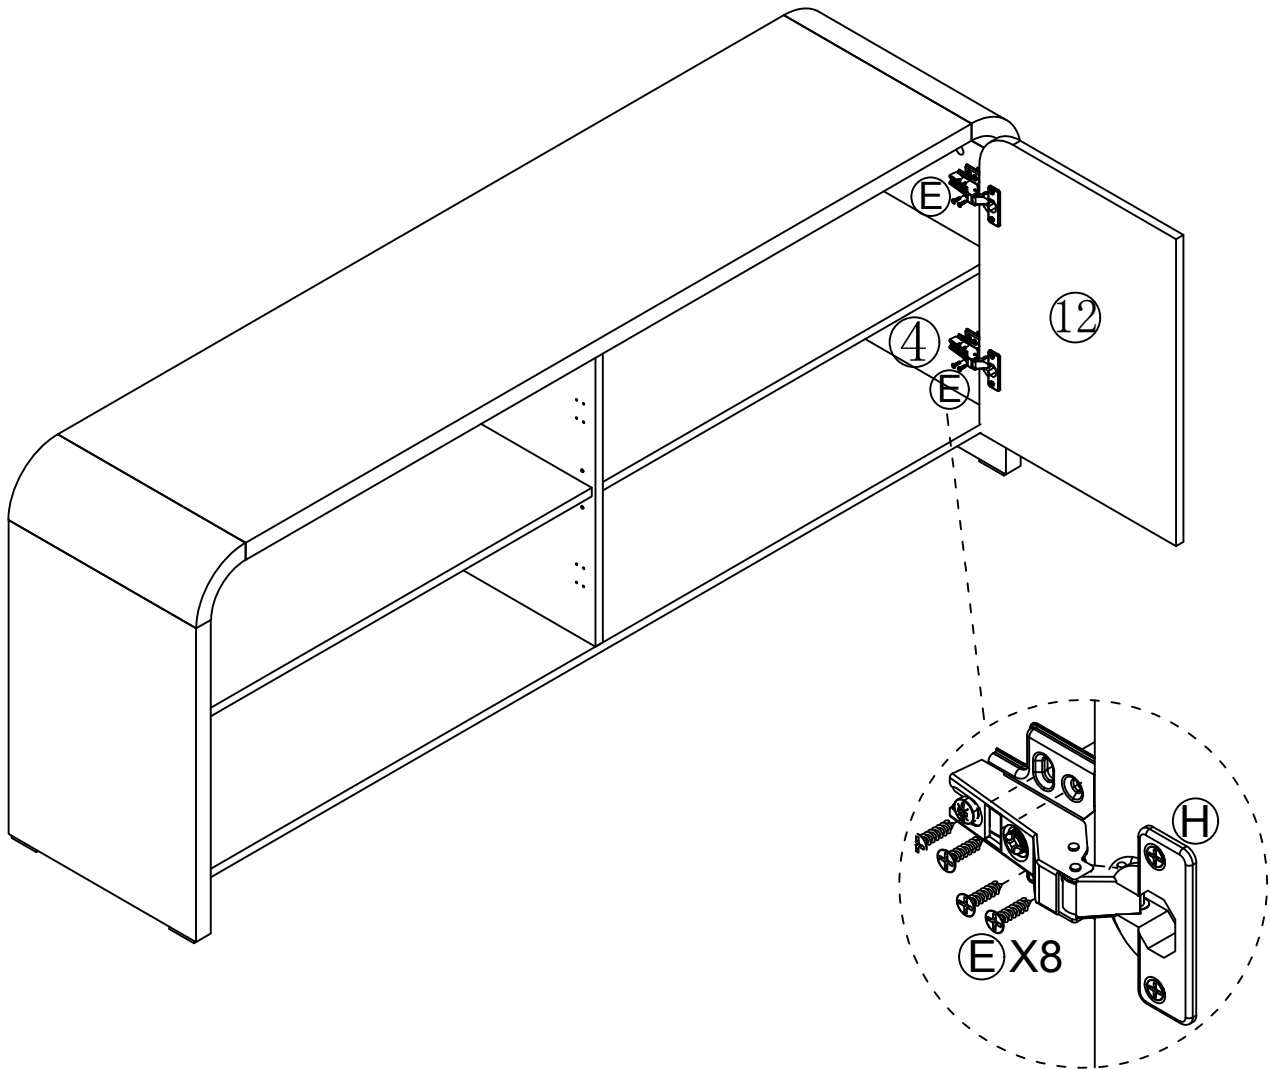

(E)

 


3.5*14mm Screw x 8

Assembly Instructions

Step 20

The following steps are for installing the hinge H

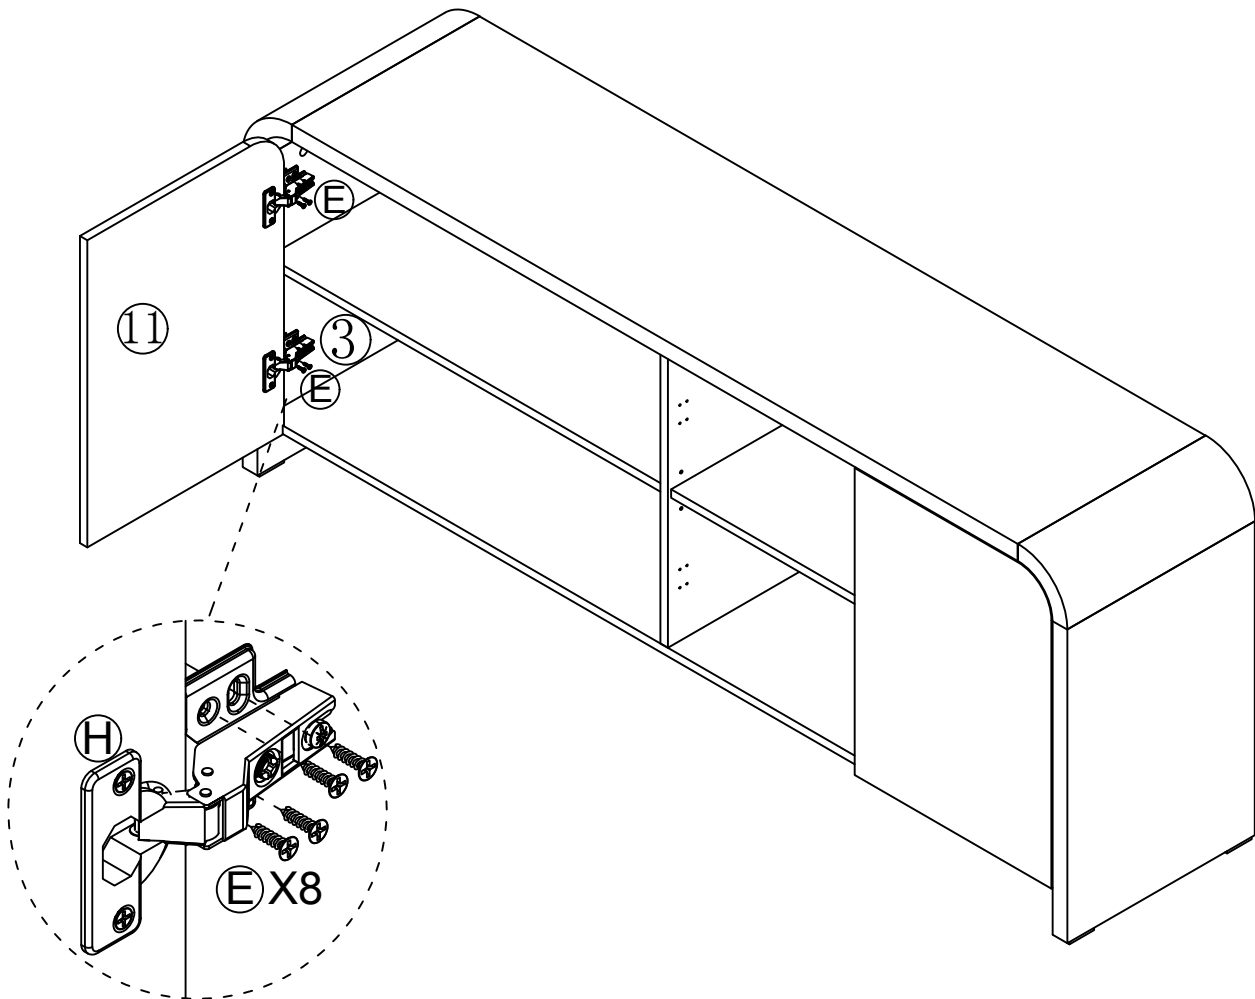


Ⓔ




3.5*14mm Screw x 8

Assembly Instructions

 Step 21

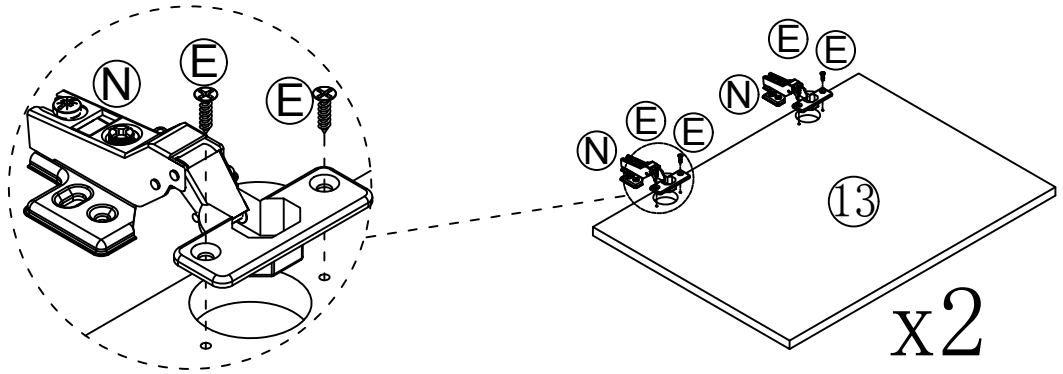


(E)

 

3.5*14mm Screw x 8

 
(N)

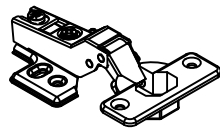

Medium bending hinge x4

Step 22

 The following steps are for installing the hinge N

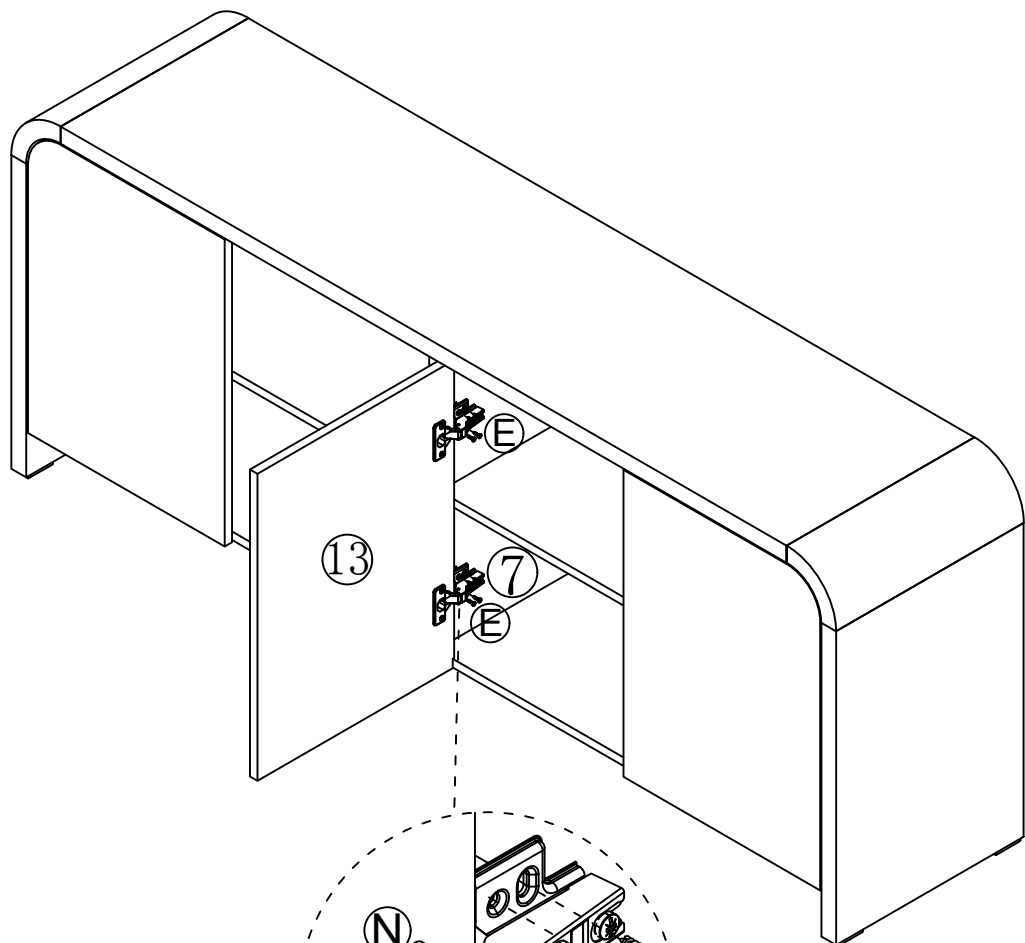

(E)

 


3.5*14mm Screw x 8


Assembly Instructions

Step 23

The following steps are for installing the hinge N

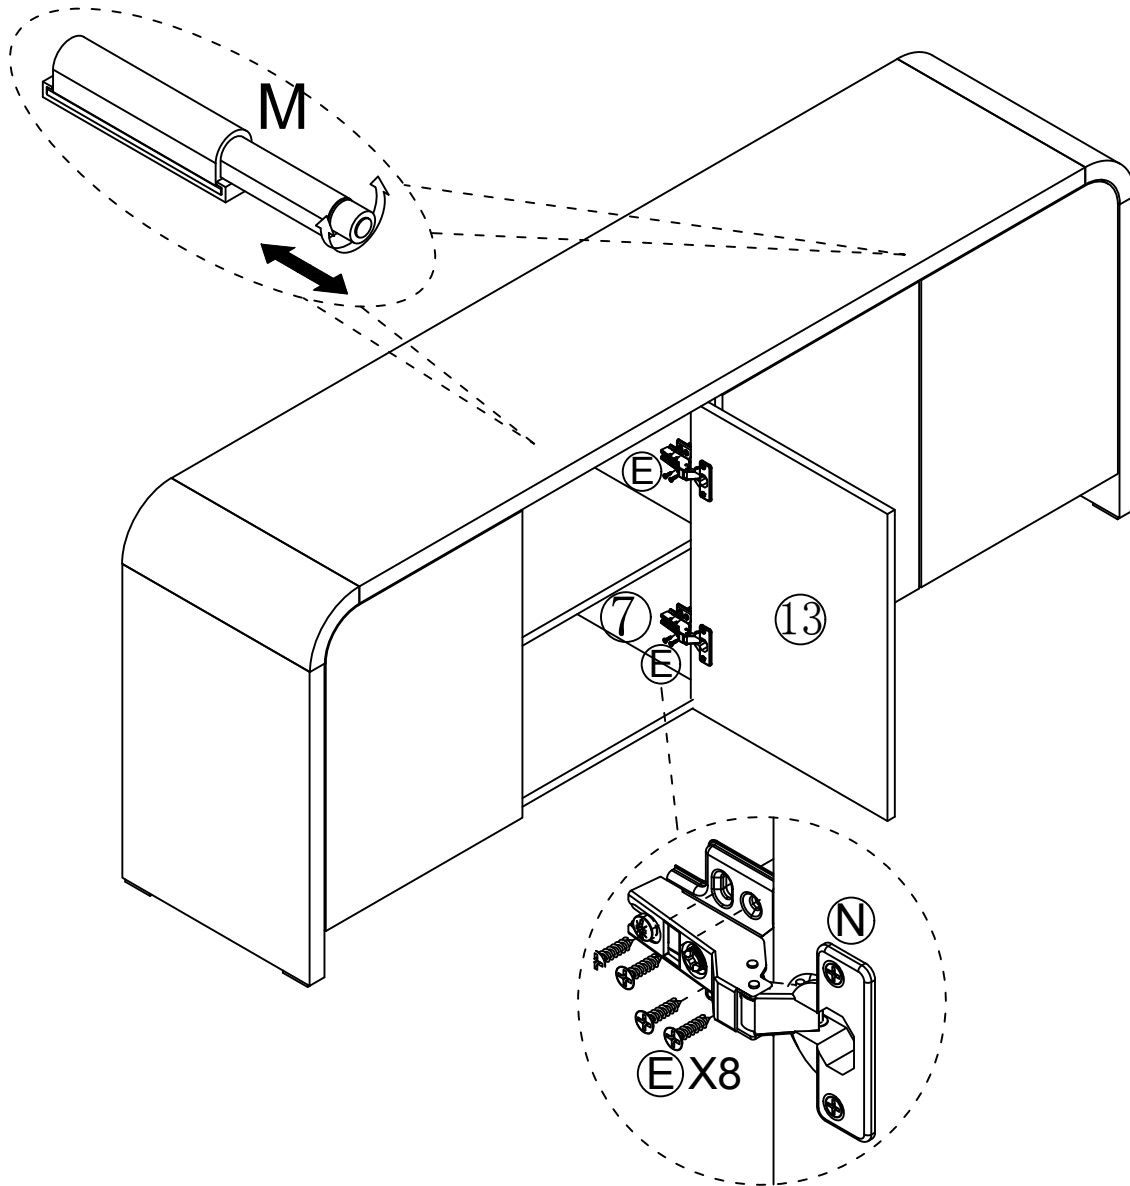


 Note that when the door cannot be opened by pressing it, you can adjust the hardware M as shown in the picture to turn the head of the pusher outward


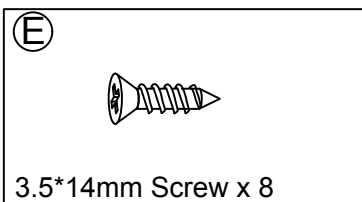


Assembly Instructions


 
When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

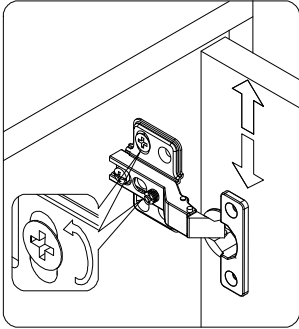

 
 
1. Adjust the screws shown in Figure 1 to adjust the door up and down.

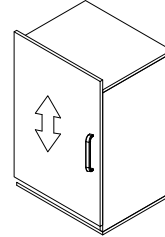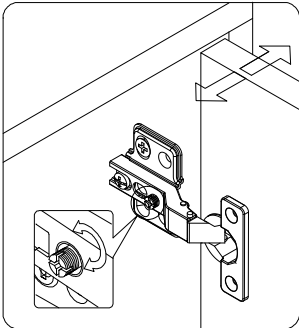

  2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

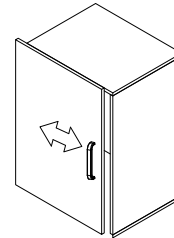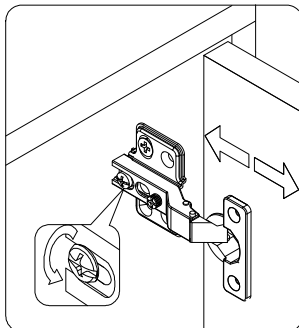

  
3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

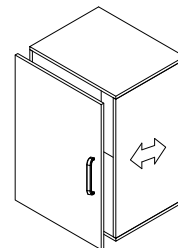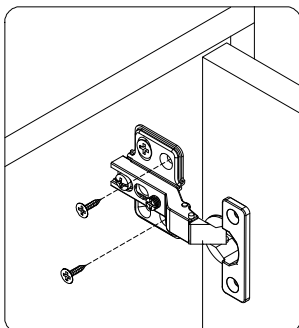


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Assembly Instructions

 Step 24

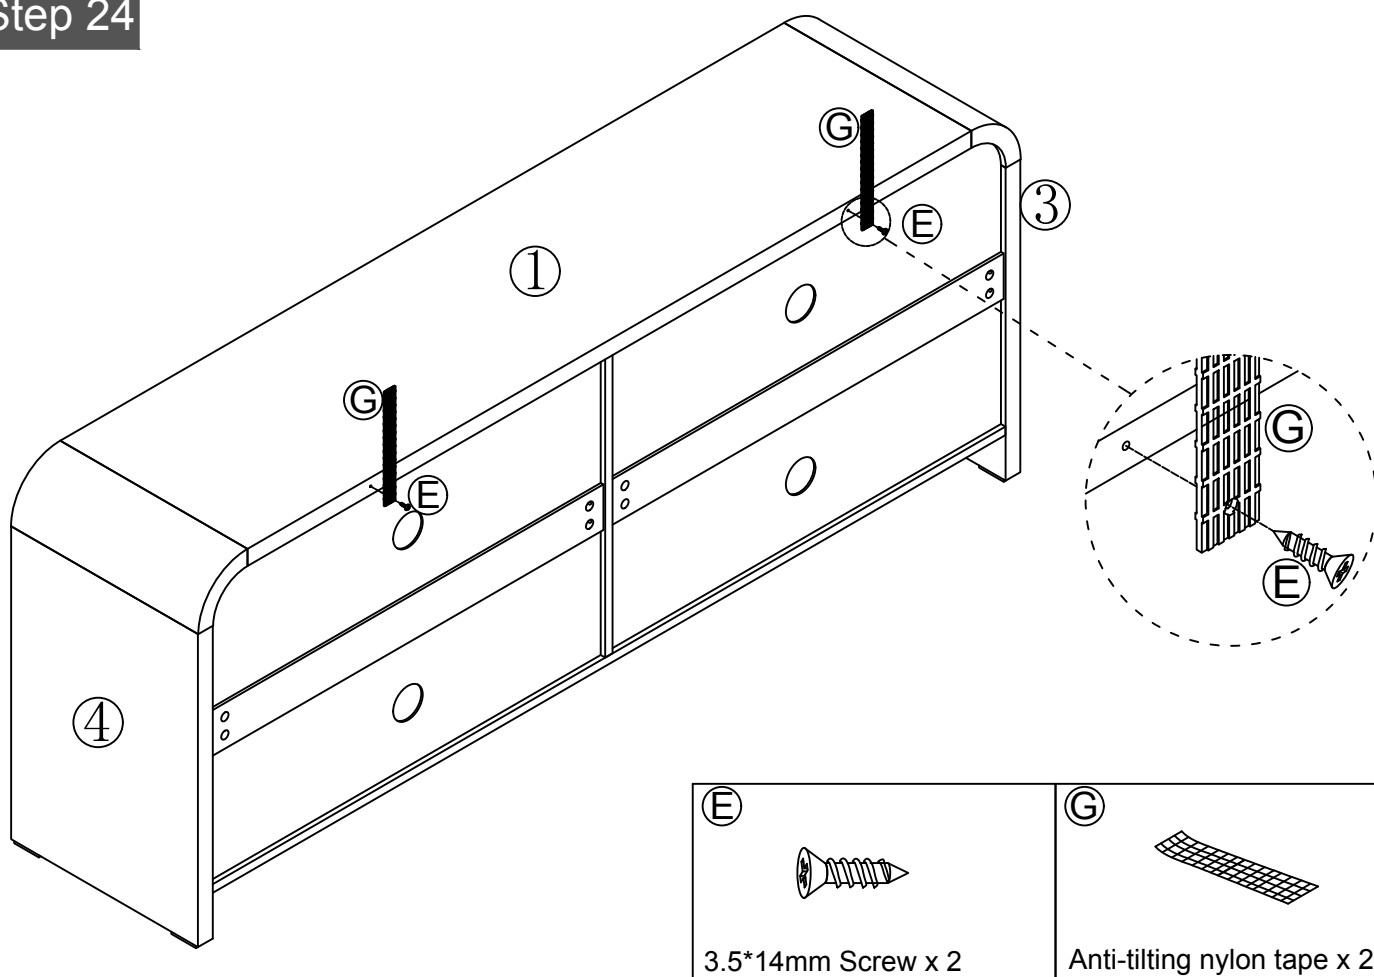


 Step 25

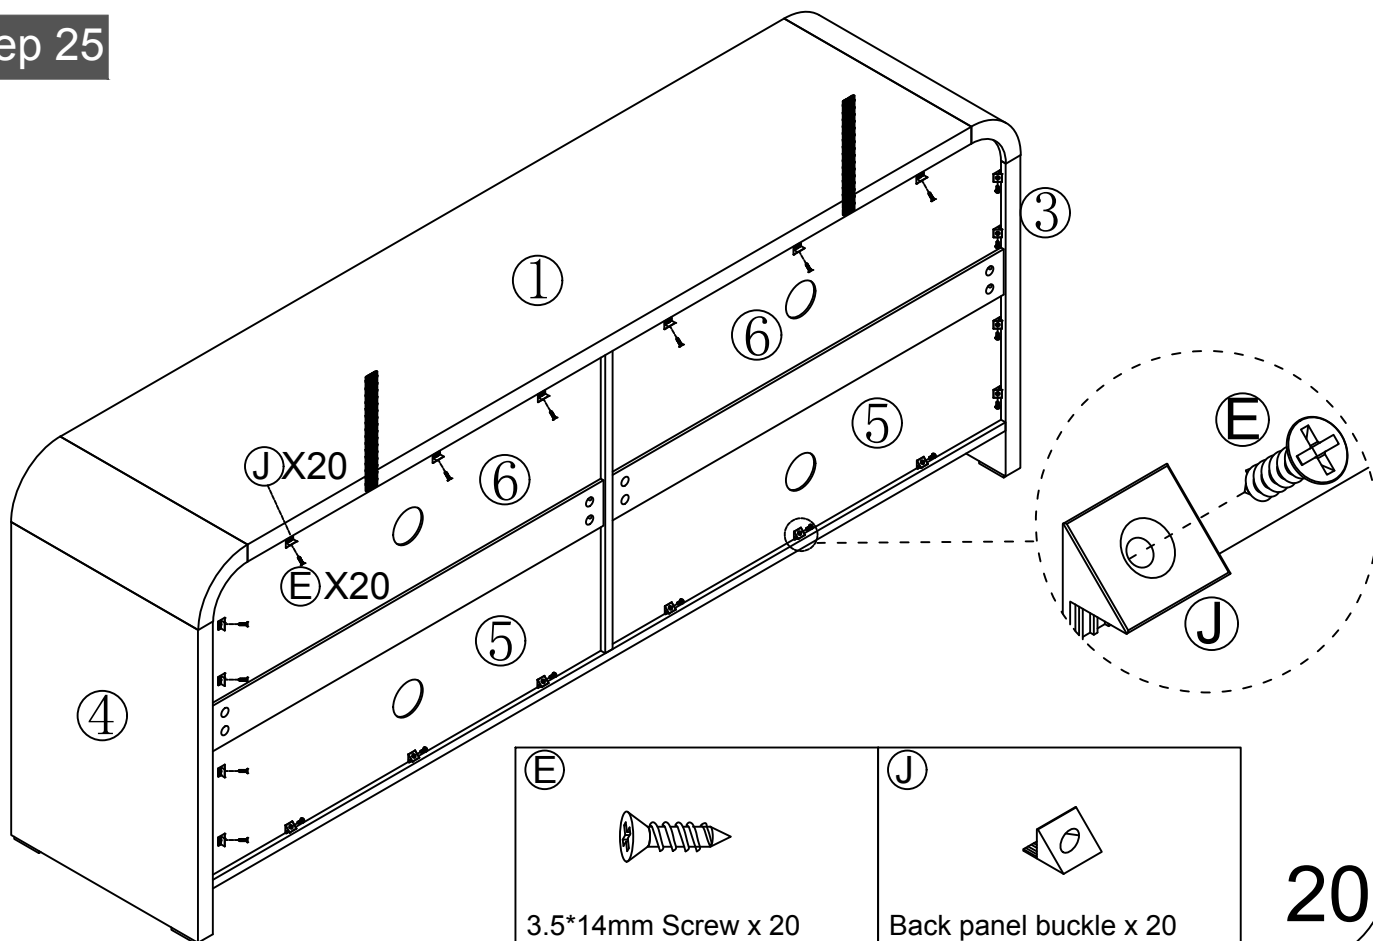

Assembly Instructions

 Step 26

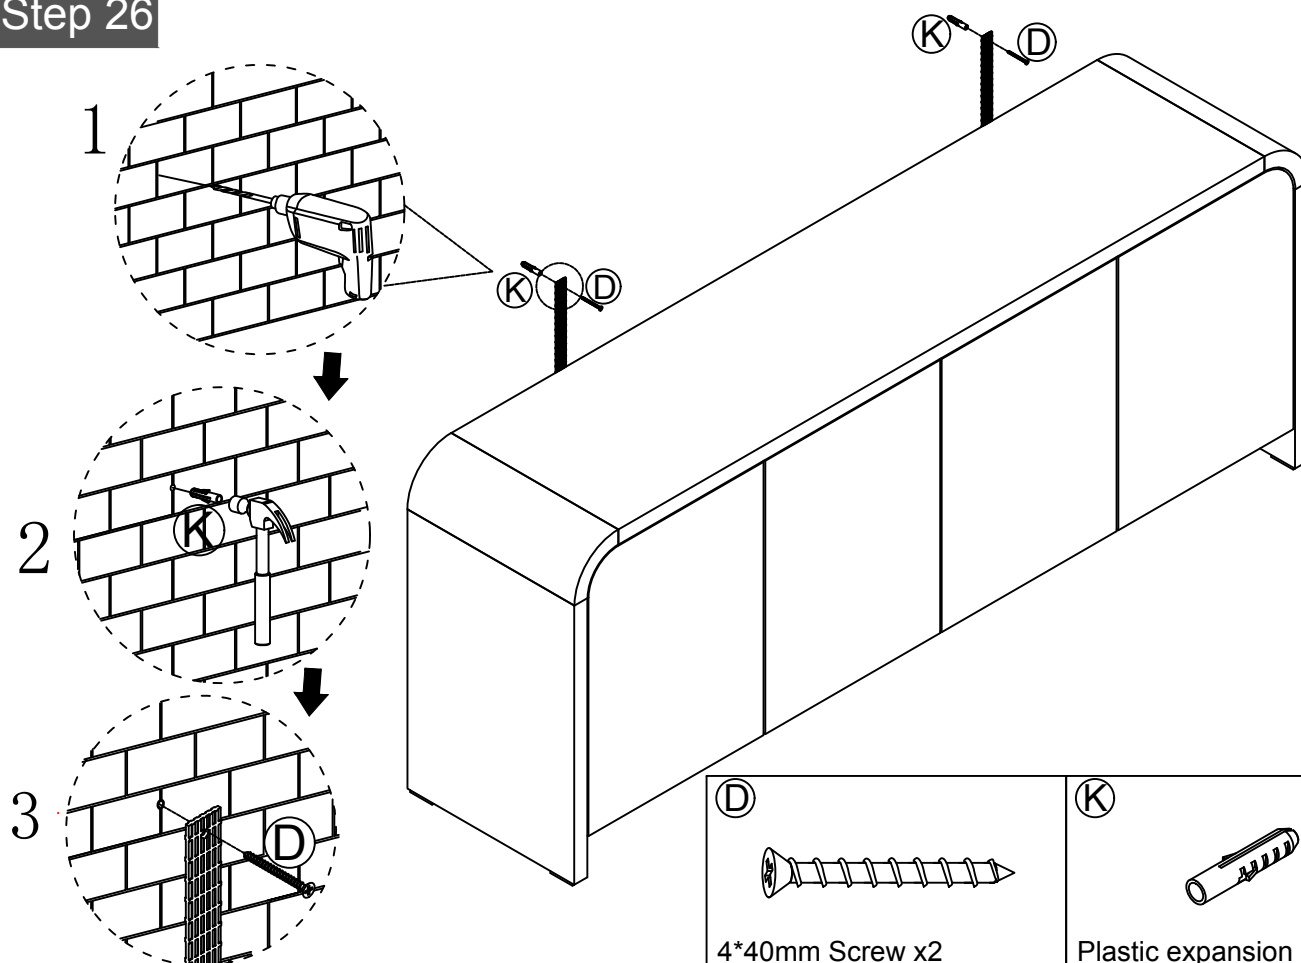

FINISH

