

# catnapper



## Hand Wand Features:

Power footrest control, power headrest control, power lumbar control, heat, massage, USB, and LED backlight.



## LED Backlight:

The buttons are each equipped with an indicator LED that will light up when pressed.



#### Foot Buttons:

When held down, the Foot “Open” button will recline the furniture. To stop the furniture in the desired comfort position simply release the button at any time.

When held down, the Foot “Close” button will bring the furniture out of the reclined position and return to the normal upright seated position. To stop the furniture in a particular position simply release the button.



#### Head Buttons:

When held down, the Head “Open” button will extend the headrest, to stop the headrest simply release the button.

When held down, the Head “Close” button will retract the headrest to the normal closed position, to stop the headrest in a position simply release the button at any time.



#### Lumbar Buttons:

When held down, the Lumbar “Open” button will extend the lumbar support in the lower back of the furniture, to stop the lumbar support simply release the button.

When held down, the Lumbar “Close” button will retract the lumbar support to the normal closed position, to stop the lumbar support in the desired position simply release the button at any time.



#### Home Button:

When held down, the “Home” button will return the furniture to the normal closed position by closing the head, foot, and lumbar motors.



#### Message Mode Button:

Pressing the message button will activate the vibrating massage feature of the furniture.

The message mode button will cycle through the two massage modes; steady and pulse.




#### Message Mode: Pulse

By default the massage feature starts on the “pulse” mode and “medium” intensity. The “pulse” mode will alternate the massage motors from “on” to “off” to “on” in even intervals.

The Pulse massage mode is indicated by the RED LED under the Massage Label on the hand wand.

The medium intensity setting is indicated by the BLUE LED on the intensity label on the hand wand.

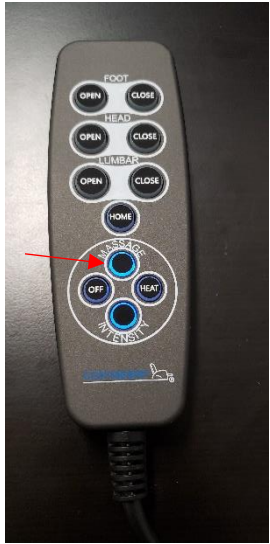

### Massage Mode: Steady

Pressing the message button a second time will change the massage mode to “steady”. The “steady” mode will turn on all of the massage motors, the motors in “steady” mode will run constantly.

The Steady massage mode is indicated by the BLUE LED under the Message Label on the hand wand.


Again, the medium intensity setting is indicated by the BLUE LED on the intensity label on the hand wand.



### Massage Intensity Button:


When the massage feature is enabled, the massage intensity button will cycle through Low, Medium, and High intensity settings.

By default the Intensity setting starts on Medium, which is indicated by the BLUE LED.

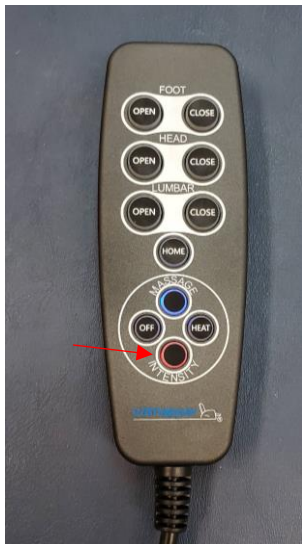

### Massage Intensity Button:

Pressing the intensity button will change the massage power from BLUE (Medium) to RED (High).

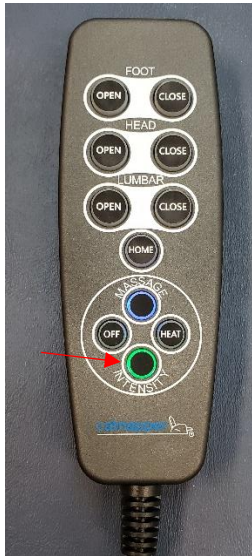

#### Massage Intensity Button:

Pressing the intensity button again will change the massage power from RED (High) to GREEN (Low).



#### Heat Button:

Pressing the heat button will activate the heating pad. This button will also cycle through the 3 heat settings; Low, Medium, and High.

By default the heating button will start on RED (High) mode.



#### Heat Button:

Pressing the heat button again will cycle the heat setting from RED (High) to BLUE (Medium).



#### Heat Button:


Pressing the heat button again will cycle the heat setting from BLUE (Medium) to GREEN (Low).



#### Off Button:

When pressed, the off button will stop both the heating and massage functions.

# 18-20 Minutes

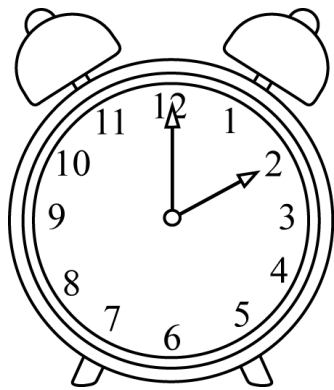

#### Safety Timer:


This system is protected by a safety timer that will shut the heating and massage functions off after approximately 18-20 minutes of runtime.



## Furniture Assembly Instructions

Your furniture is shipped with the Back Frame disconnected from the rest of the furniture.

**Step 1.** To connect the Back Frame of the furniture, simply align the female KD brackets (also called KD sleeves) on the Back Frame with the male KD brackets at the back of the Seat/Arm Frame and push down to lock in place. When the bracket is successfully locked into place you will hear an audible “click” confirming that the locking tab has been engaged.

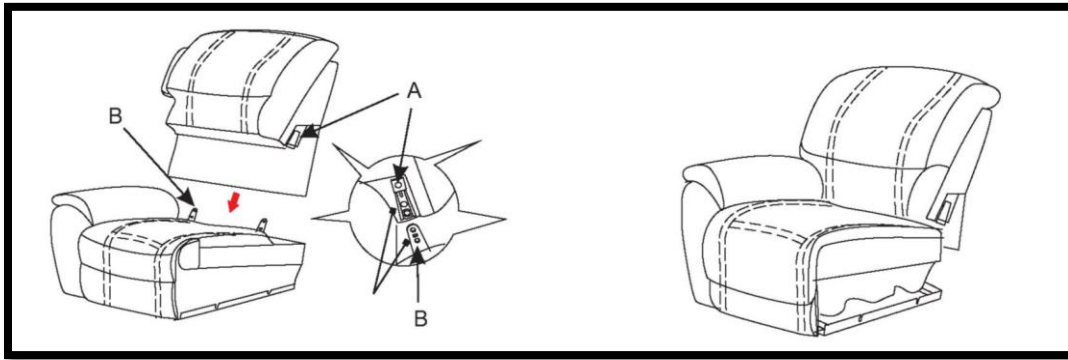

**Step 2.** With the Back Frame locked into place, carefully flip the furniture over to expose the reclining mechanism. Cut or remove any bands/ties that were used to restrict the reclining mechanism during shipping. To prevent damage, this must be done before operating the furniture.


**Step 2A. (Power Furniture Only)** Power furniture may require additional setup before use

If your power furniture has Heat, Massage, Power Headrest, and/or Power Lumbar feature, lift up the back cover (this is secured by Hook and Loop fastener like Velcro) and plug in any loose wire/s, the wires are either keyed or color coded to ensure that they can only go in the intended location.

**Step 2B. (Power Furniture Only)** All power furniture ships with a power cord that will plug into the wall after setup is complete.

The power cord is attached to the reclining mechanism under the furniture and can be accessed by carefully flipping the furniture over. While the furniture is flipped over, detach the power cord and cut any ties that were used to secure the mechanism during shipping. Note: The power cord is intended to plug directly into a wall outlet, do NOT use an extension cord with this product.

**Step 3.** Attach the back cover to the bottom of the Seat/Arm frame (this is done with preinstalled hook and loop fastener).

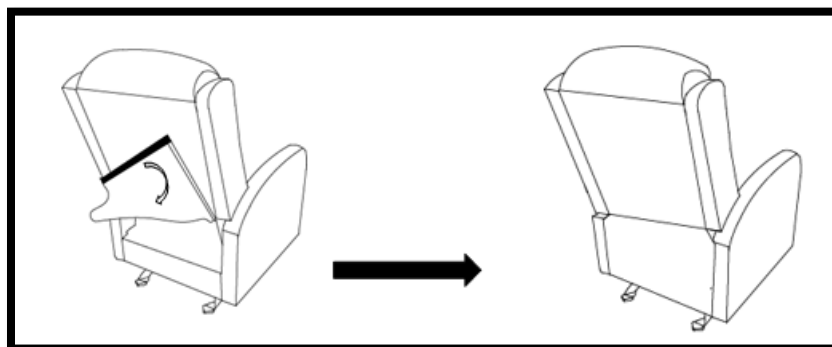

**Step 4.** Test each function of your furniture and enjoy!