

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





 
Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective, Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.





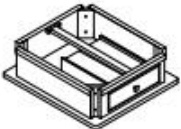


ASSEMBLY TIME PER UNIT: 20 MINUTES

PARTS IDENTIFICATION


A	TOP		1PC
B	BOTTOM SHELF		1PC
C	LEG		4PCS

z HARDWARE PACKAGE


NO	DESCRIPTION	FIGURE	QTY
1	ALLEN WRENCH (4MM)		1PC
2	ALLEN BOLT (Ø1/4*2")		8PCS
3	LOCK WASHER (Ø1/4")		8PCS
4	FLAT WASHER (Ø1/4**19MM)		8PCS
5	WOOD DOWEL (Ø8*40MM)		4PCS

It needs two persons and takes about twenty minutes to assemble the item.

STEP 1:

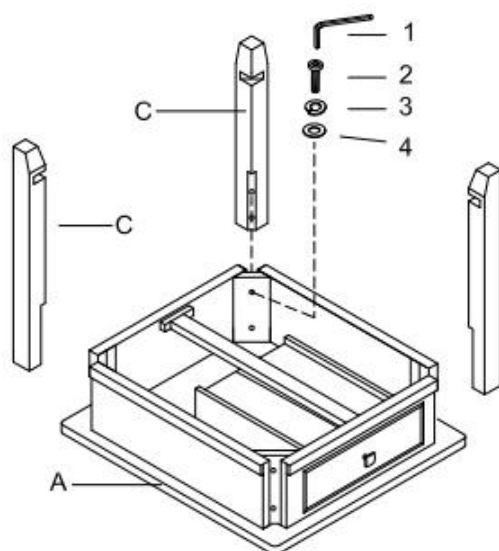

STEP 2:

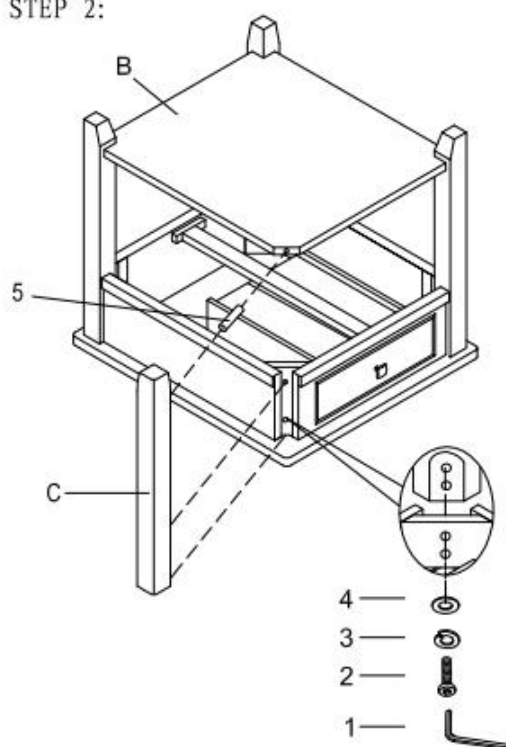

COMPLETED

