 


INSTRUCTION MANUAL

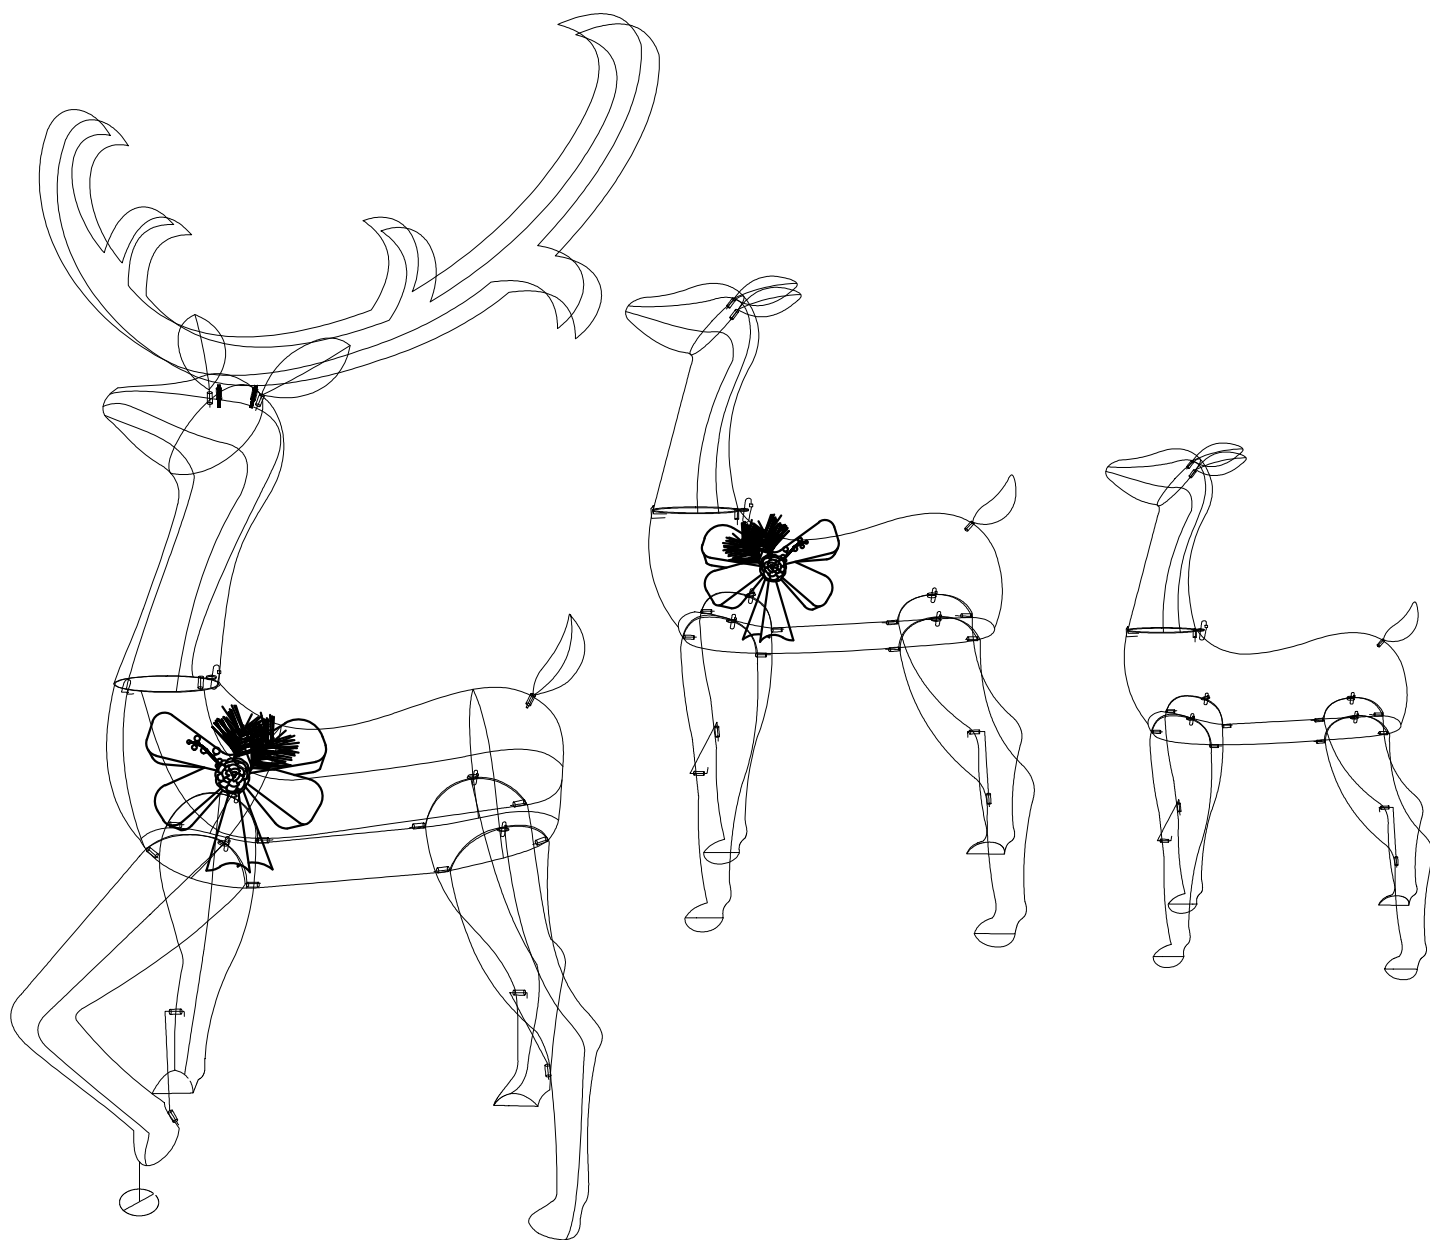

NOTICE! Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.


WARNINGS!


- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- This product contains glitter, do not assemble indoors to avoid unintended property damage and cleanup.
- Do not allow glitter to contact your eyes or face as this may result in skin irritation or injury.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the reindeer.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.


TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
One section does not light	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
Lights do not work	Not plugged in	Firmly plug into wall outlet
	Extension cord does not have power	Plug in/turn on extension cord
	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
	Blown fuse	Replace fuse on plug

 HARDWARE

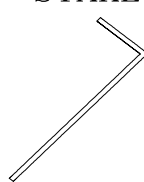
1 STAKE

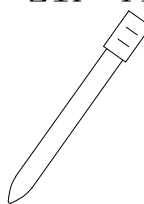 12 PCS

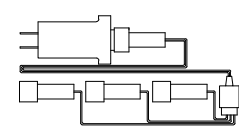 
2 ZIP TIE

15 PCS

 
3 PLUG

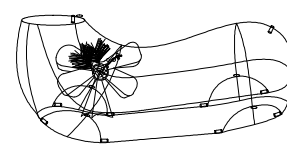1 PC

 
PARTS

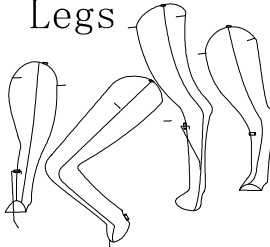
Male Deer

 
A Body

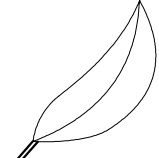1 PC

 B Legs

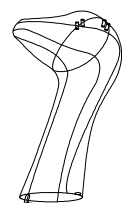4 PCS

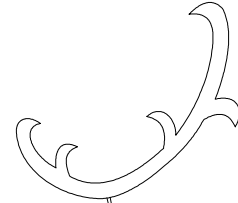 
C Tail

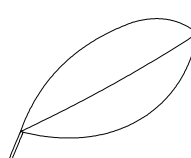 1 PC


D Head

1 PC

 
E Antlers

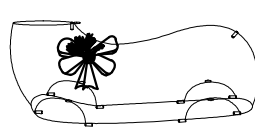2 PCS

 F Ear

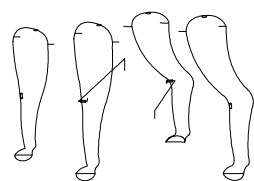2 PCS

 Female Deer

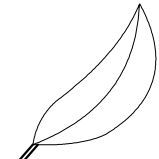
A1 Body

1 PC

B1 Legs

4 PCS

 C1 Tail

1 PC

D1

 
Head



1 PC

E1

Ear

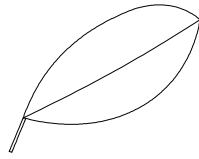


2 PCS

Fawn

A2

 
Body



1 PC

B2

 
Legs

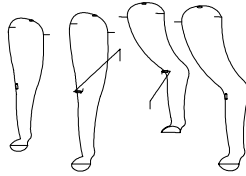

4 PCS

C2

 
Tail

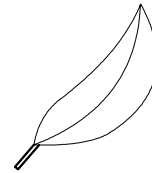

1 PC

D2

 
Head



1 PC

E2

 Ear

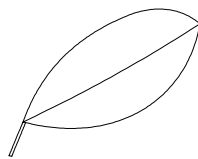


2 PCS

1

Carefully remove protective wrap. Do not use a knife to avoid damaging parts or light bulbs.

Insert the part B legs into the designated holes on the part A body.

 
And secure with part 2 zip ties, Do this four places.

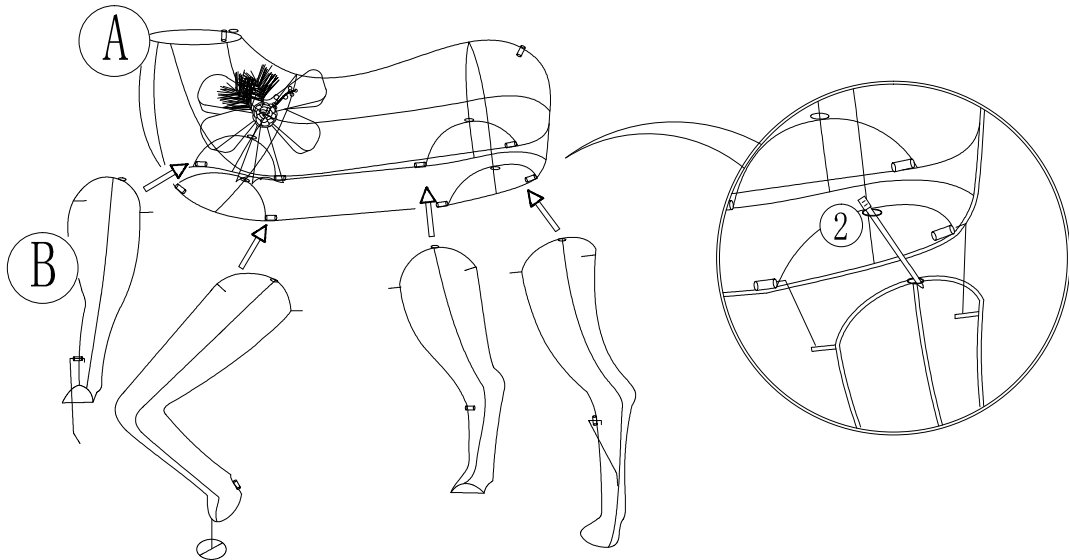

2


Insert the rod on a front leg into the designated hole on the other front leg. Repeat on the back legs.

 Insert the part C tail.

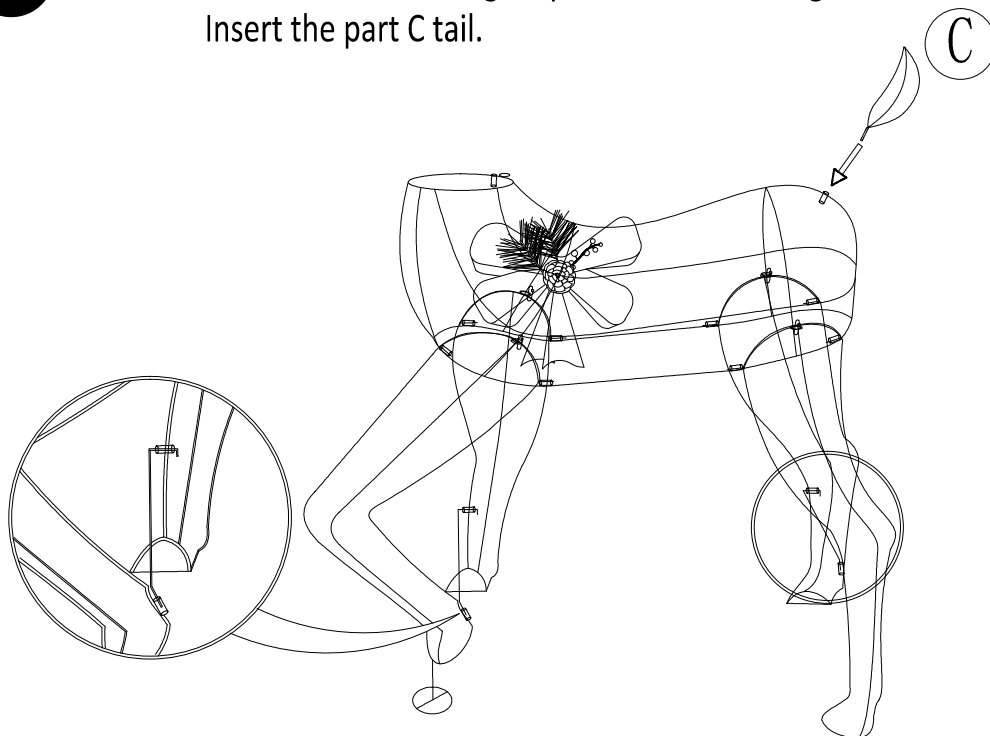

3

 
Insert the part D head. Secure the back of the neck with a part 2 zip tie. Insert the part E antlers / F ears.

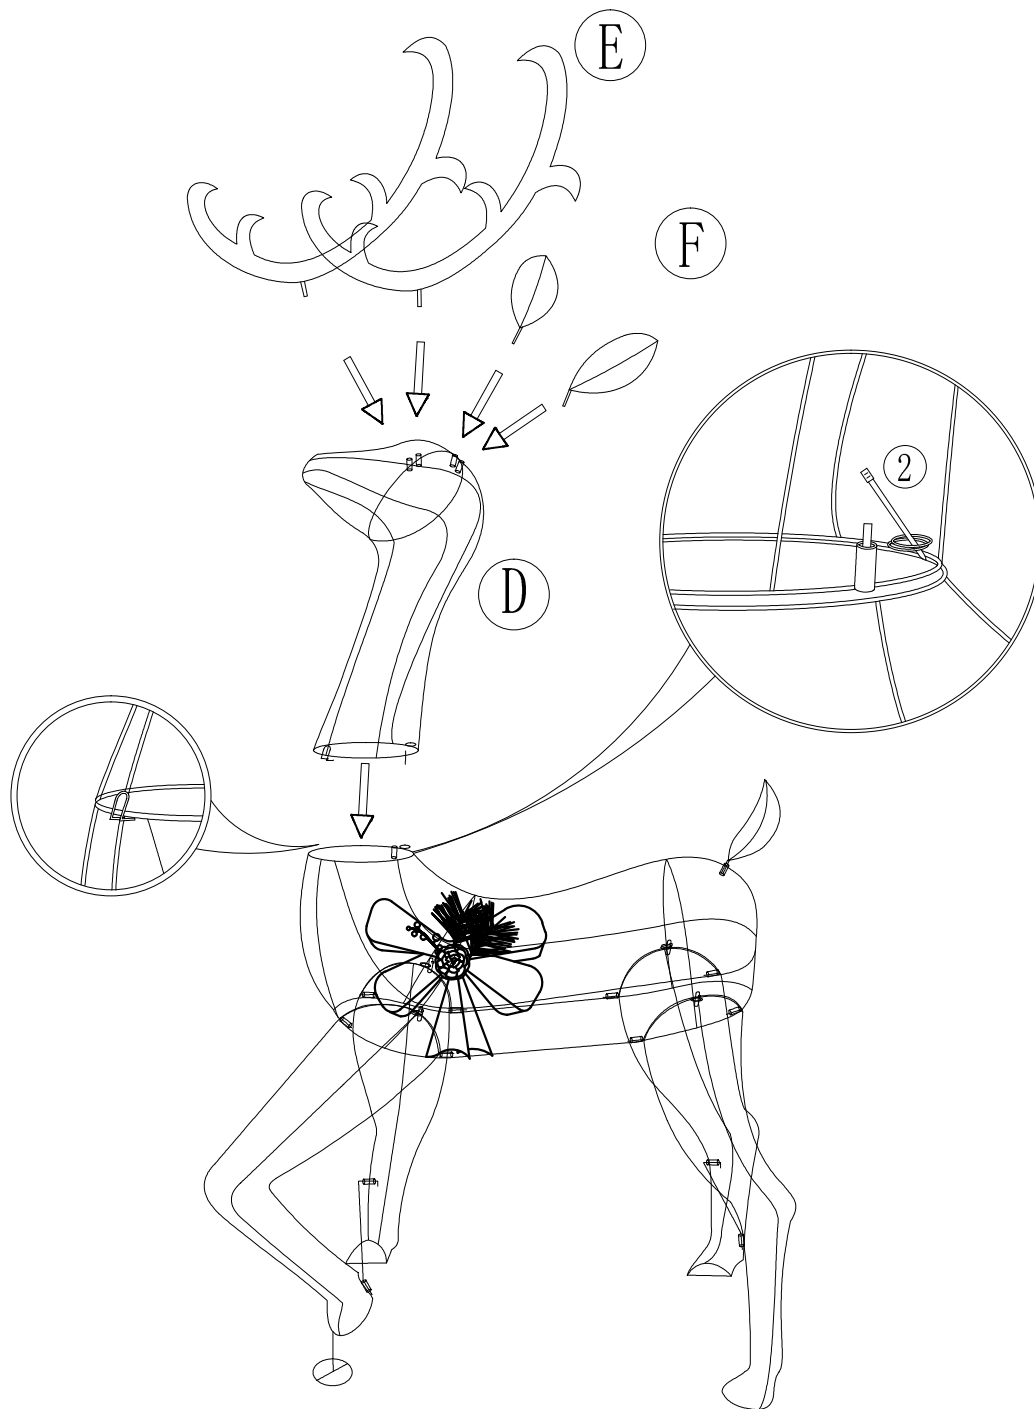

1

Carefully remove protective wrap. Do not use a knife to avoid damaging parts or light bulbs.

 
Insert the part B1 legs into the designated holes on the part A1 body. And secure with part 2 zip ties. Do this four places.

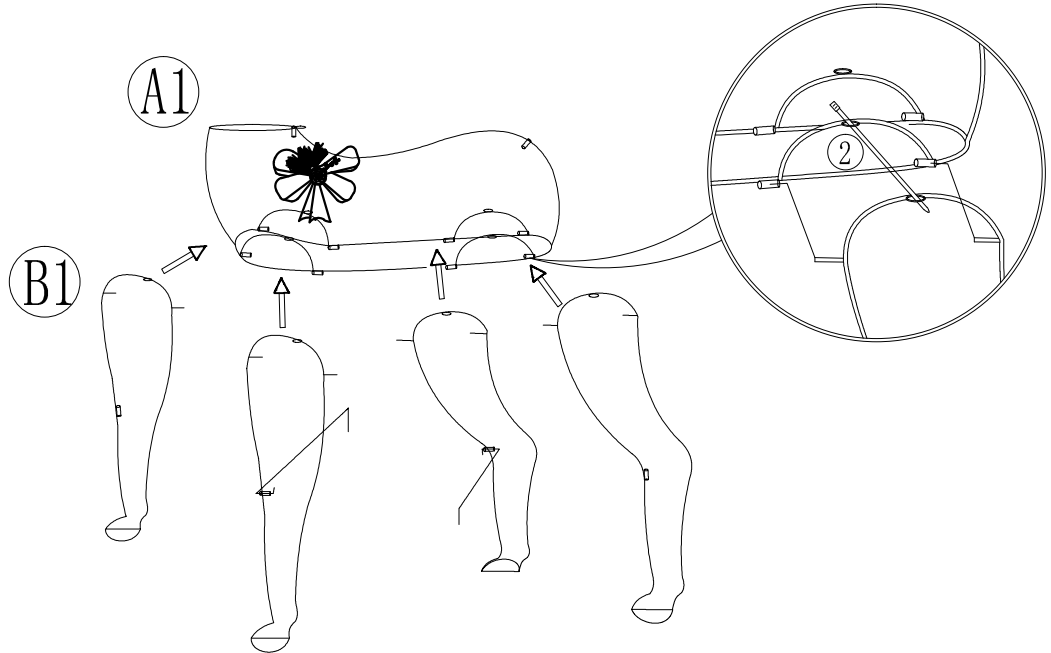

2


Insert the rod on a front leg into the designated hole on the other front leg. Repeat on the back legs.

 Insert the part C1 tail.

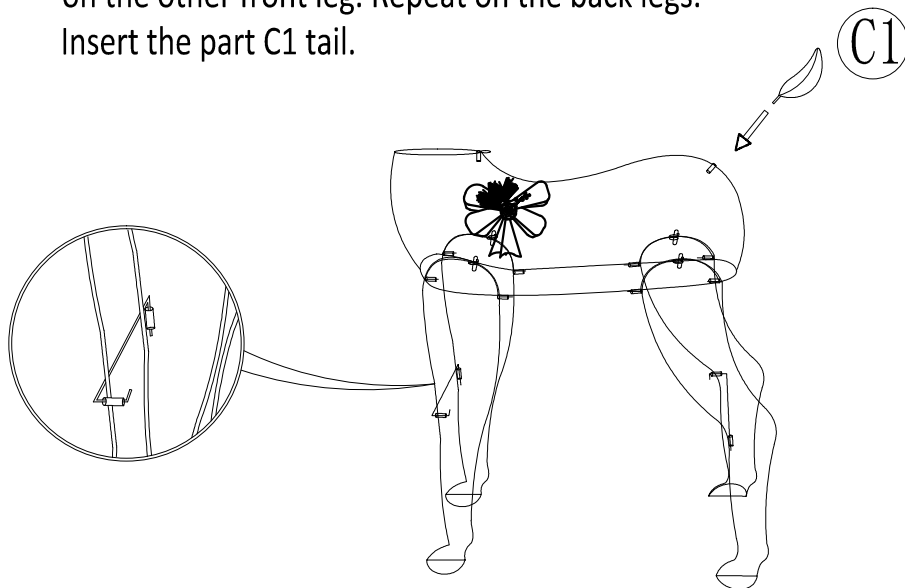


3

 Insert the part D1 head. Secure the back of the neck with a part 2 zip tie. Insert the part E1 ears.

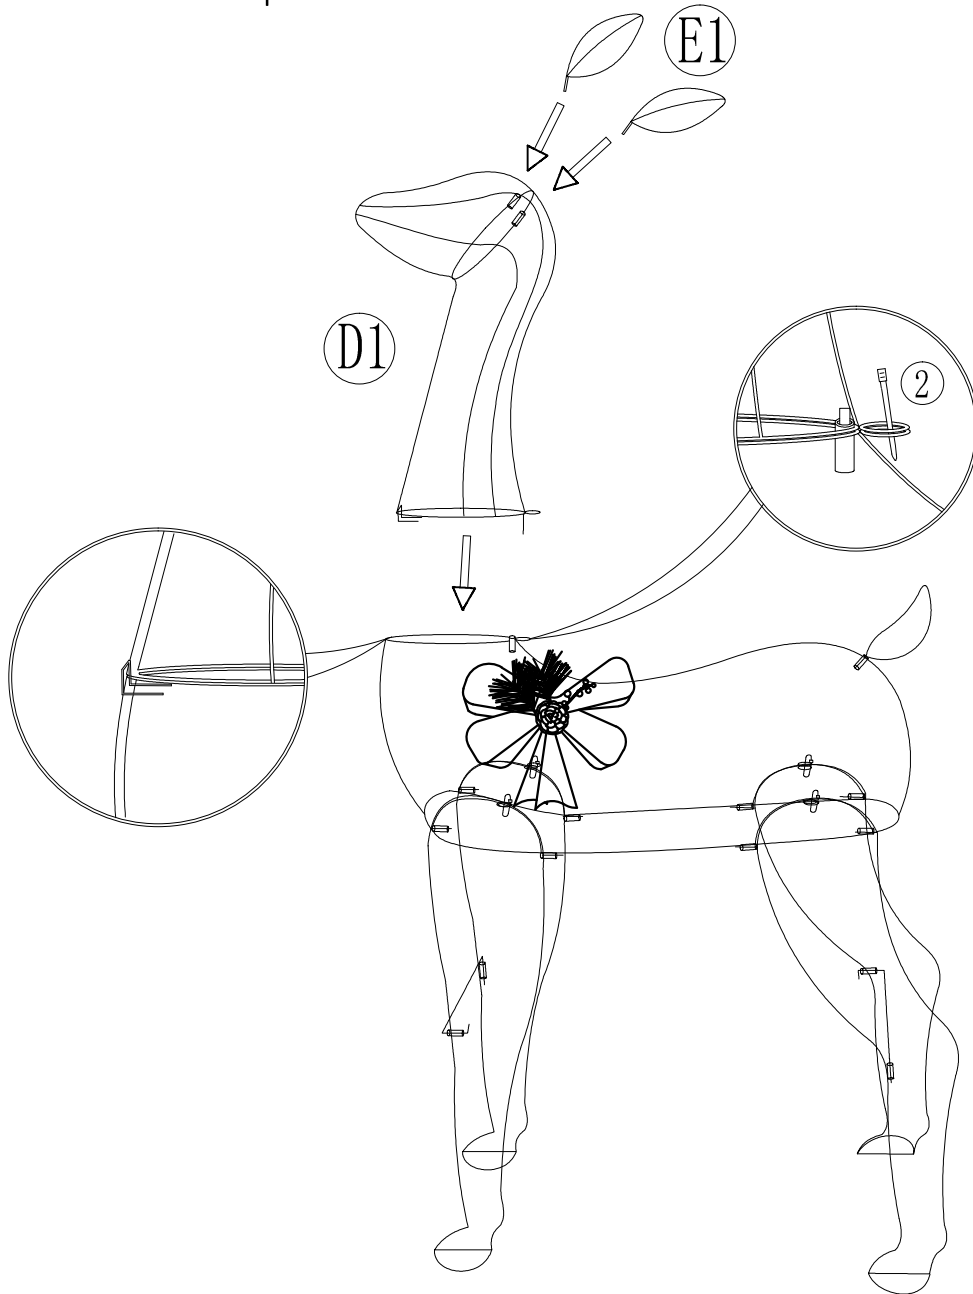


1

 Carefully remove protective wrap. Do not use a knife to avoid damaging parts or light bulbs. Insert the part B2 legs into the designated holes on the part A2 body. And secure with part 2 zip ties. Do this four places.

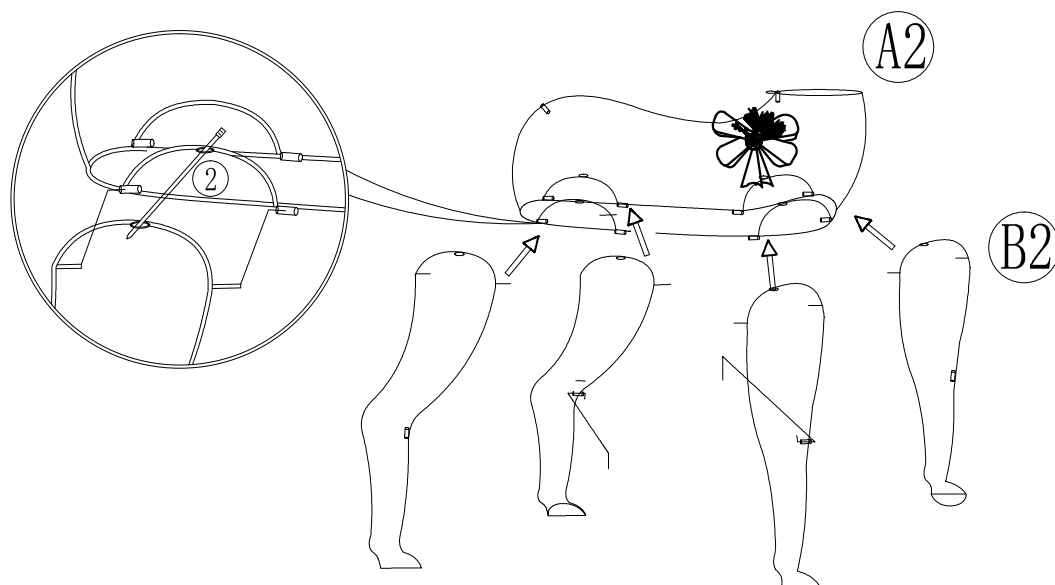


2

 Insert the rod on a front leg into the designated hole on the other front leg. Repeat on the back legs. Insert the part C2 tail.

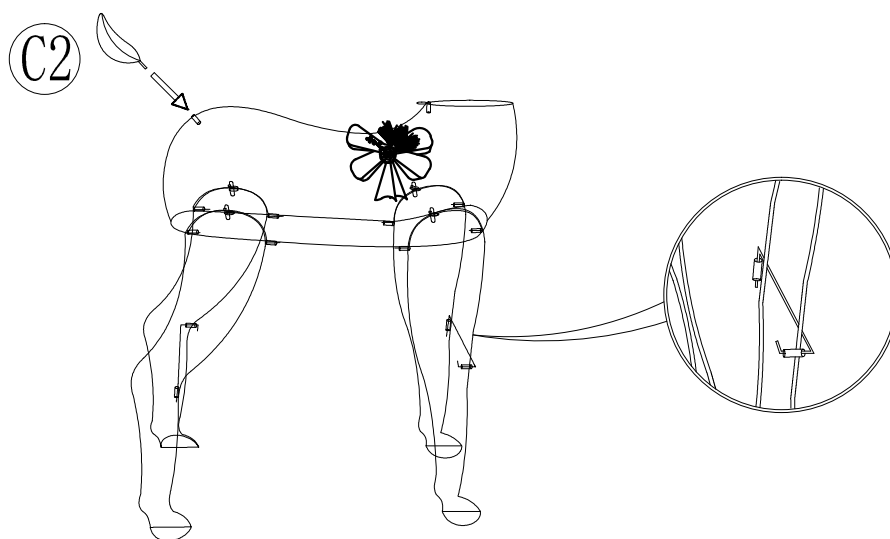

3

 Insert the part D2 head. Secure the back of the neck with a part 2 zip tie. Insert the part E2 ears.

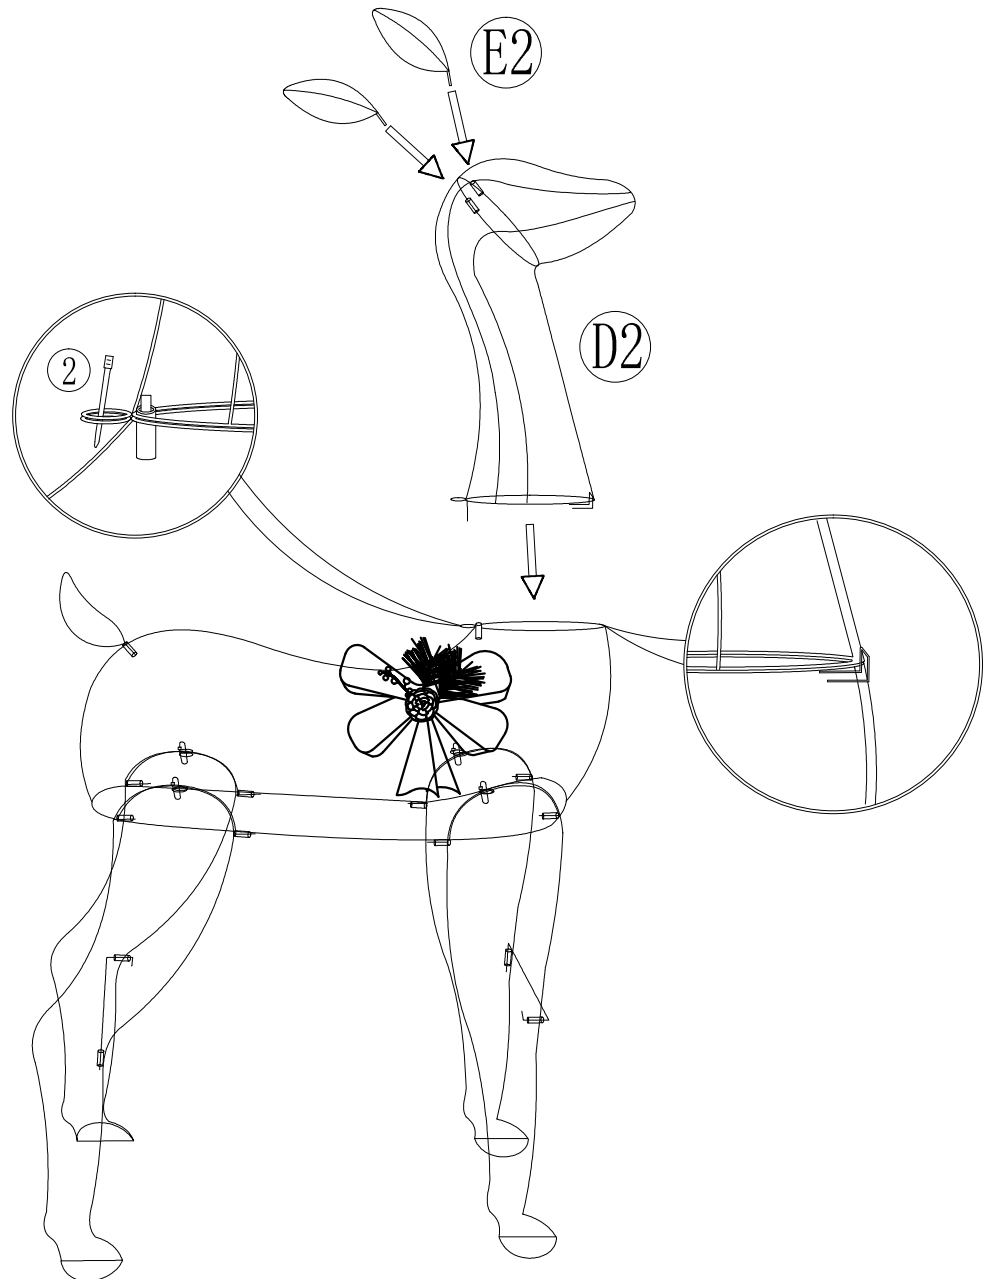

PRODUCT ASSEMBLY

