 




# **INSTALLATION**

## *Product Manual*

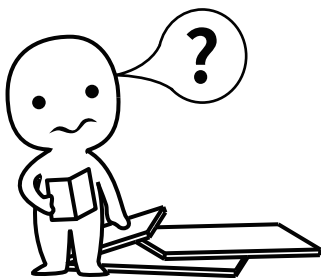


### **IMPORTANT INFORMATION!**

  Please read the entire manual before starting to assemble and/or using this product. Follow the manual thoroughly and keep it for further reference.

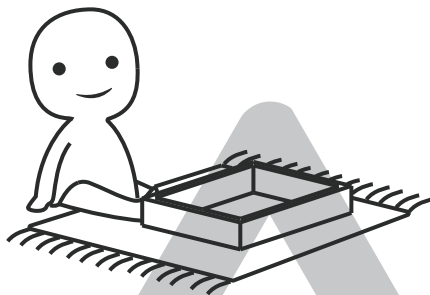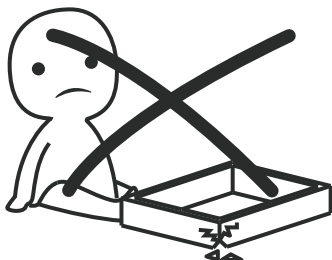



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

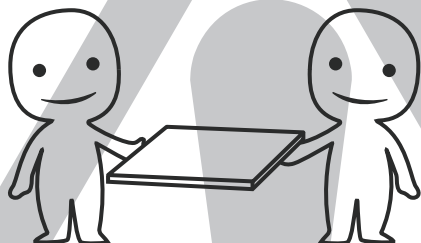

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

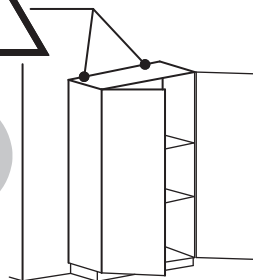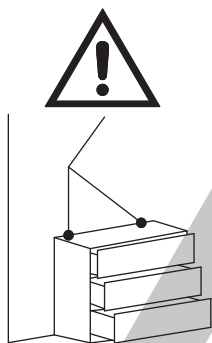

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

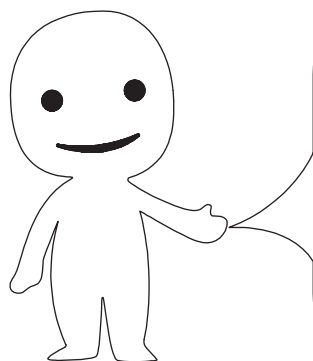

Please prepare the following tools

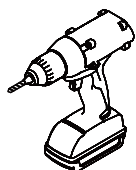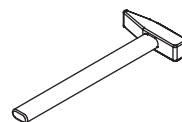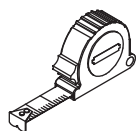     


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 55



CRB1595A

 B x 55



CRA0635B

C x 32




CRF0630A

D x 55



 E x 19



CRC0540A

F x 38



CRD3512A

G x 46




CRD0314A

H x 2




CRD0316A

 J x 2




CRG0625A

 K x 3

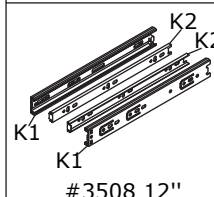


#3508 12"

 
L x 2

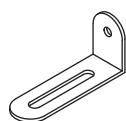

M x 2

 

N x 2

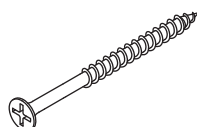 


CRD0580A

P x 6




Ø 4 x 20mm

 Q x 3




R x 2

 

S x 34




 T x 2




CRD0468A


 
U x 2



V x 1

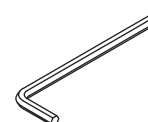 

M4

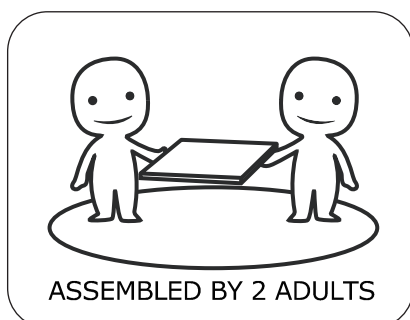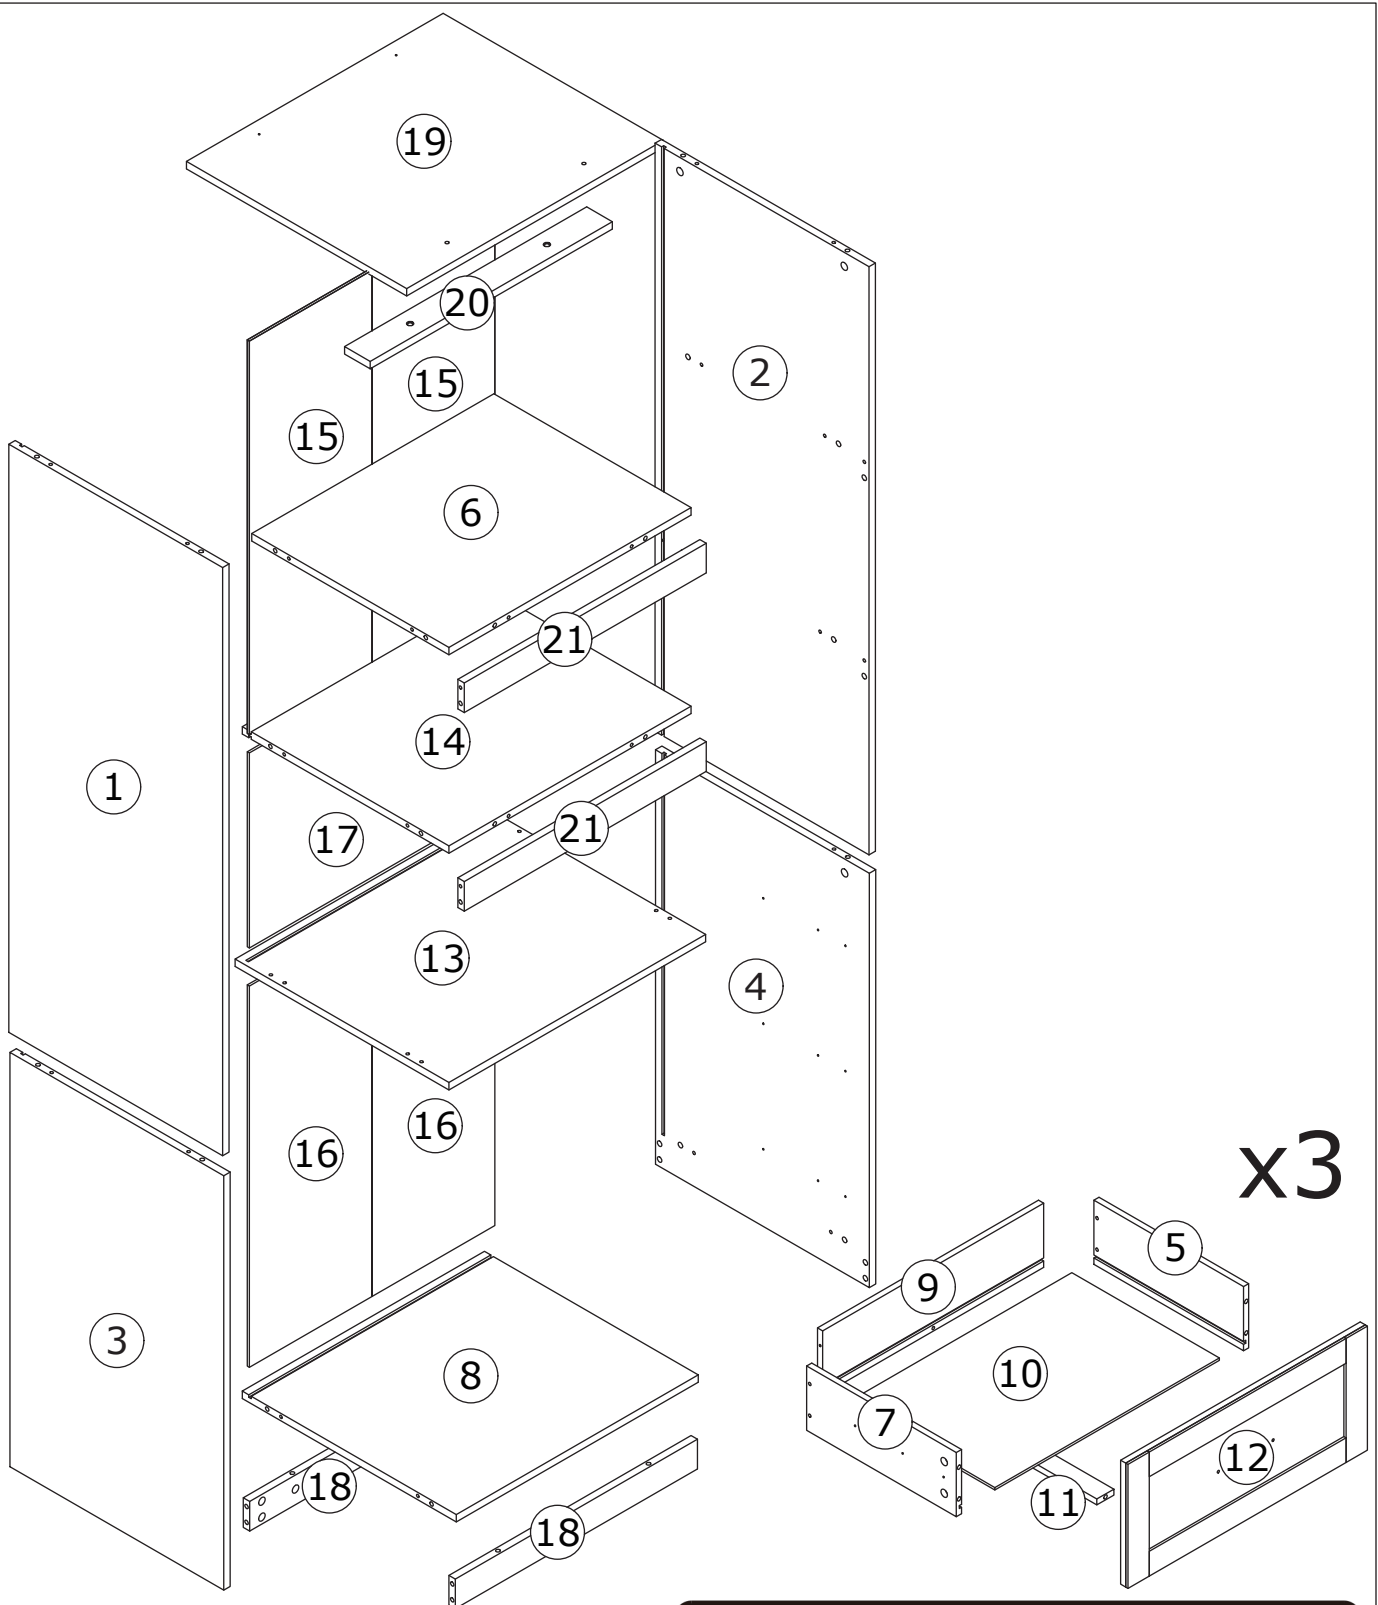  





## ⚠ WARNING








**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

    *This is a permanent label.  
Do not remove!*

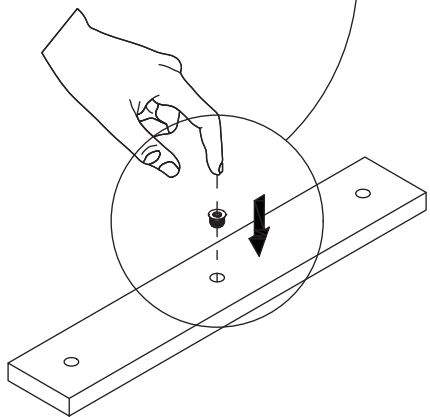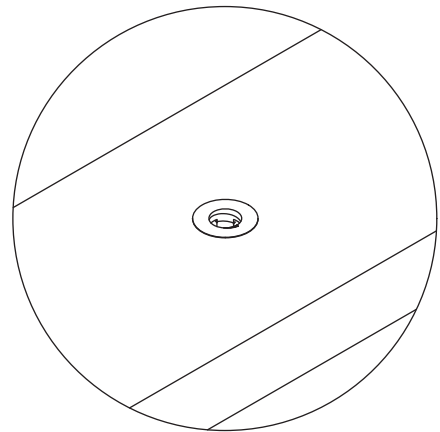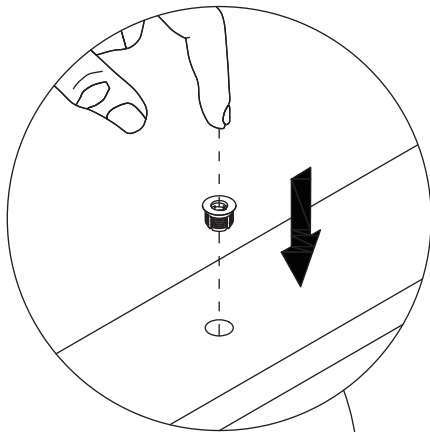


OR

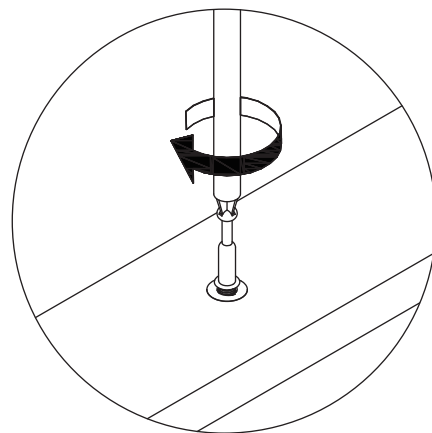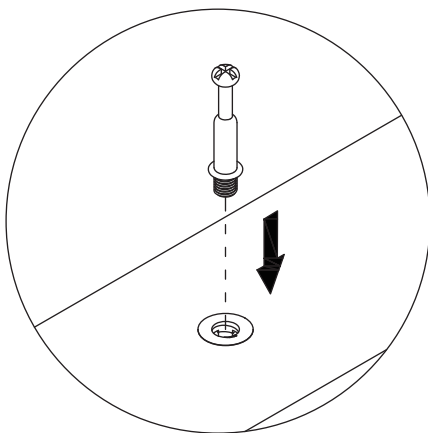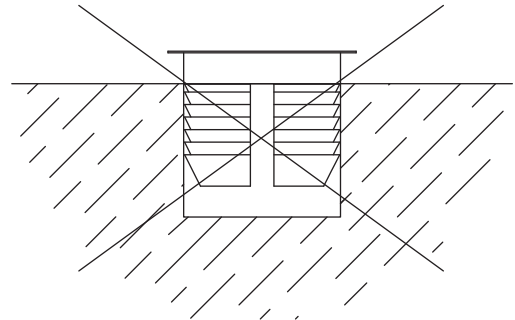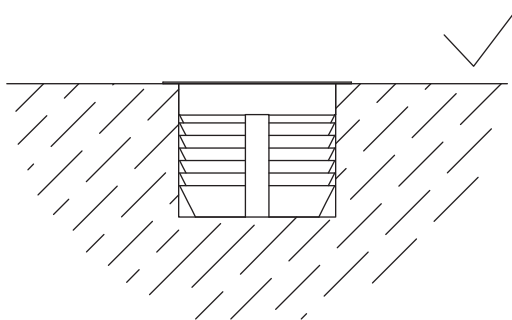     




**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.




 
Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

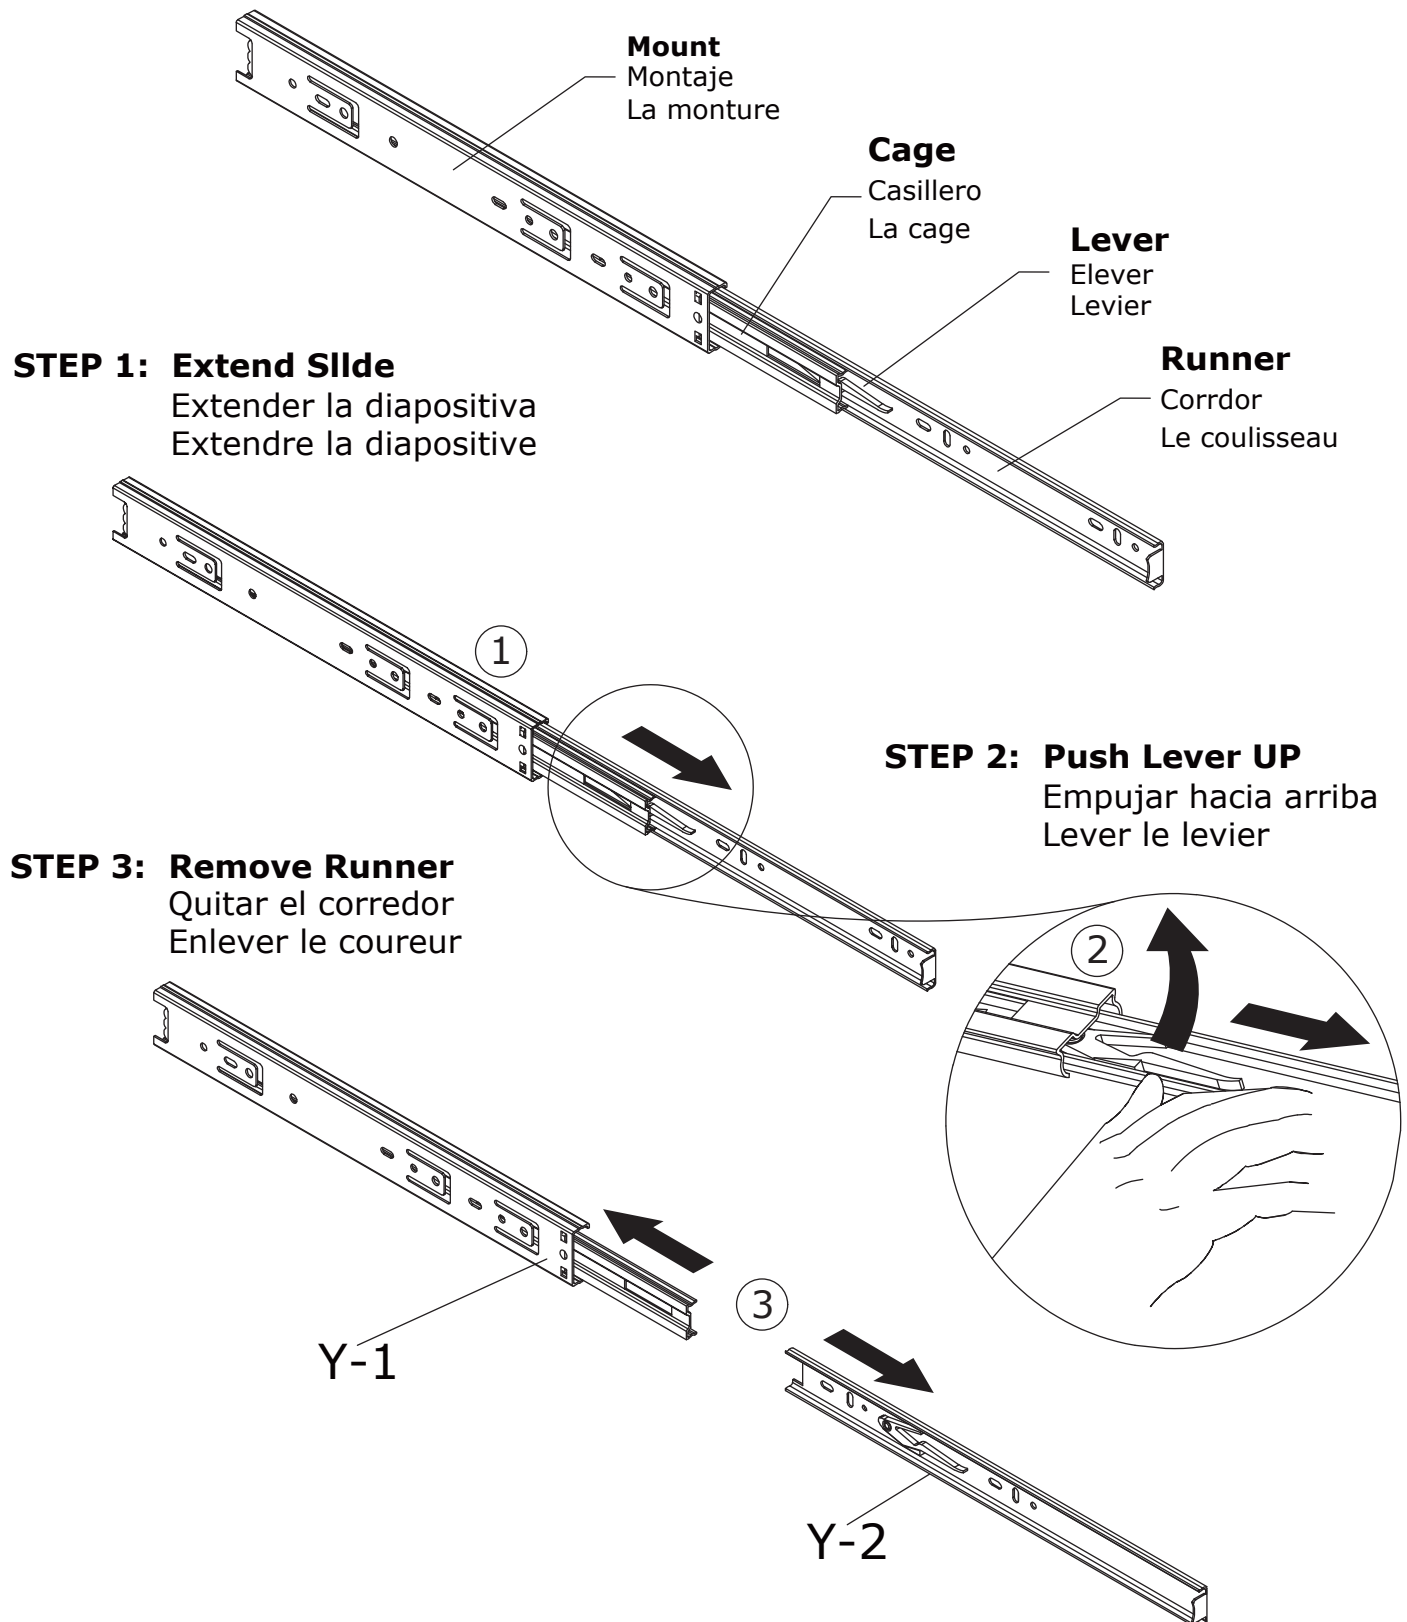





1

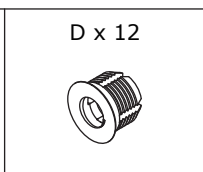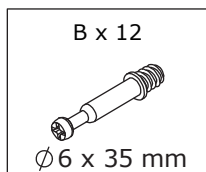   

    
Insert threaded inserts (D) into the pre-drilled holes of Panels 1 and 2, then fasten cam screw (B) into the insert nuts.

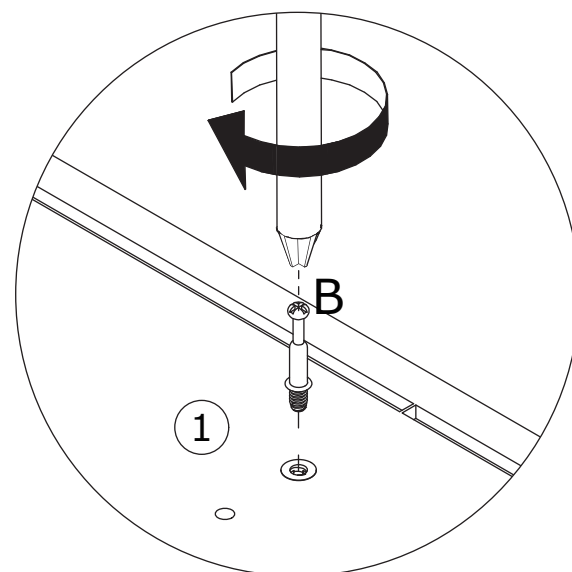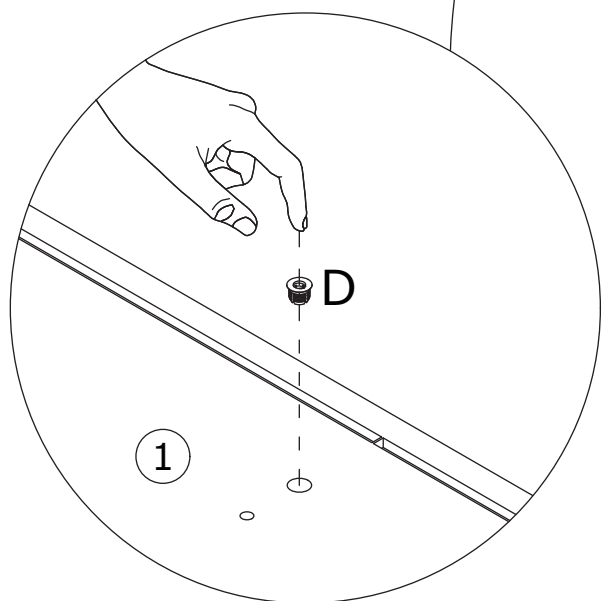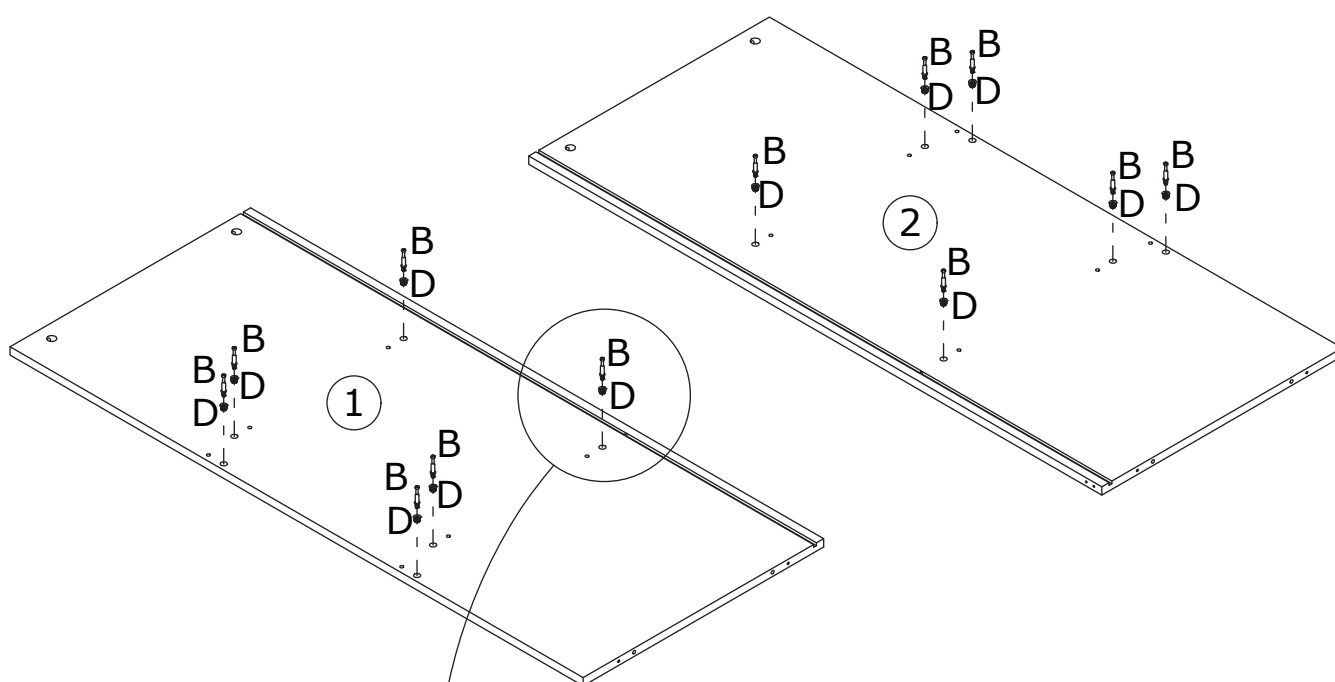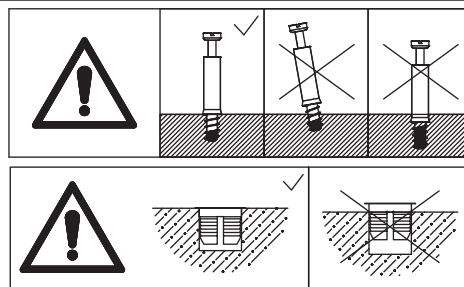

2

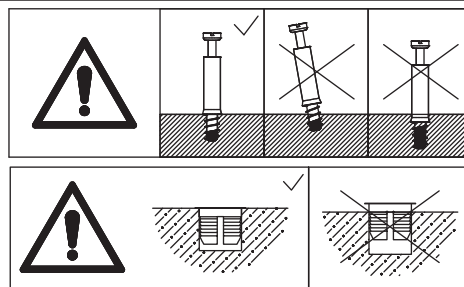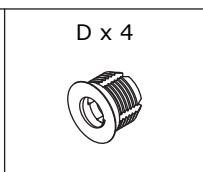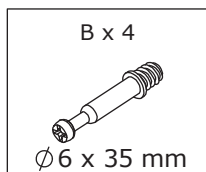    

 Insert threaded inserts (D) into the pre-drilled holes of Panel 21, then fasten cam screw (B) into the insert nuts.

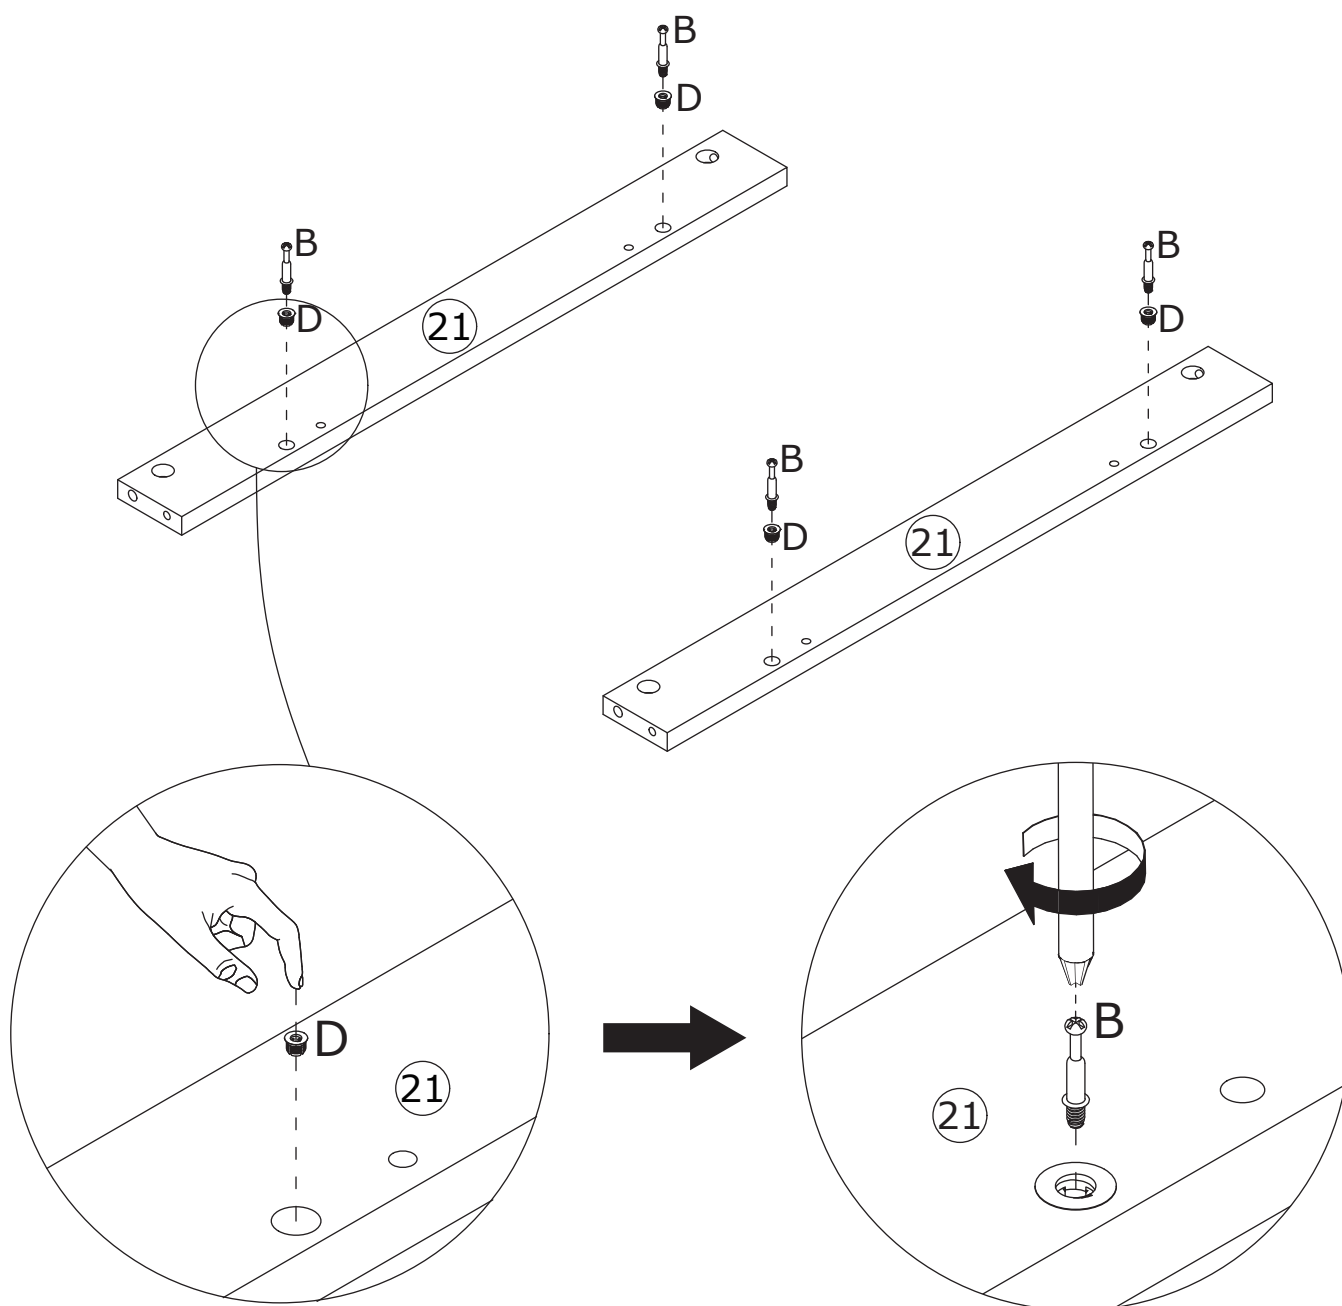


3

A x 4









CRB1595A

 
C x 4



CRF0630A

      

 Connect Panel 21 to Panels 14 and 6 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

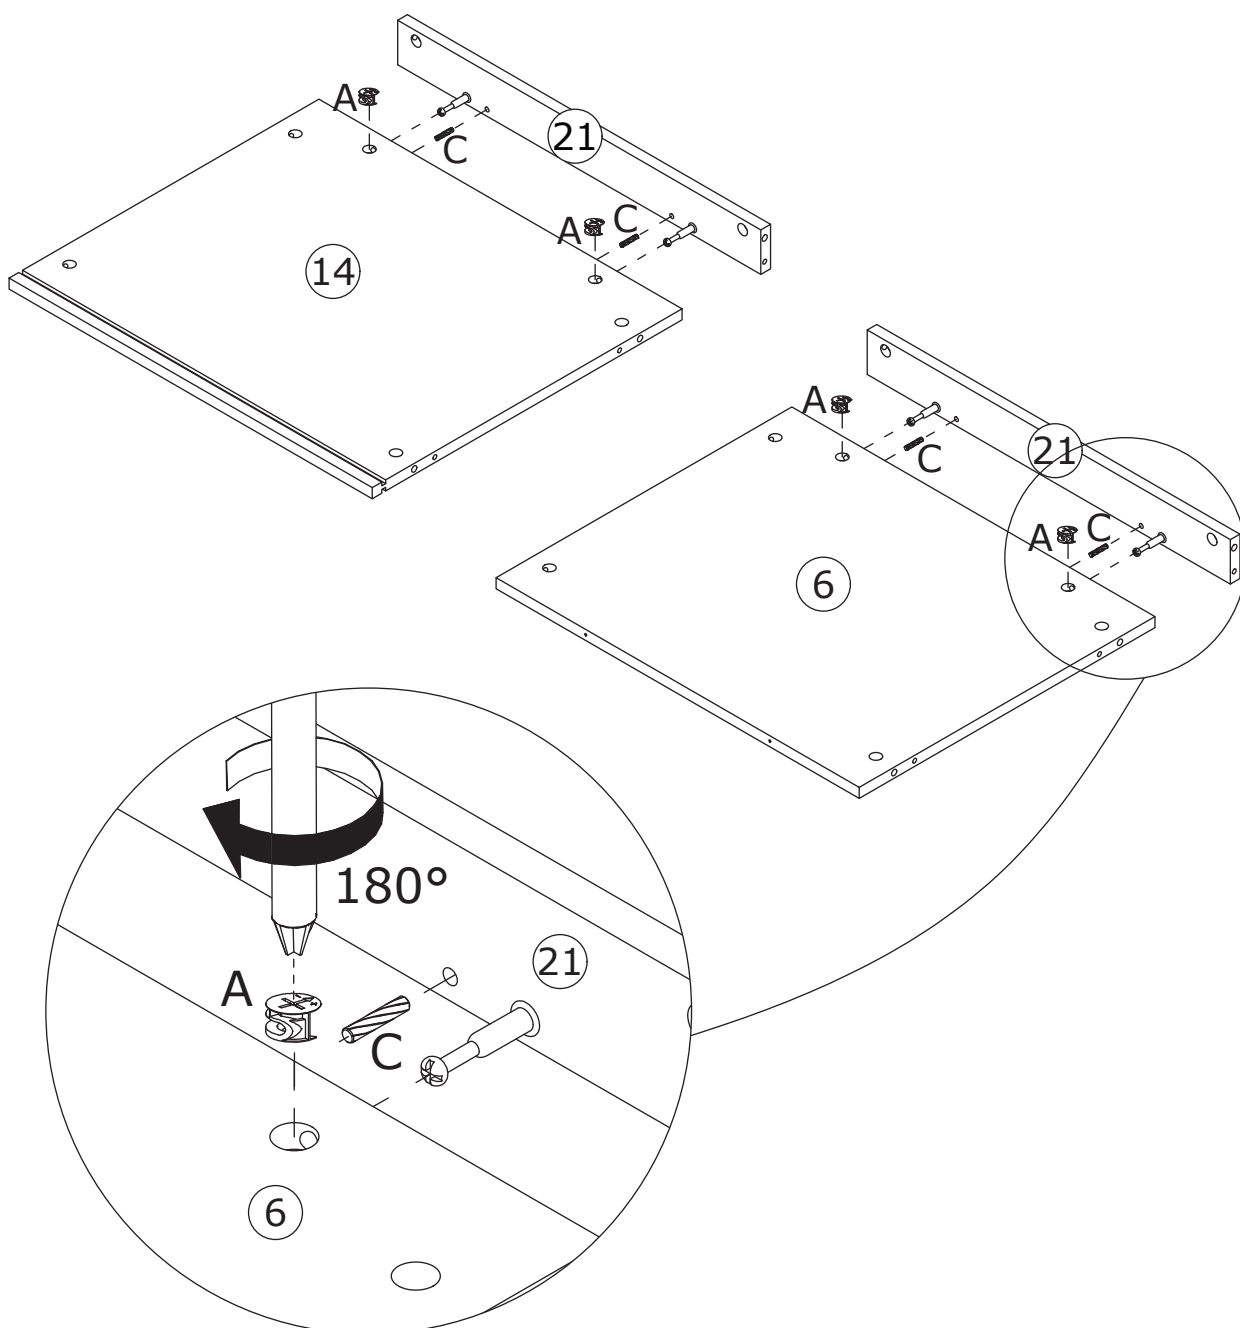


4

A x 6




CRB1595A


 
C x 6



CRF0630A

 

  Connect Panels 21, 14 and 6 to Panel 1 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

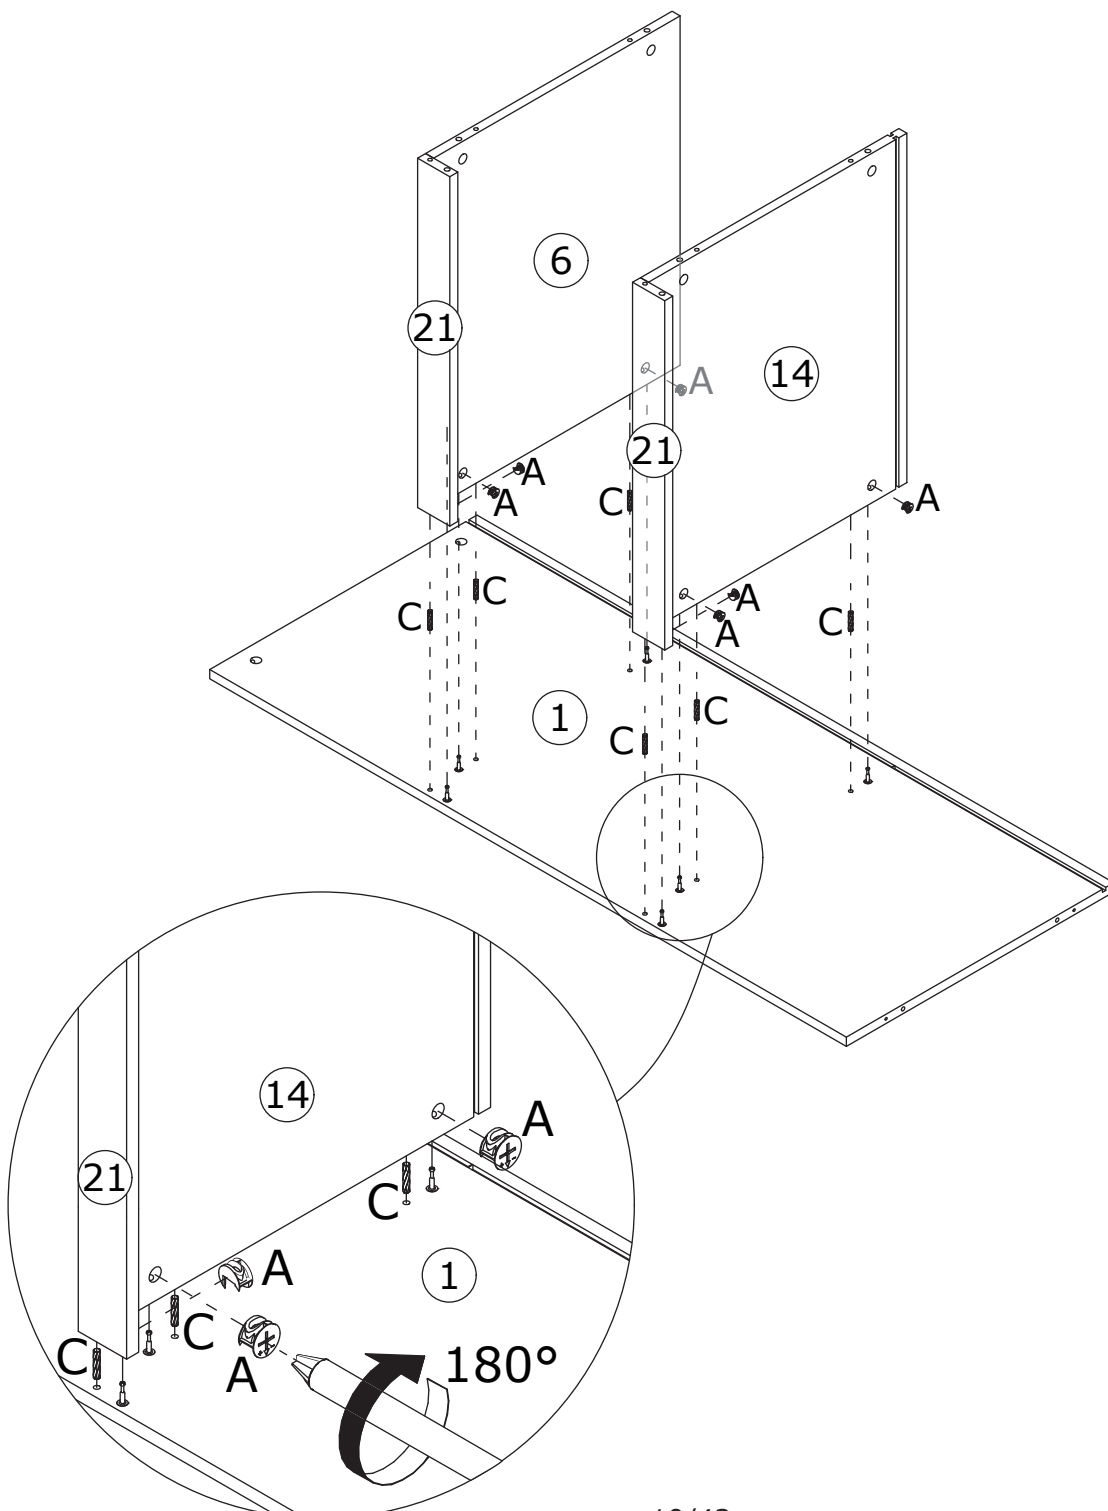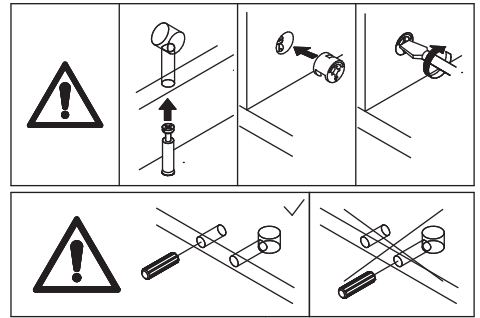


# 5

A x 6




CRB1595A



 
C x 6



CRF0630A

 

   Connect Panels 21, 14 and 6 to Panel 2 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

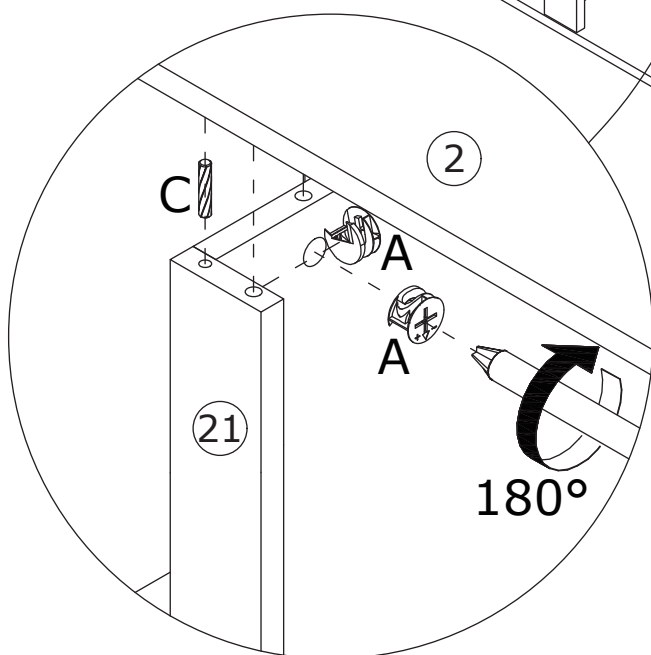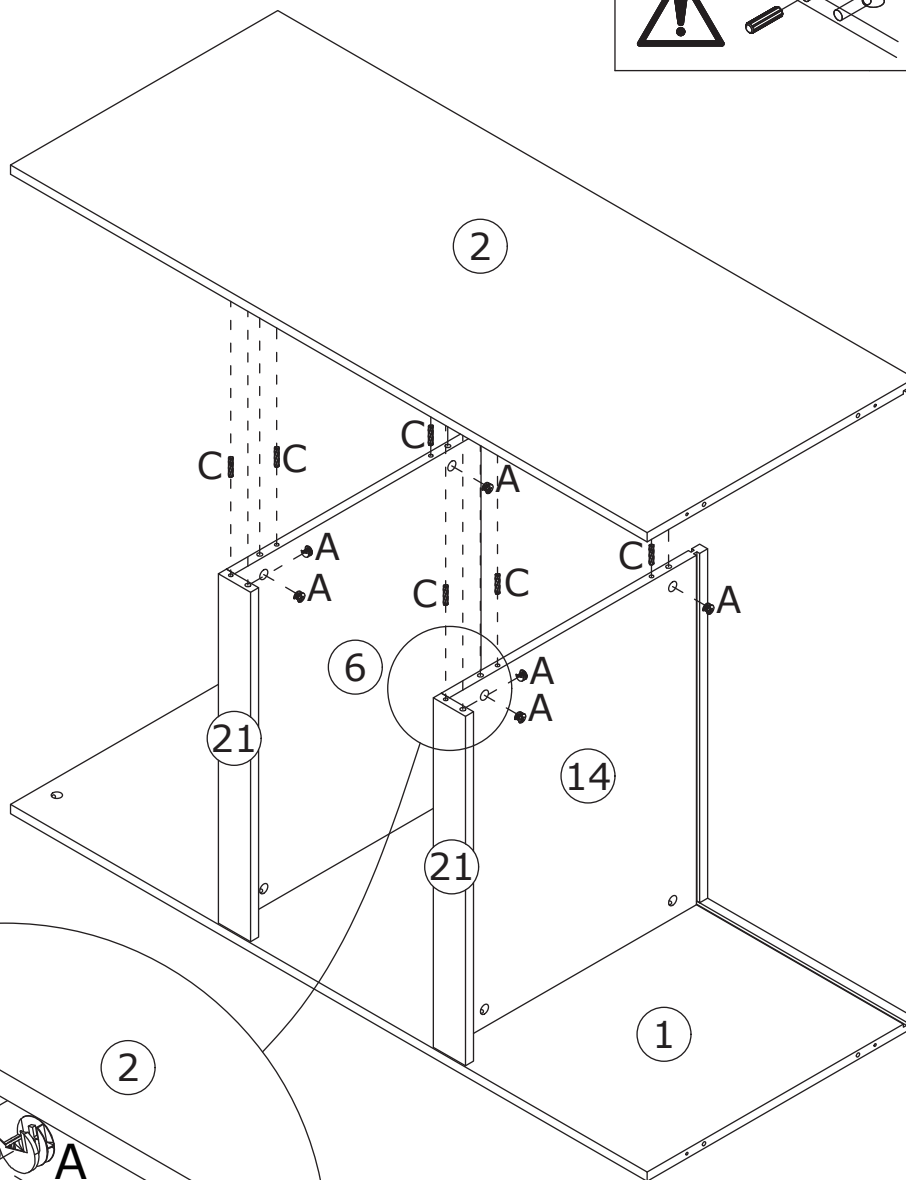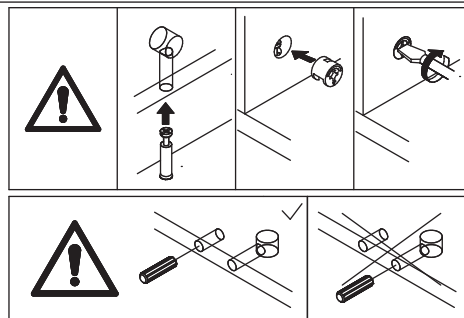


6

J x 2  
CRG0625A

v x 1  
M4

 Secure Panel 20 to Panel 19 with screws (J).

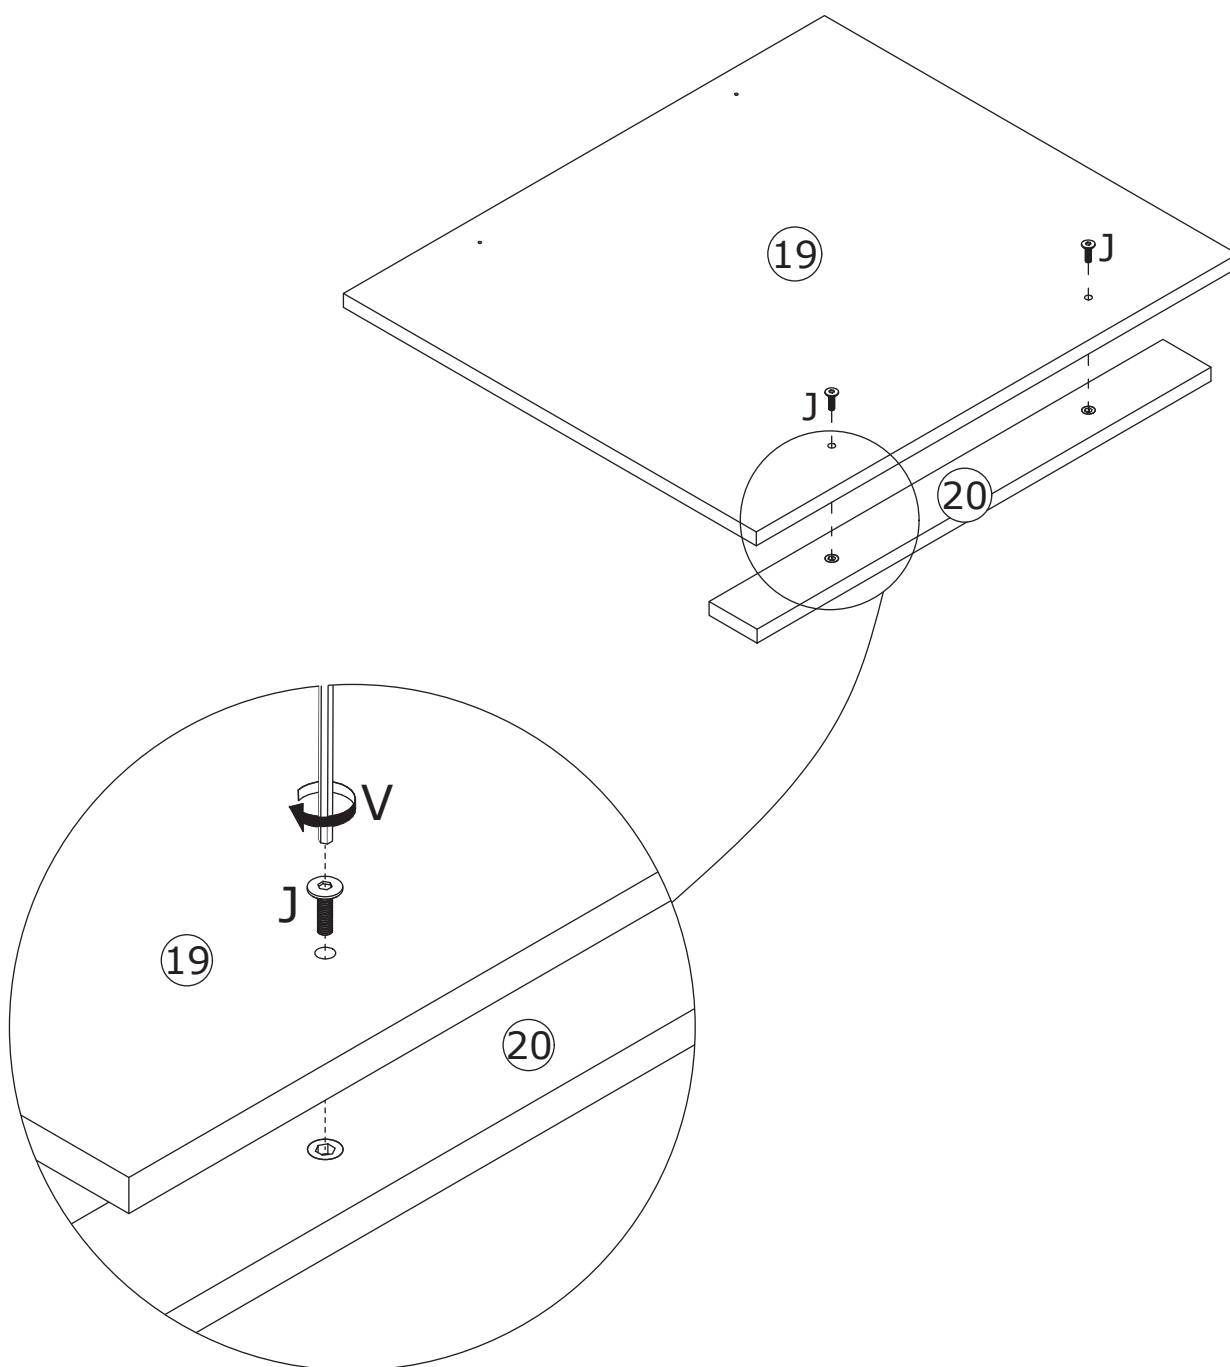


7



B x 4



 D x 4



  Insert threaded inserts (D) into the pre-drilled holes of Panel 19, then fasten cam screw (B) into the insert nuts.

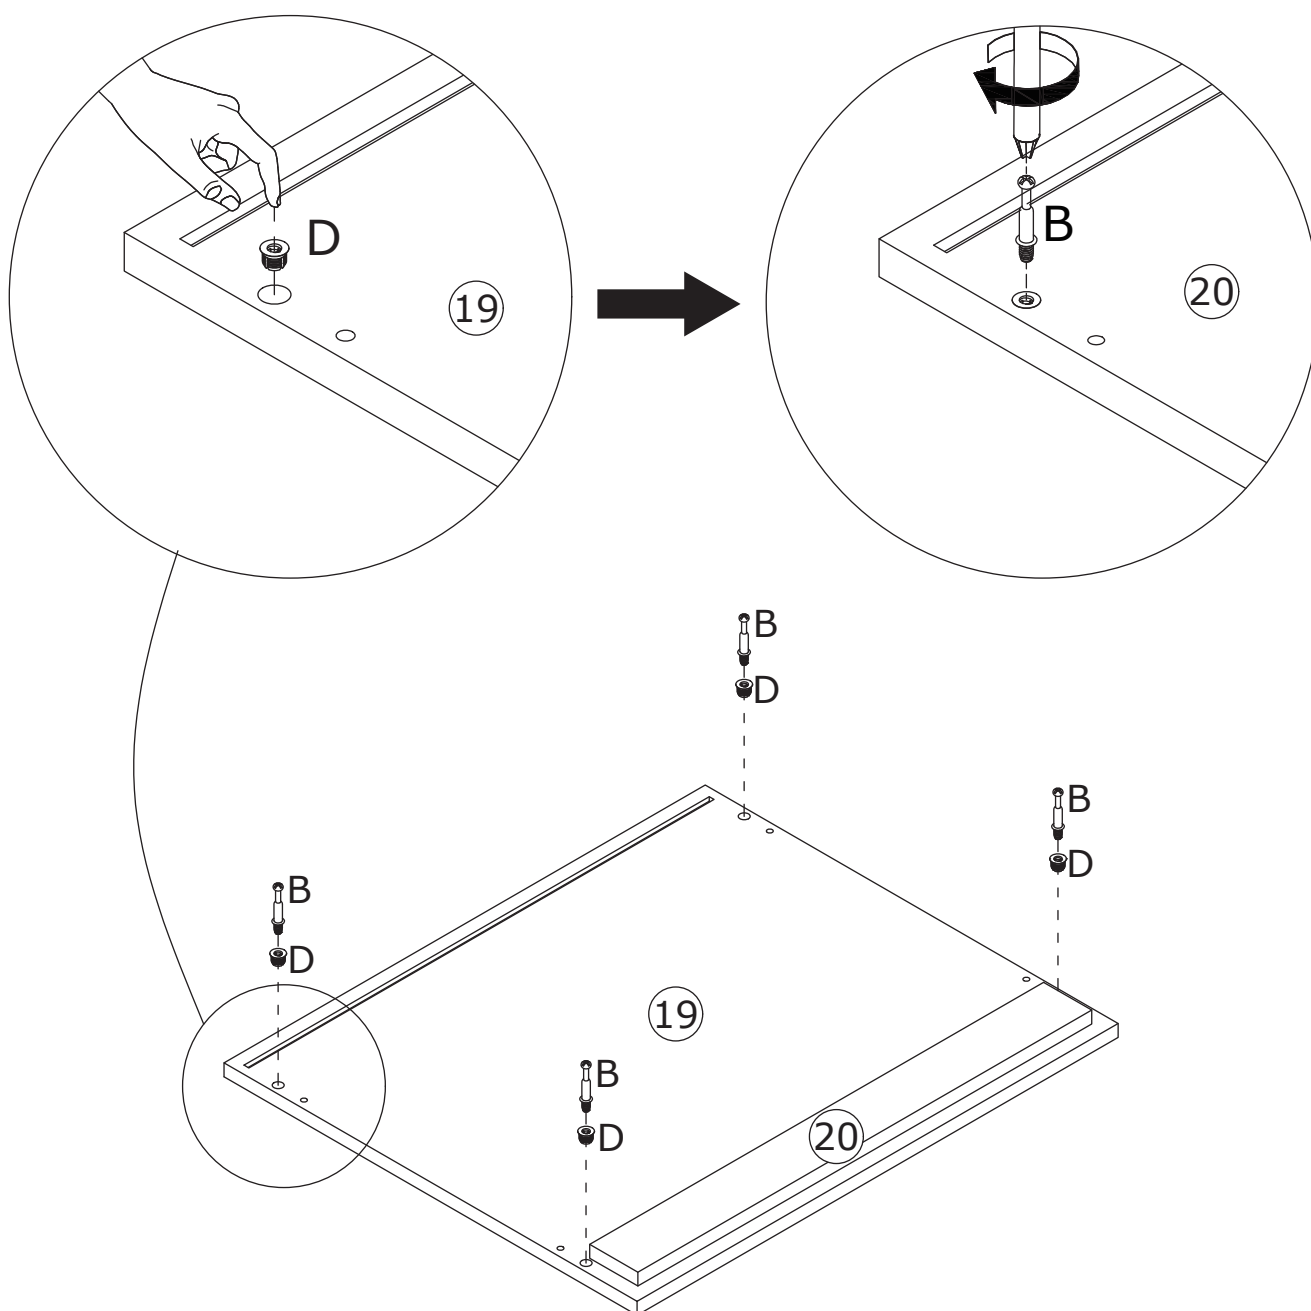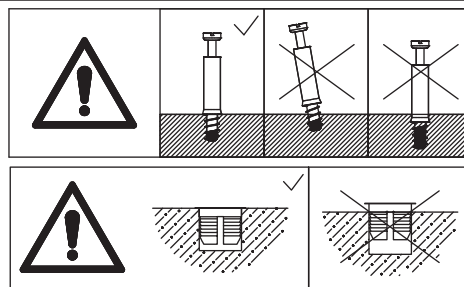


8





B x 4



 D x 4




    Insert threaded inserts (D) into the pre-drilled holes of Panel 13, then fasten cam screw (B) into the insert nuts.

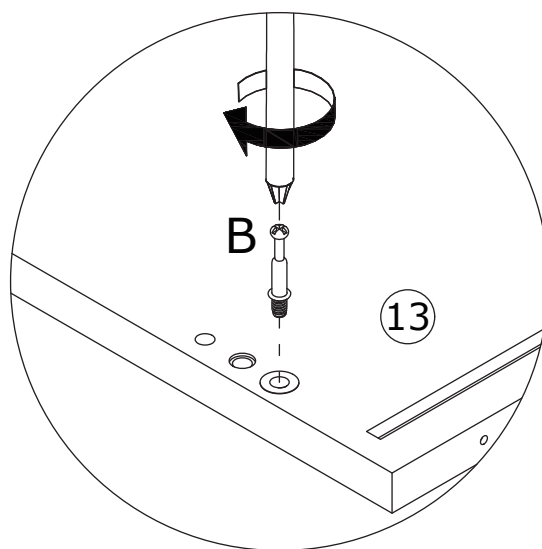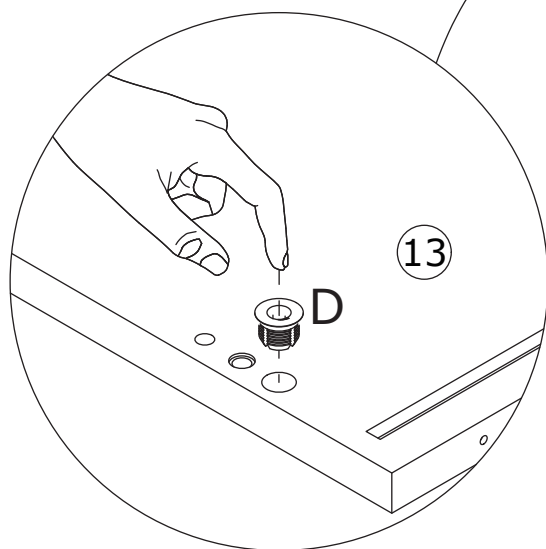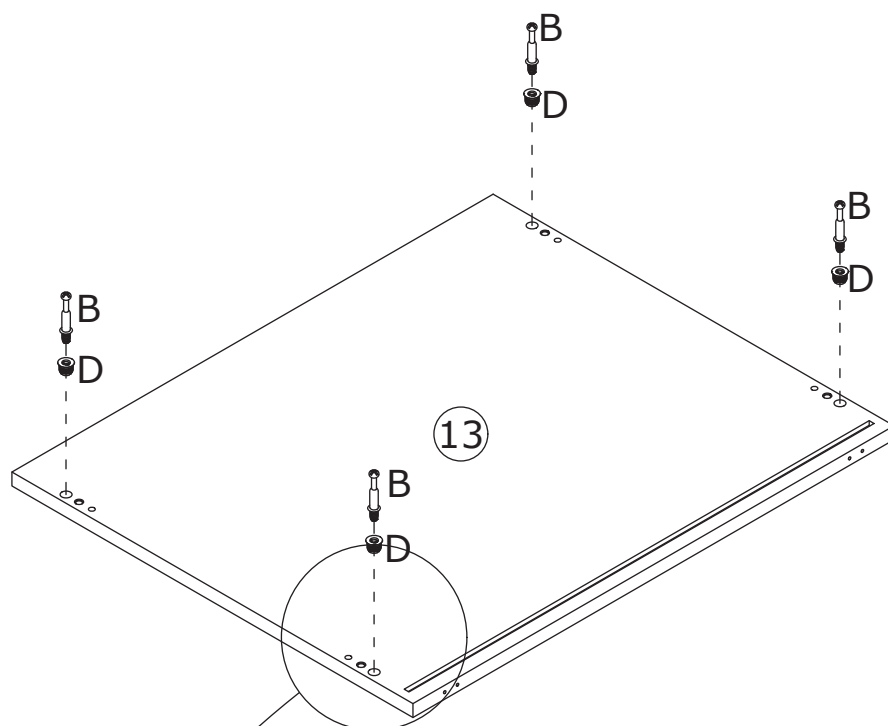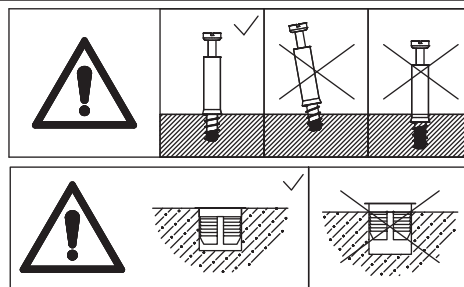


9

 
1.

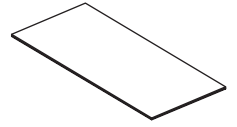

 
2.

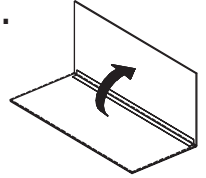


 
3.

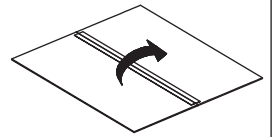

 
Insert Panel 15 along the reserved slots.

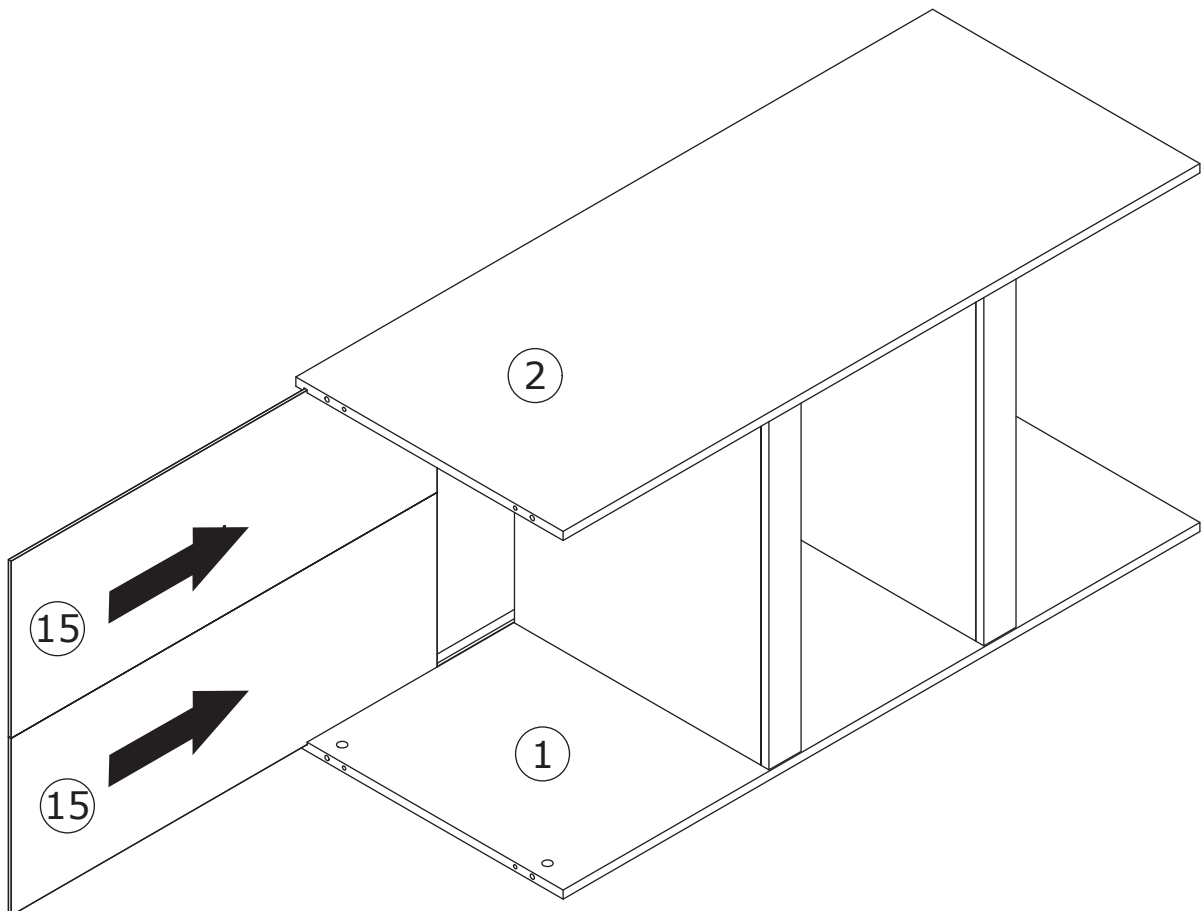


# 10

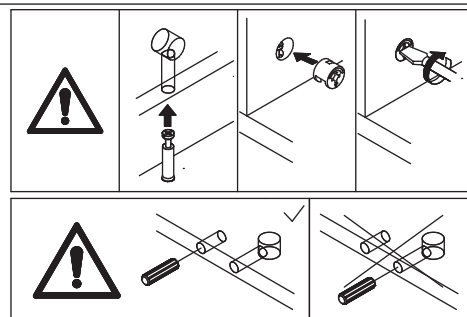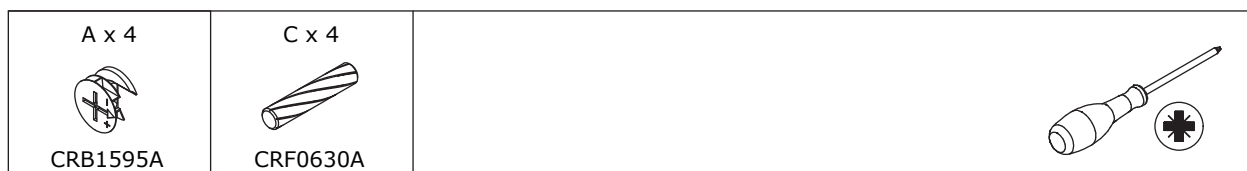  

 
Connect Panel 19 to Panels 1 and 2 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

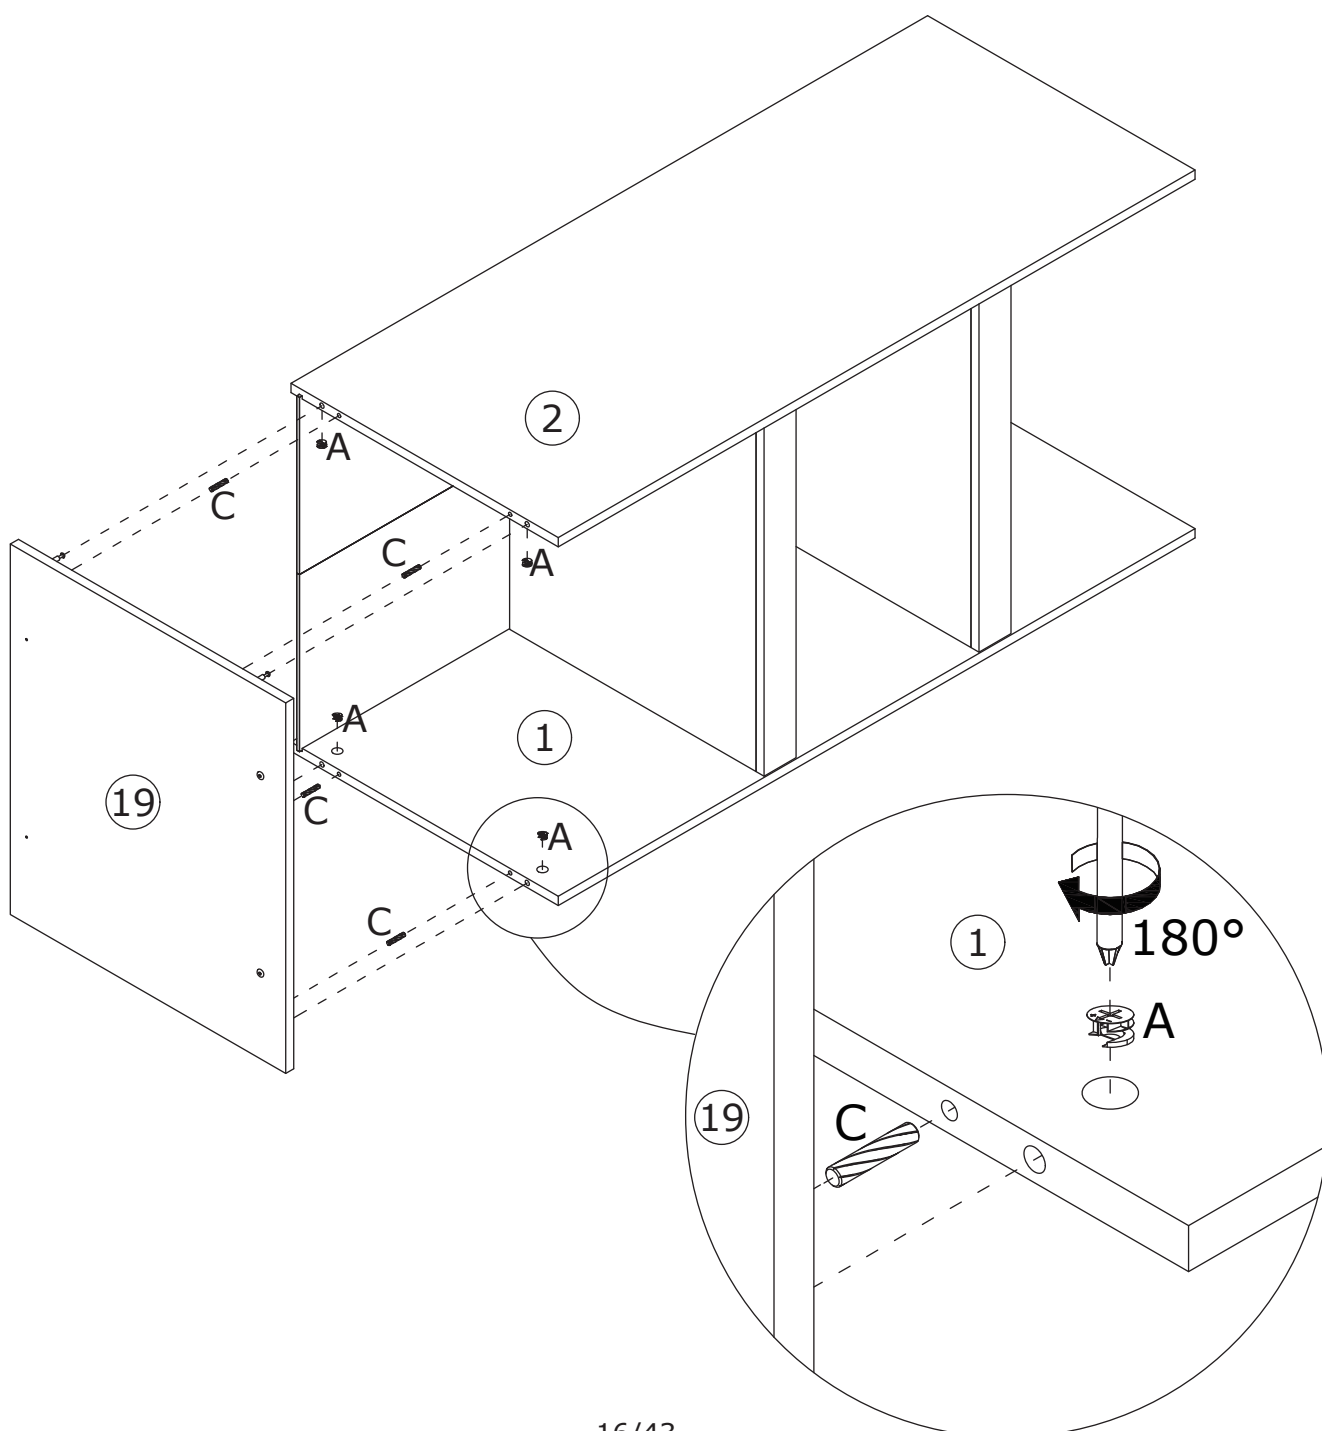


# 11

 

 
Insert Panel 17 along the reserved slots.

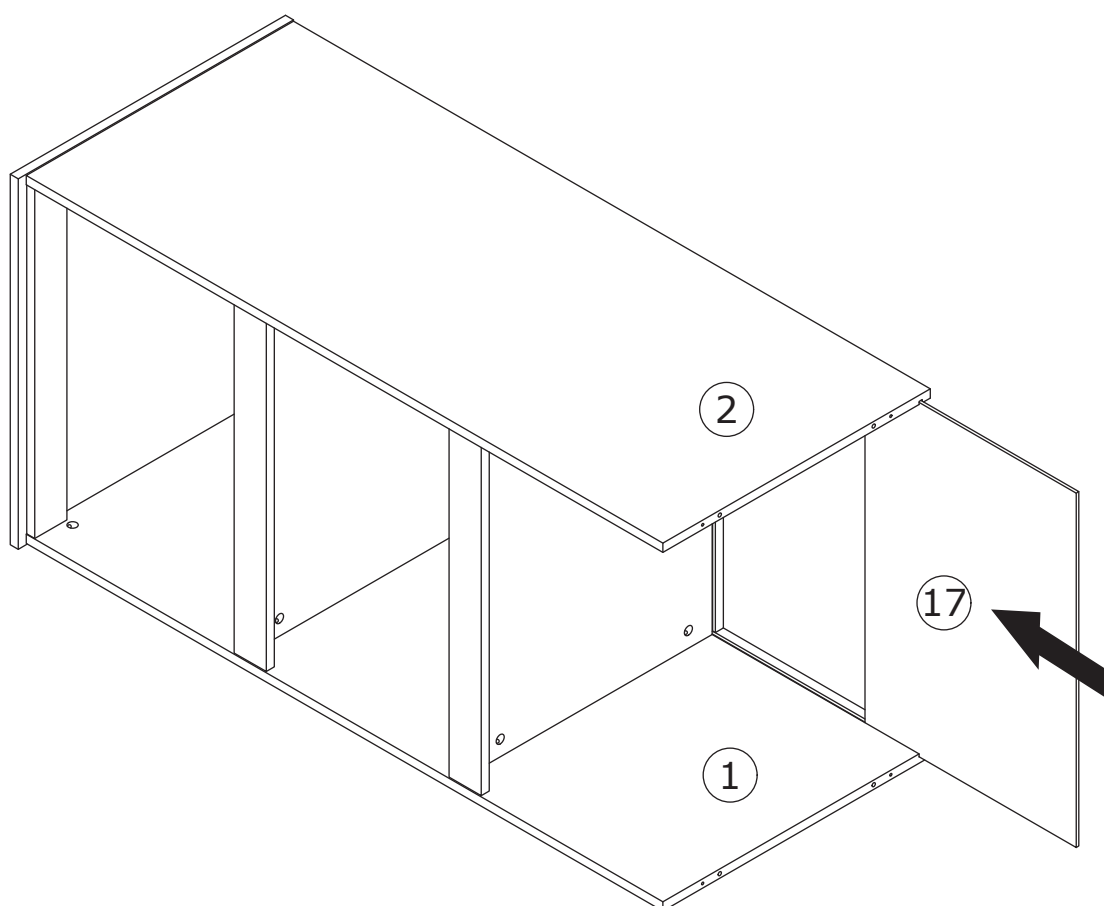

# 12

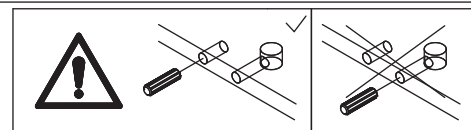 

 Connect Panel 13 to Panels 1 and 2 using dowel pins (C), then secure with screws (E).


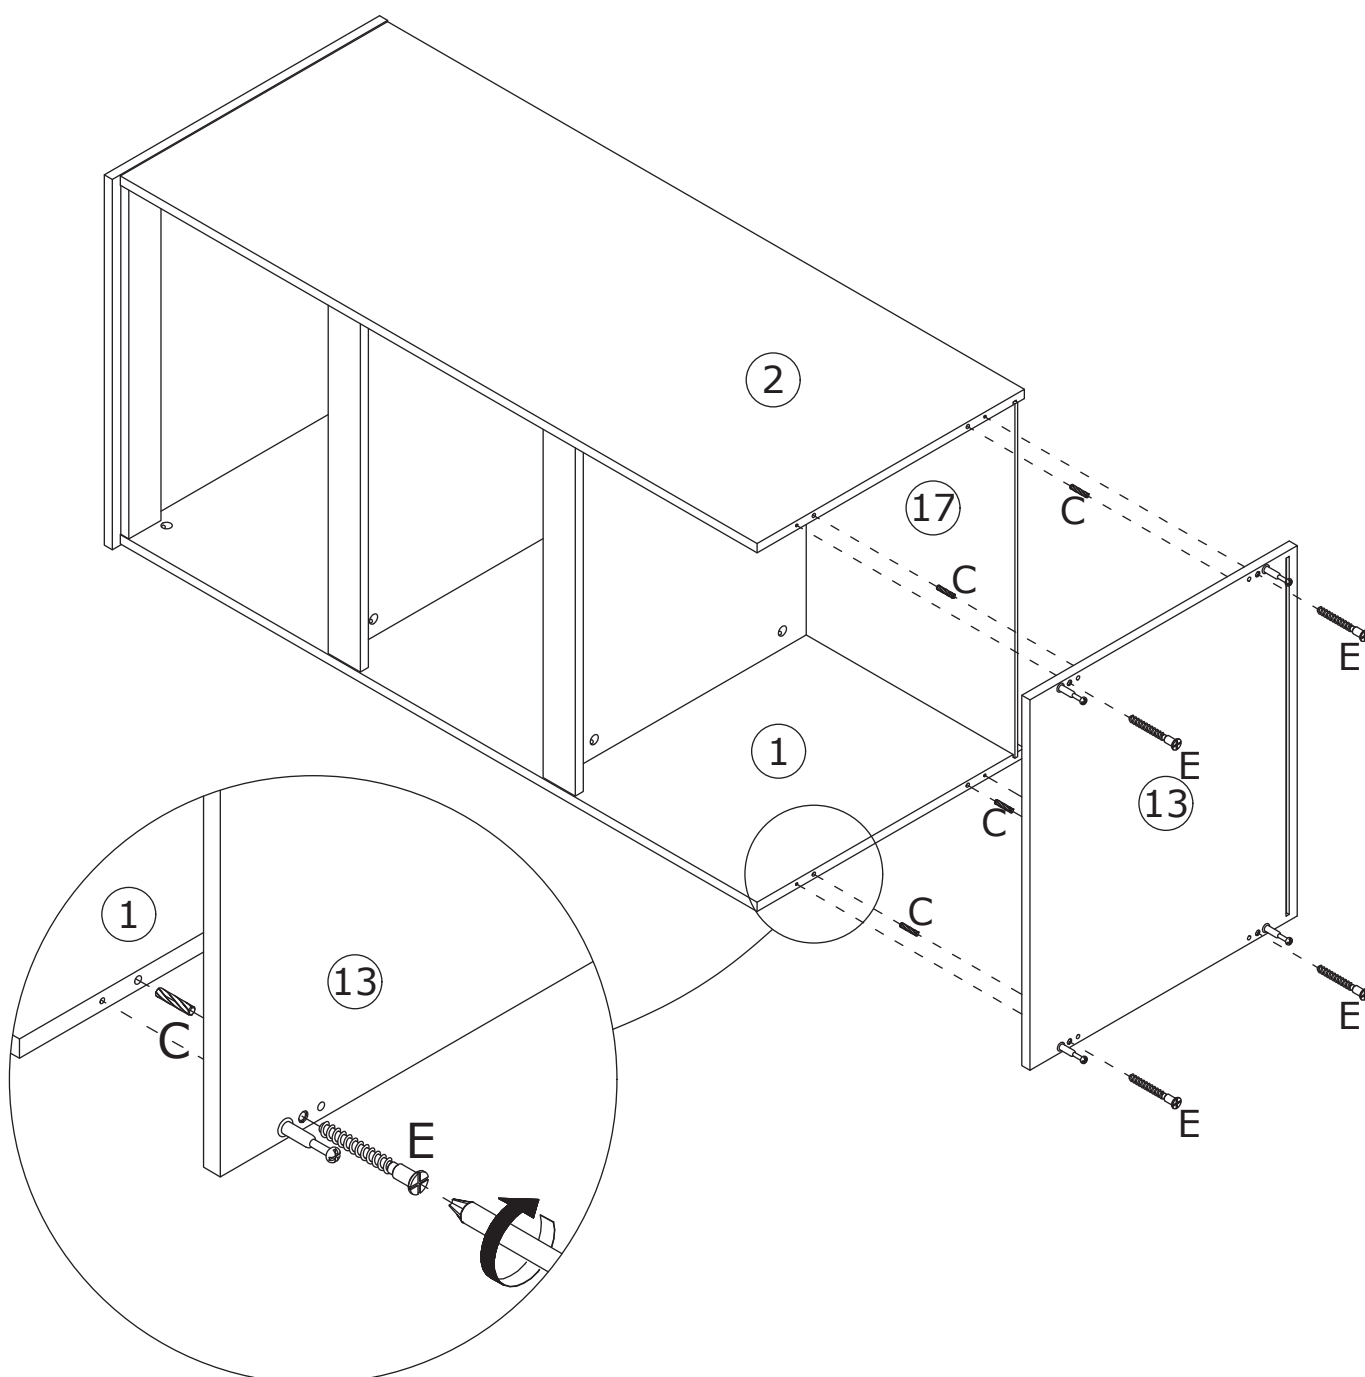


# 13




B x 12



  D x 12

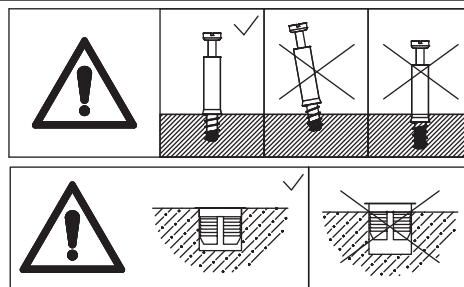

   Insert threaded inserts (D) into the pre-drilled holes of Panels 3 and 4, then fasten cam screw (B) into the insert nuts.

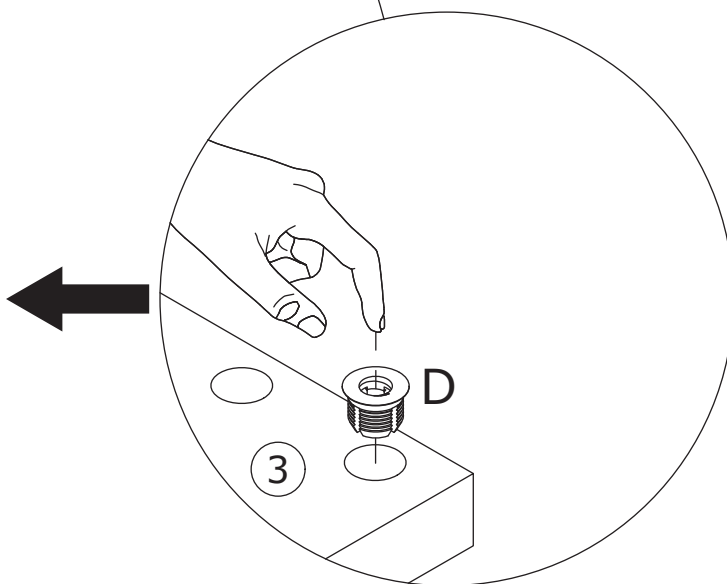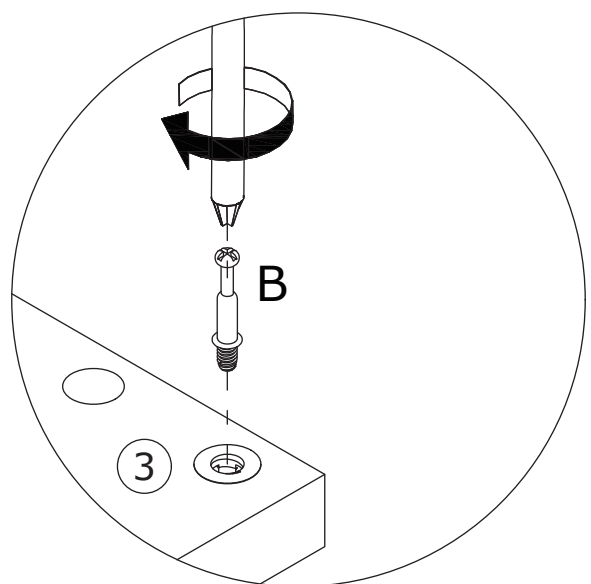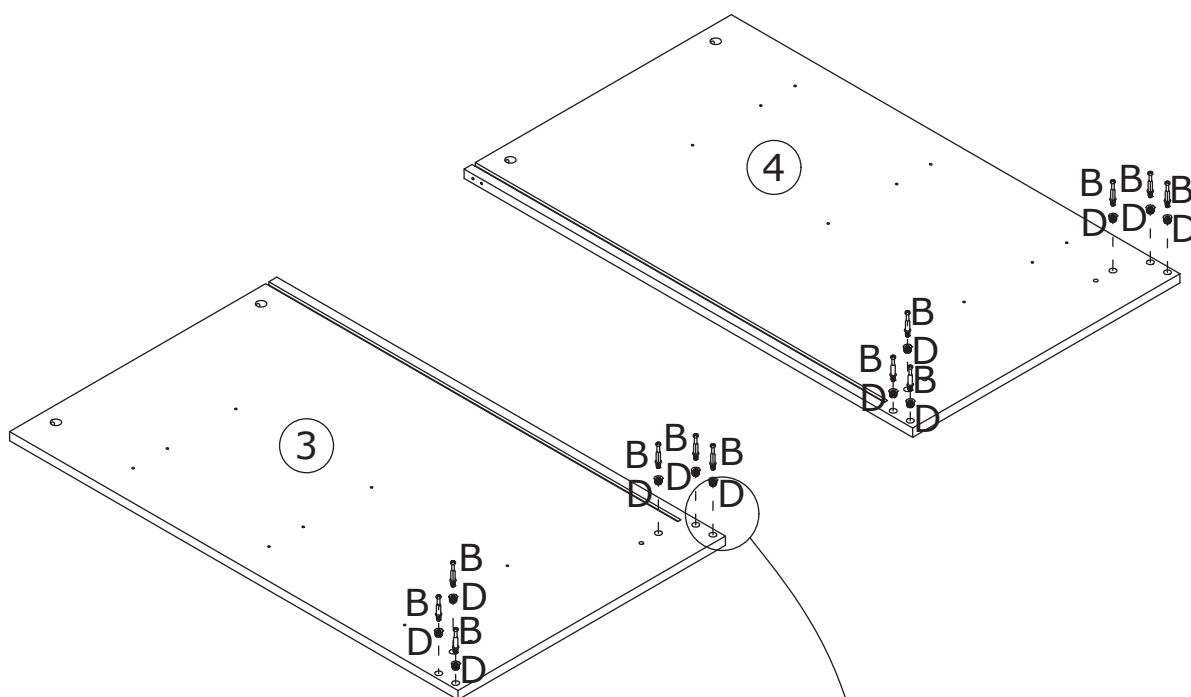

# 14

F x 18




CRD3512A

K x 3



 K1  
#3508 12"



F



CRD3512A

G



CRD0314A

H



CRD0316A

F

 
F

K1


F




Secure drawer slide (K1) to Panels 3 and 4 with screws (F).

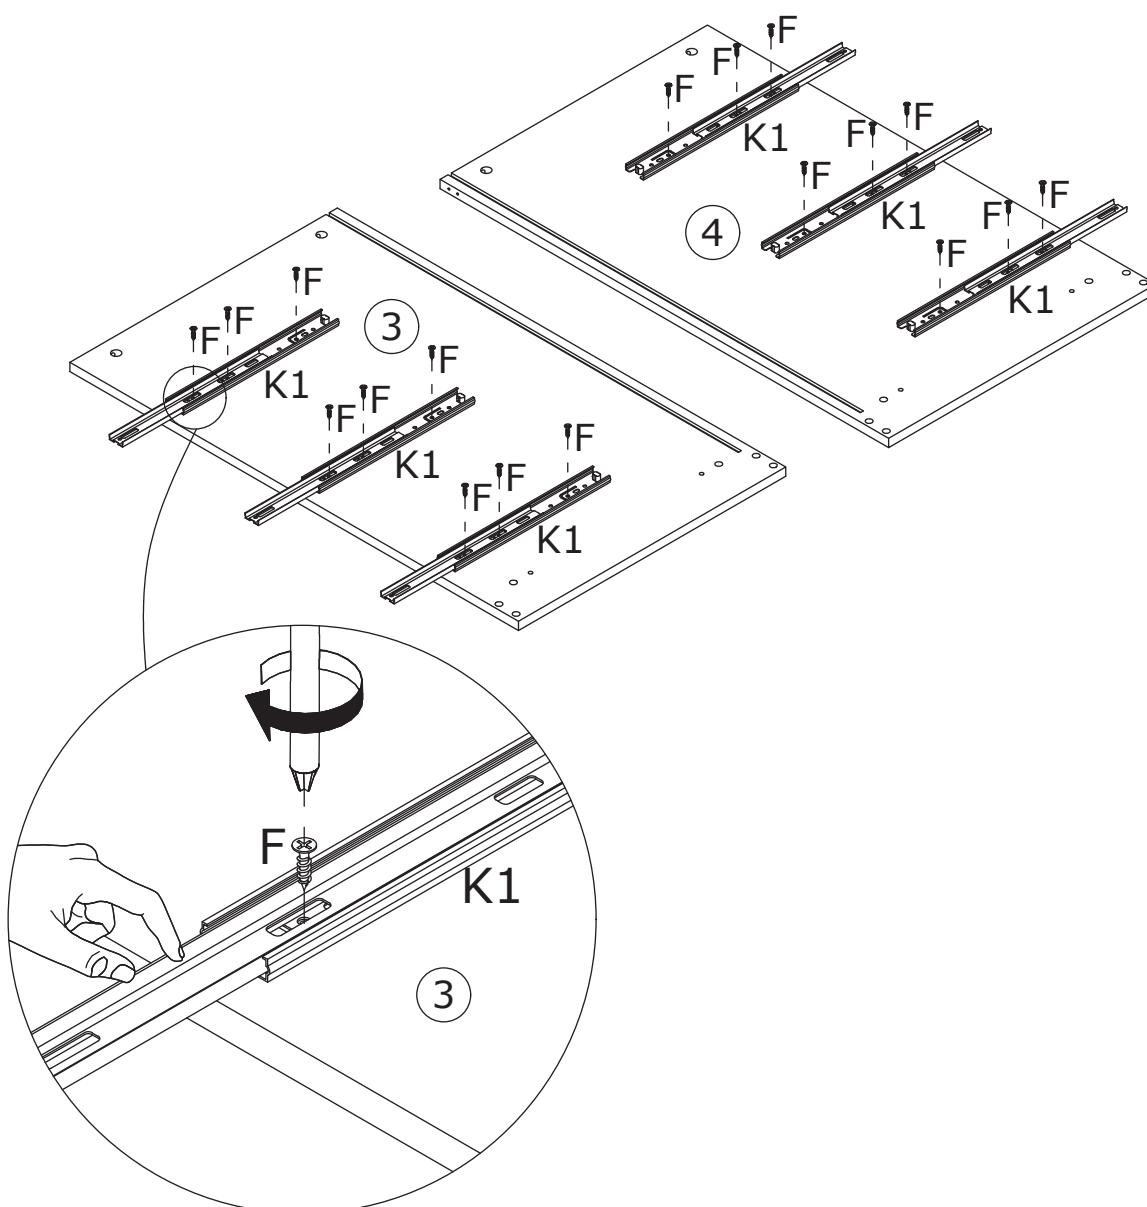

# 15


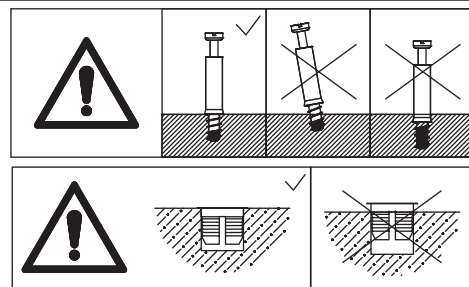 


 Insert threaded inserts (D) into the pre-drilled holes of Panel 8, then fasten cam screw (B) into the insert nuts.

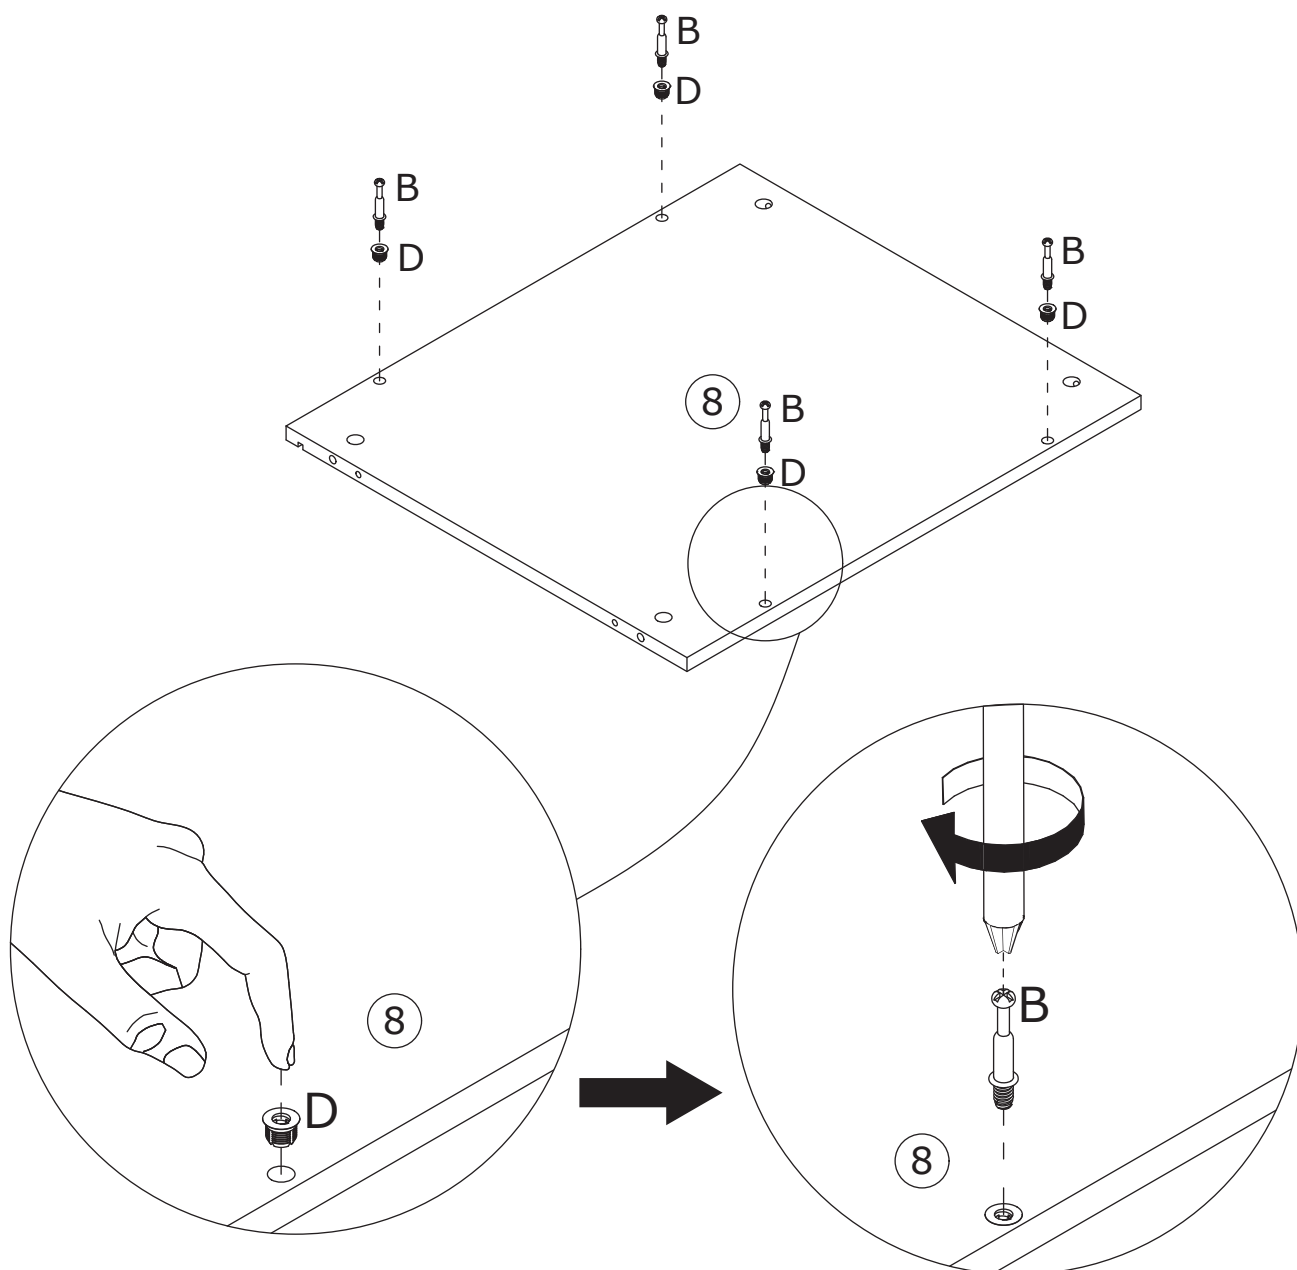


# 16

  A x 4  
CRB1595A

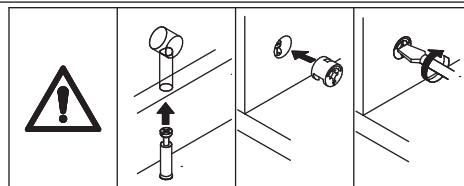

 Connect Panel 18 to Panel 8, fit cam lock (A) into position, then turn it clockwise to tighten.

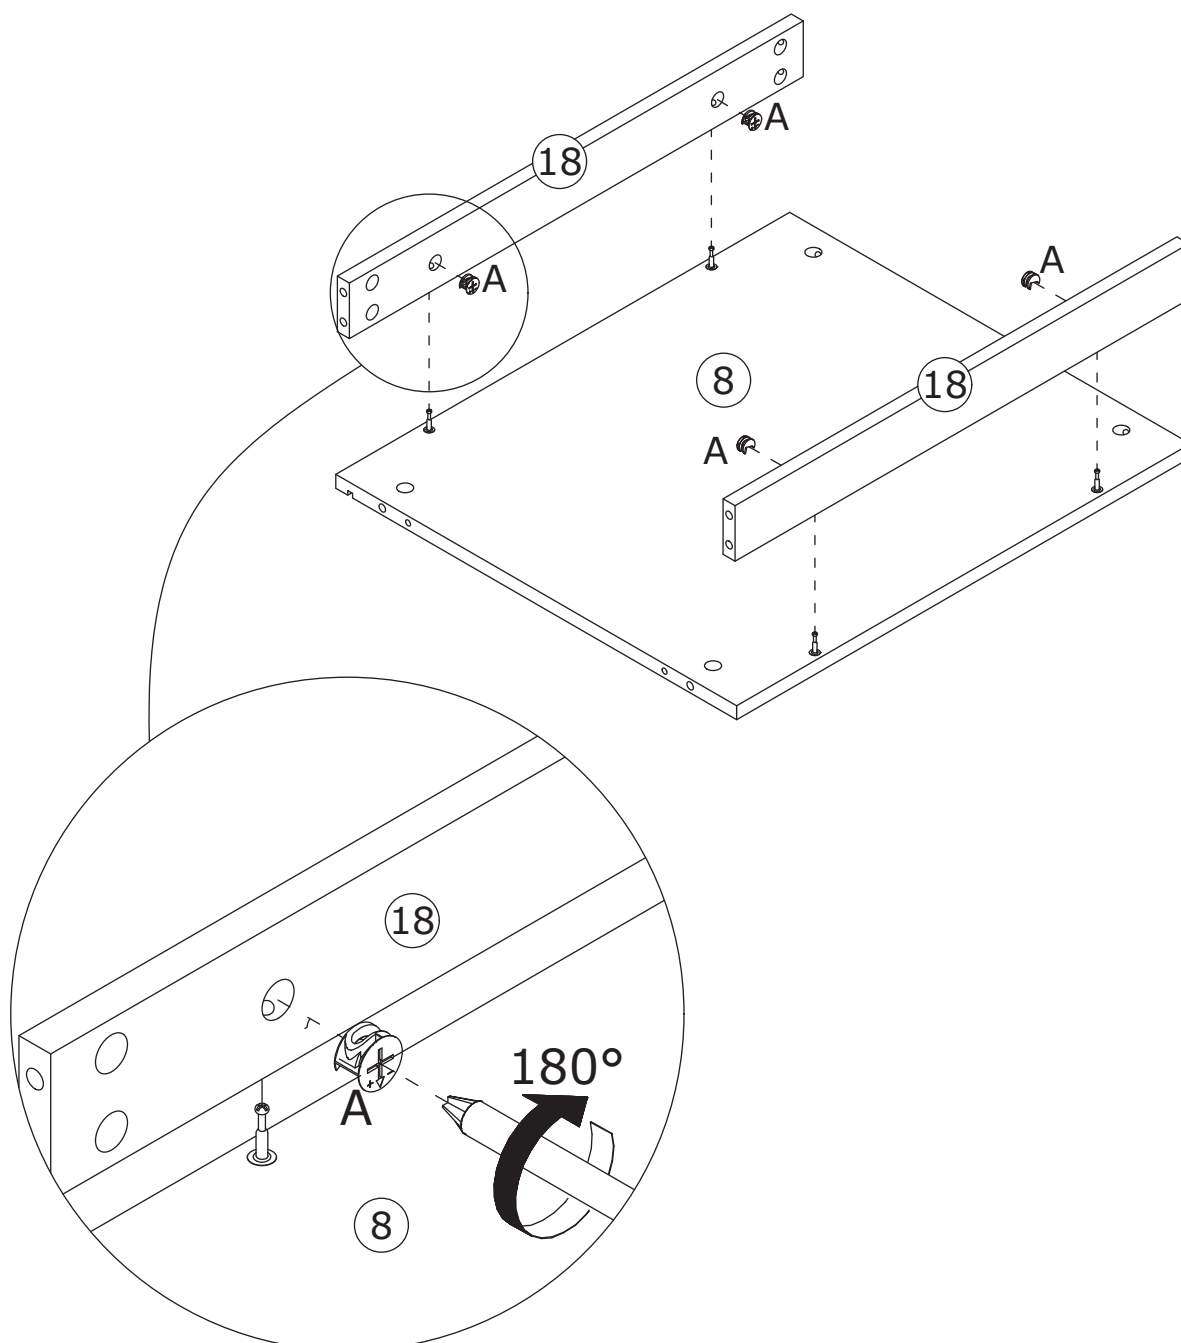


# 17

A x 12





CRB1595A

 
C x 4




CRF0630A

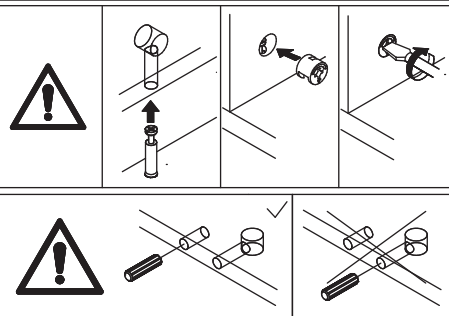  

 
Connect Panels 3 and 4 to Panels 8 and 18 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

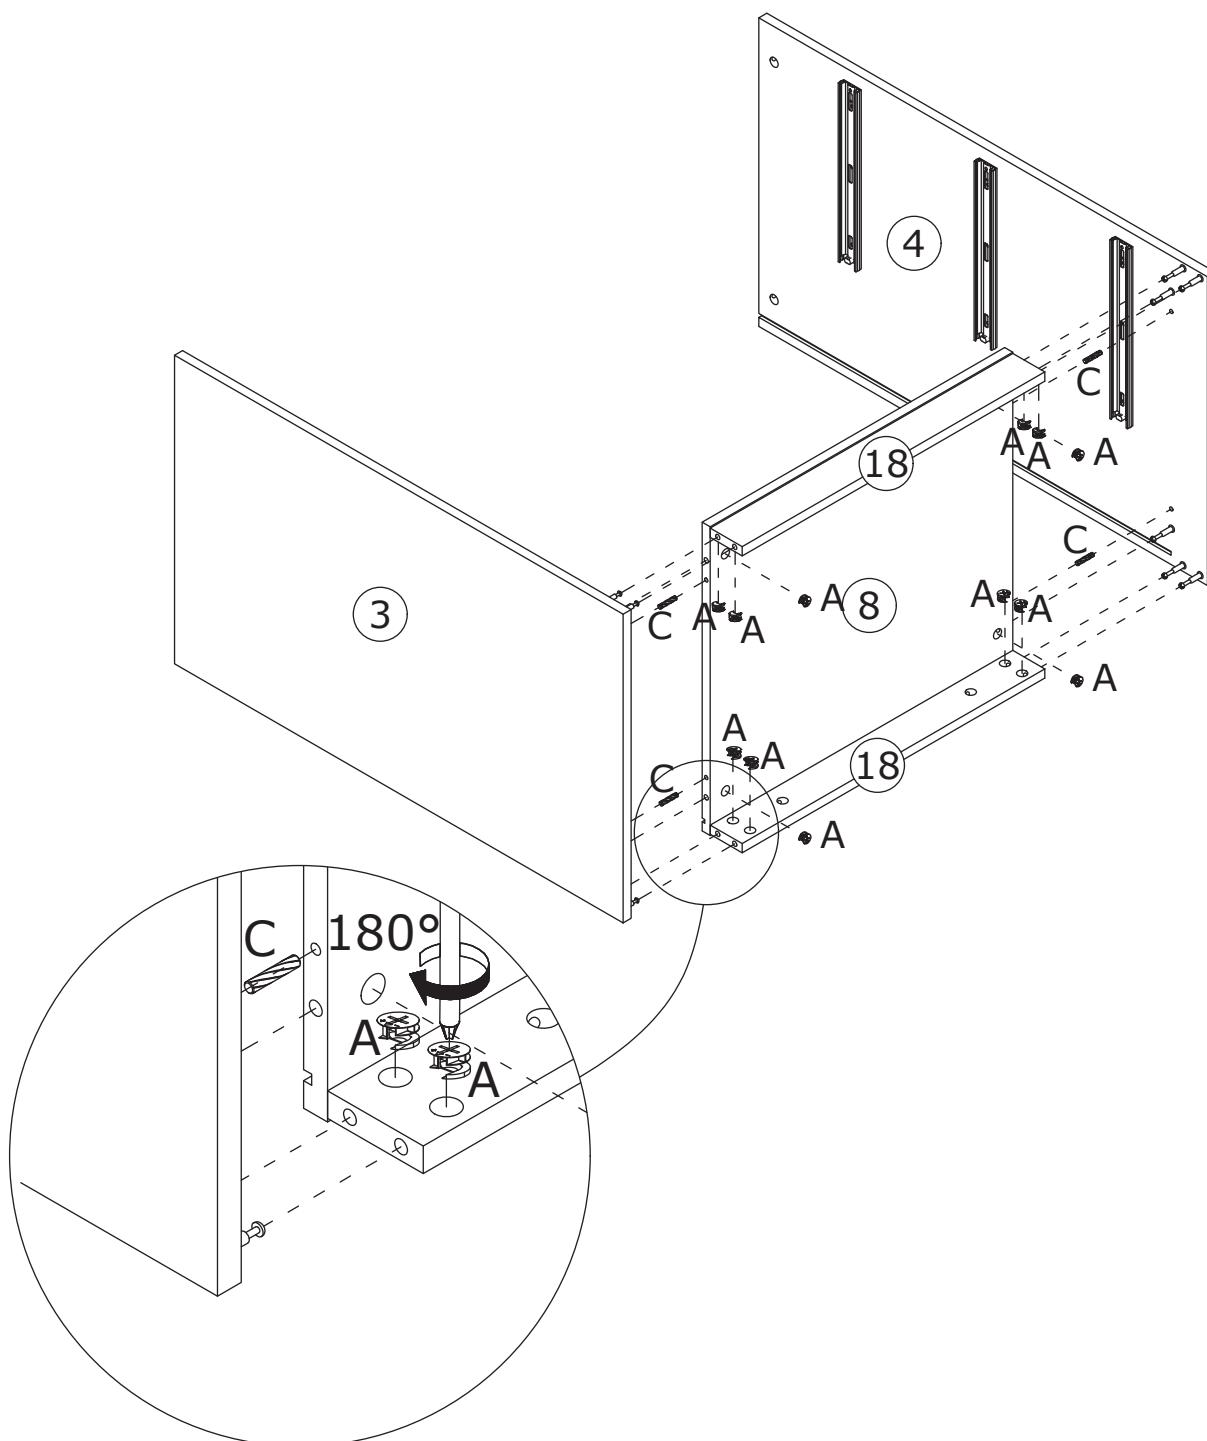

 
Insert Panel 16 along the reserved slots.

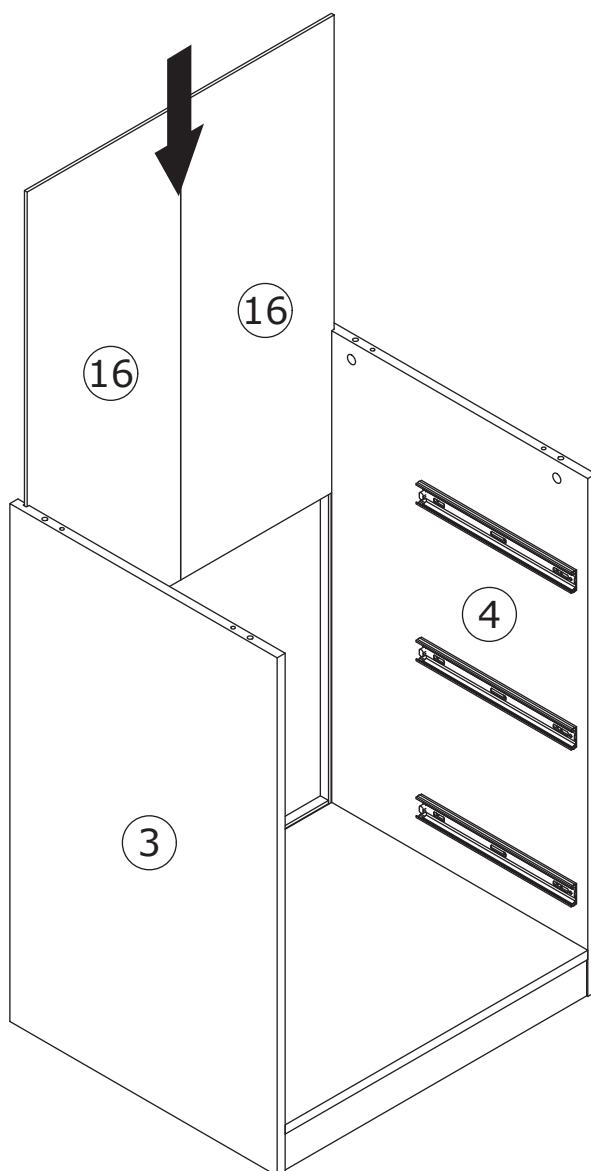

 
1.

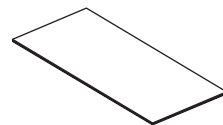


 
2.

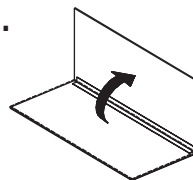



 
3.

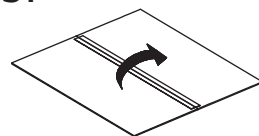

# 19
  
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>A x 4</p>  <p>CRB1595A</p> | <p>C x 4</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

   Connect Panel 13 to Panels 3 and 4 with dowel pins (C), fit cam lock (A) into position, then turn it clockwise to tighten.

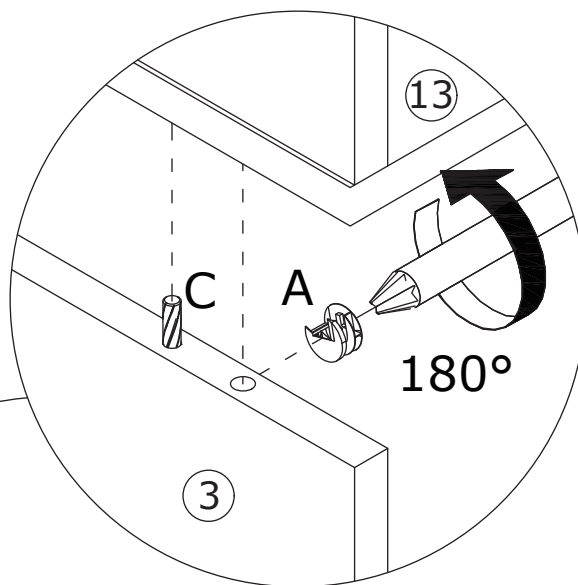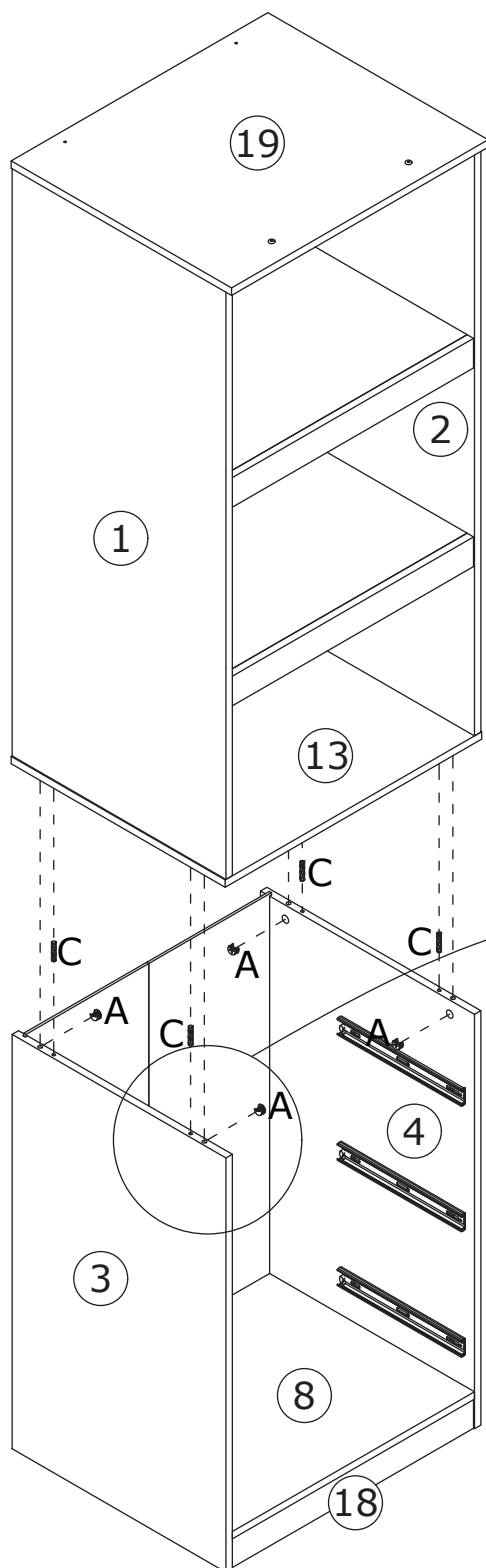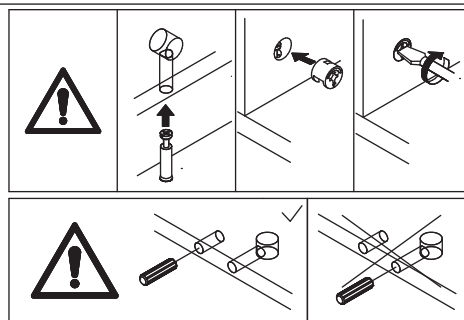

# 20

H x 2





CRD0316A

G x 12




CRD0314A

  M x 2



 Secure part (M) to Panels 1, 2, 3, 4 and 13 with screws (G), and secure Panel 15 to Panel 6 with screws (H).

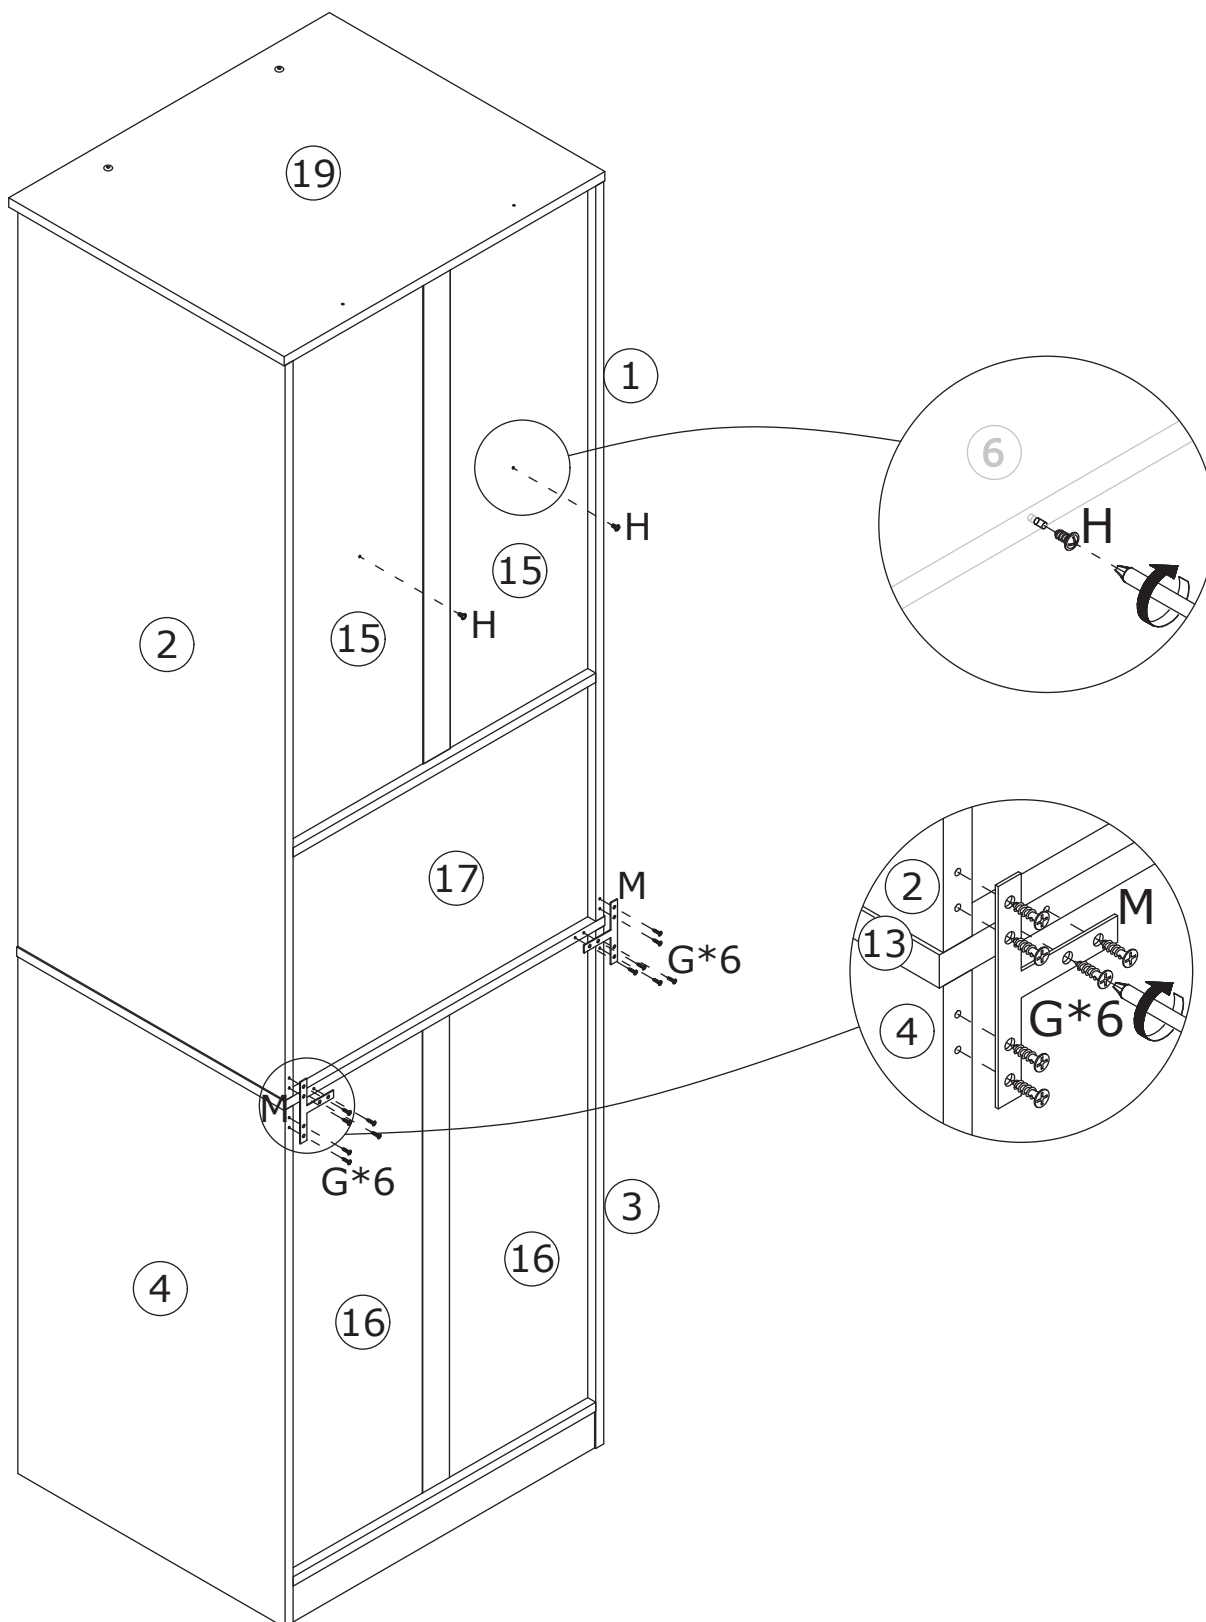


# 21

G x 34



CRD0314A

 S x 34



Slide clips (S) into the gap of the unit,  
then secure them in place by tightening  
screws (G).



E



CRD3512A

G





CRD0314A

H




  CRD0316A

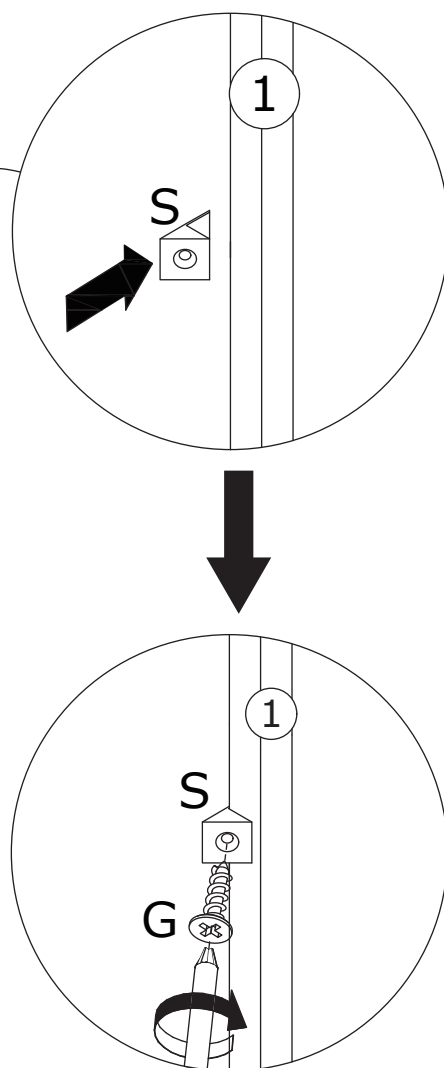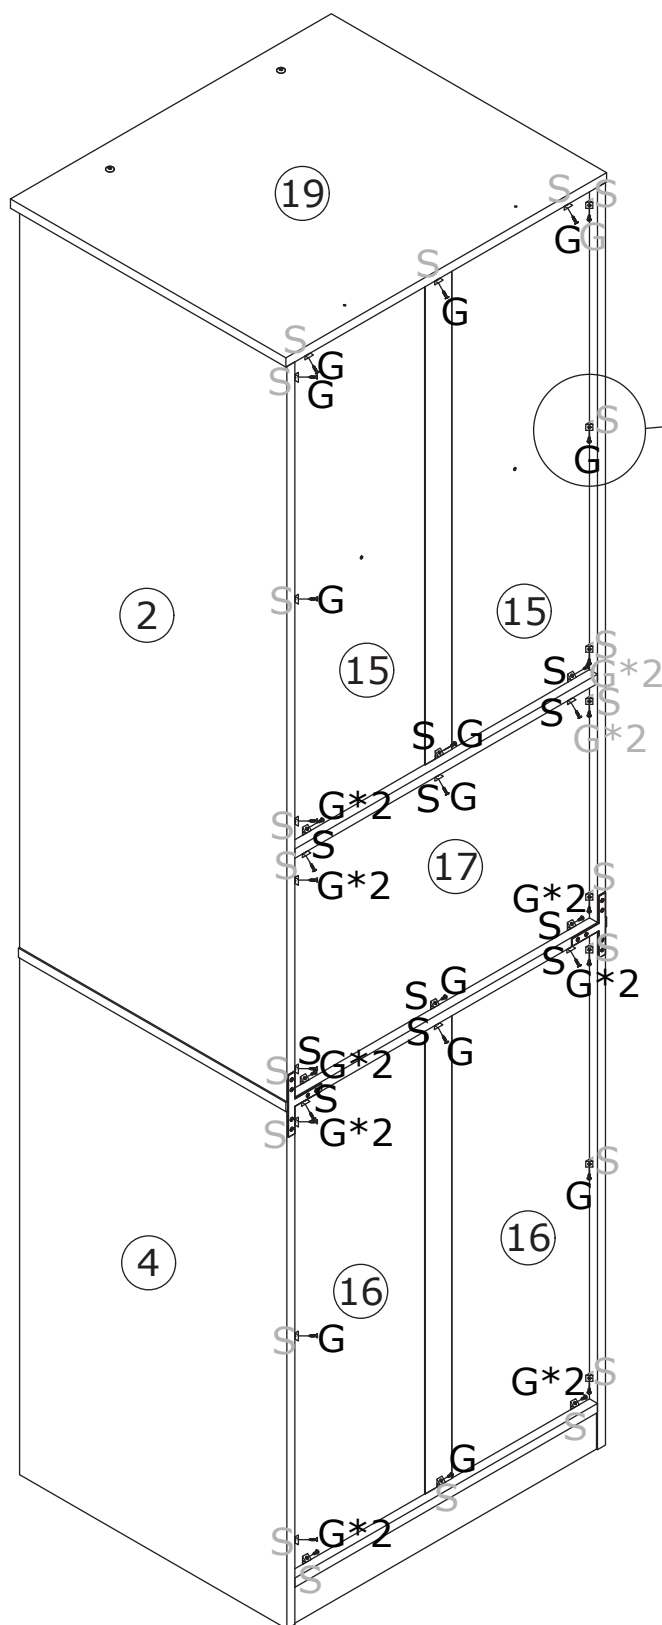




If there is a keel inside the wall, please select Option A  
If there is no keel inside the wall, please select Option B.

 Option A

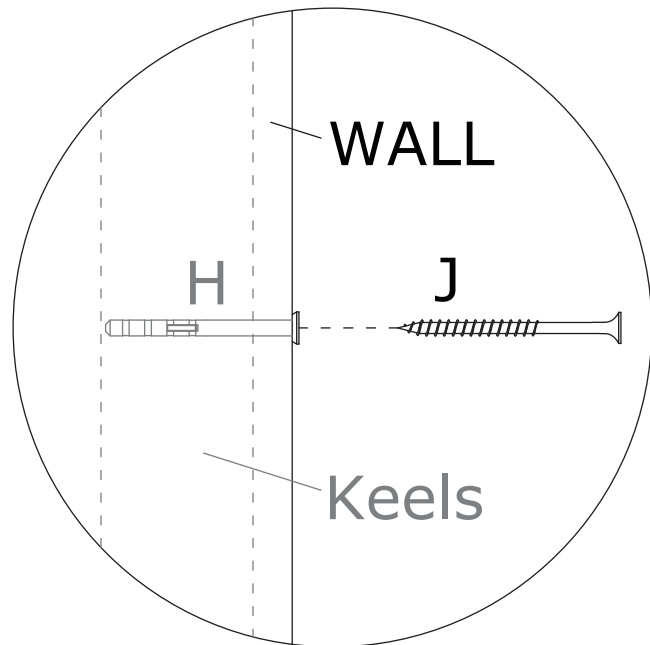


Option B

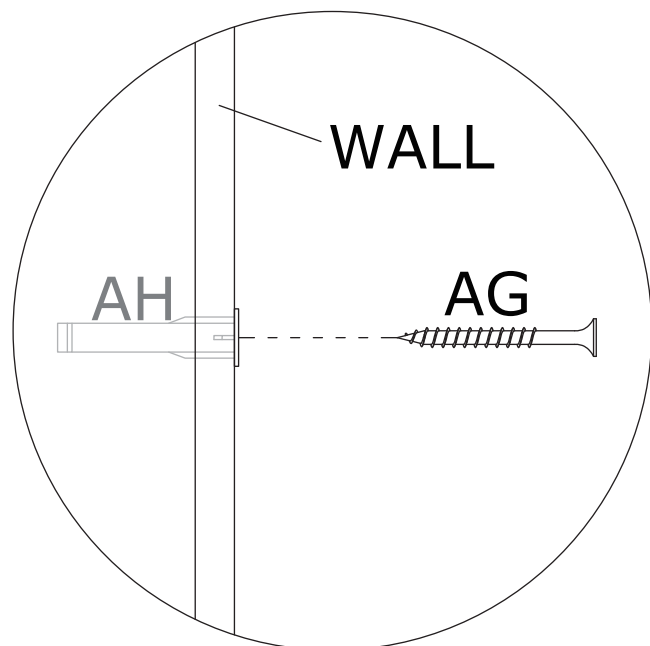 

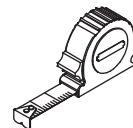  


# Option A

 Locate the anti-tip position on the wall stud.

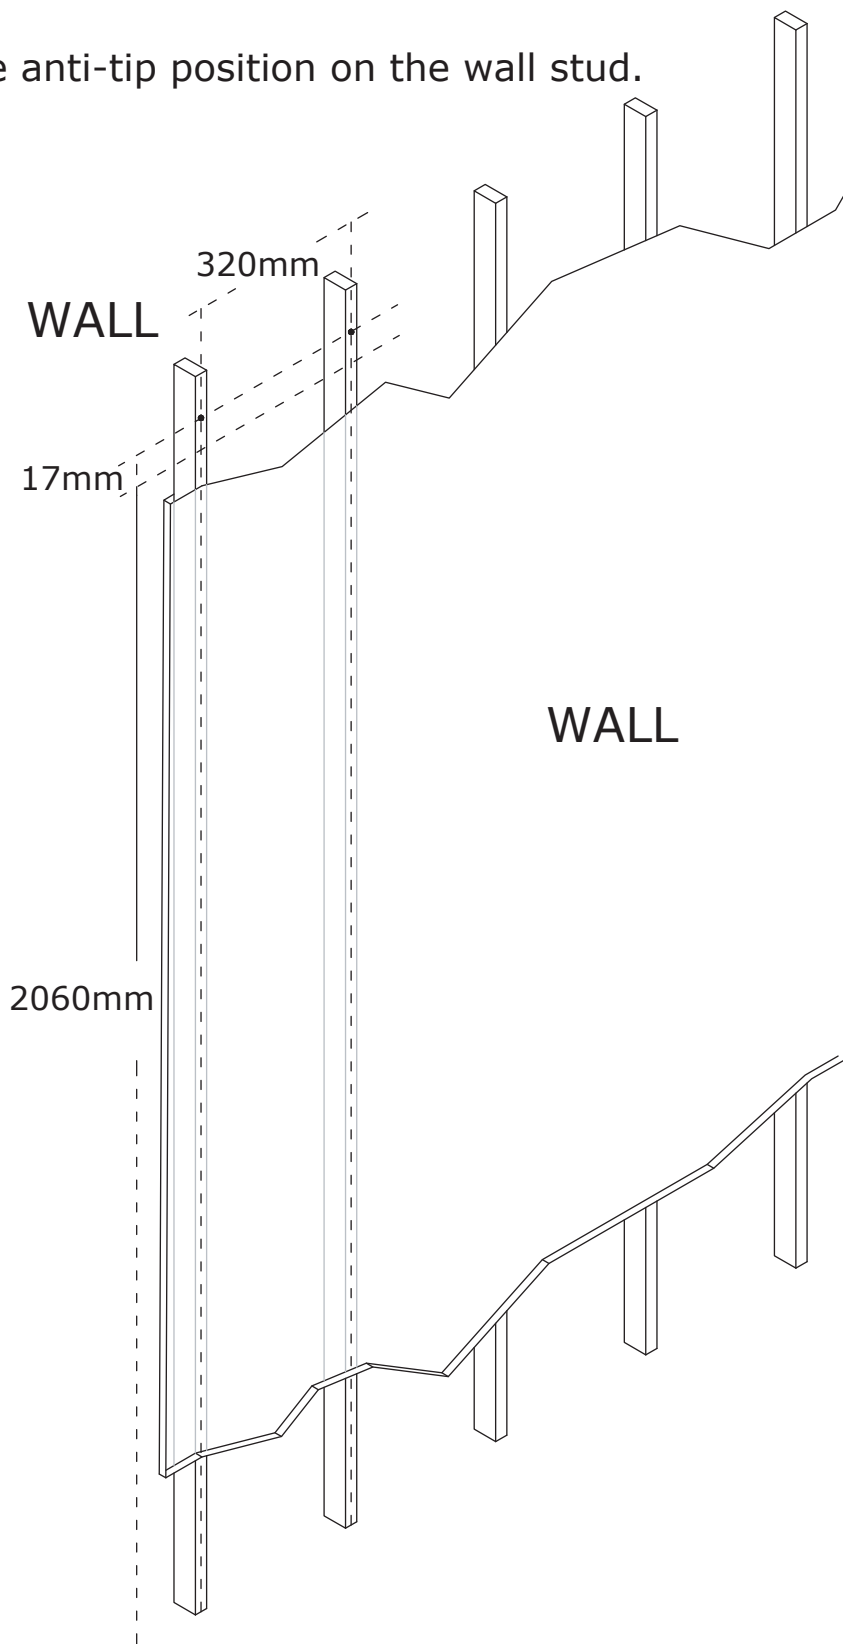

23

 R x 2



# Option A

Install part (R) into the wall stud according to the anti-tip position marked in step 23.

 
WALL

R

R


WALL

WALL


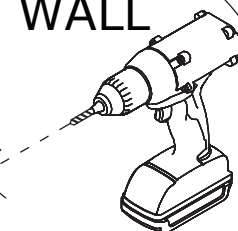


WALL



 
R

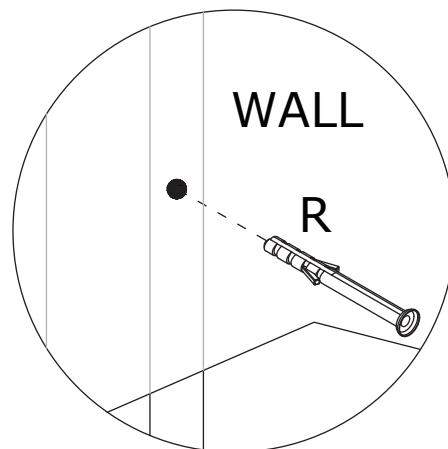

24

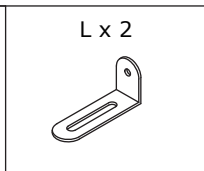 
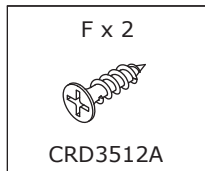 


# Option A

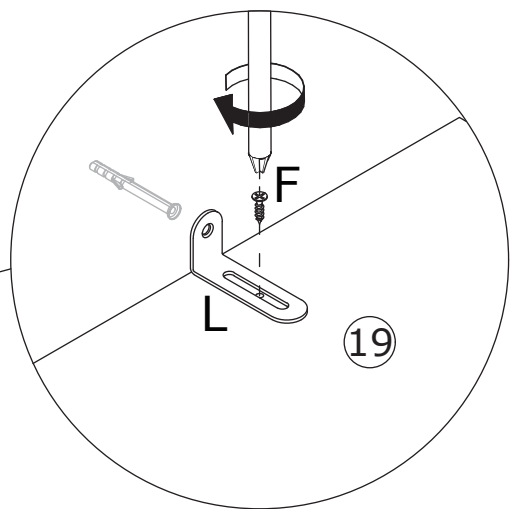 
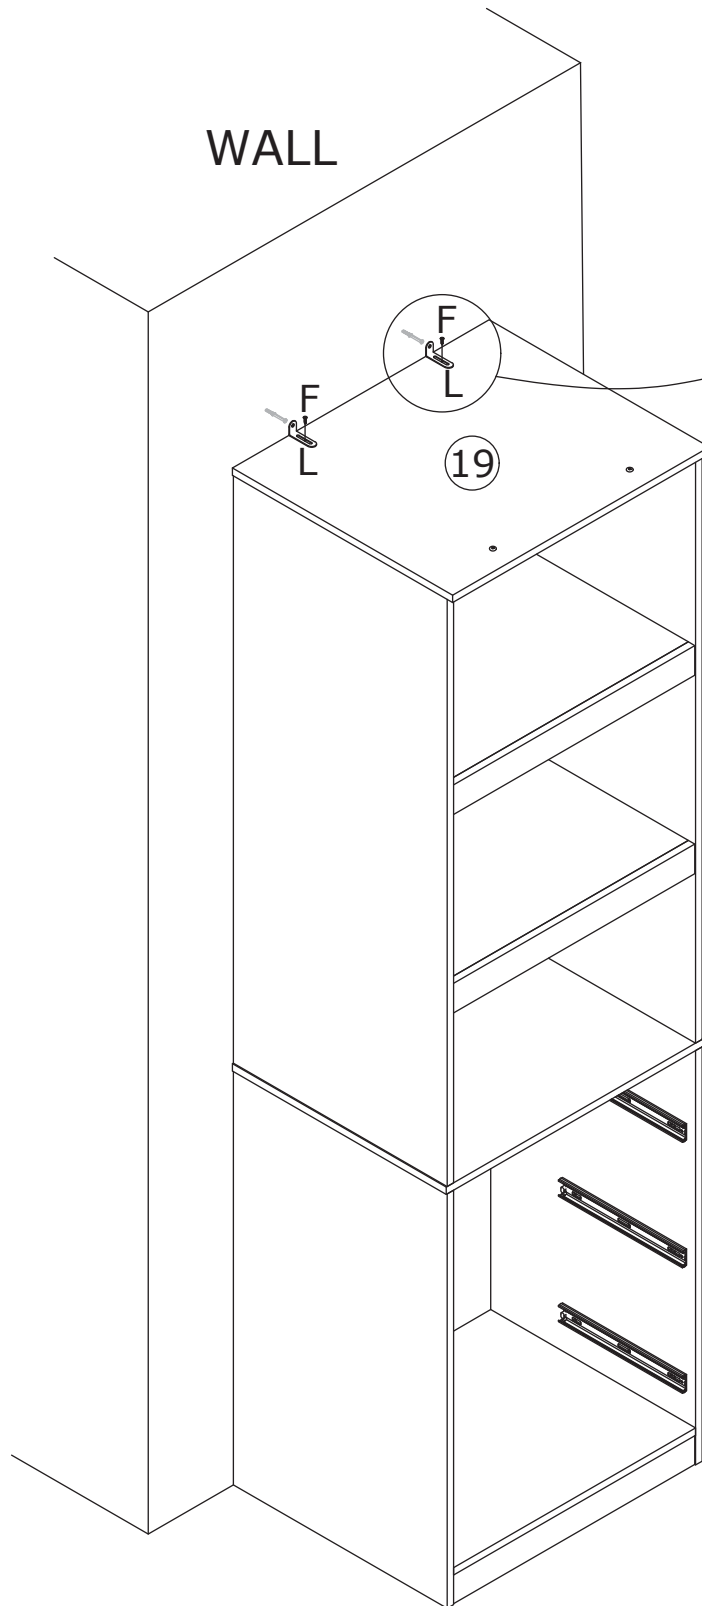 
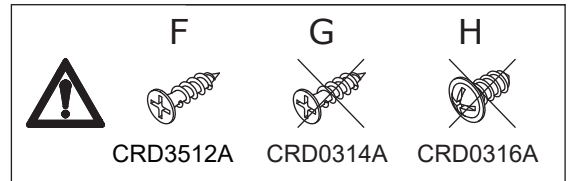 


Install part (L) to Panel 19 with screws (F).

 
 
25

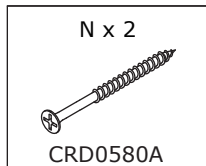

# Option A

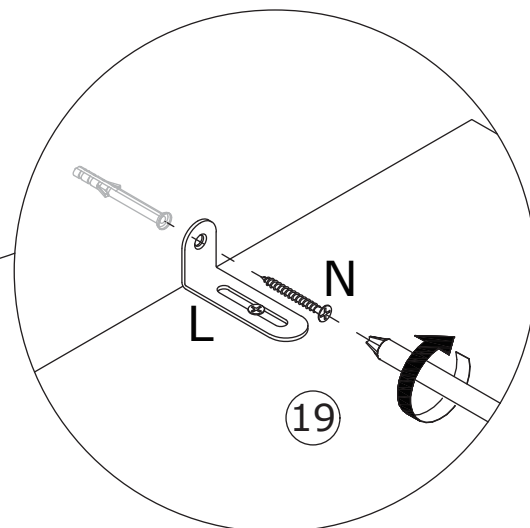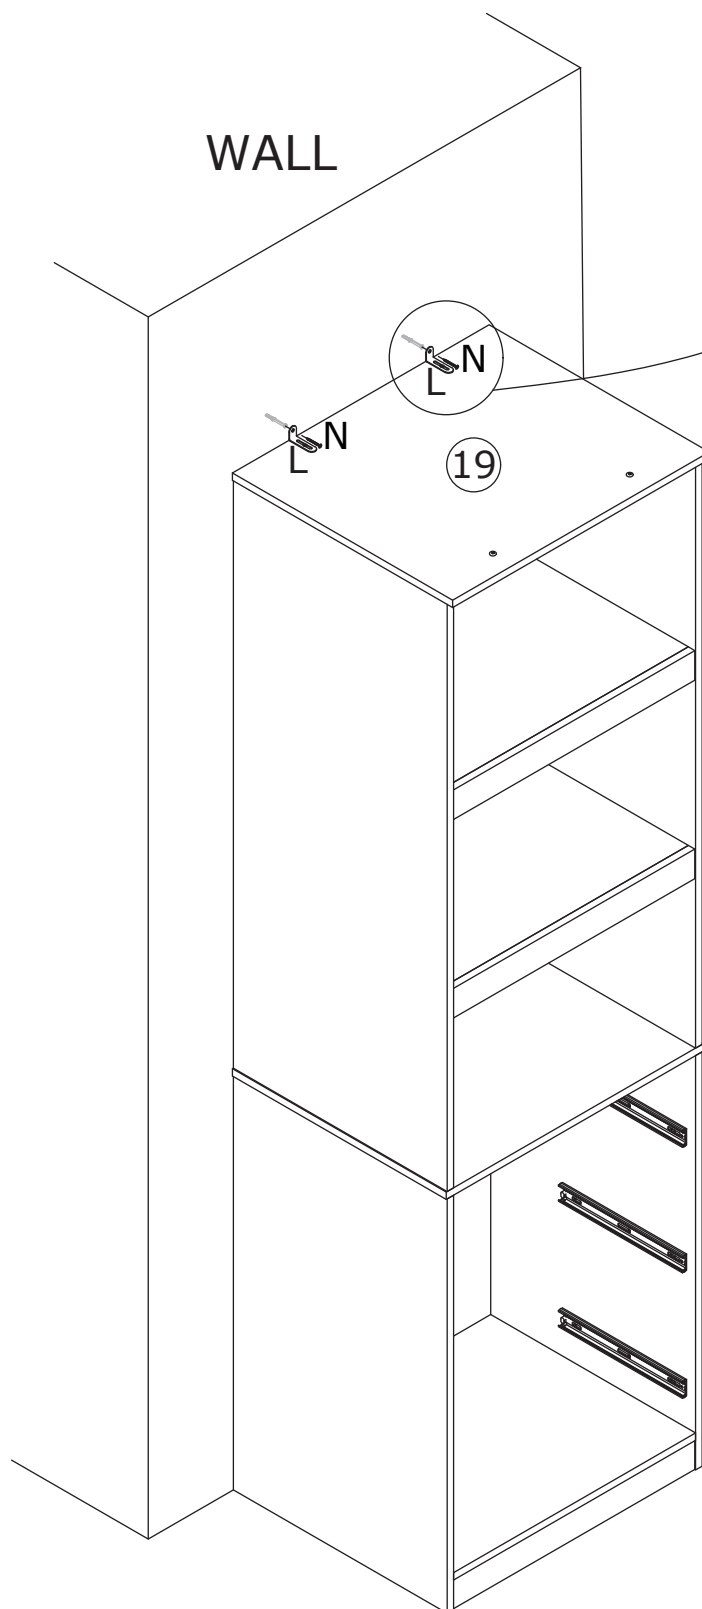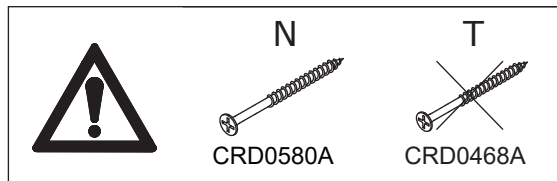   


  Install part (L) to the wall with screws (N).

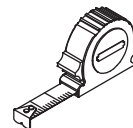



# Option B

 Locate the anti-tip position on the wall.

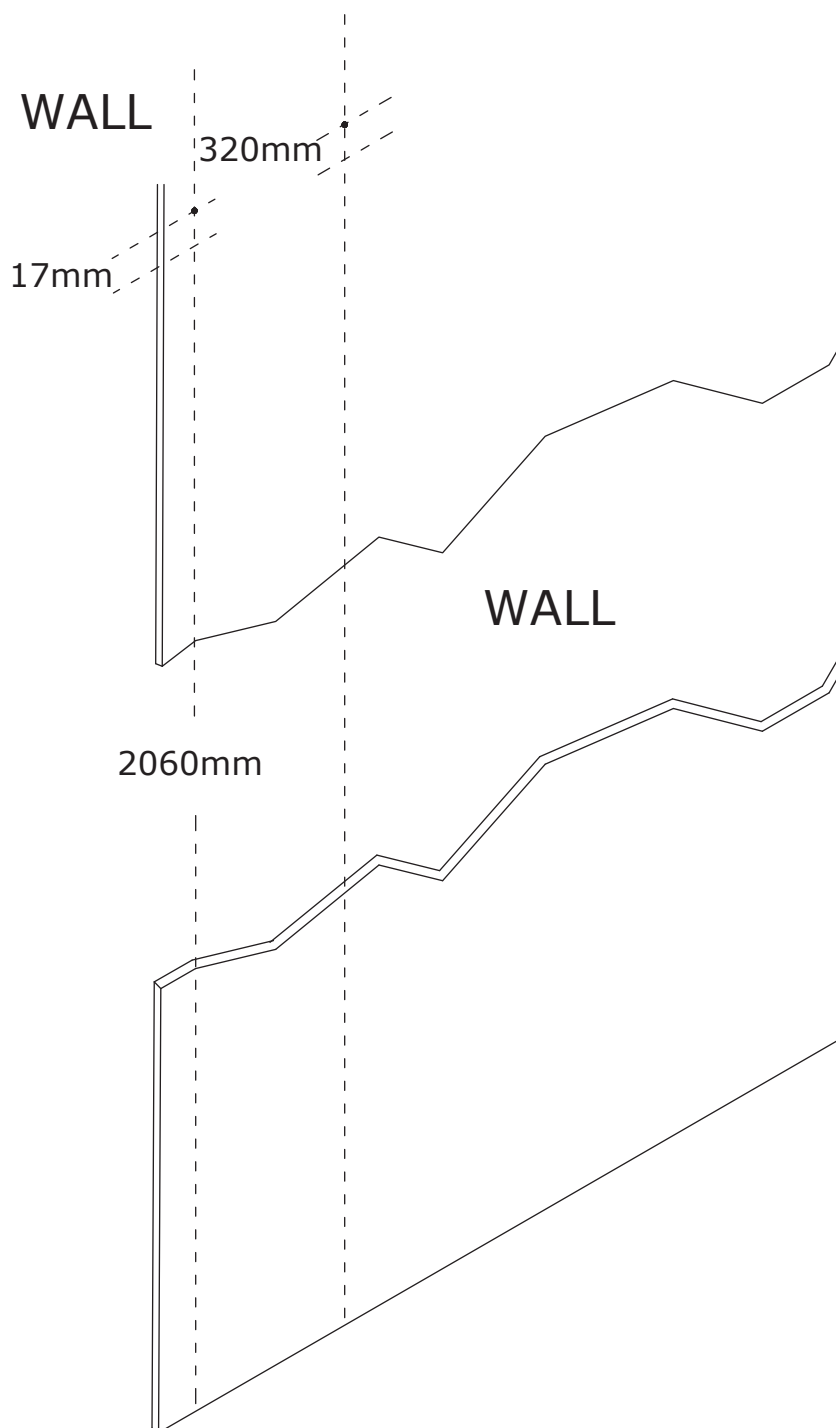

27

  U x 2



## Option B

 
Install part (U) into the wall according to the anti-tip position marked in step 27.

WALL




U

WALL

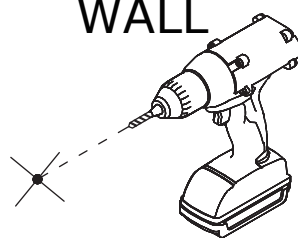


WALL

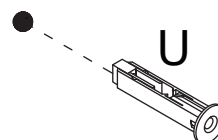 




# 28

F x 2  
CRD3512A

 L x 2




## Option B

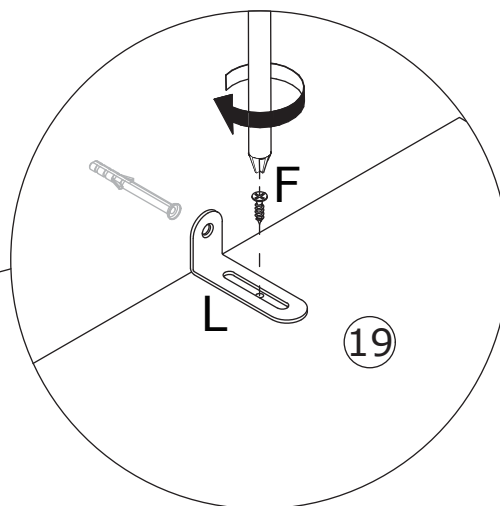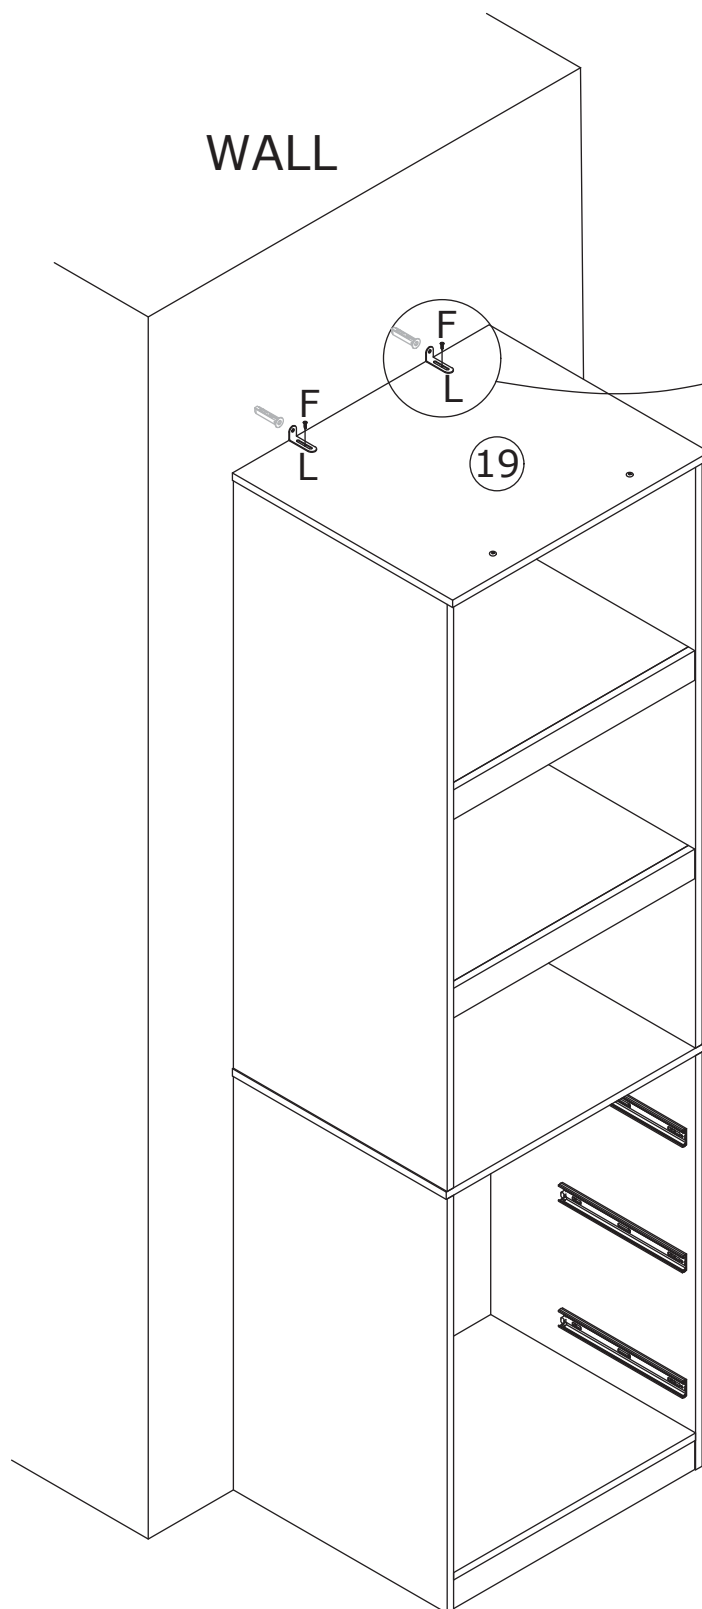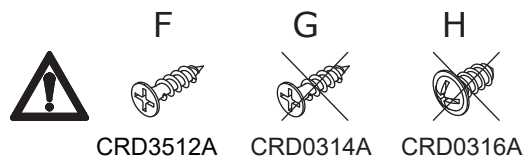   

Install part (L) to Panel 19 with screws (F).

29

 T x 2  
CRD0468A





# Option B



N  
~~CRD0580A~~

  
T  
CRD0468A

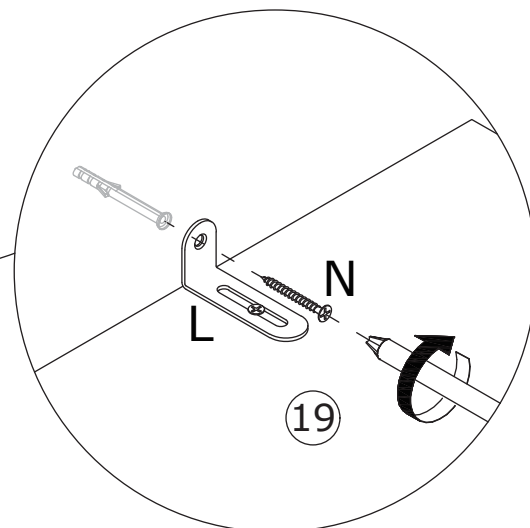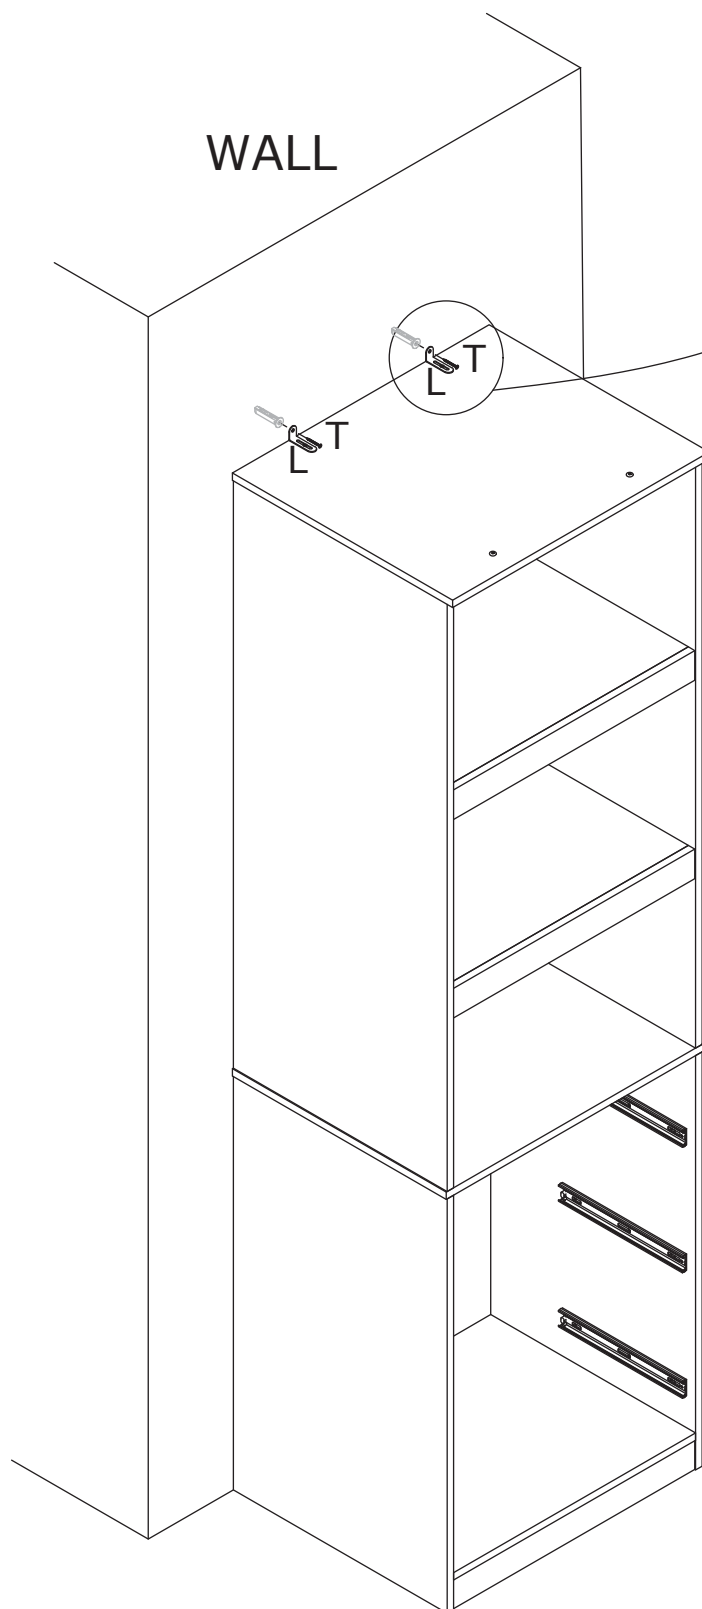



Install part (L) to the wall with screws (T).

# 30

 E x 15





CRC0540A

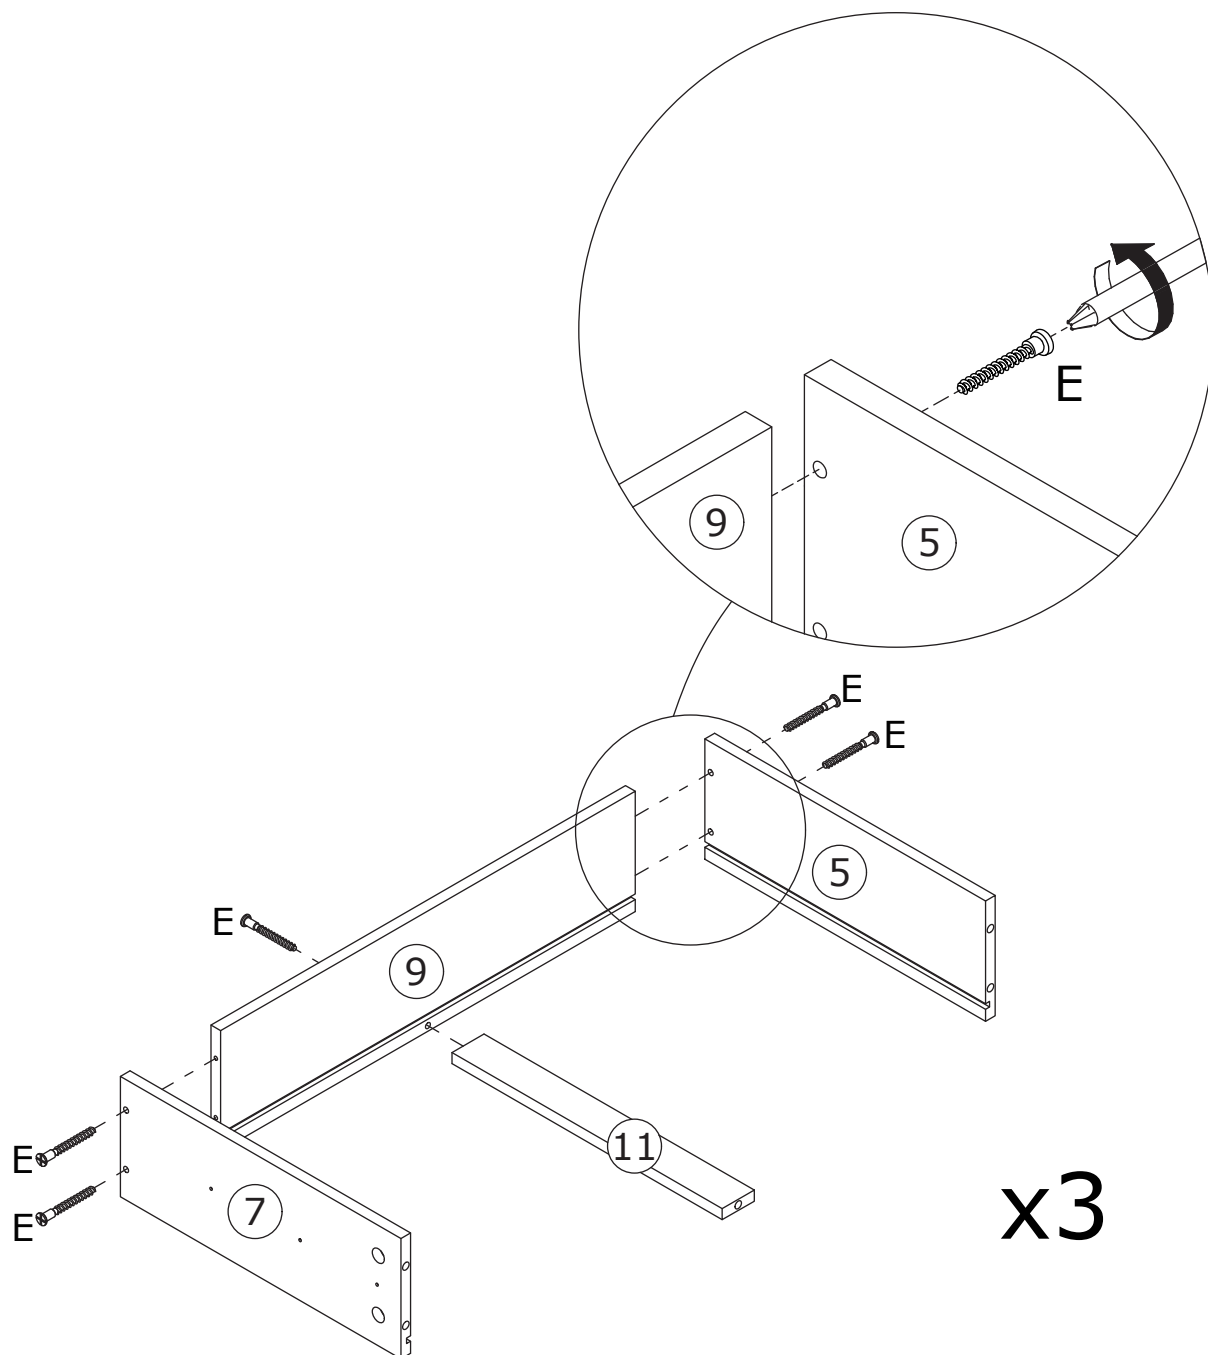  

x3

Secure Panels 5, 7 and 11 to Panel 9 with screws (E).

# 31

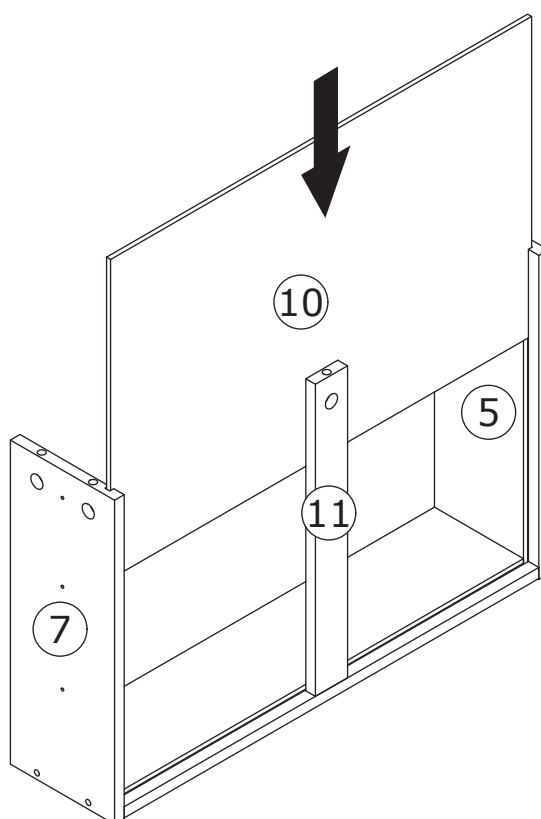  


x3

Insert Panel 10 along the reserved slots.





# 32

 B x 15




Ø 6 x 35 mm

   
 
D x 15

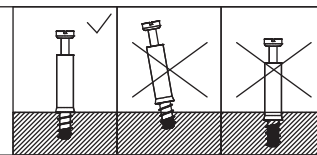

 Insert threaded inserts (D) into the pre-drilled holes of Panel 12, then fasten cam screw (B) into the insert nuts.

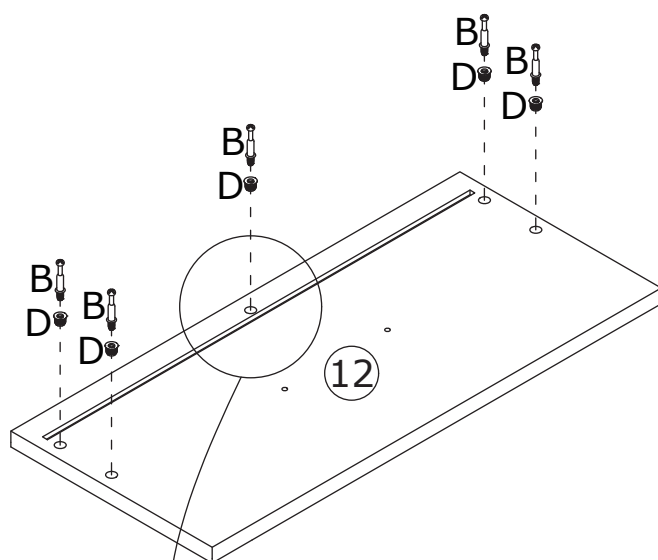

x3

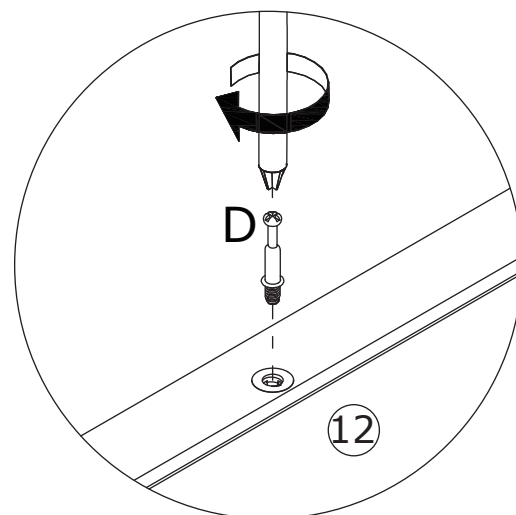 
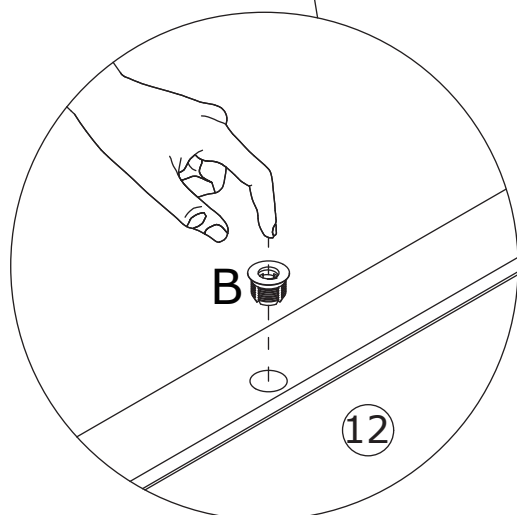 


# 33


A x 15



  
CRB1595A

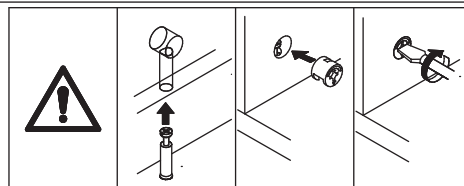



 
Connect Panel 12 to Panels 5, 7 and 11, fit cam lock (A) into position, then turn it clockwise to tighten.

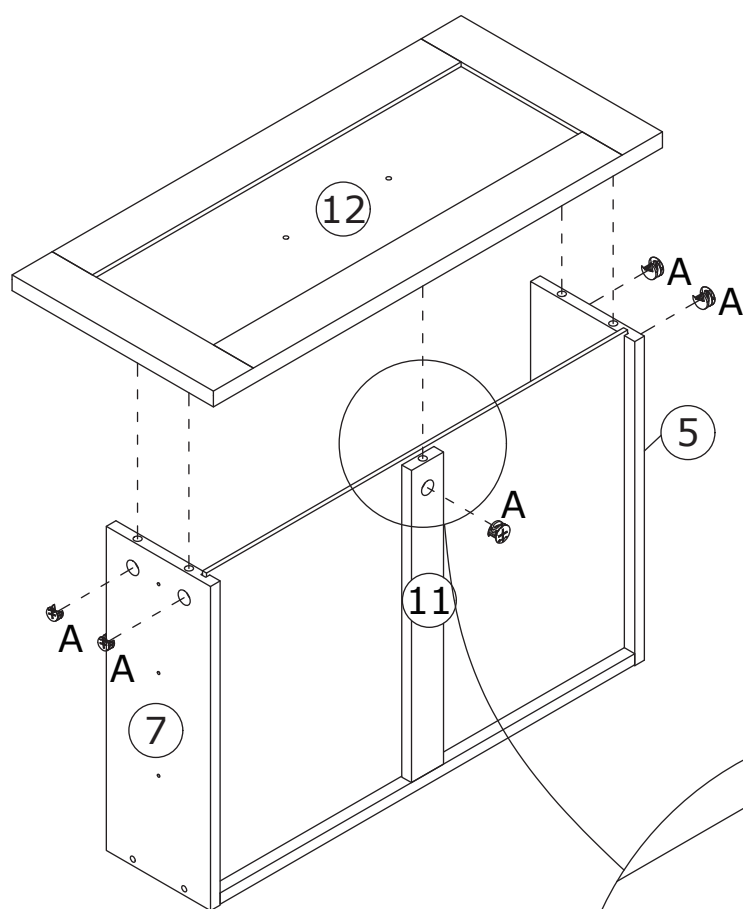


x3

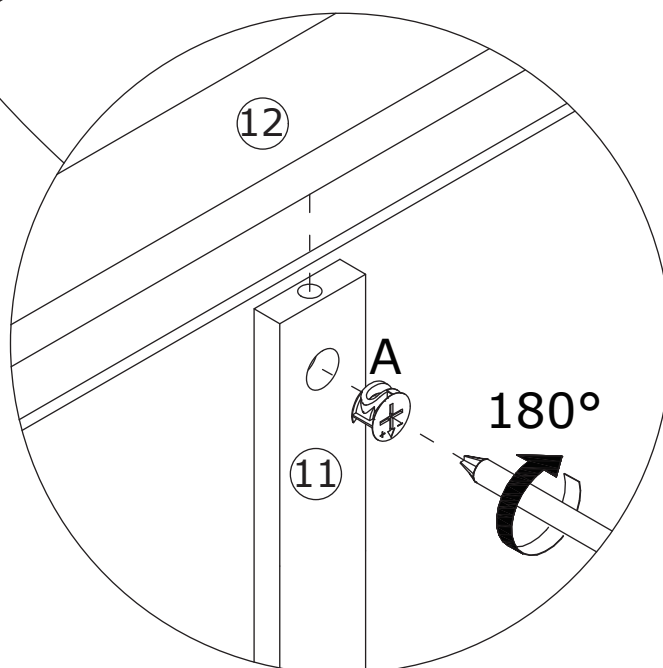 

# 34

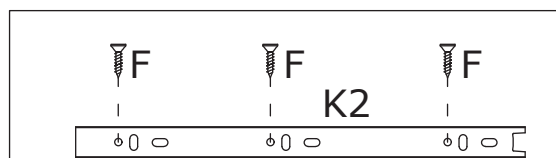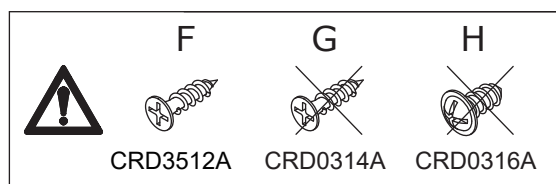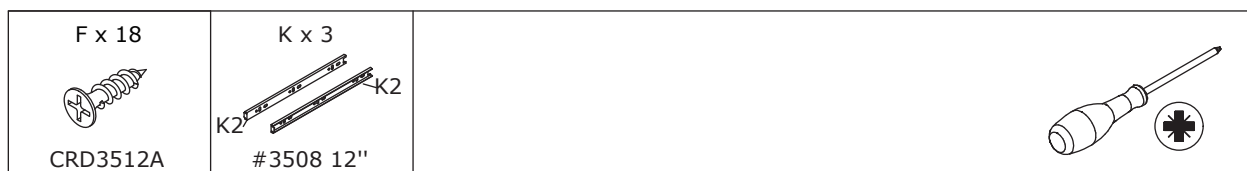   

 
Secure drawer slide (K2) to Panels 5 and 7 with screws (F).

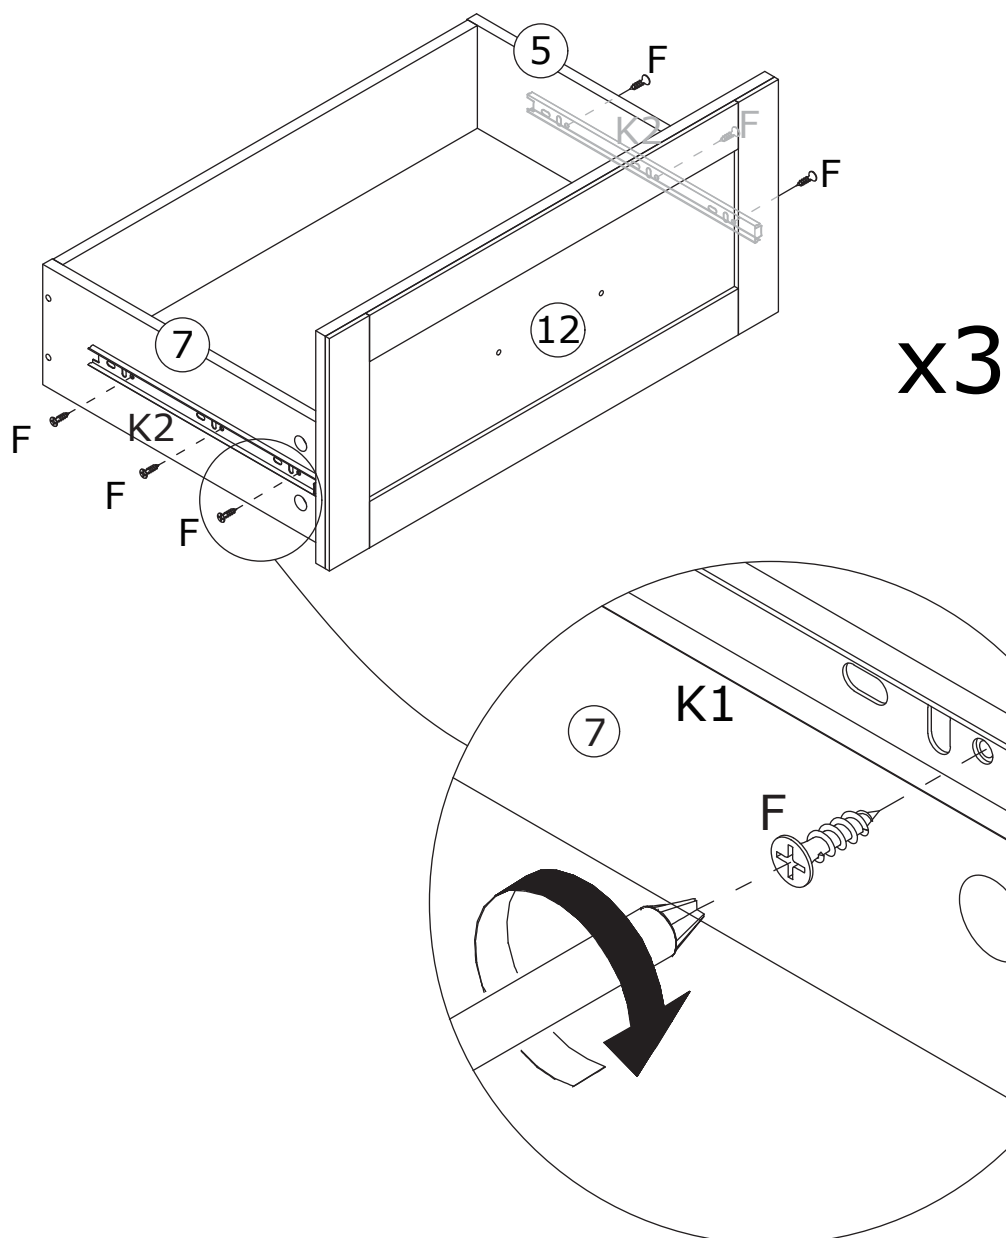


35



 
Secure handle (Q) to Panel 12 with screws (P).

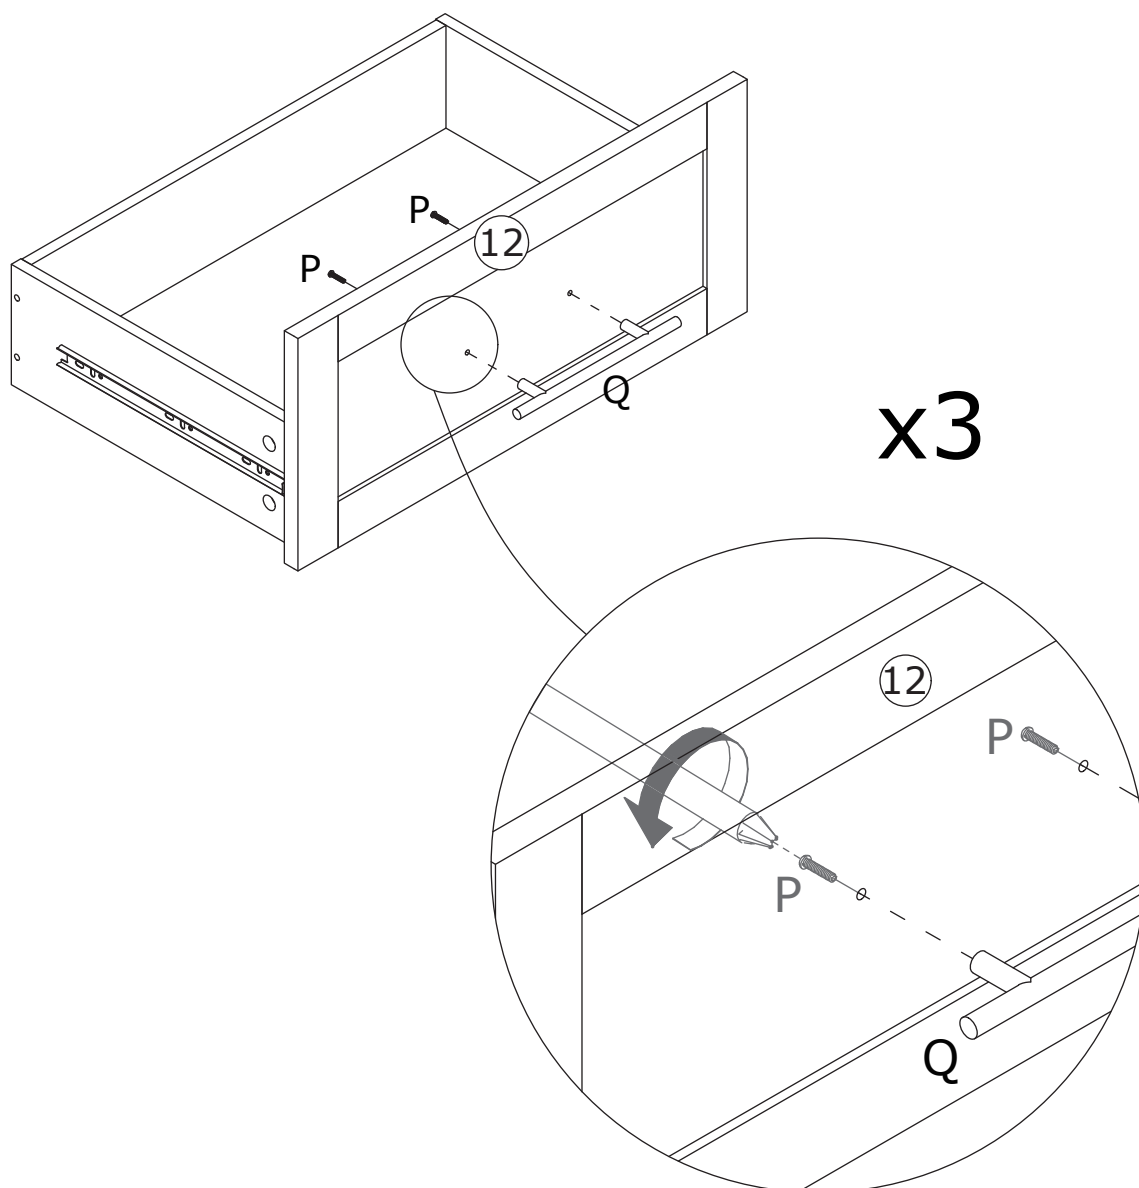

36

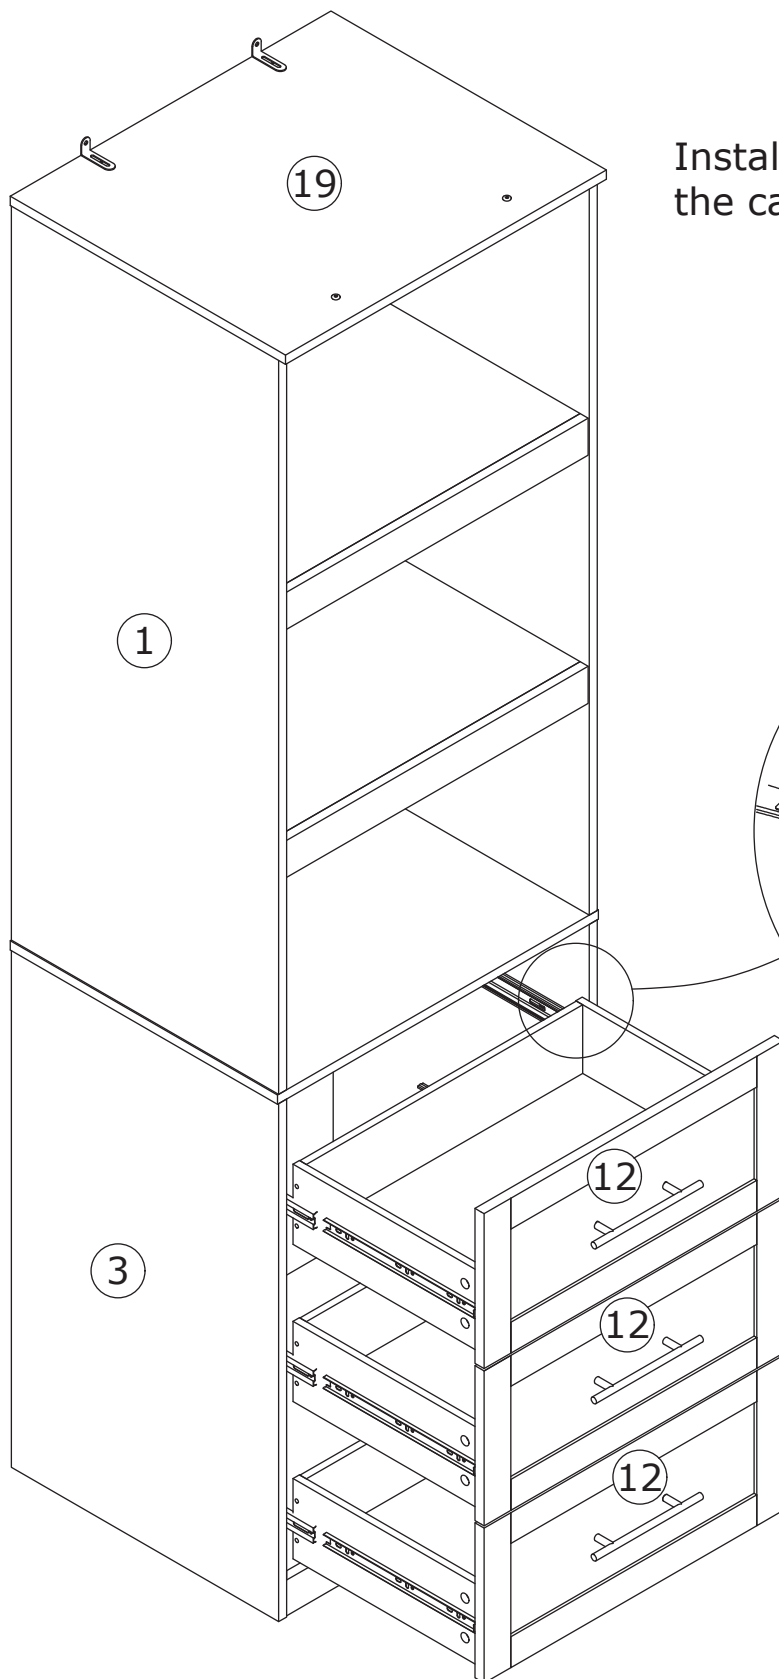 

 Install the drawers onto the cabinet as shown.

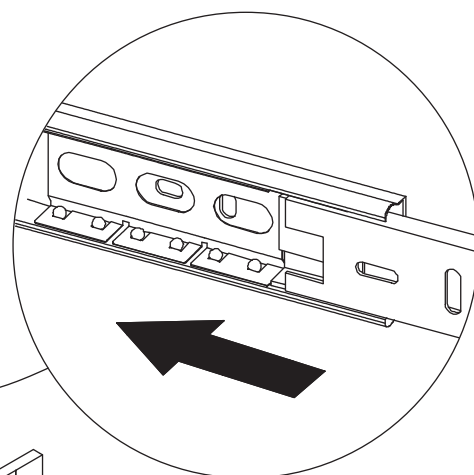

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.