 


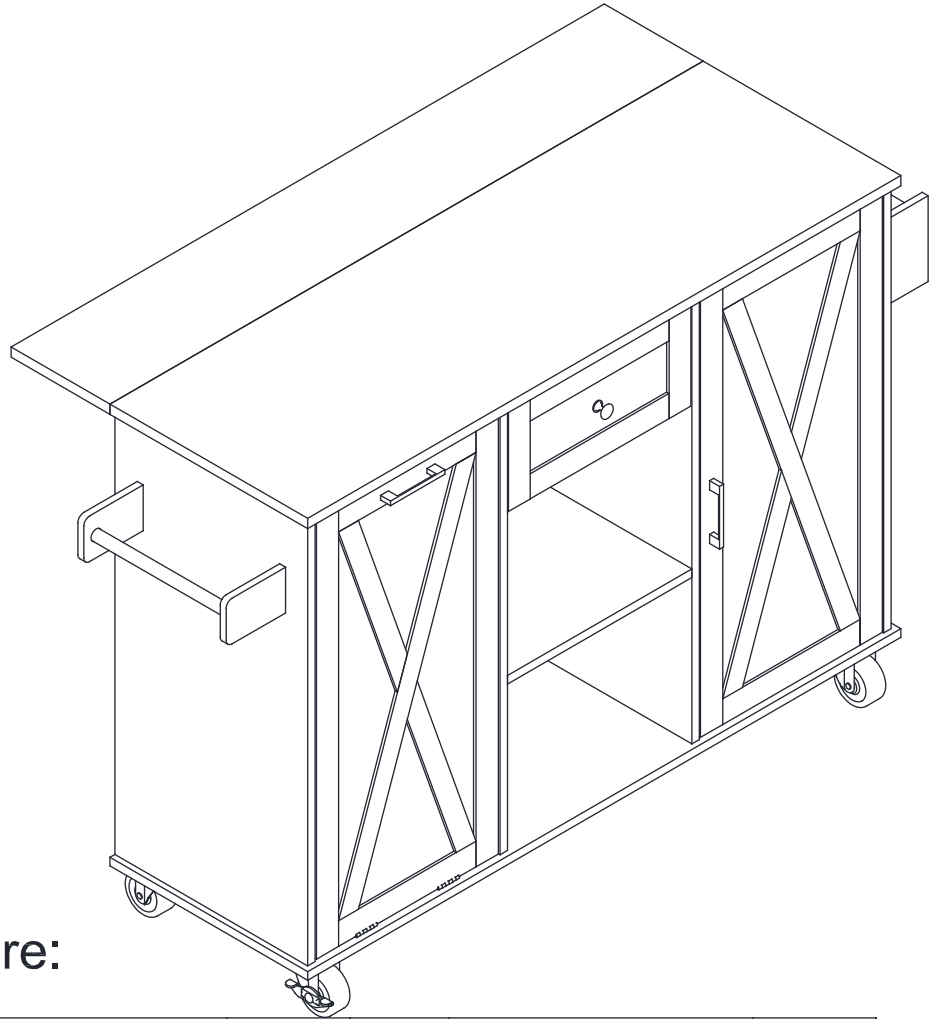























ASSEMBLY INSTRUCTIONS

<<Before assembling, check all the hardwares and panels>>



Hardware:

Letter	Piece	Number	Letter	Piece	Number
A	 6x30mm	50pcs	M	 (CL)	1set
B	 6x35mm	37pcs		 (CR)	
C		2pcs		 (DL)	
D	 15x9.5mm	37pcs		 (DR)	
E	 3x12mm	32pcs	N	 3.5x14mm	12pcs
F	 4x30mm	32pcs	O		2pcs
G		1pc	P	 4x14mm	30pcs
H	 4x16mm	5pcs	Q		4pcs
I		2pcs	R		2pcs
J		2pcs	S		2pcs
K		8pcs	T		3pcs
L		2pcs	U	 3x16mm	9pcs

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact the store of purchase.
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

 
- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

WARNING


- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

DANGER

- CHILDREN MUST BE SUPERVISED.


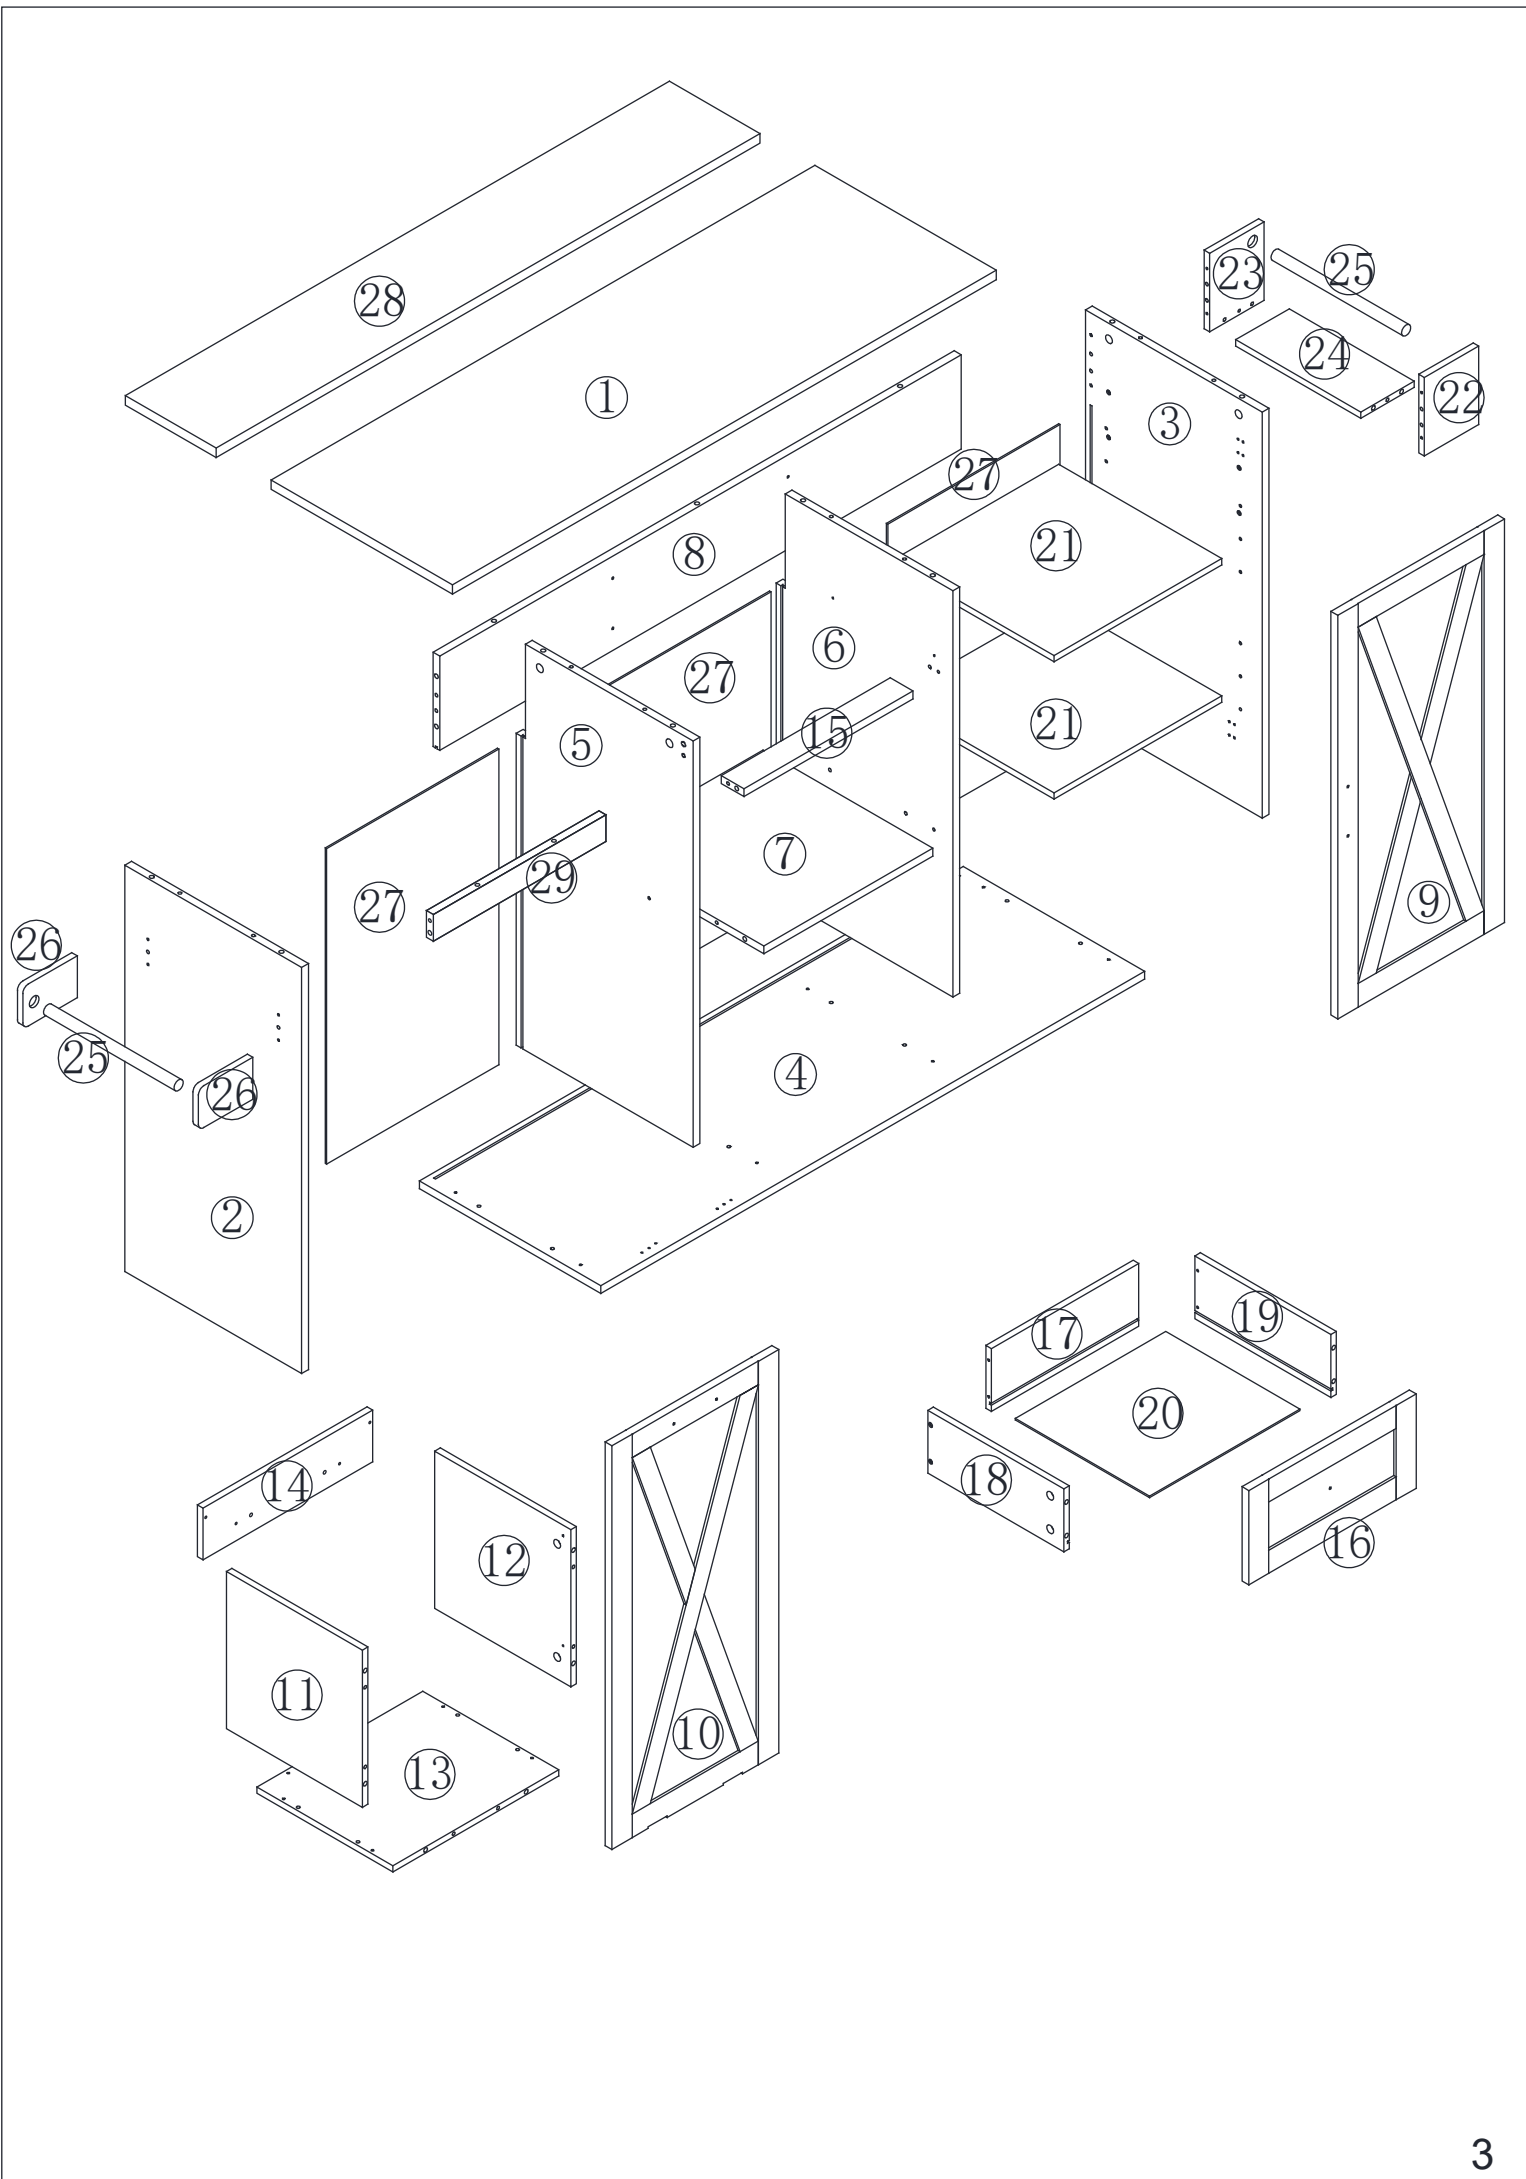


①

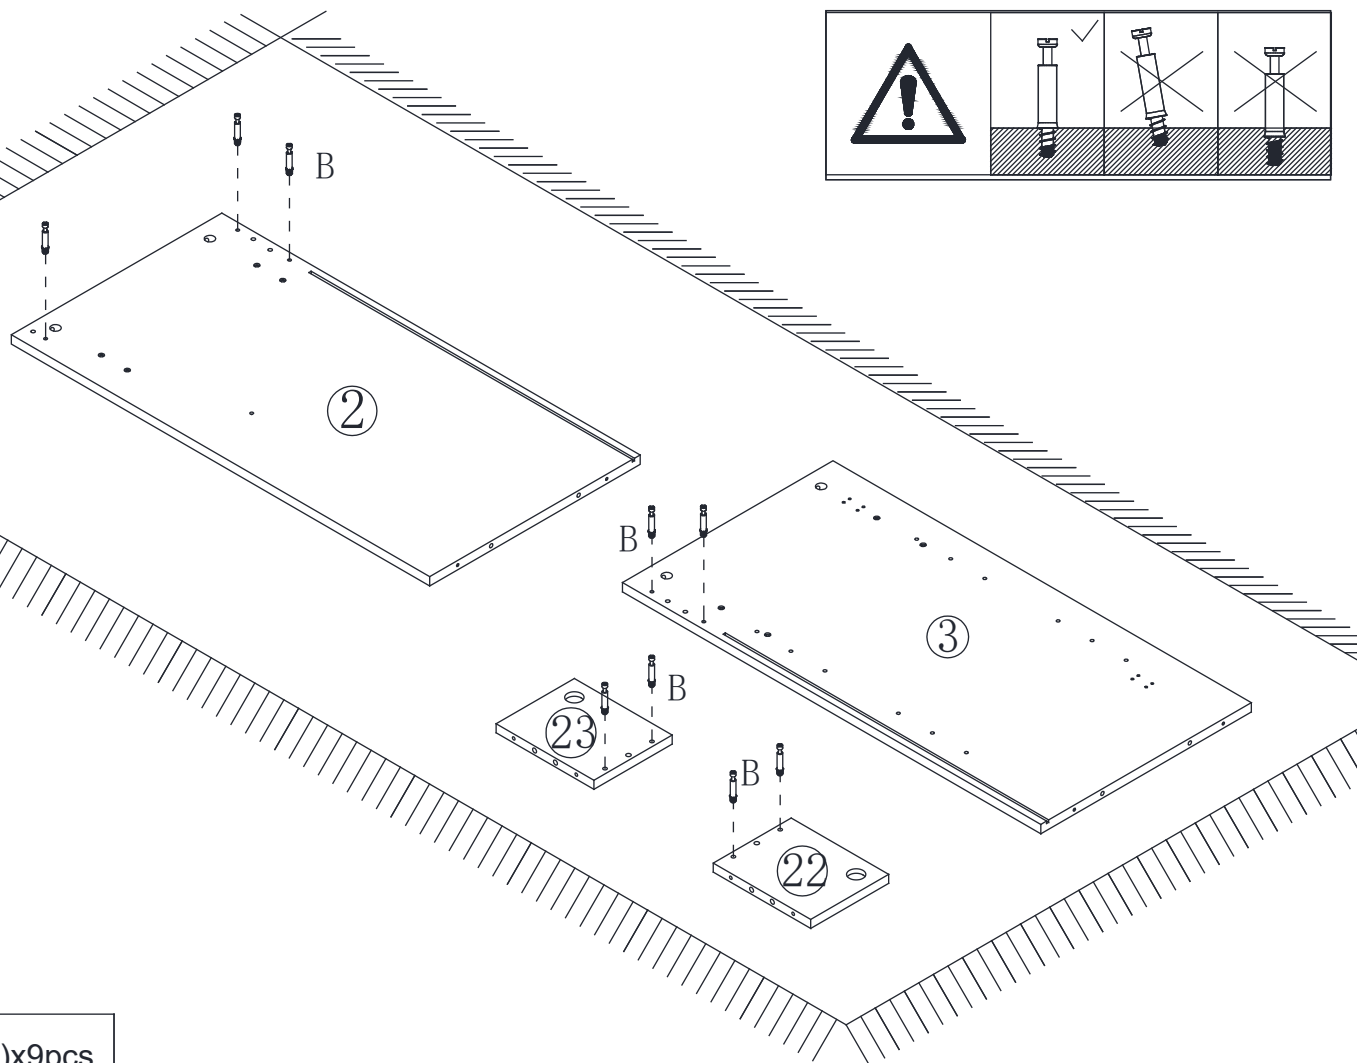 


(B)x9pcs

  ②

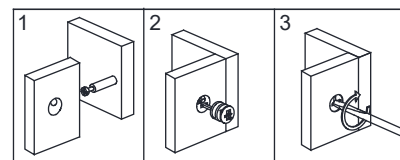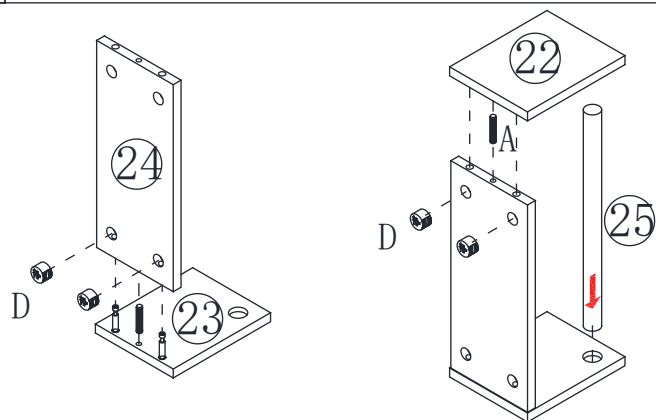

Cam Lock Fastening System

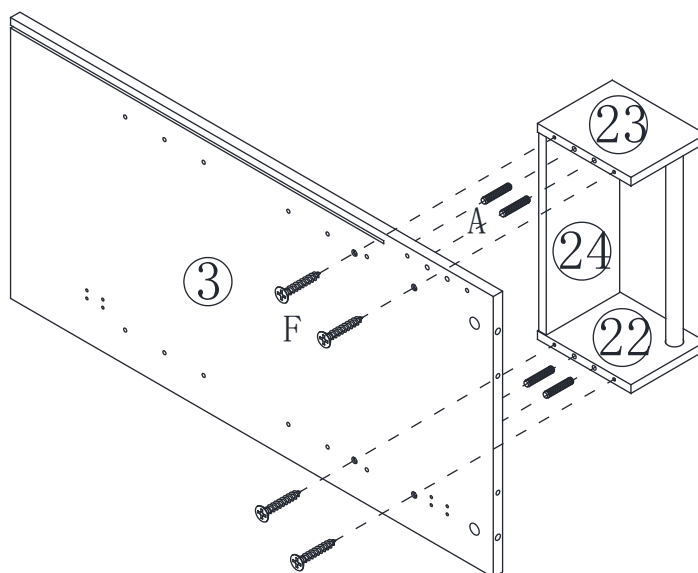 

(A)x6pcs

 


(D)x4pcs



(F)x4pcs

③


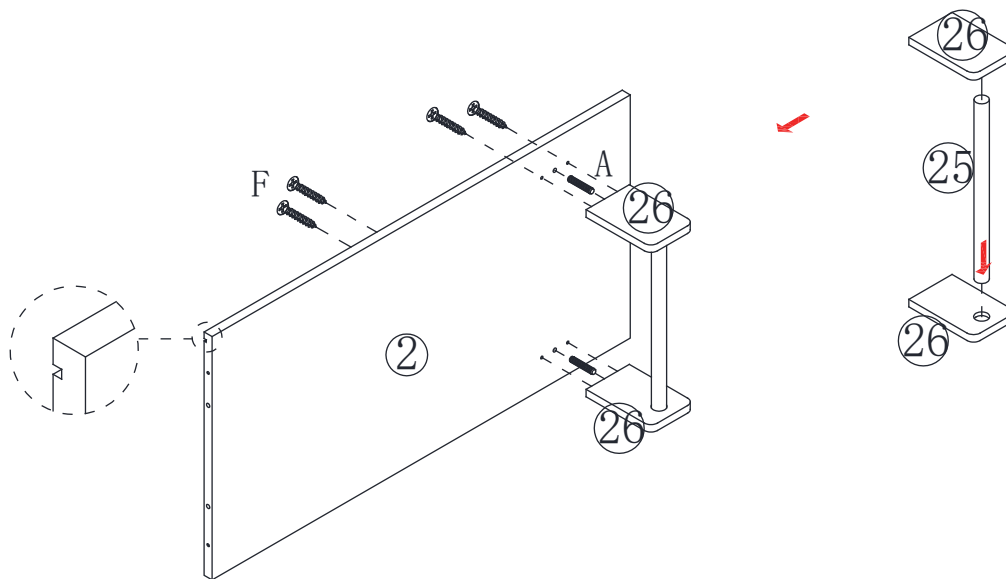


(A)x2pcs



(F)x4pcs

  ④

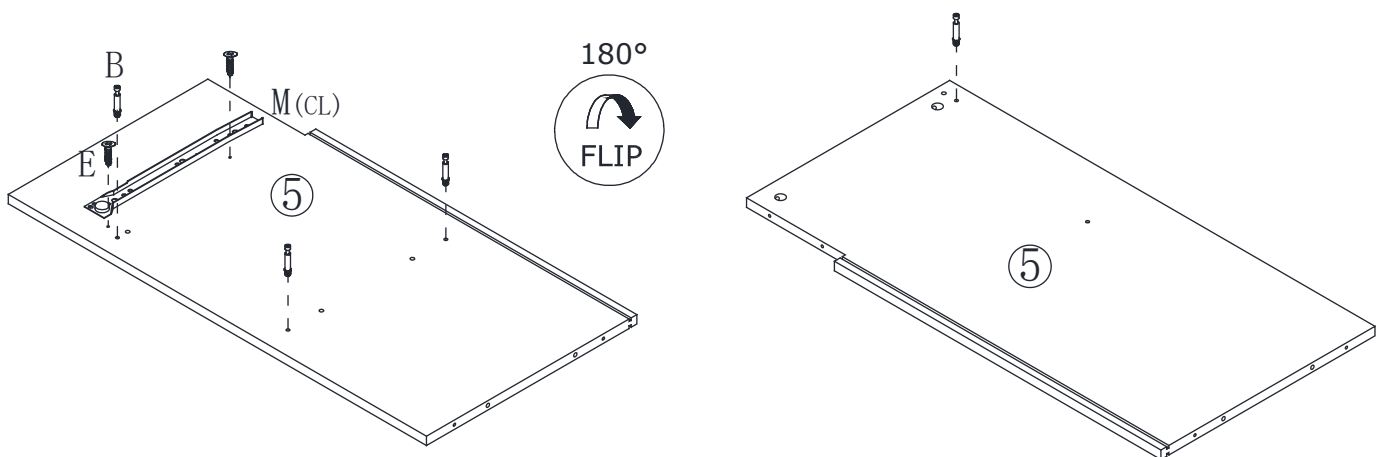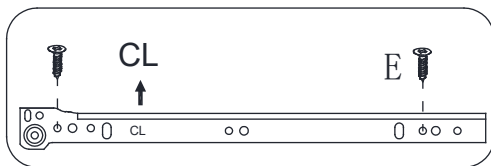

(B)x4pcs

 
 
 
 


(E)x2pcs




(M)x1pc

⑤

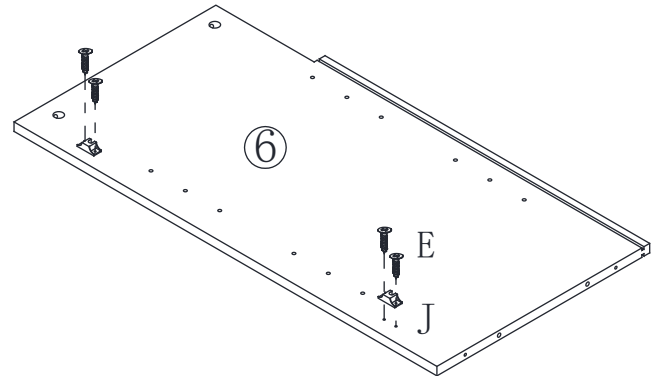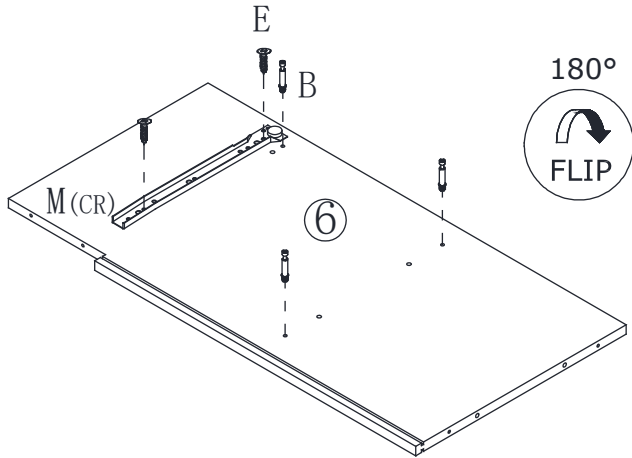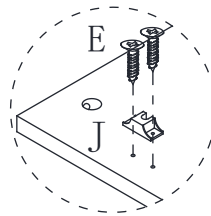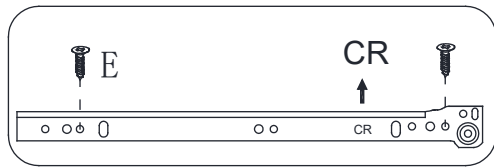


	(B)x3pcs
	(E)x6pcs
	(J)x2pcs
	(M)x1pc

 ⑥

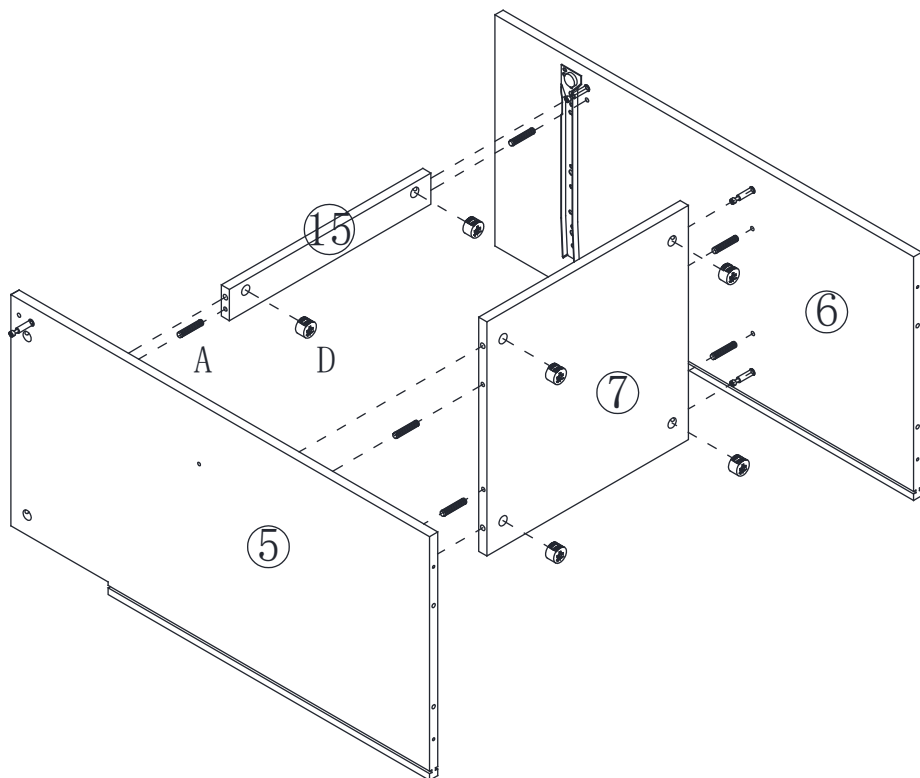

	(A)x6pcs
	(D)x6pcs

 ⑦

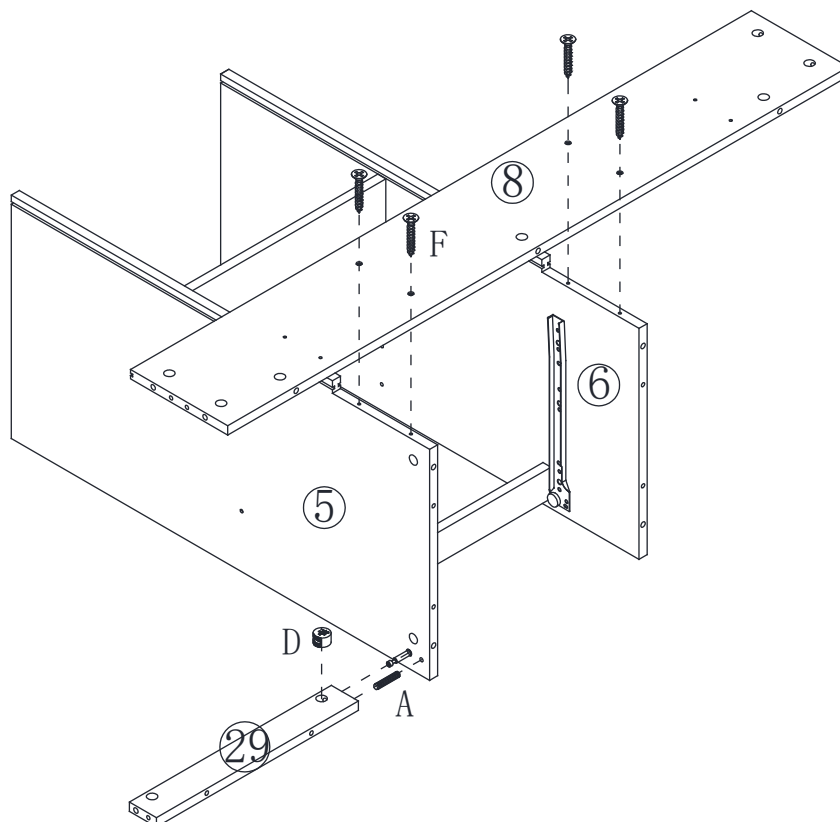

(A)x1pc

 


(D)x1pc



(F)x4pcs

⑧

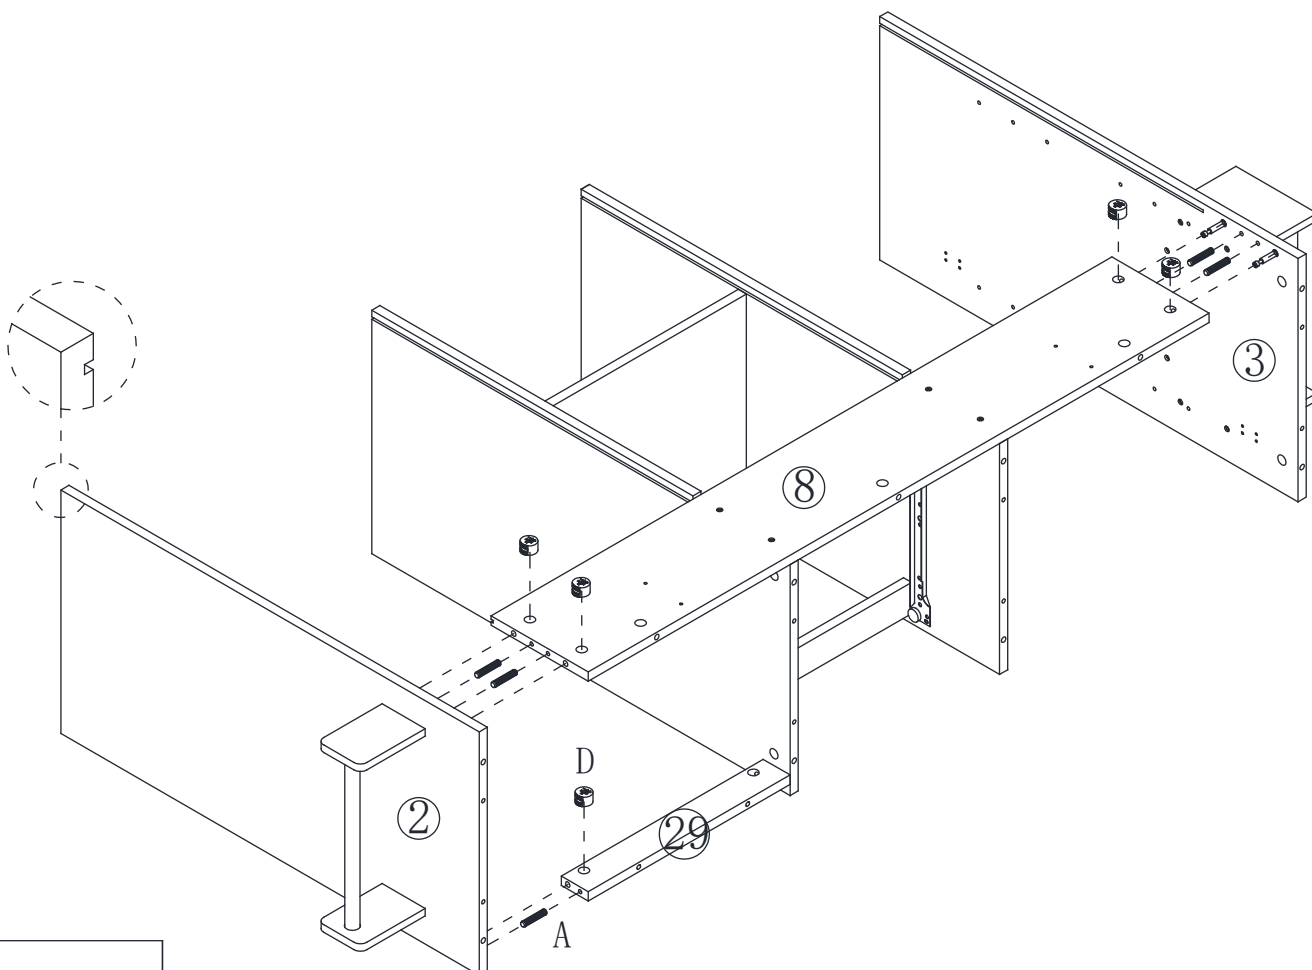


(A)x5pcs




(D)x5pcs

 9

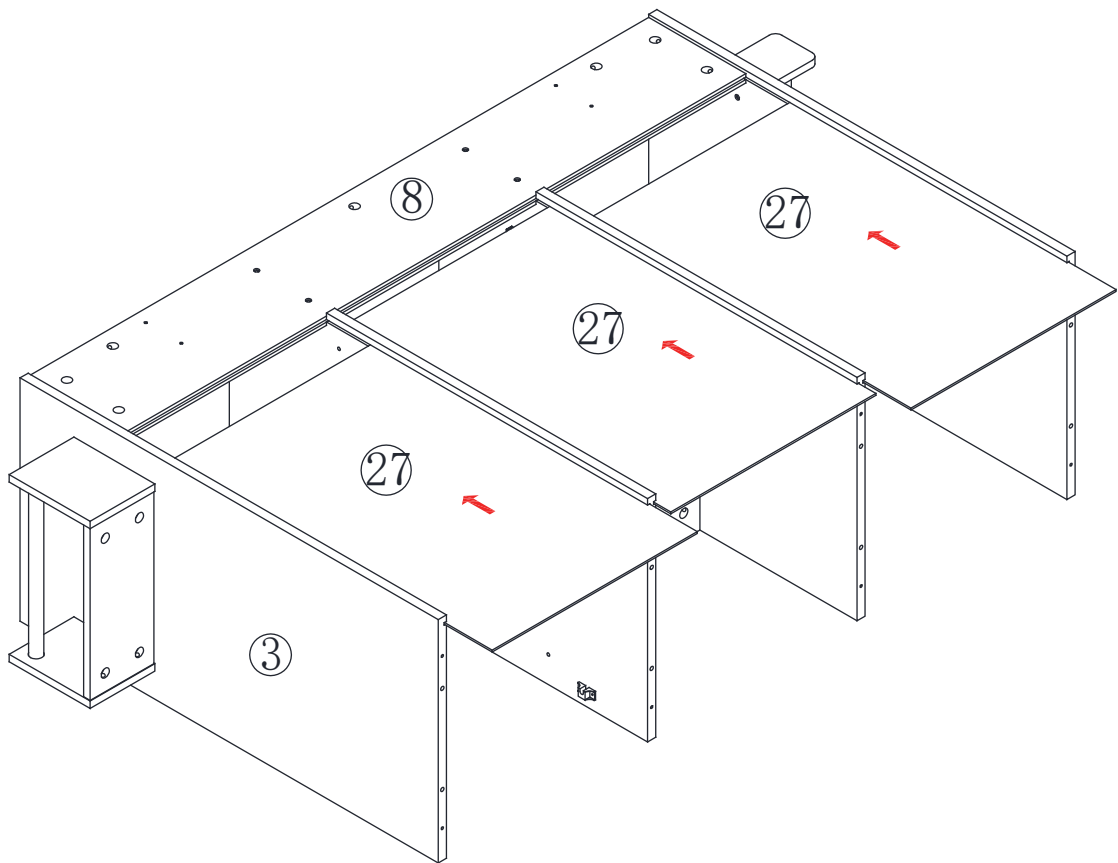

10

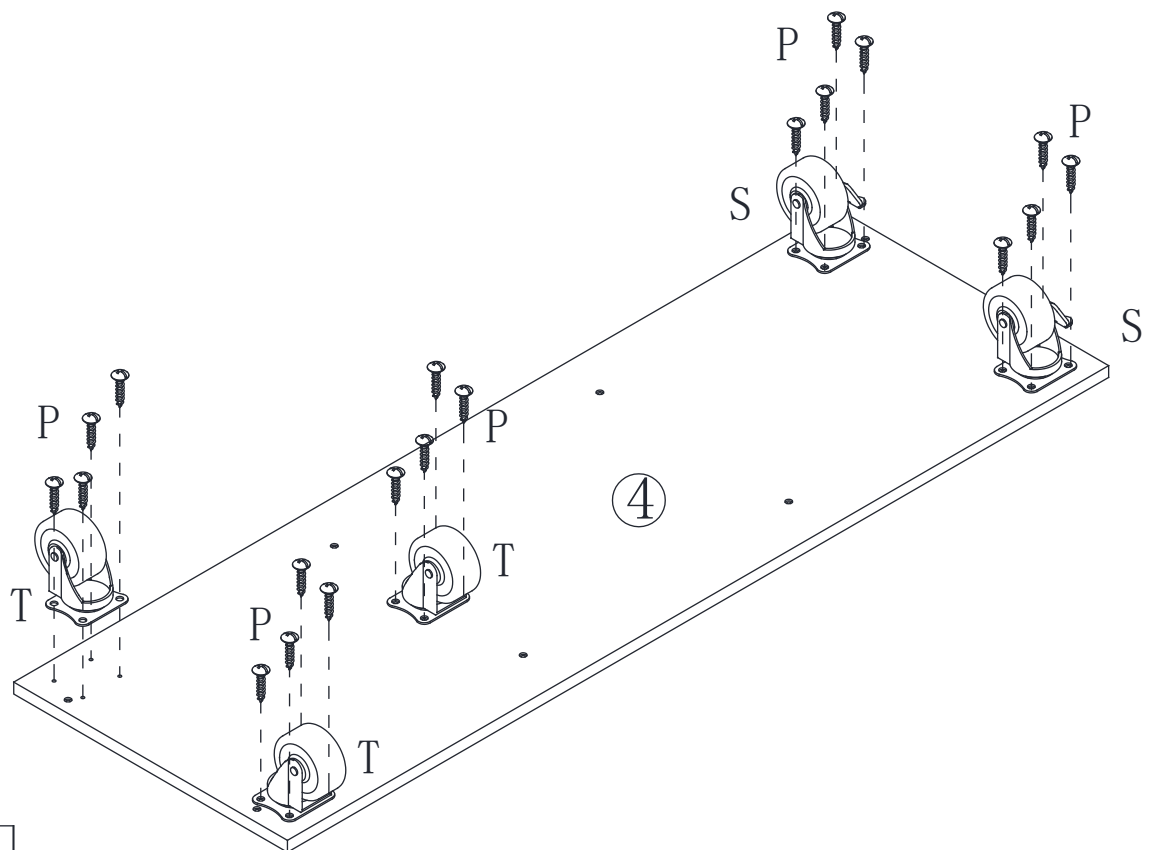 

(P)x20pcs

 


(S)x2pcs



(T)x3pcs

11

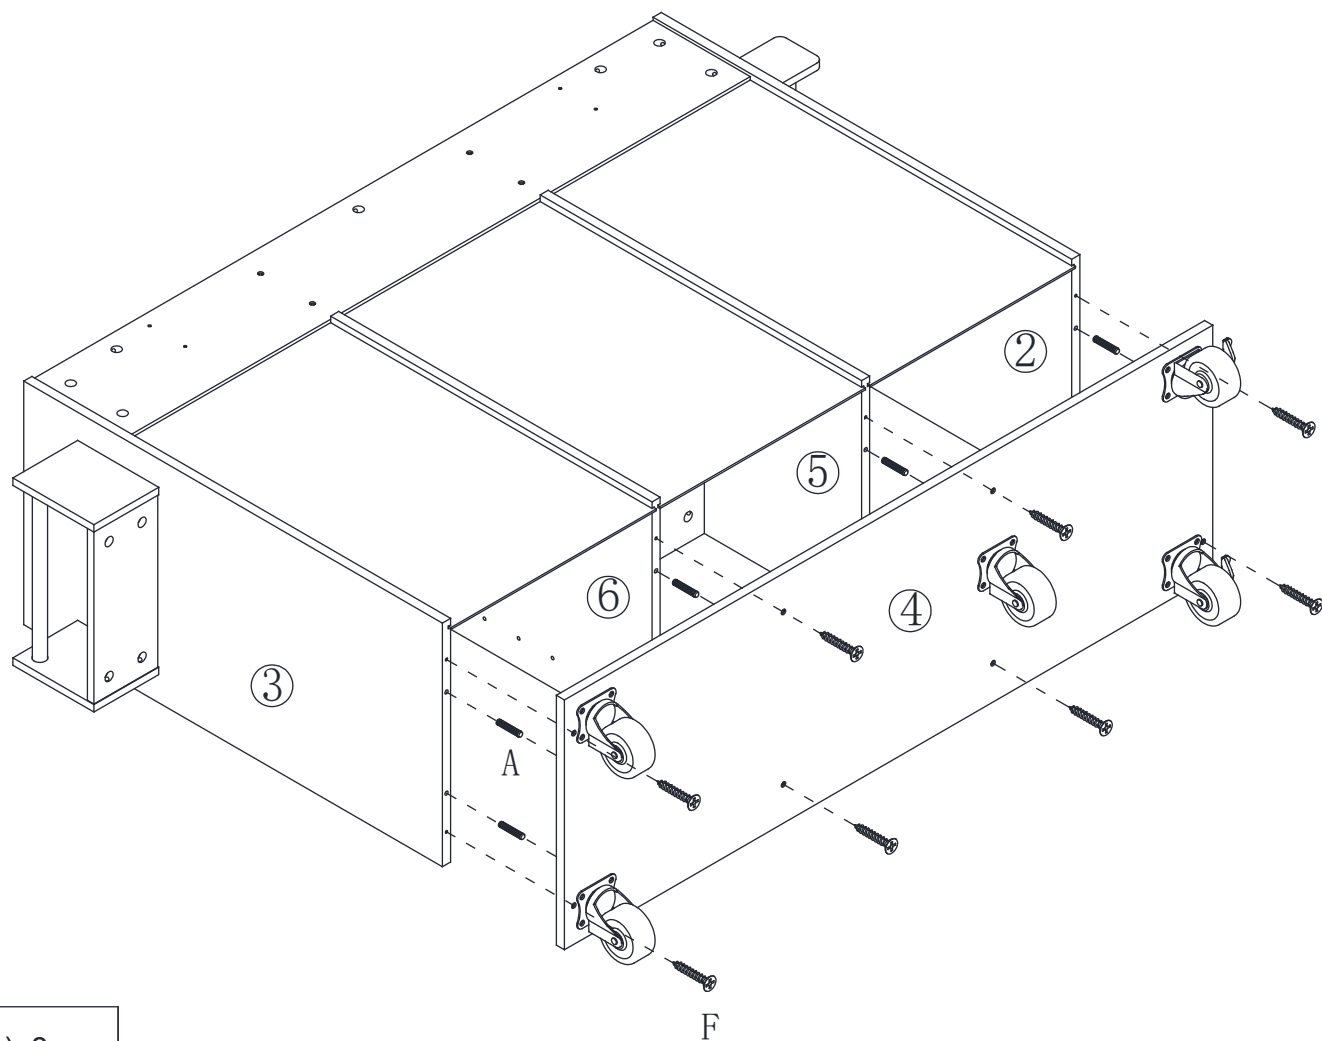


(A)x8pcs




(F)x8pcs

 12

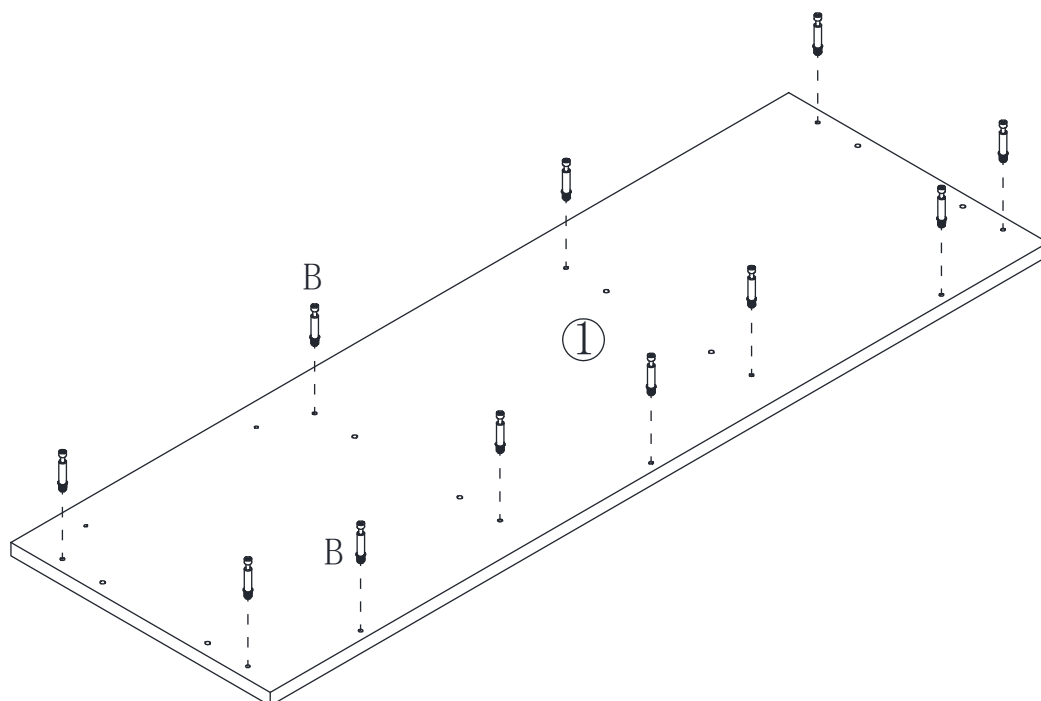

(B)x11pcs

 13

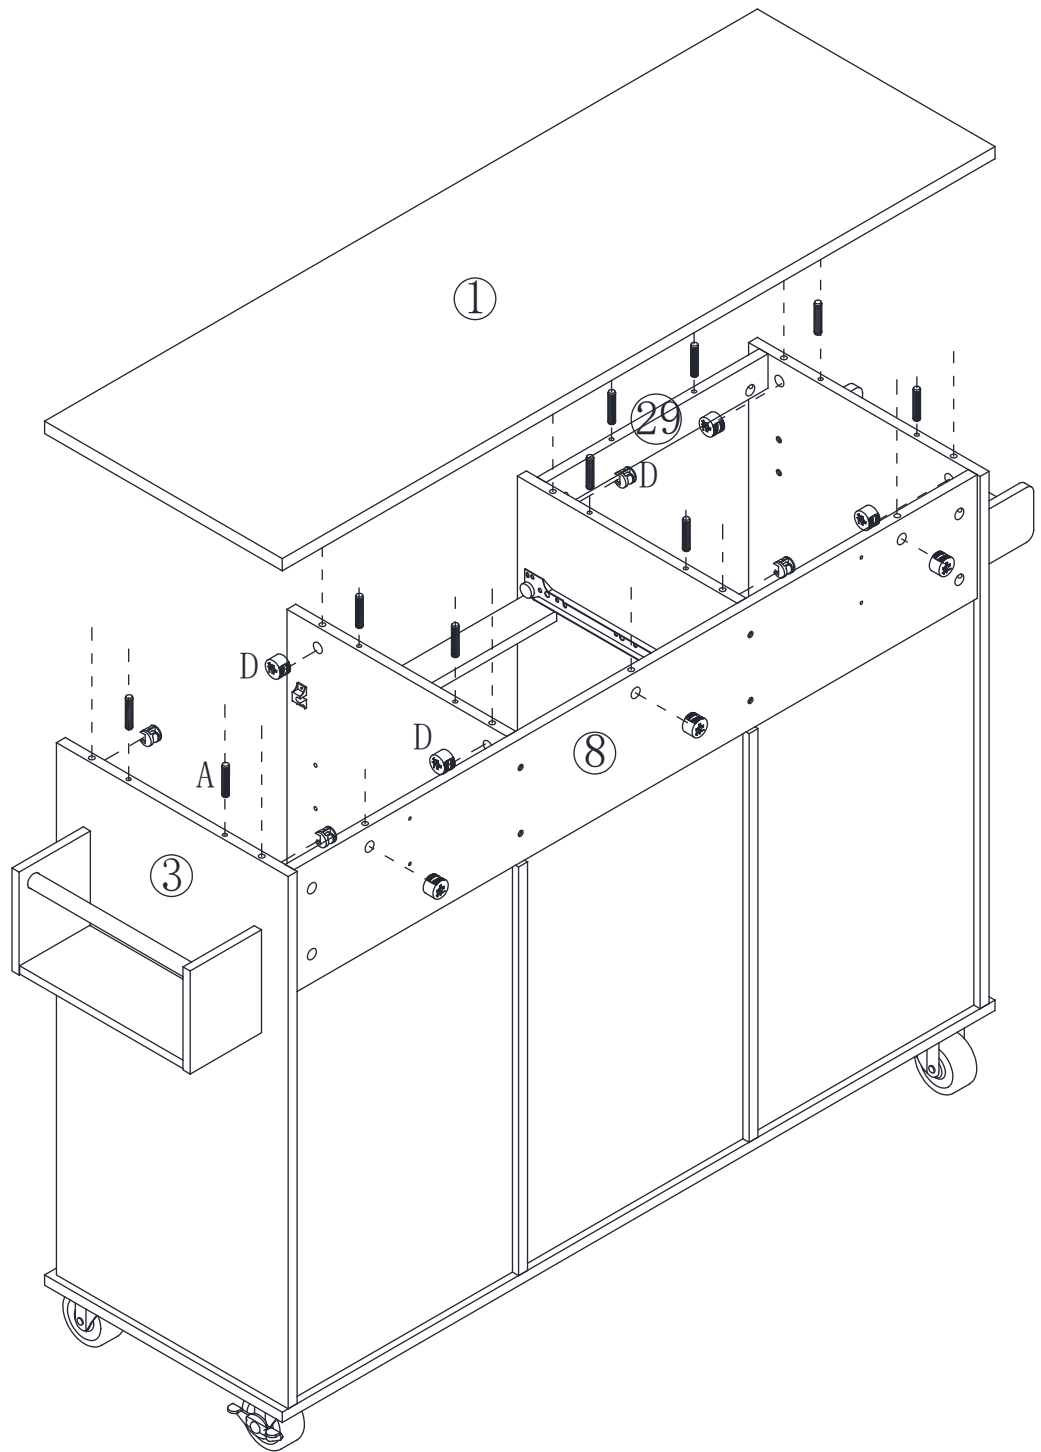

(A)x10pcs

 
 


(D)x11pcs


14

Note: Pinch the support bracket and slowly put it into the card slot.

Stretch 90°

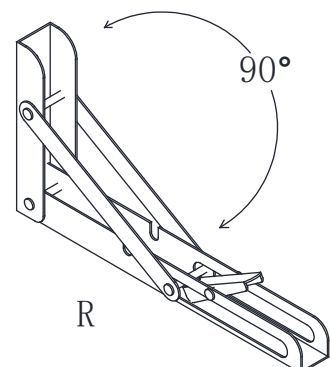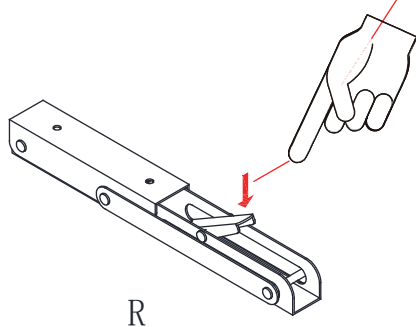

15

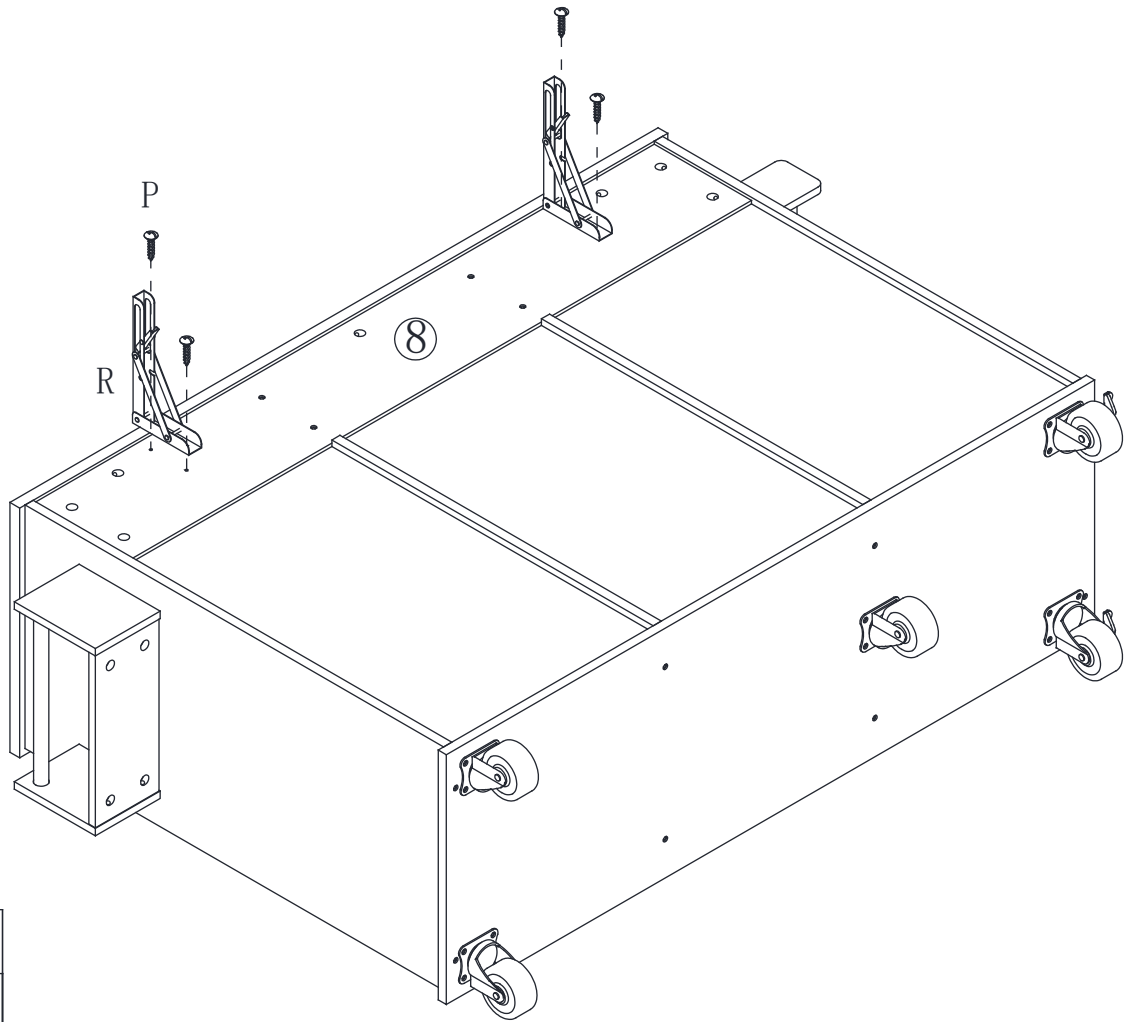 


(P)x4pcs



(R)x2pcs

 16

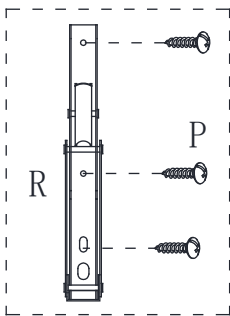


R


P

P

 P

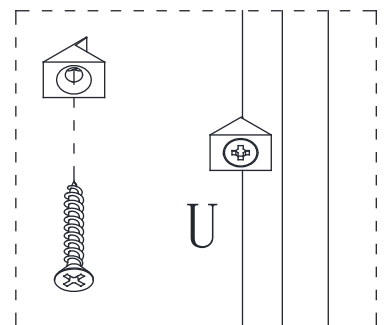

U

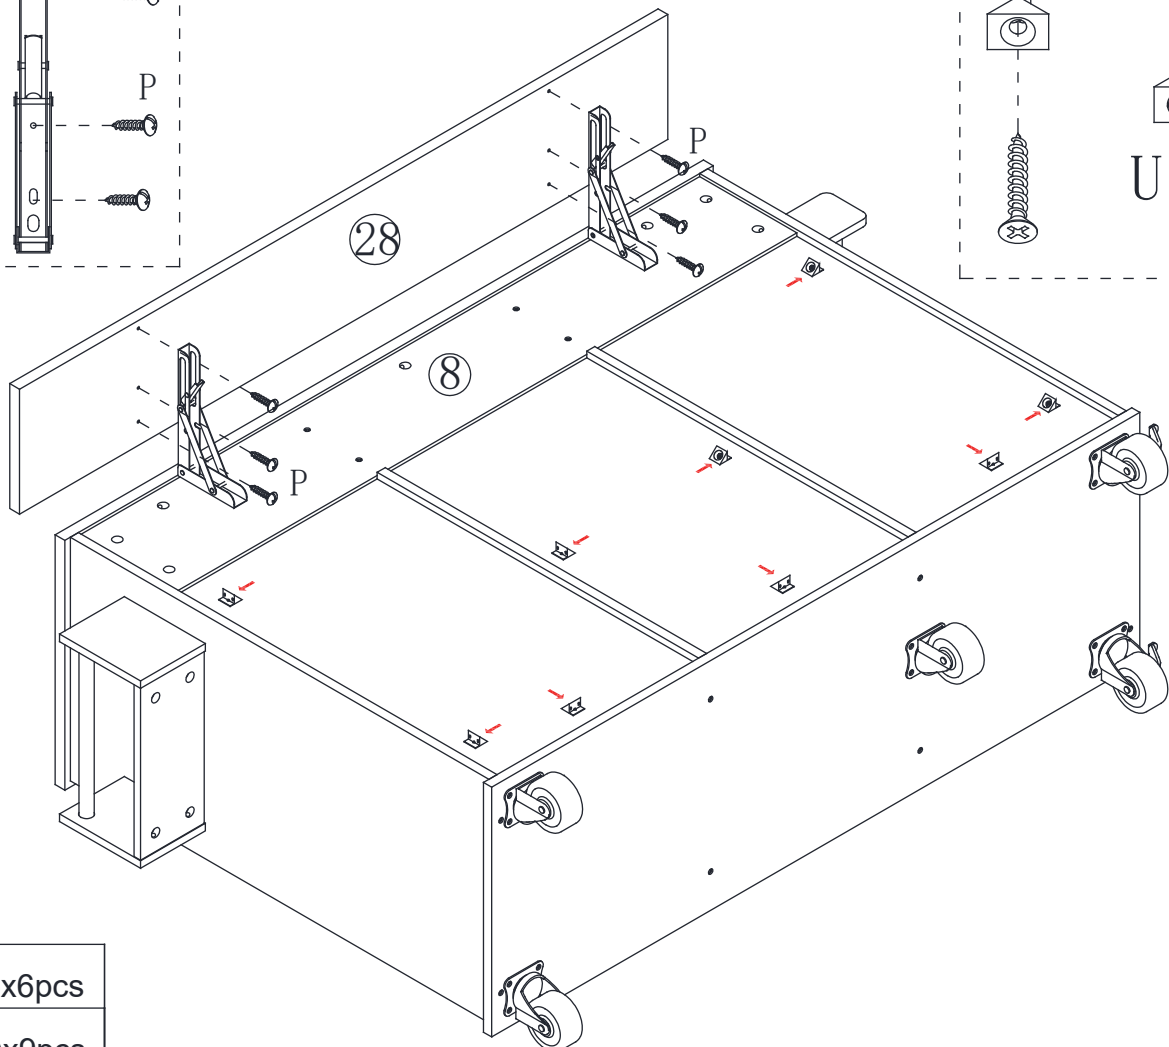 

28

8

P

P

P

 


(P)x6pcs



(U)x9pcs

17

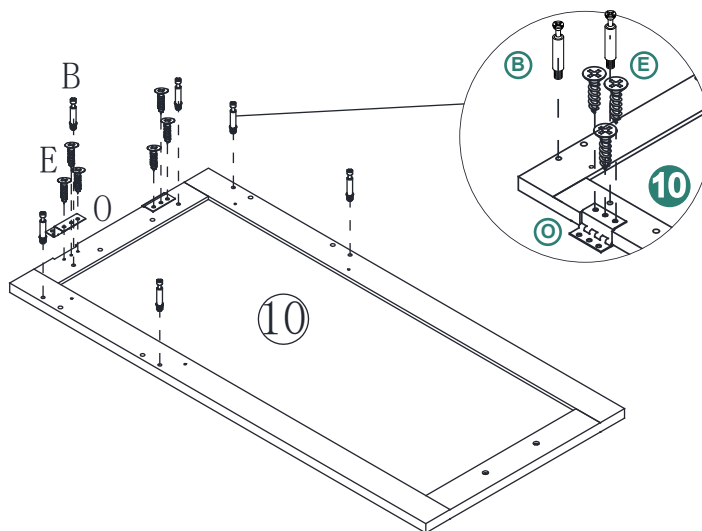

(B)x6pcs

 


(E)x6pcs



(O)x2pcs

18

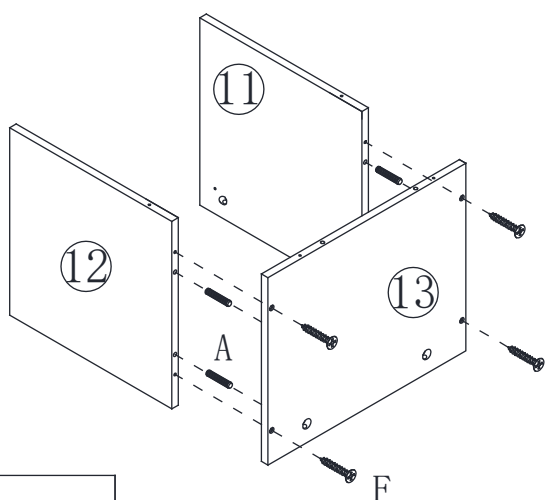


(A)x10pcs




(D)x6pcs



 (F)x4pcs

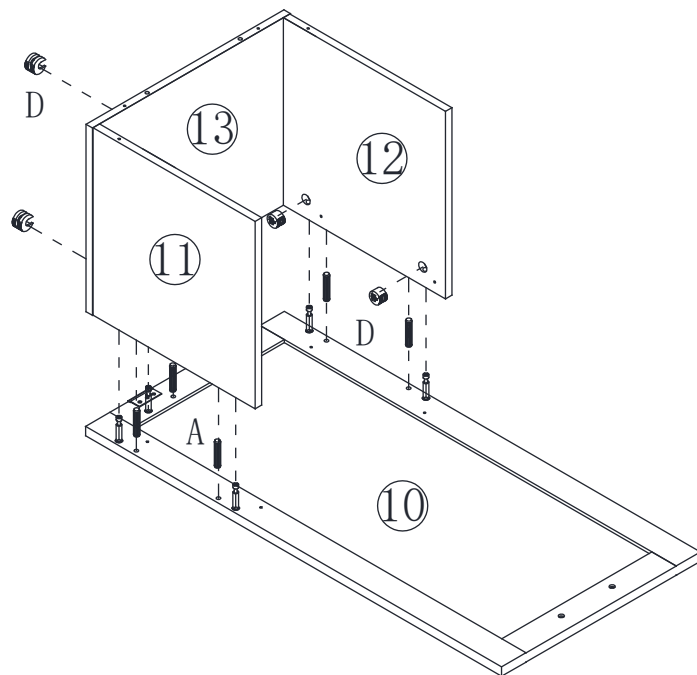

19

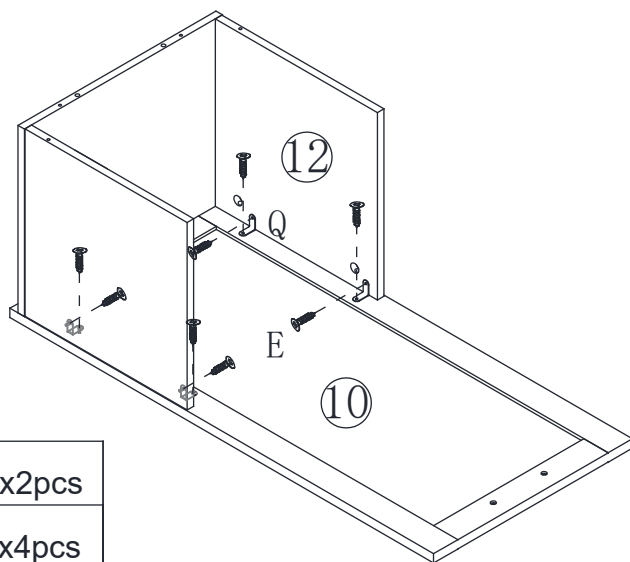 

(A)x2pcs



 
(F)x4pcs







(E)x8pcs



(Q)x4pcs


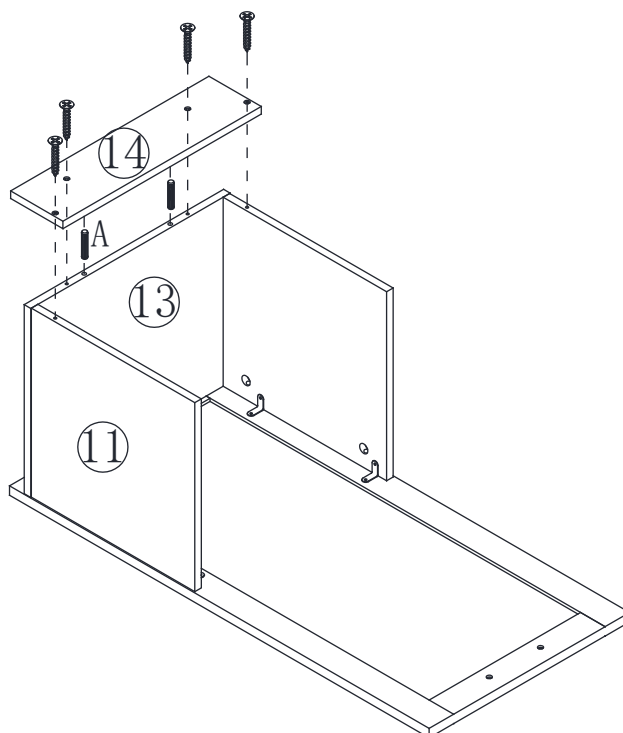


20

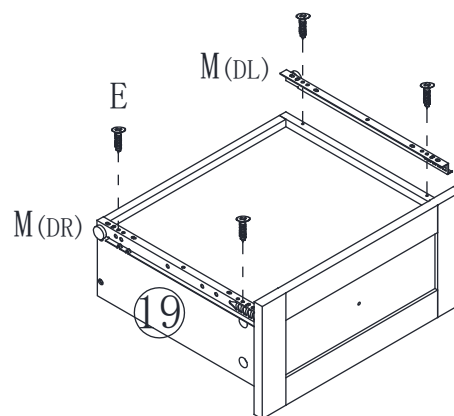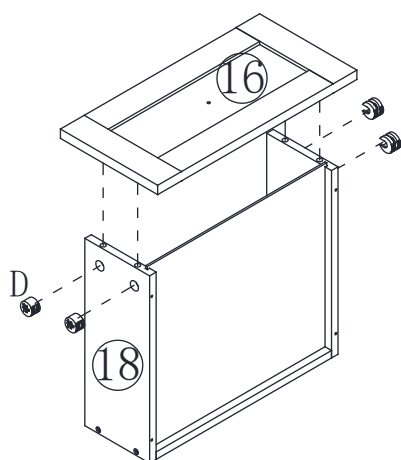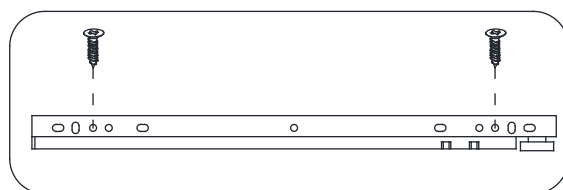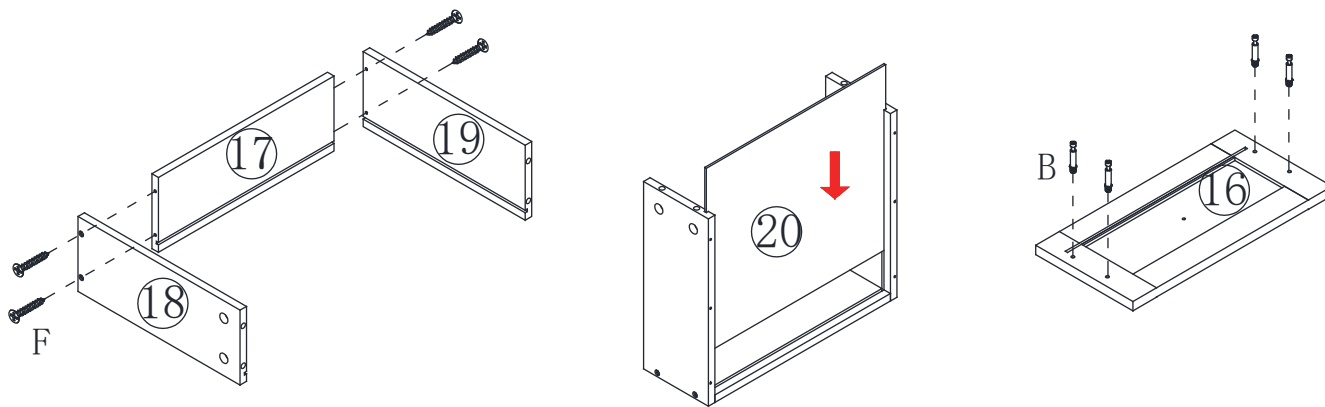    



	(B)x4pcs
	(D)x4pcs
	(E)x4pcs
	(F)x4pcs
	(M)x1pc

  21

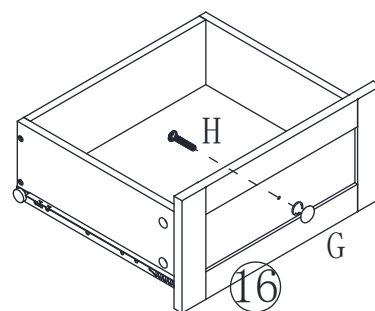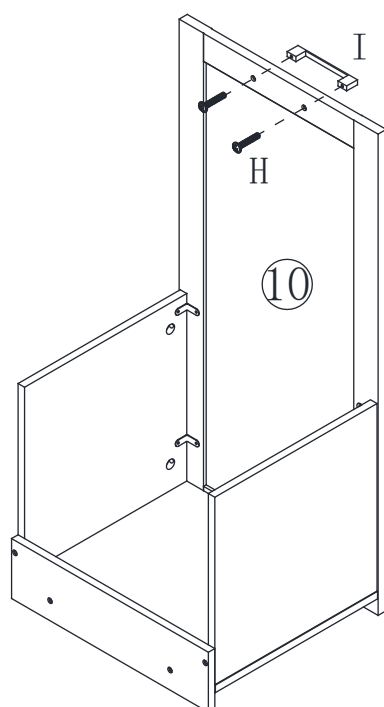



	(G)x1pc
	(H)x3pcs
	(I)x1pc

    22



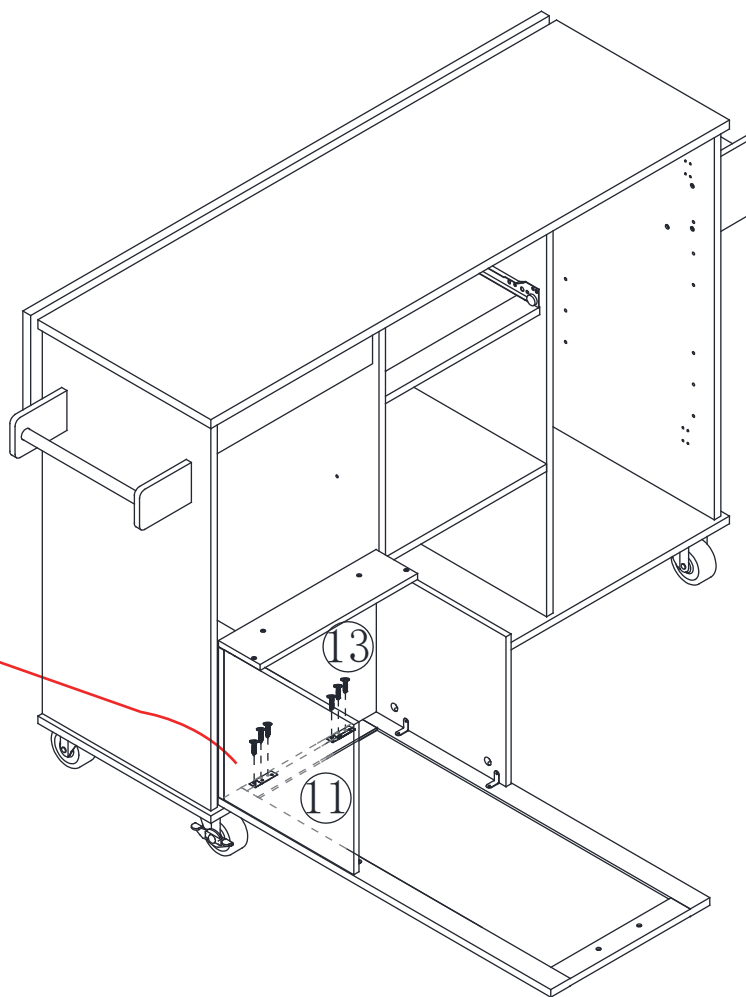
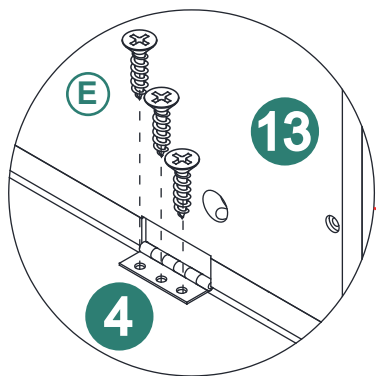




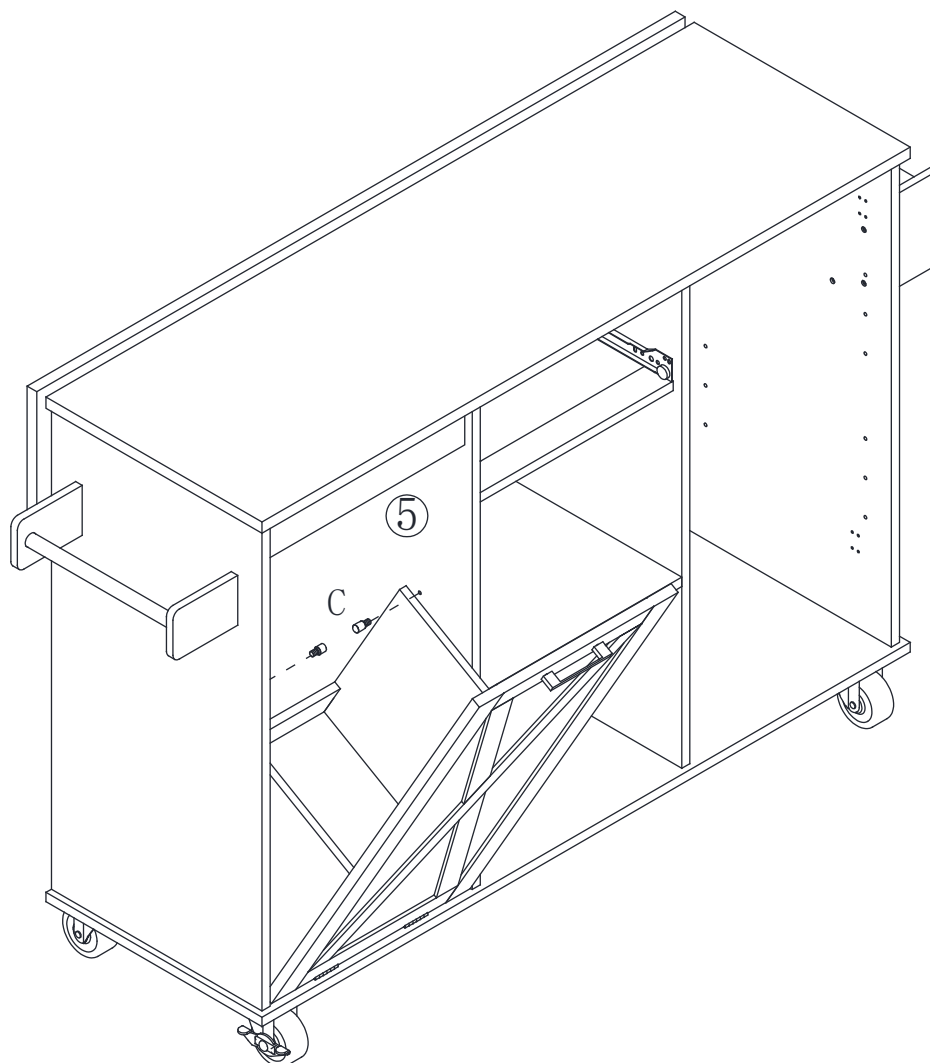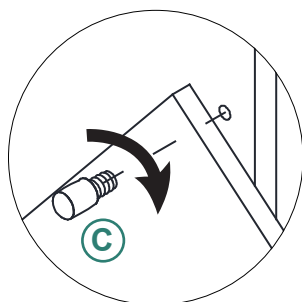

(E)x6pcs

    23

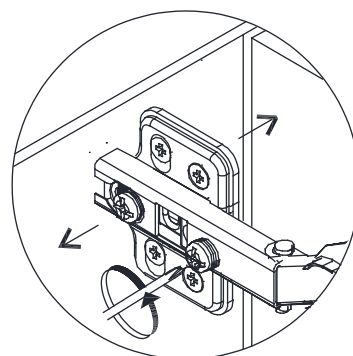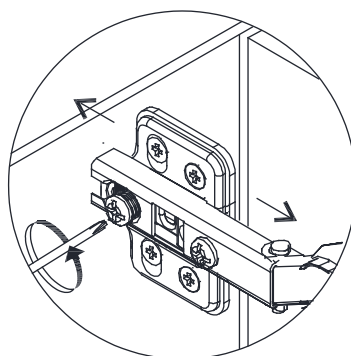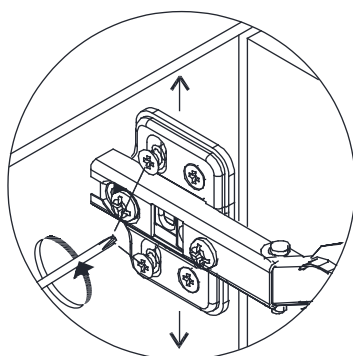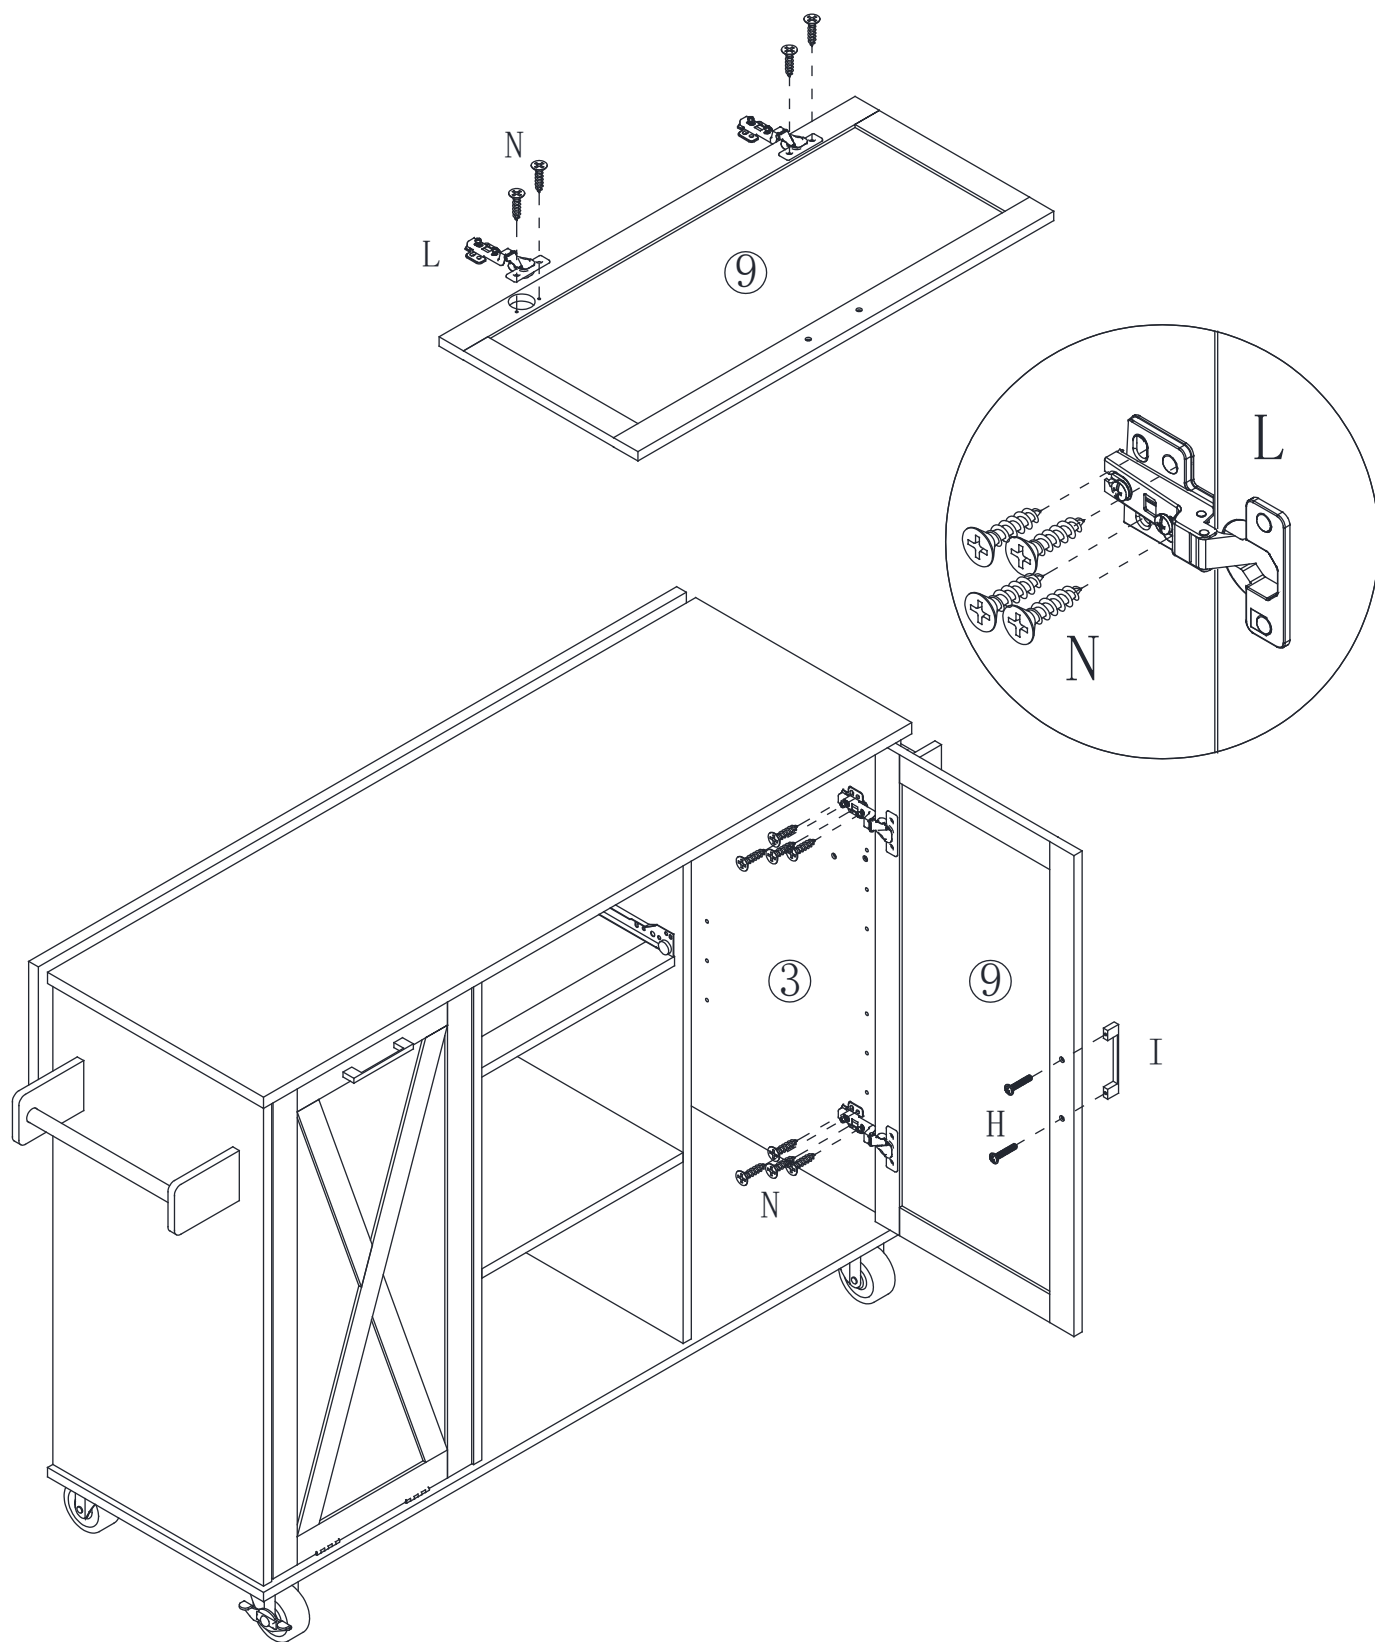

(C)x2pcs



	(H)x2pcs
	(I)x1pc
	(L)x2pcs
	(N)x12pcs

