


Assembly Instruction Sheet for Model 502344

Package Contents

Part	Description	Quantity
A	Hanging Chain	2 pcs.
B	Wood	1 pc.
C	Fixture Arm	4 pcs.
D	Fixture Body	4 pcs.
E	Ceiling Canopy	1 pc.
F	Mounting Bracket	1 pc.

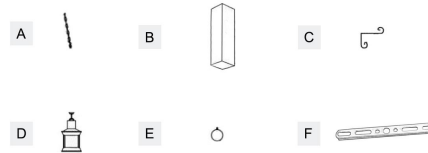

STEP 1

Fix the Hanging Chain(A) to the Wood(B).
Repeat the above step o fix the other Hanging Chain(A).

STEP 2

Fix the Fixture Arm(C) to the Wood(B).
Repeat the above step o fix the other Fixture Arms(C).

STEP 3

Open the lamp shade of the Fixture Body(D), and insert the bulb(not included) to the bulb base.
Fix the lamp shade back to the Fixture Body(D).
Fix the short hanging chain of the Fixture Body(D) to the Fixture Arm(C).
Repeat the above step to fix the other Fixture Bodies(D).

STEP 4

Thread the wire through holes of the Hanging Chains(A).
Thread the wire to the back of the Ceiling Canopy(E).
Fix the Hanging Chains(A) to the Ceiling Canopy(E).

STEP 5

Remove the Mounting Bracket(F) from the Ceiling Canopy(E).
Mark the drilling position on ceiling with the help of the Mounting Bracket(F).
Drill holes on the marks and stick the expansion anchors into the holes.
Fix the Mounting Bracket(F) to the expansion anchors with self-tapping screws.

STEP 6

Hold the fixture close to ceiling.
Connect live line to wire color Black/Red from the the Hanging Chains(A).
Connect neutral line to wire color White/Blue from the Hanging Chains(A).

STEP 7

Attach the Ceiling Canopy(E) to the Mounting Bracket(F).

Your fixture is now assembled and ready to use.