



INSTALLATION MANUAL

TABLE LAMP

Model No.: EDST003WFG-1GR

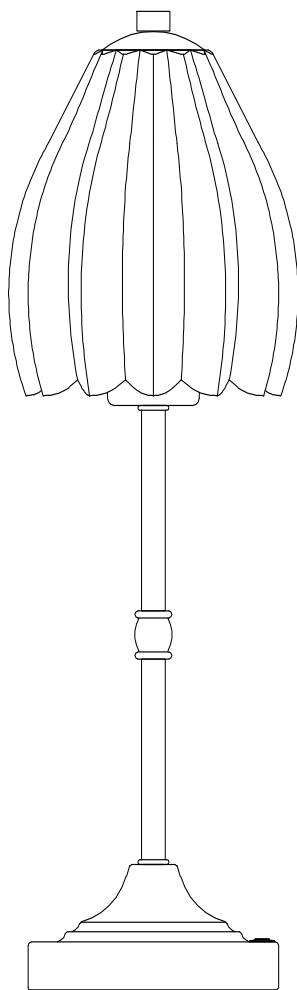

PACKING LIST

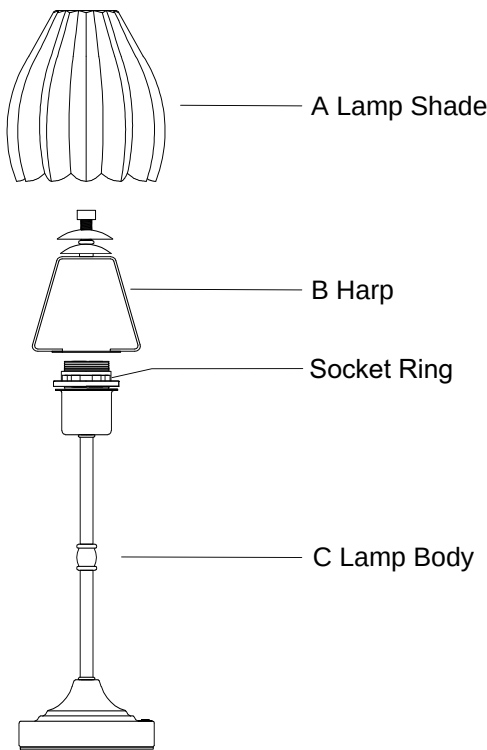


Installation Kit

D	1x	E	1x
			
USB-A to USB-C Cable		Bulb	


Installation Instructions

1. Install the Harp and Bulb


Step 1: Remove the socket ring from the socket.

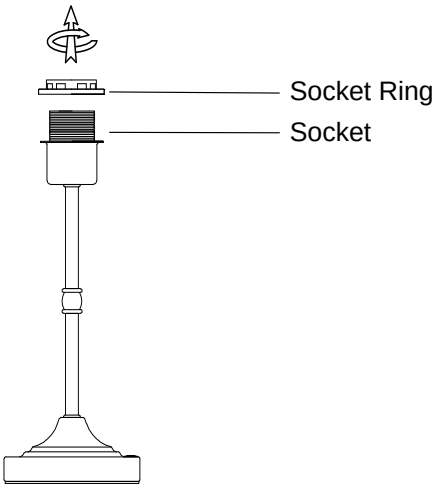

Step 2: Attach the harp (B) to the socket. Secure it with the socket ring.

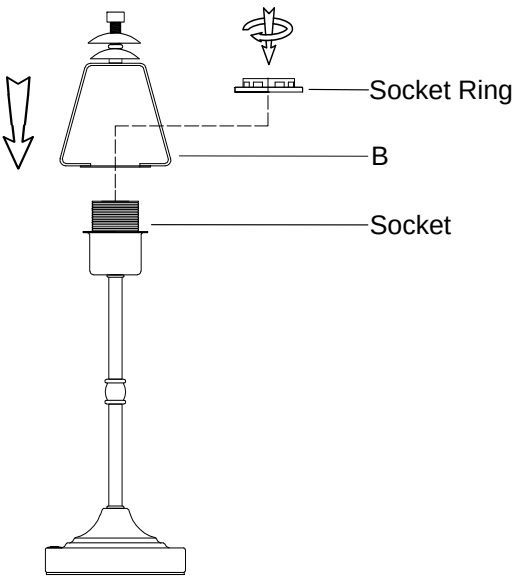

Step 3: Install the Bulb (E26, Max 3W, included).

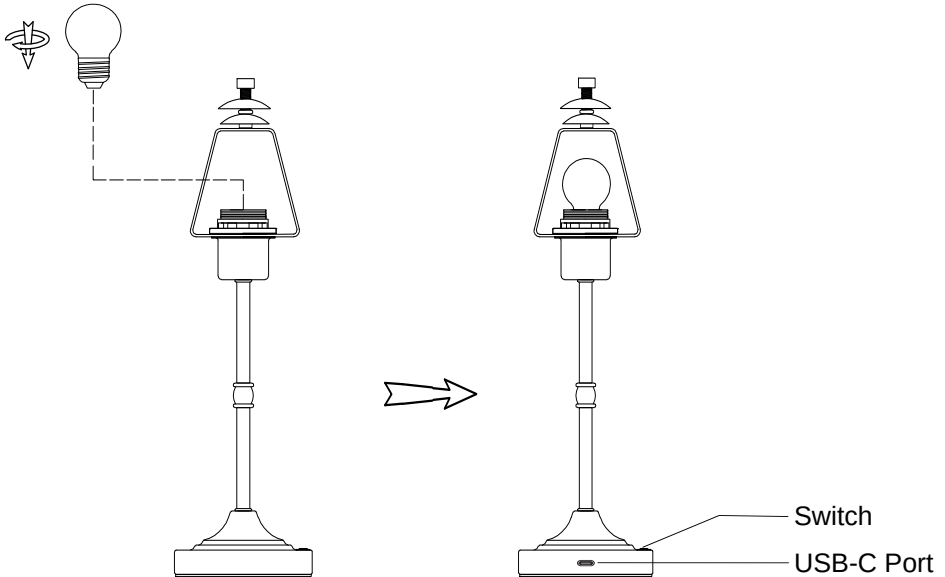


NOTE:

1. This lamp set comes with one 3-4.2V low-voltage E26 LED bulb. Replace only with 3-4.2V E26 low-voltage bulbs.
2. Standard 120V bulbs are incompatible. Use only the included USB-C cable with low-voltage bulbs for safe, optimal performance.
3. Tap the switch to cycle 3 brightness levels (with included bulb).
4. Indicator light: Red = charging; Green = fully charged.

2. Install the Shade

Step 1: Remove the nut and decorative top cap from the harp (B).
Step 2: Attach the shade (A) and decorative top cap to the harp (B).
Secure it with the nut.

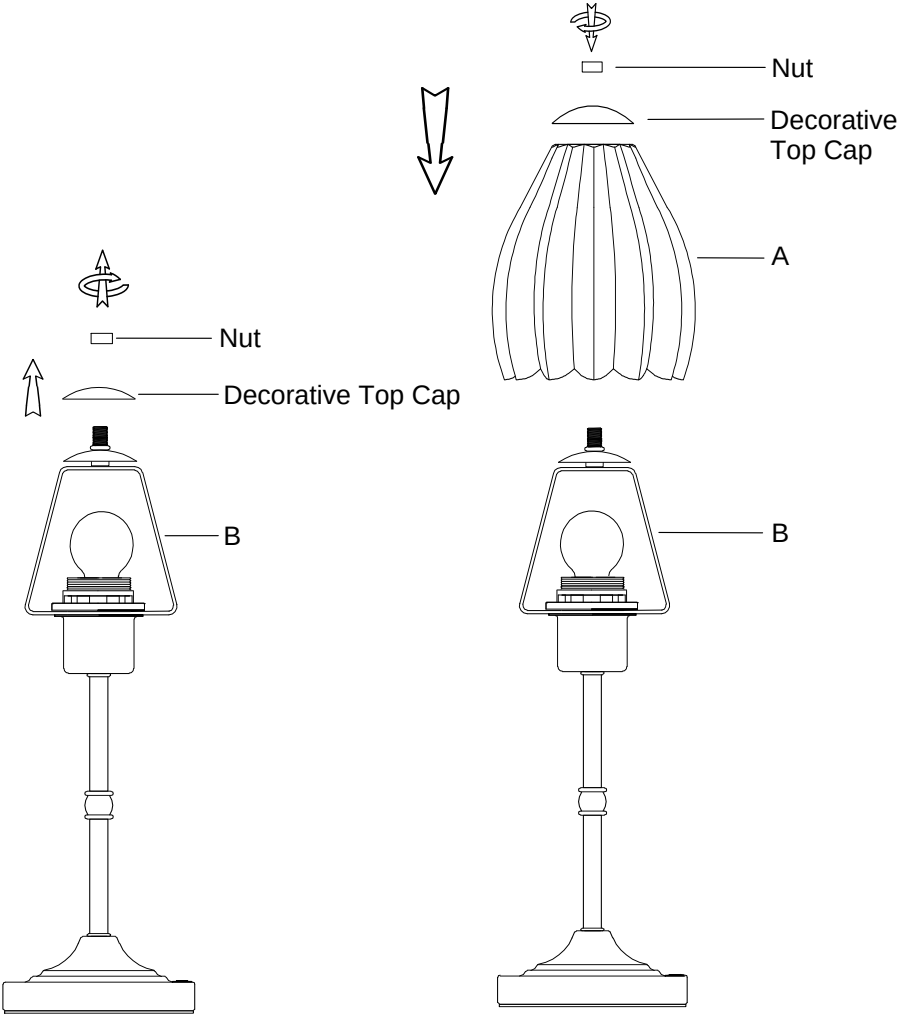

Trouble Shooting

1. Missing / Broken Parts

- Make a list of the missing / broken parts according to the packing list, take photos for broken parts, then email us for free replacements.

2. Bulbs Do Not Light Up / Flicker

- Check if the bulb is loose, burned out, or missing.
- Replace the bulb with the correct type and wattage.
- Ensure the light switch is in the ON position.
- Make sure the battery is fully charged.

3. Could Not Install / Assemble

- Take photos of the fixture, contact seller for technical support.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture.

Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.