 
 
 


Product Installation Instructions

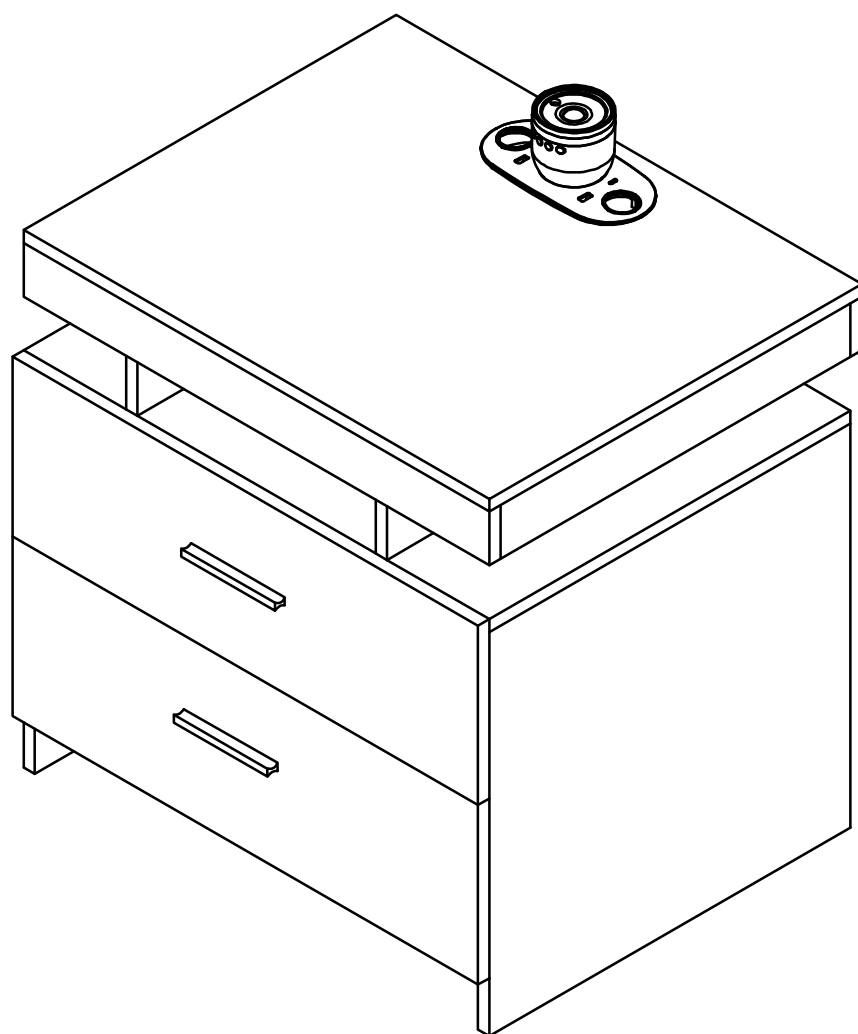


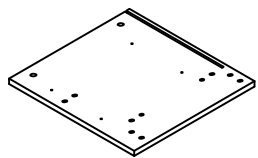


Ax1

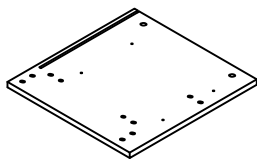

 
A2x1

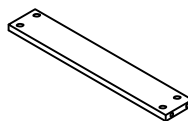


Bx1

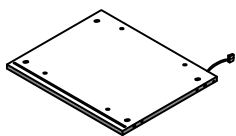 


Cx1

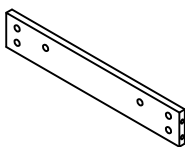 


Dx2

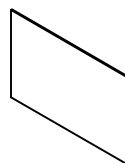 


Ex1

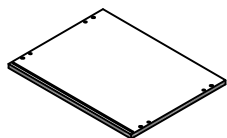 


Fx1

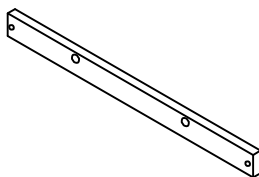 


Gx2

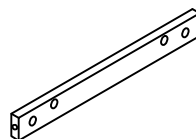 


Hx2

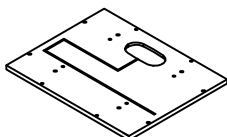 


Ix1

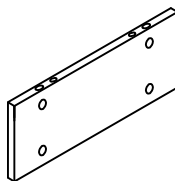 


Jx2

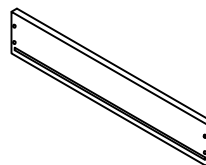 


Kx2

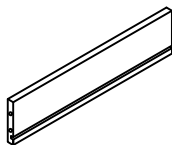 


Lx4

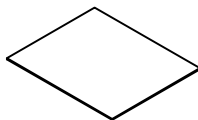 









Mx2

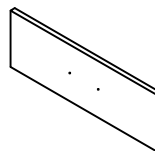 


Nx2

 


1

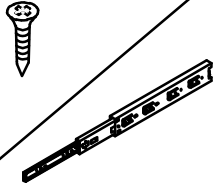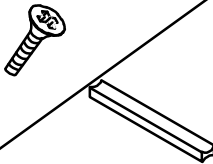        1		Two In One Screw (6x28mm)	58pcs +4pcs
2		Two In One Nut (10x12mm)	58pcs +4pcs
3		Wood Chipping (6x30mm)	18pcs +2pcs
4		Screw & Guide (29cm) (3x12mm)	20pcs +4pcs 4pcs
5		Screw & Handle (4x16mm)	4pcs 2pcs
6		Back Plate Buckle & Screw (3x16mm)	4pcs
7		Audio-Visual Module	1pcs - 1pcs - 2pcs
8		remote control	1pcs
9		Wire clamp	1pcs +1pcs
		AC/DC Adapter(12V=4.0A)	1pcs
  1pcs Double-head screwdriver, use as required 			

  
Product structure decomposition

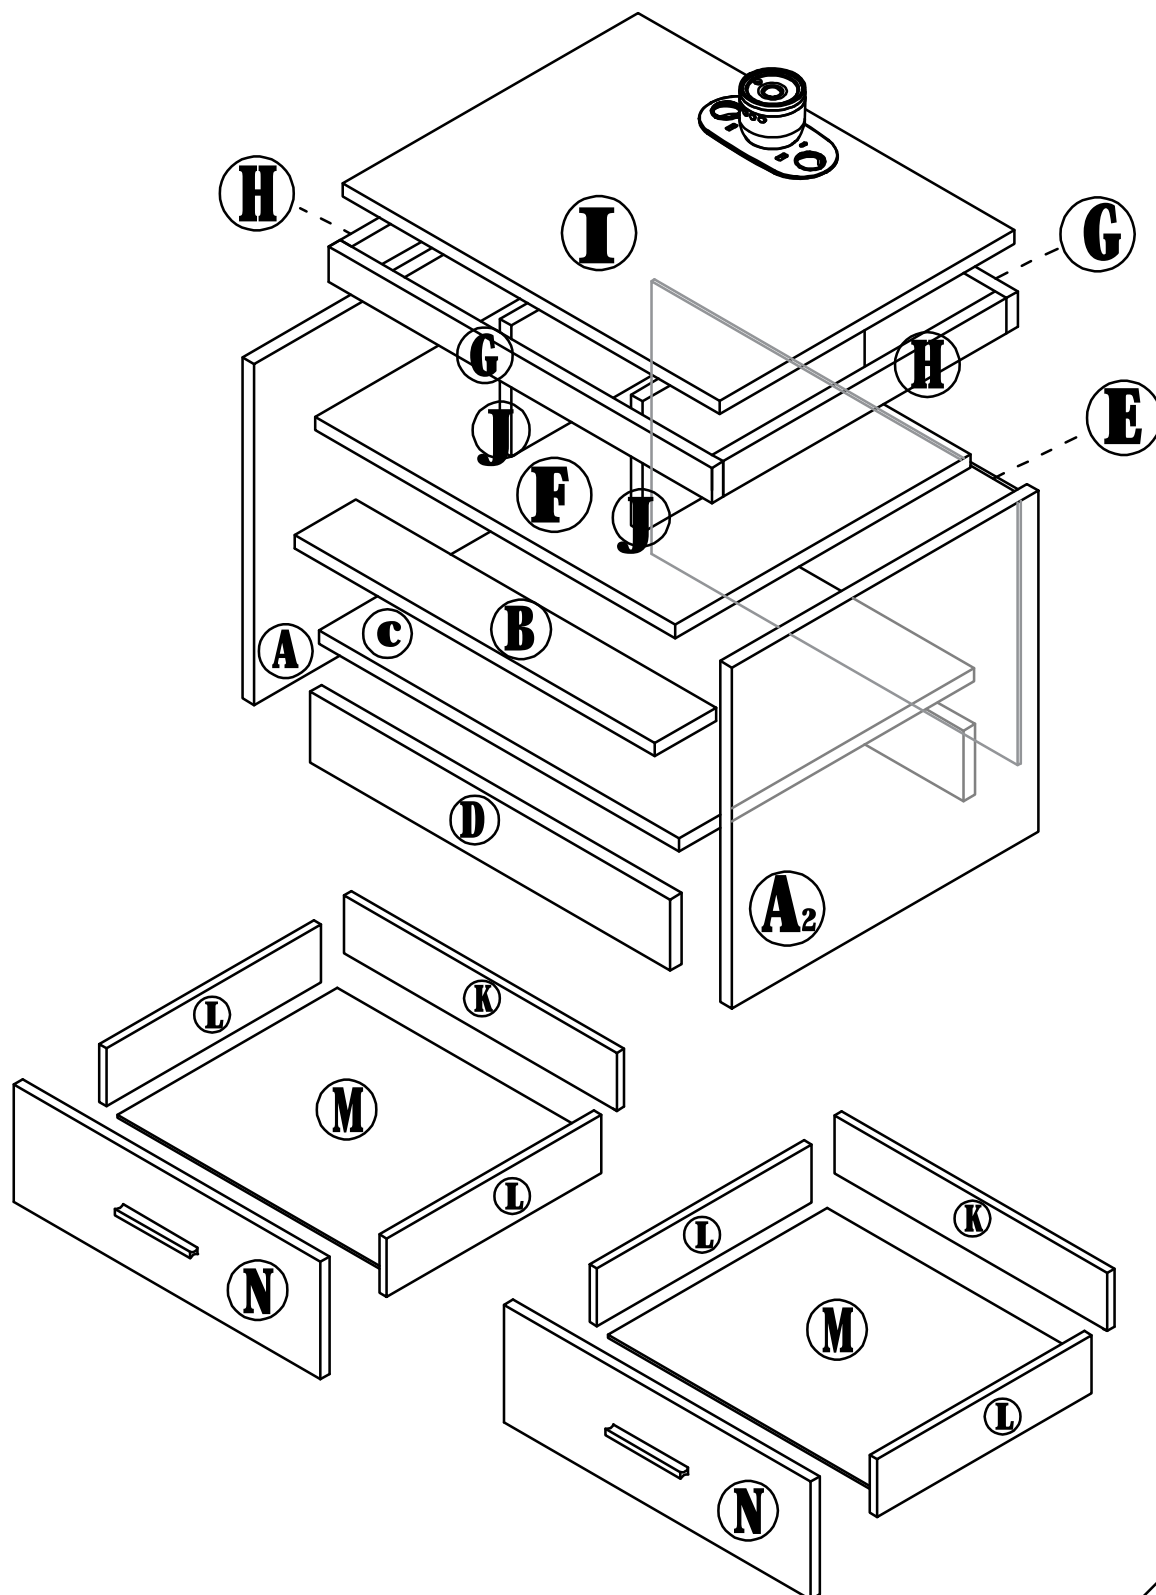

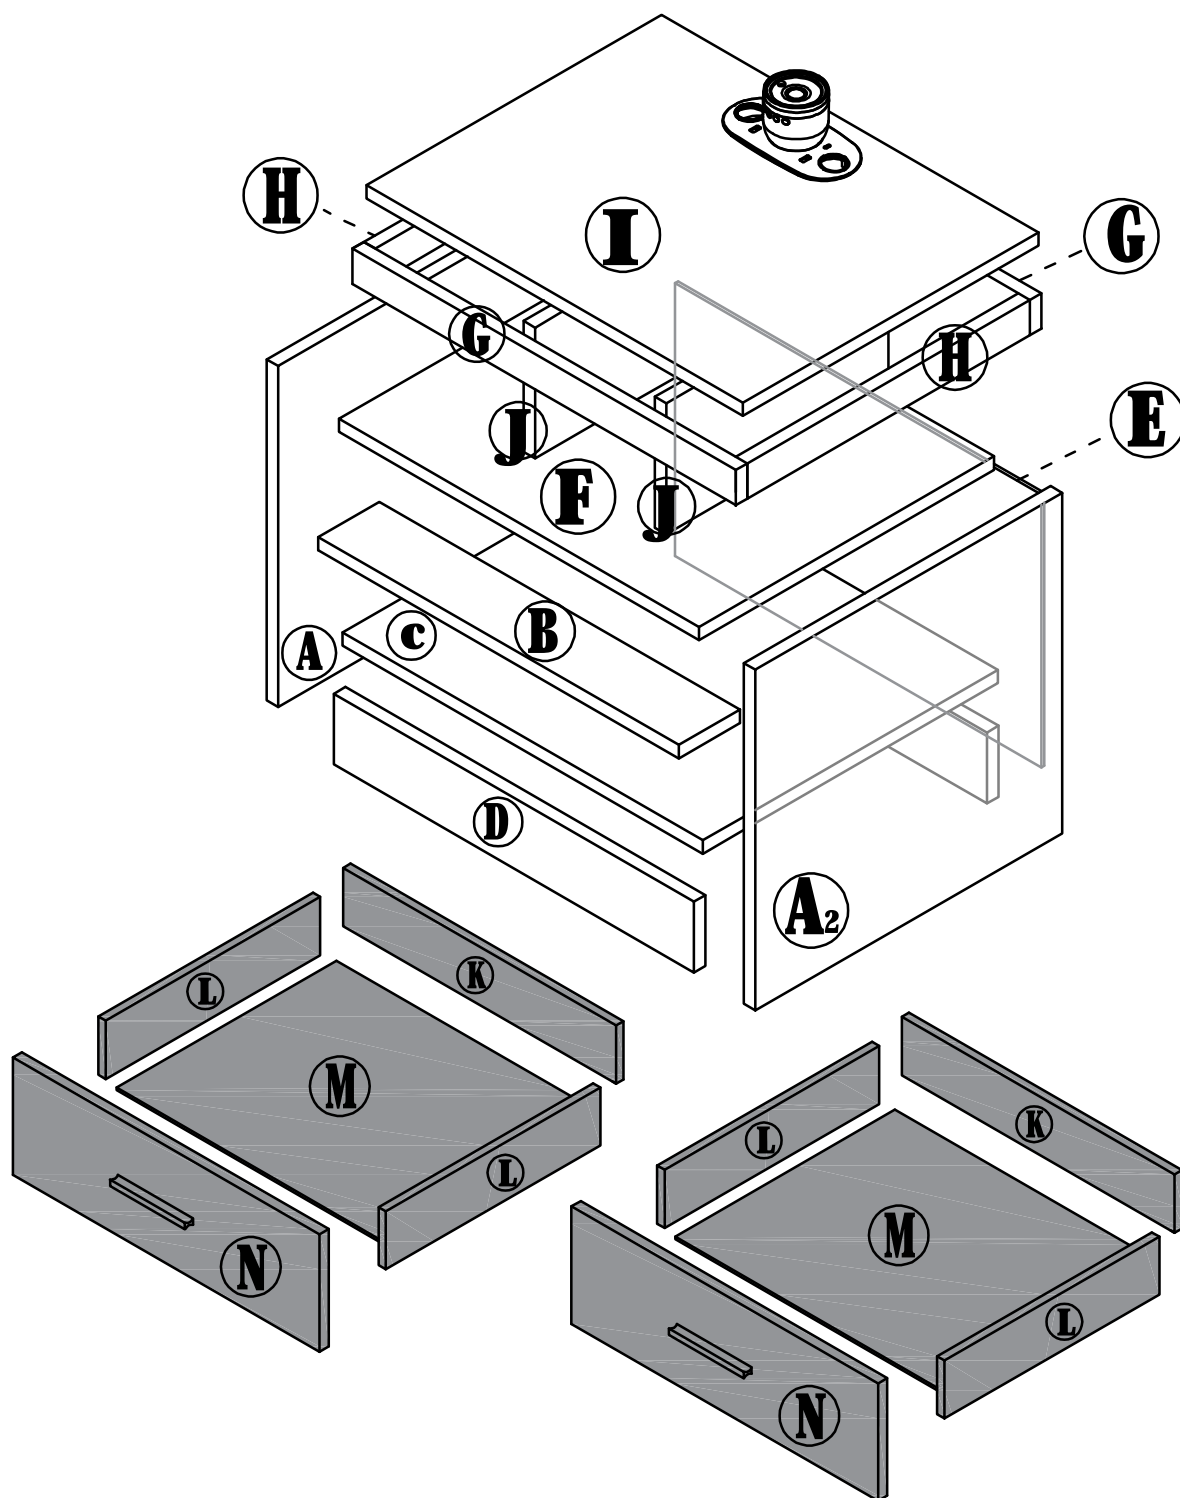


Use parts ① and ②



 
Step1

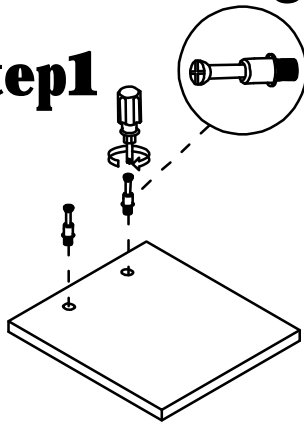

 Step2

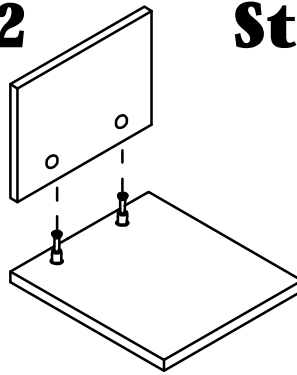

  
 
Step3

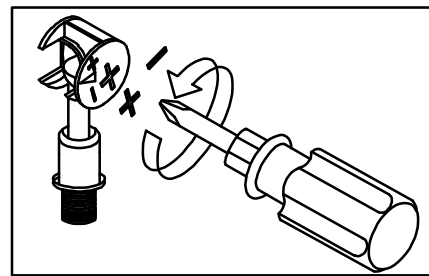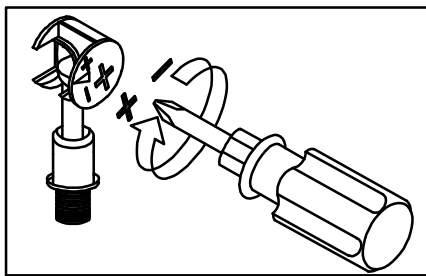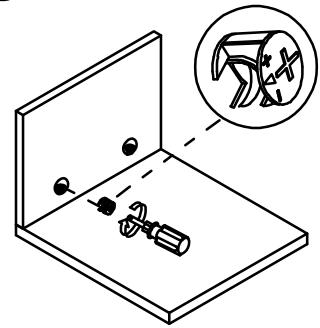

Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

  Step 1

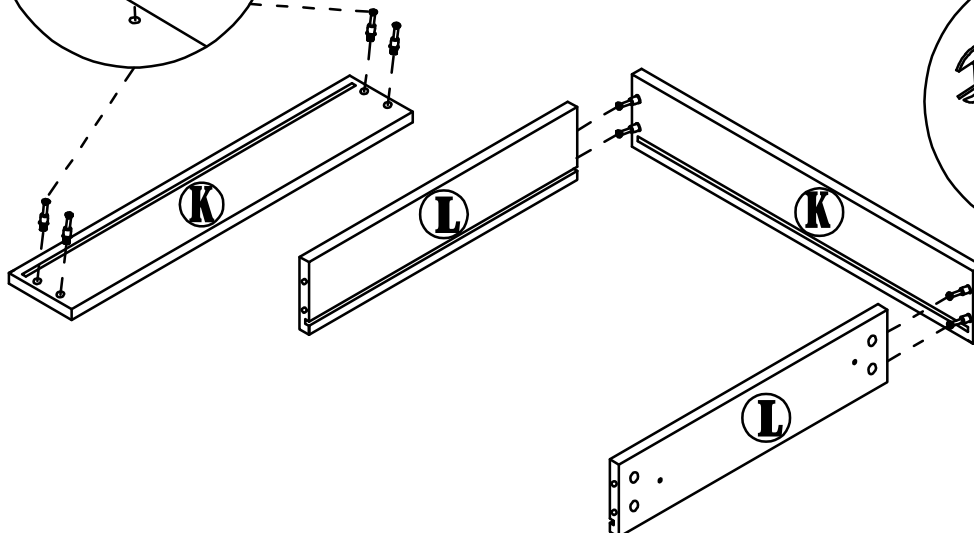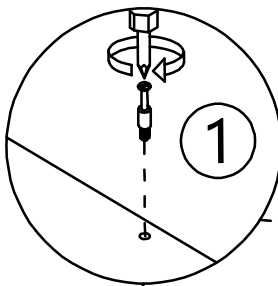


①


x4

5

 
Step 2

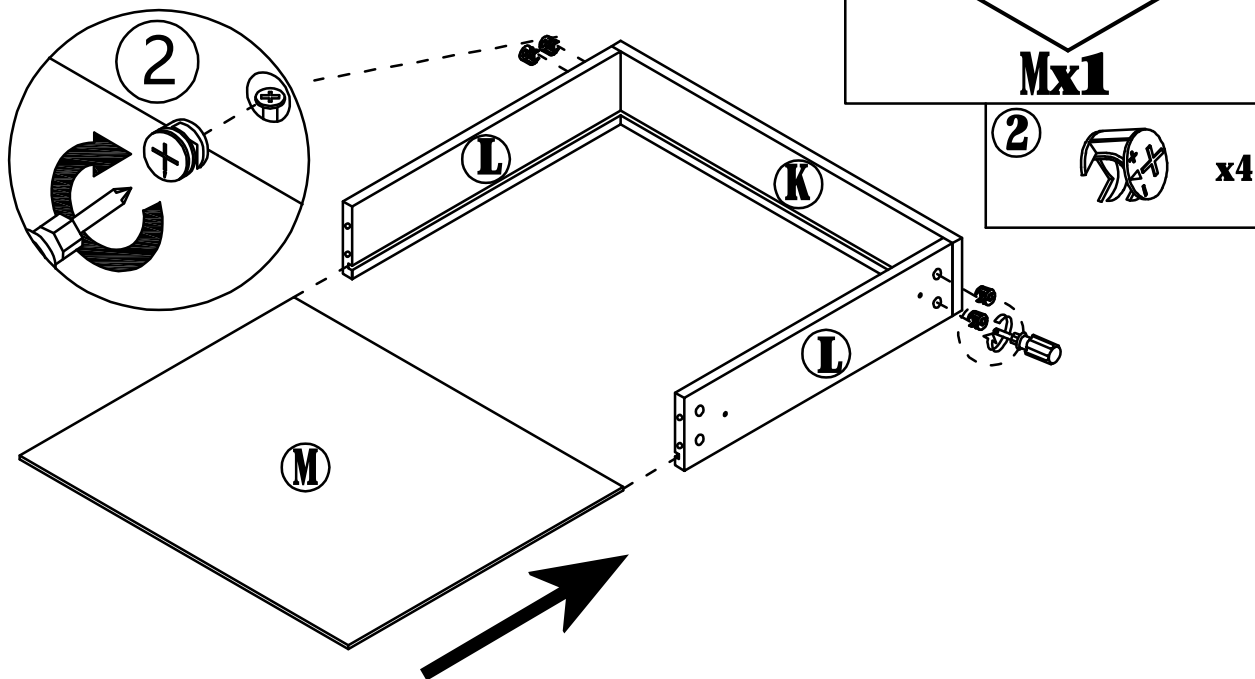

 
Step 3

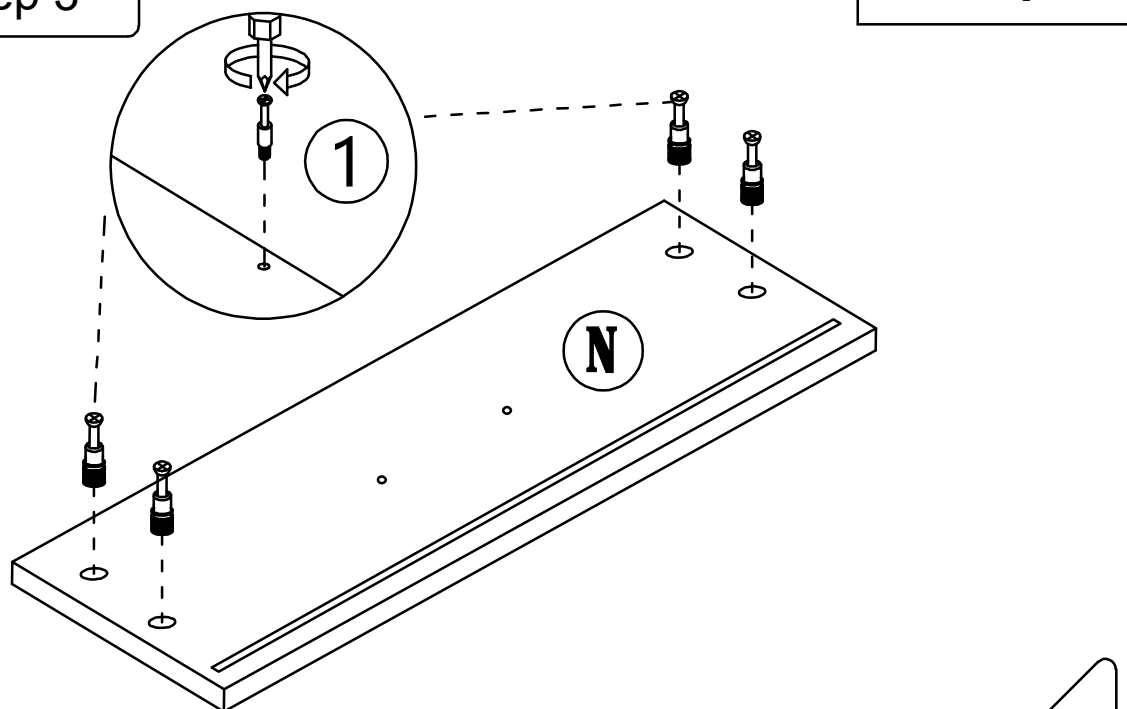

 Step 4

⑤ 
x1

 

x2

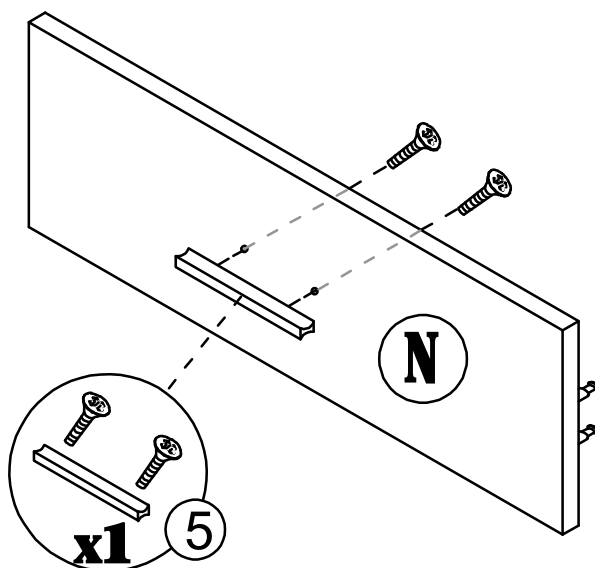

Step 5


If there is a misalignment, please loosen component 2 for adjustment first

 ②  x4

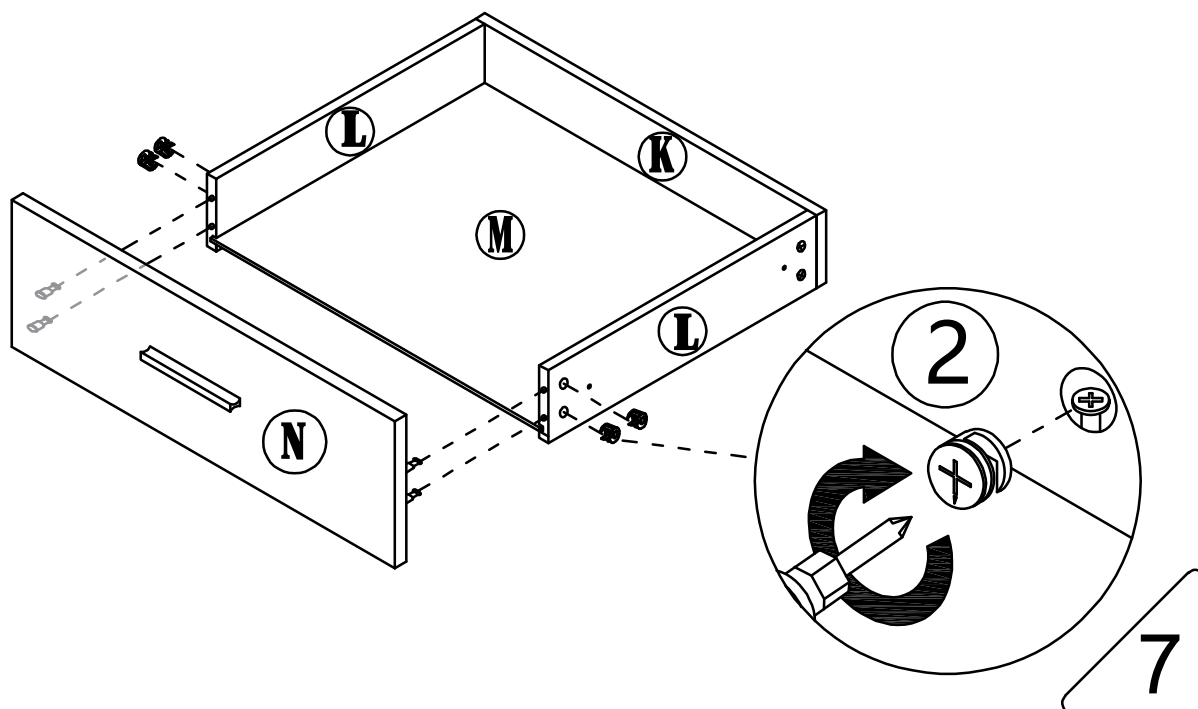


Use parts

 Drawer rail breakdown diagram

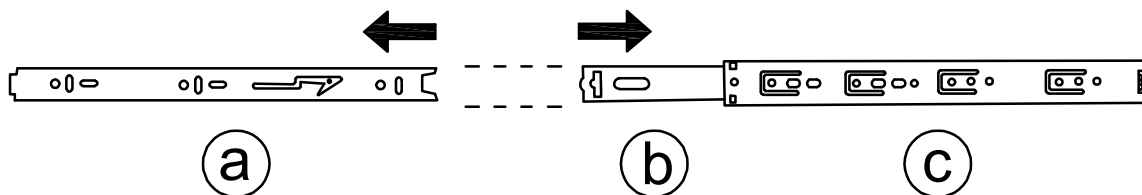


① Dismantle the schematic diagram

 Step 1 : Pull the rails apart

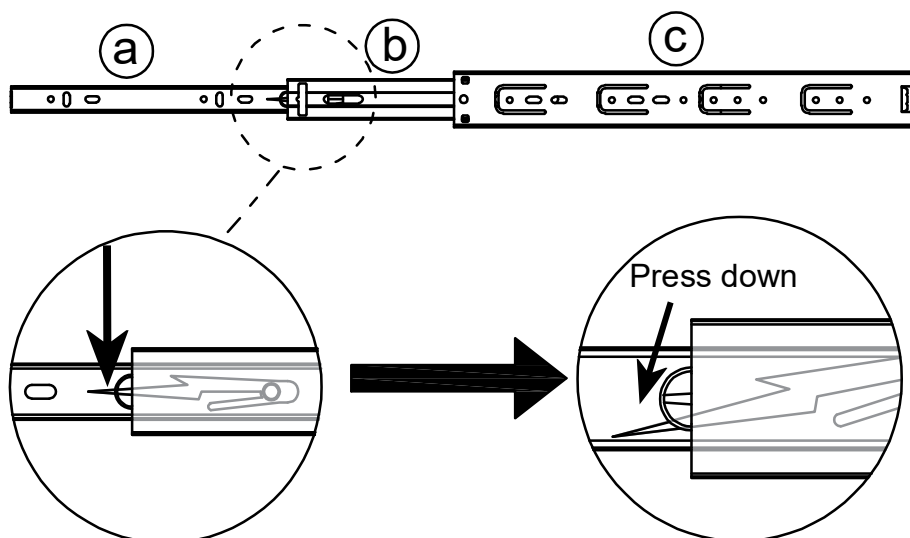




Step 2 : Press the nylon button and pull out (a).

 The drawer rail (Part I) consists of three sections — (a), (b), and (c) — after disassembly.


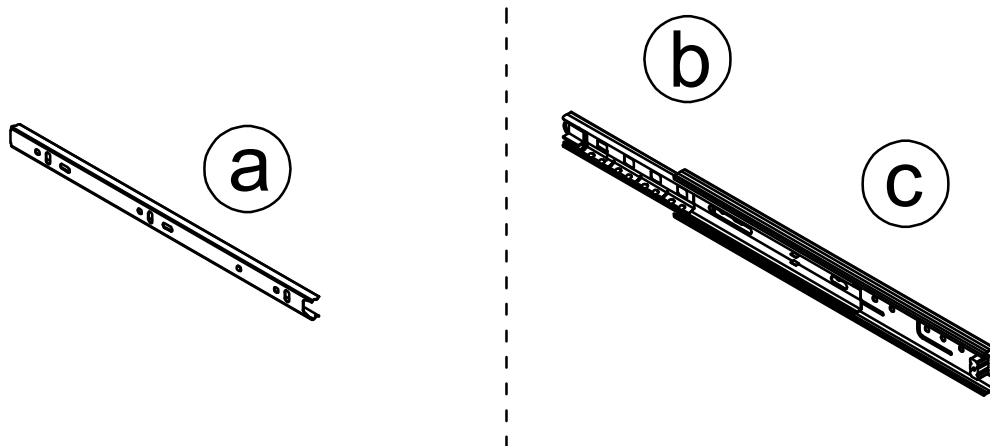


 Step 6

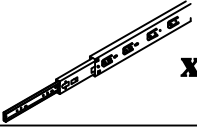
④		x2
④		x4

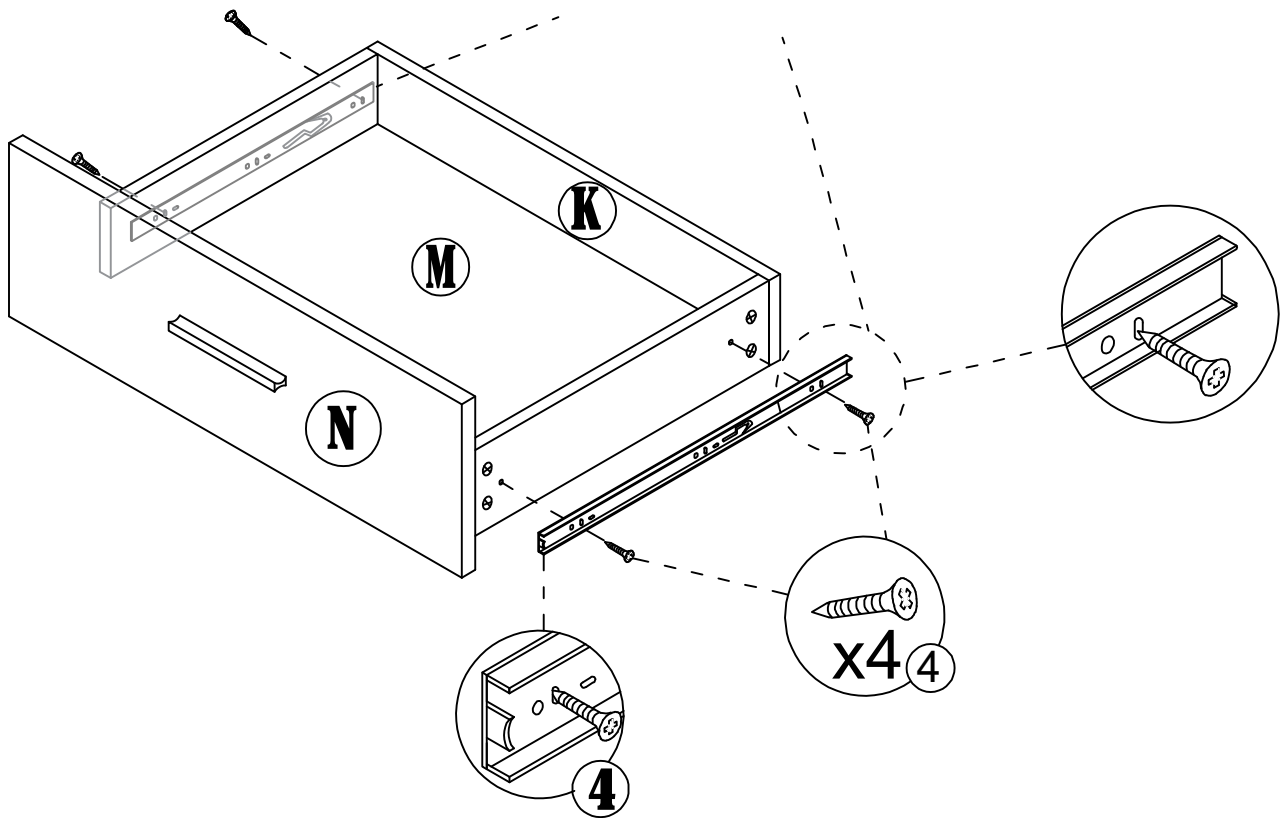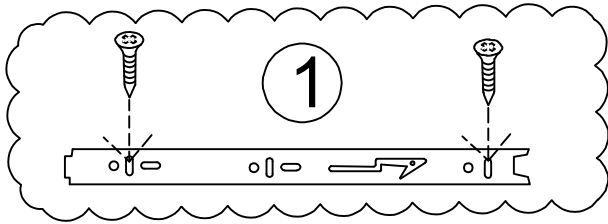  

  
Step 7

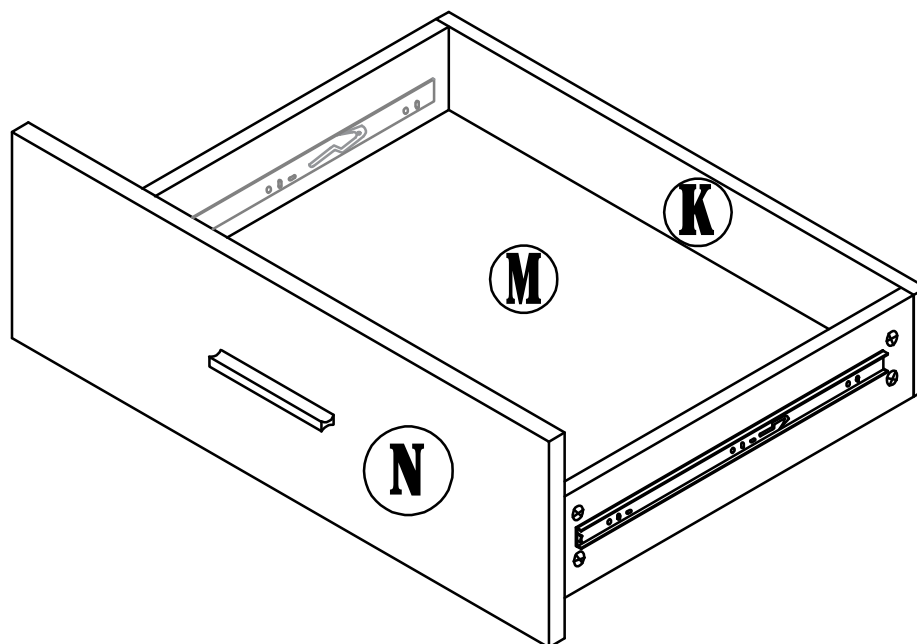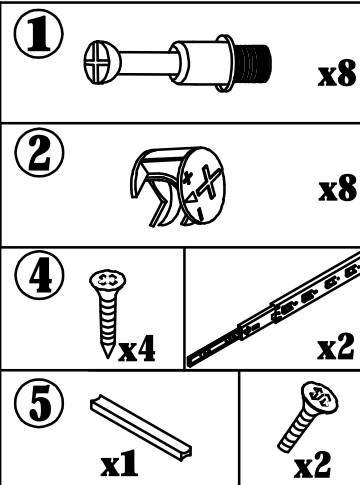


Use the same way to instalthe drawer

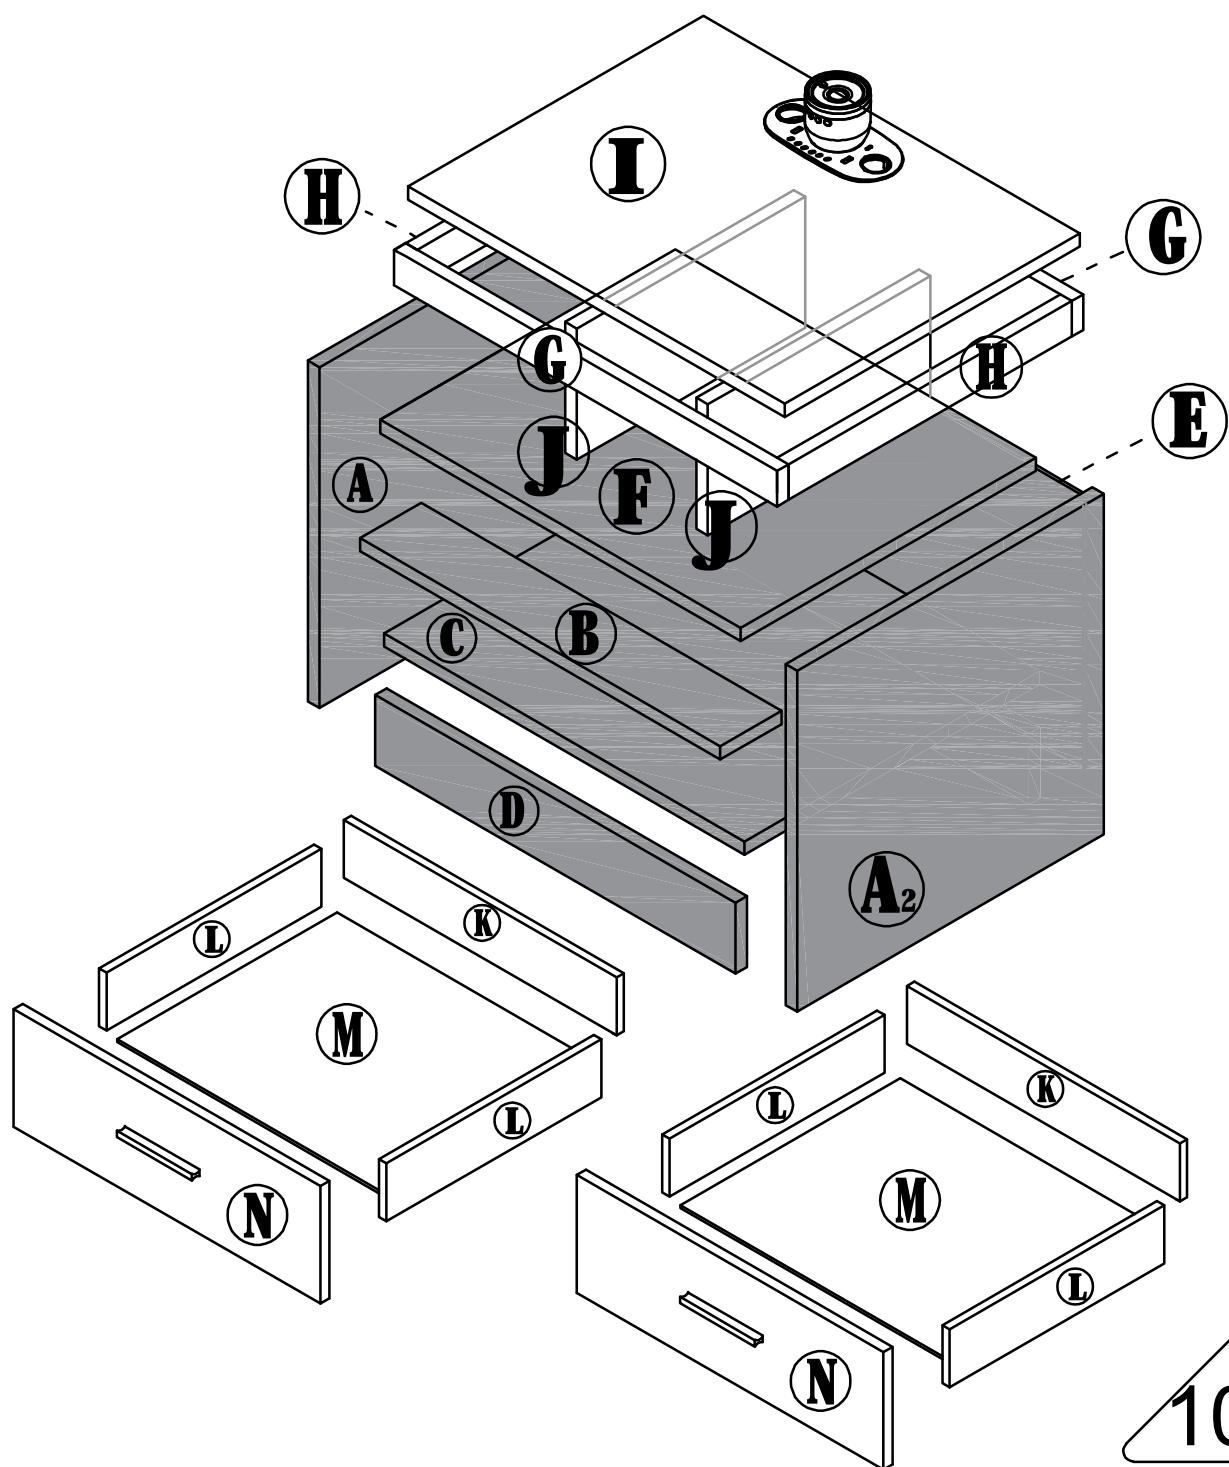 

  
Step 8

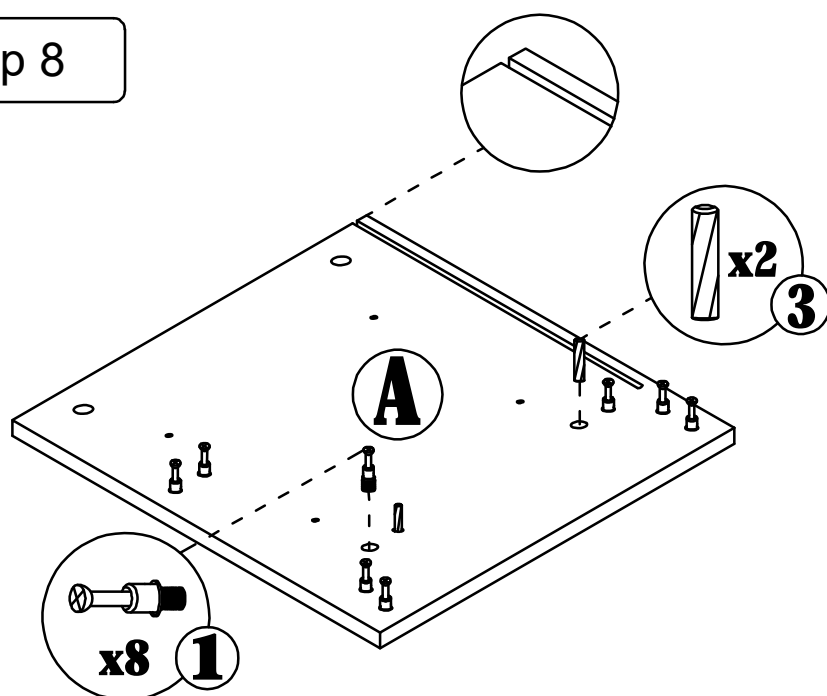


①  x8


③  x2

 Step 9

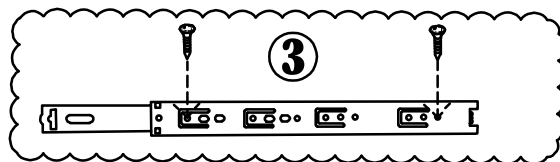

④  x4

 ④  x2

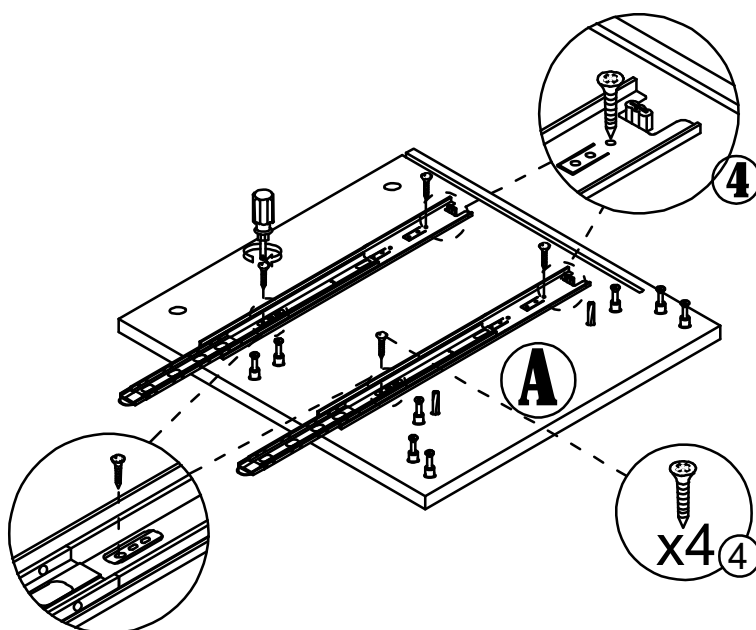 


Step 10

④



 x2

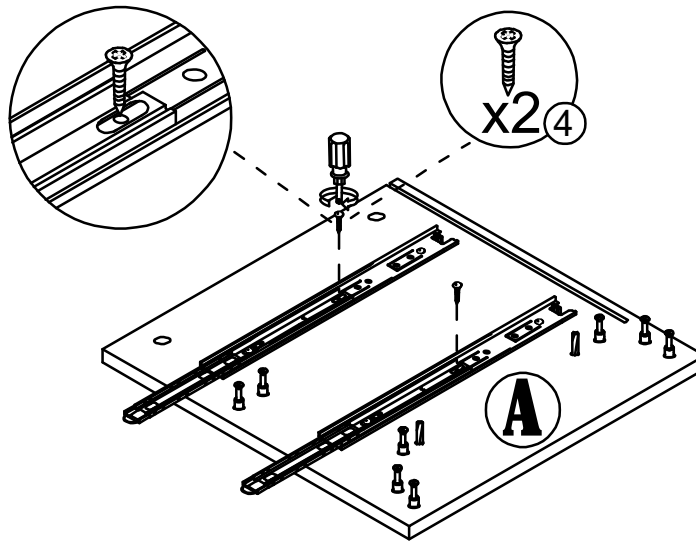


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 11


②




 x2

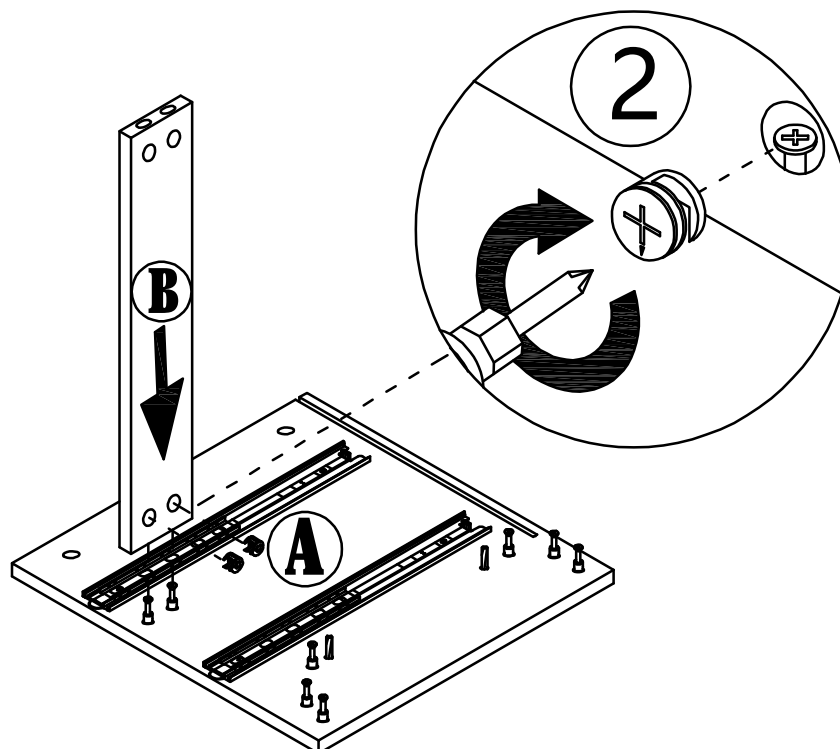

 
Step 12

1  **x4**

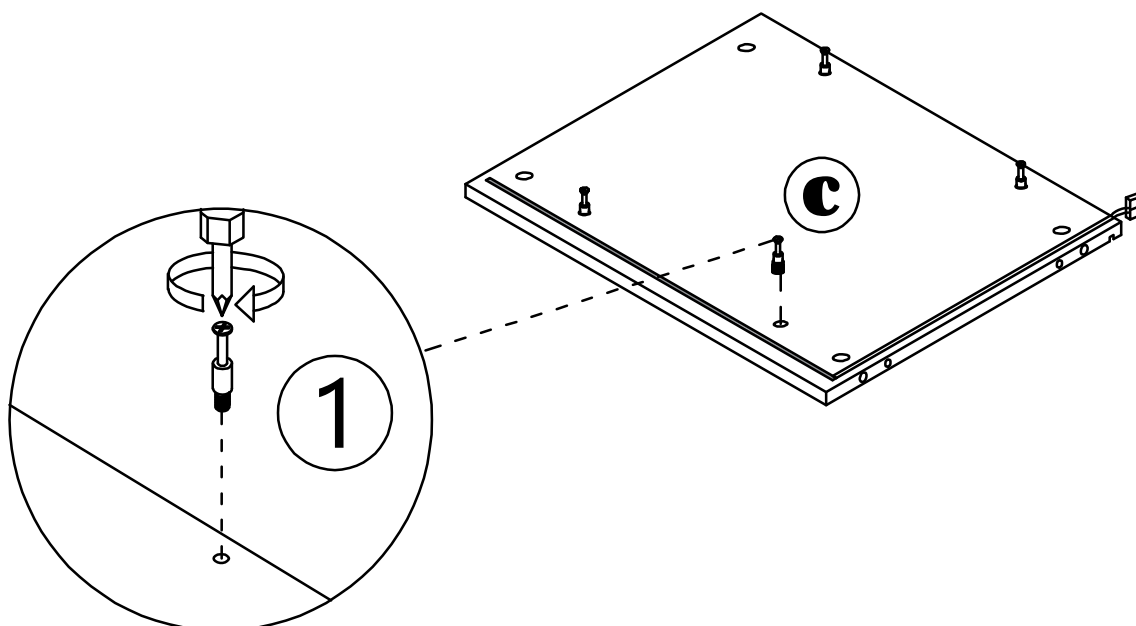 


Step 13

 2  **x4**

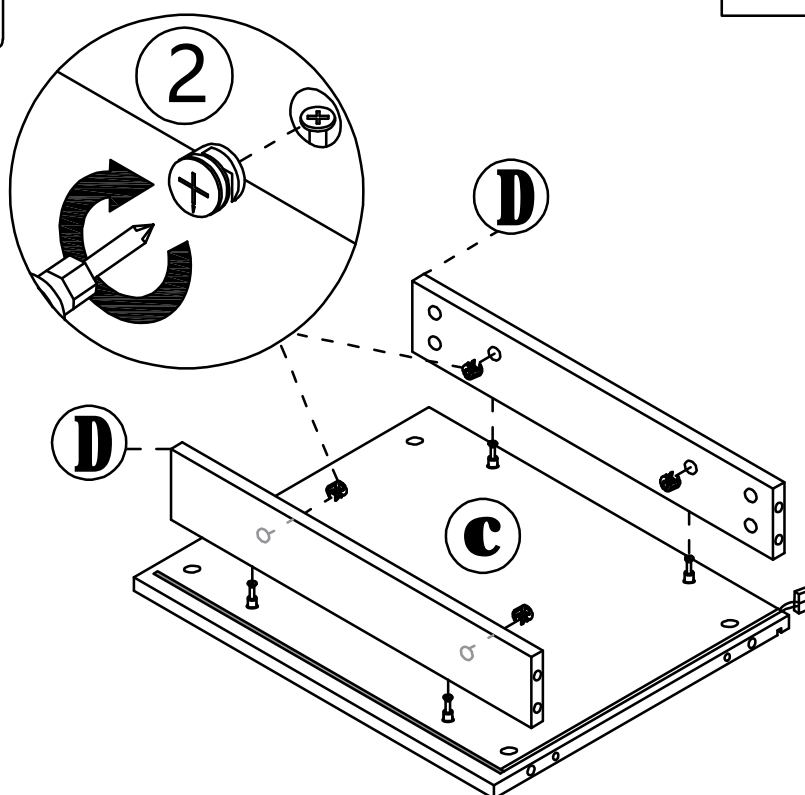


 Step 14

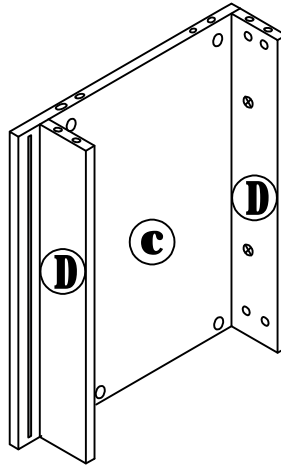



Step 15

 
②  x6

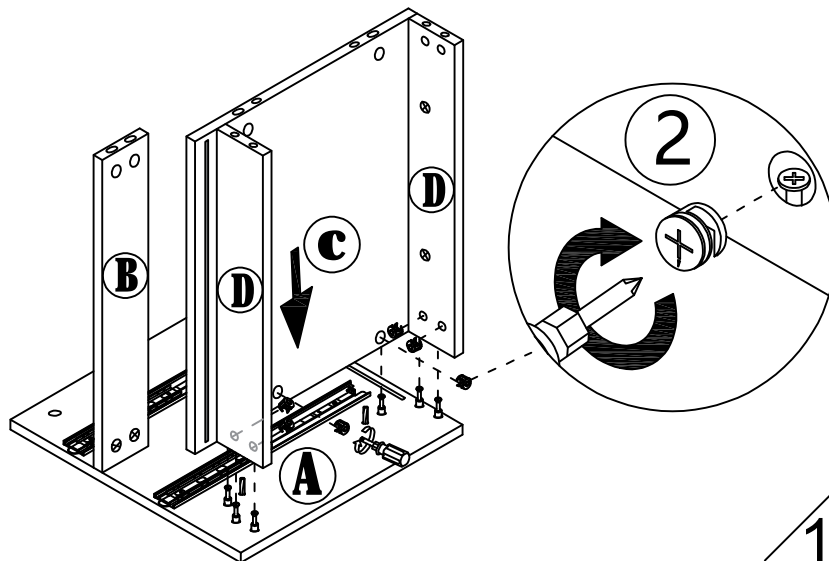

 
Step 16

①  x8

 
③  x2

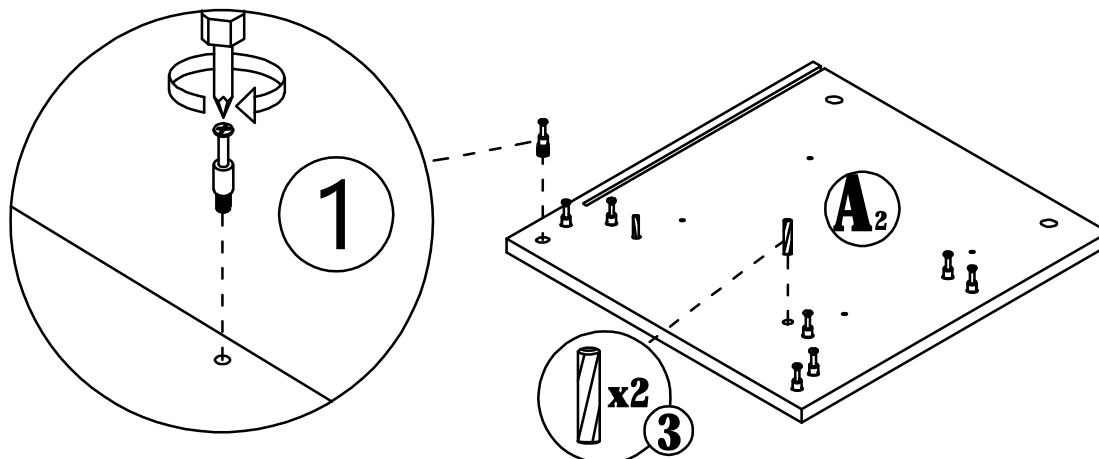 


 Step 17

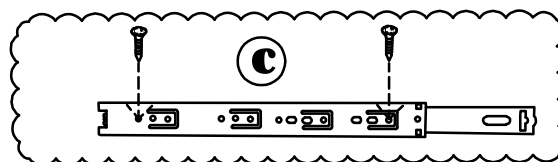


④  x4

 ④  x2

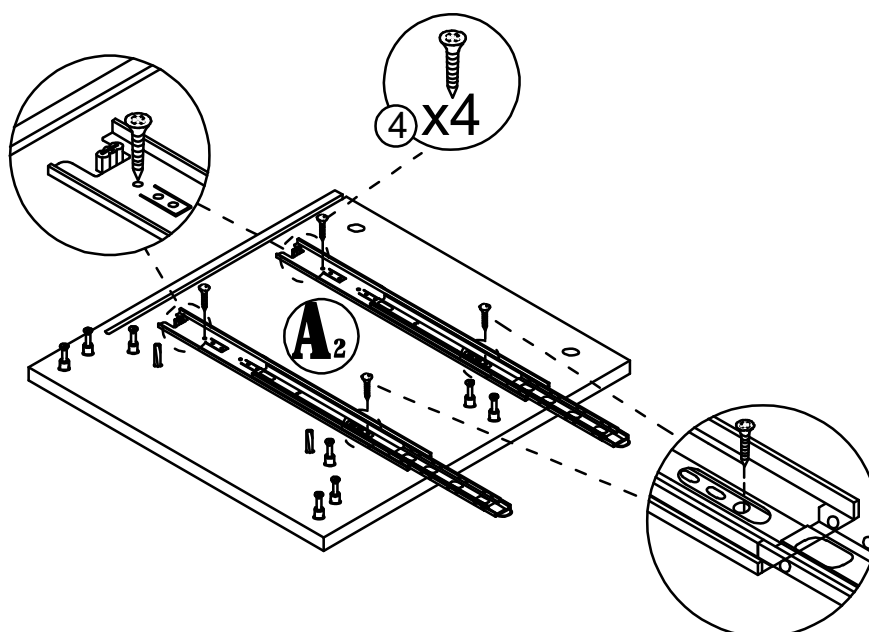 

Step 18


 
④  x2

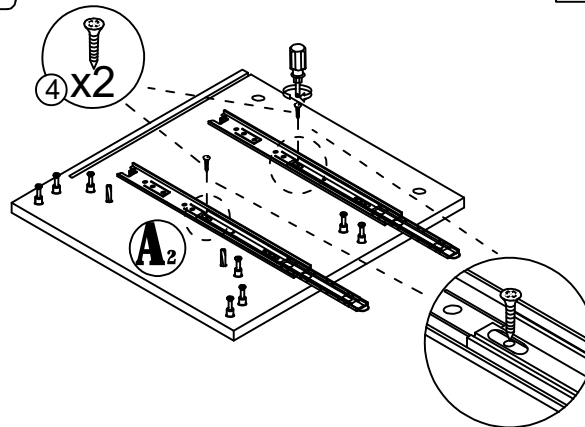

This hole is for strengthening fixed hole customers can choose to install according to their needs.




Step 19

  ②  x8

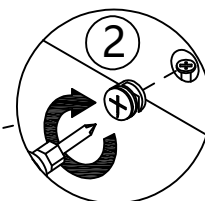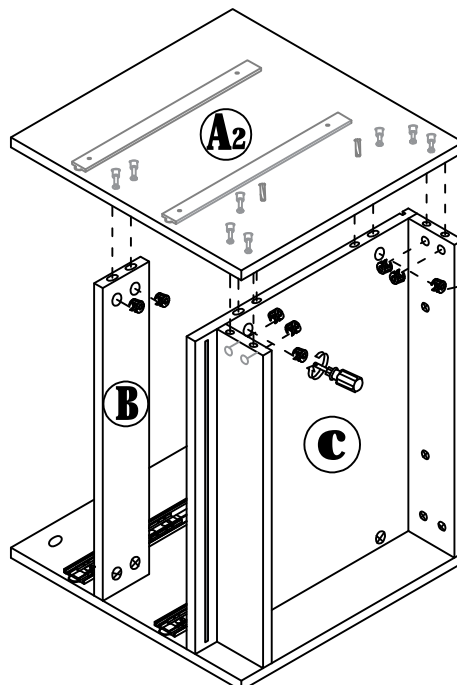



16

   Step 20

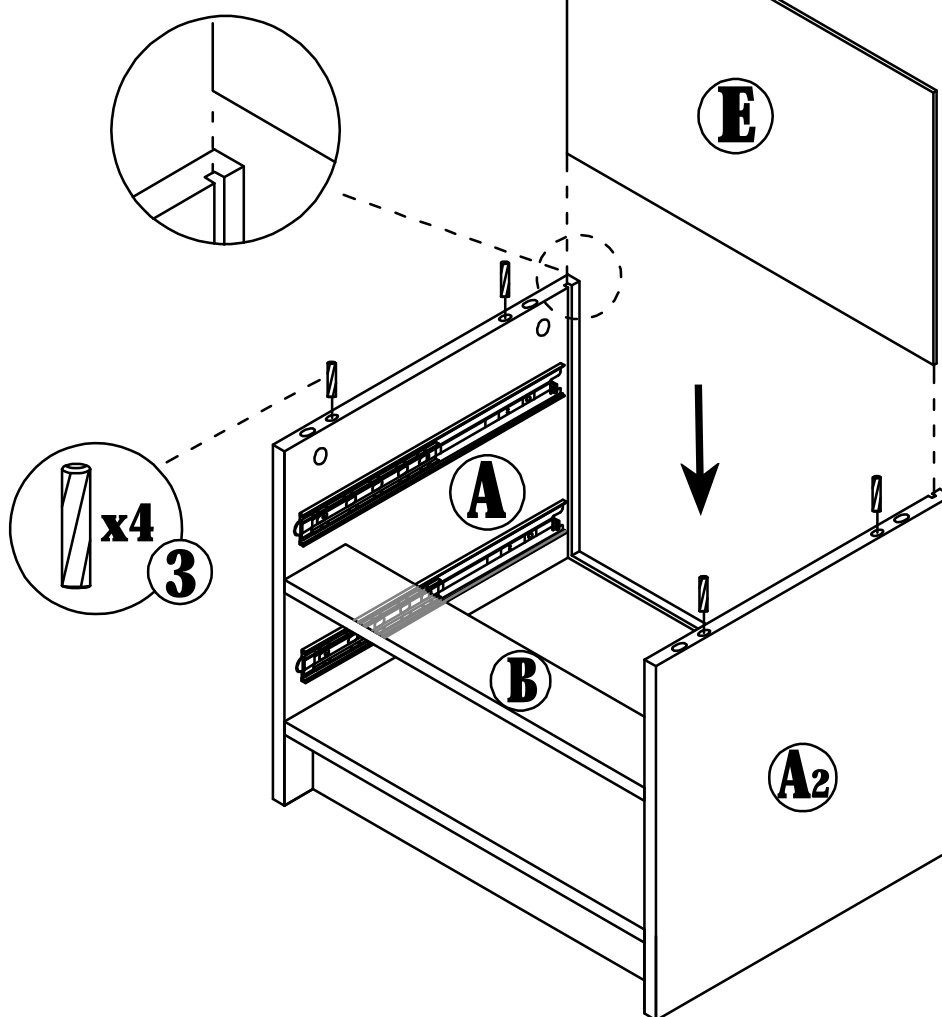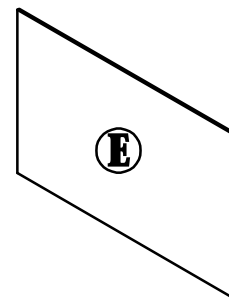

 
Step 21

1  **x4**



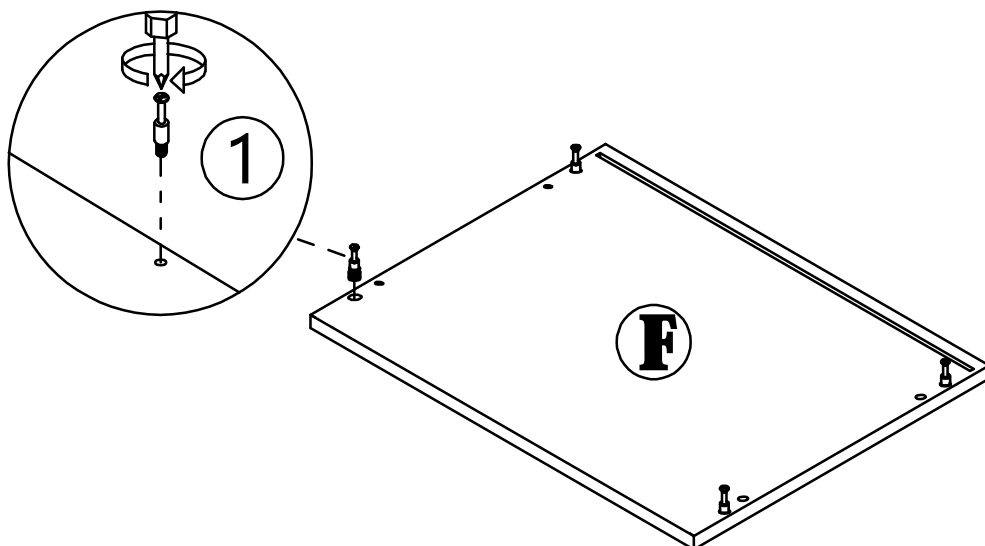 



Step 22

 2  **x4**

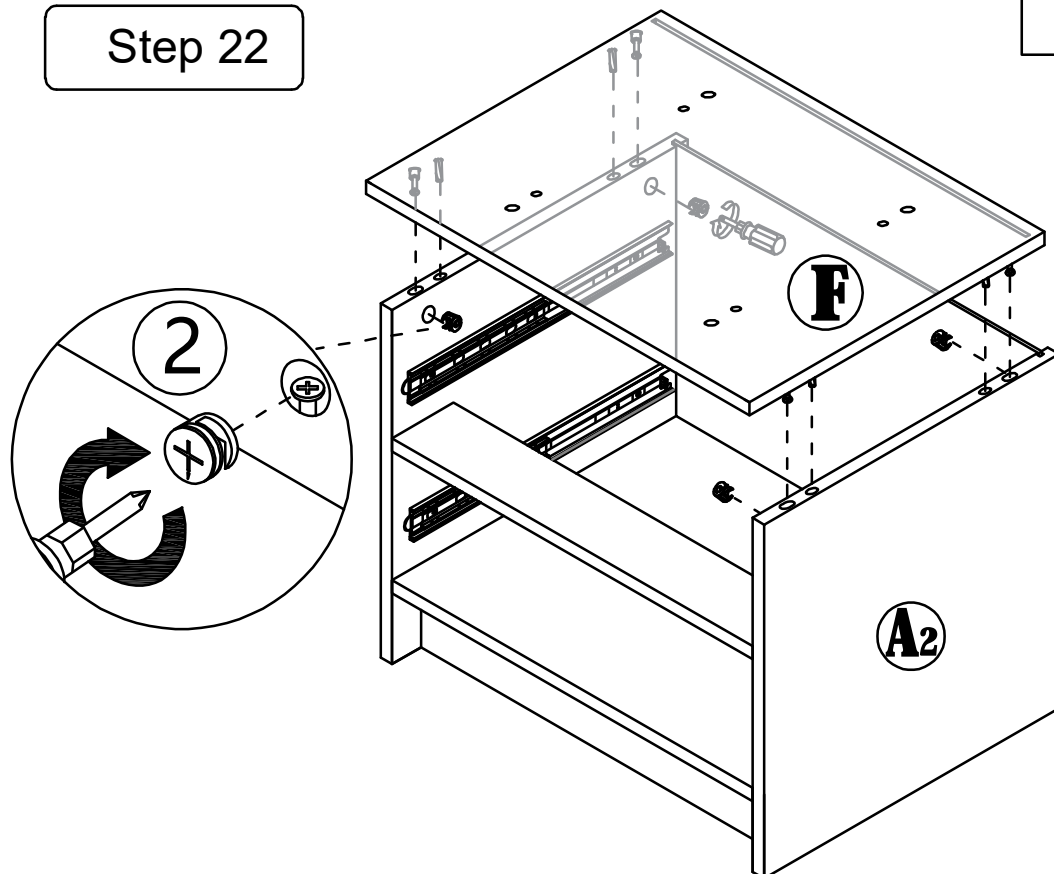


    
Step 23

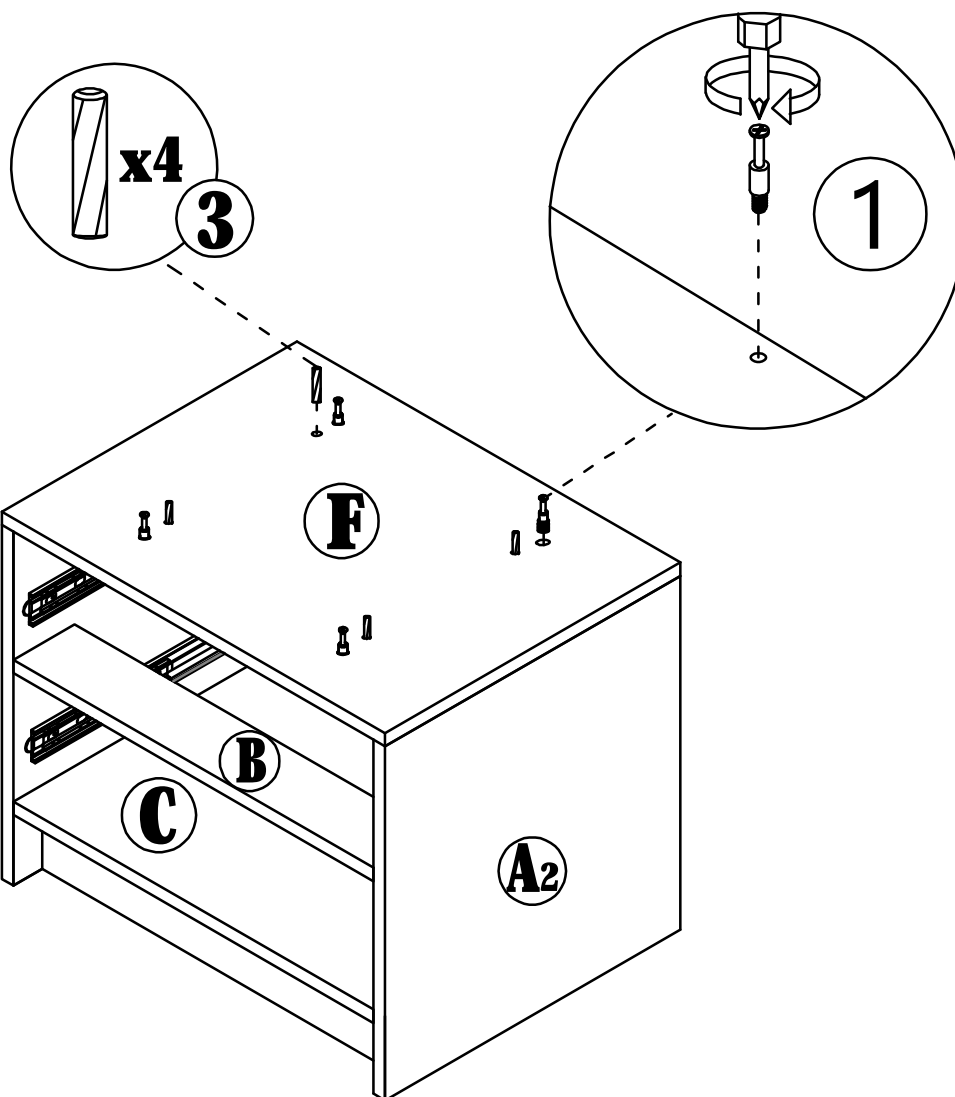

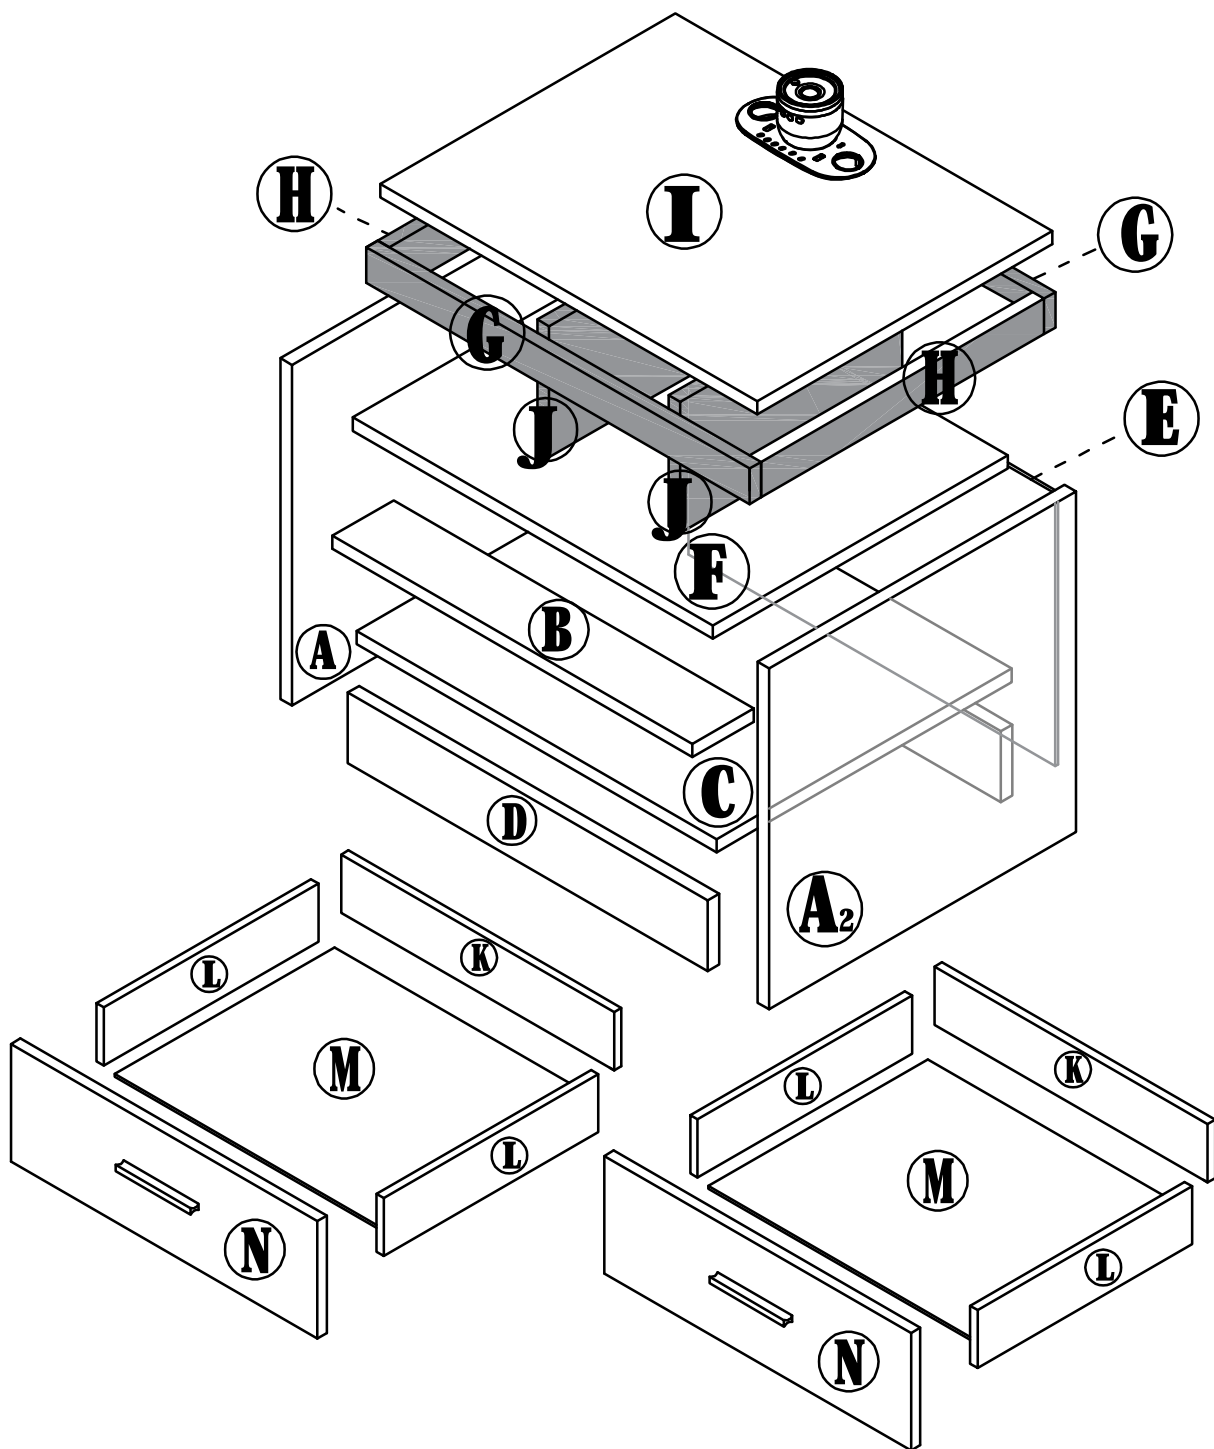

  
Step 24

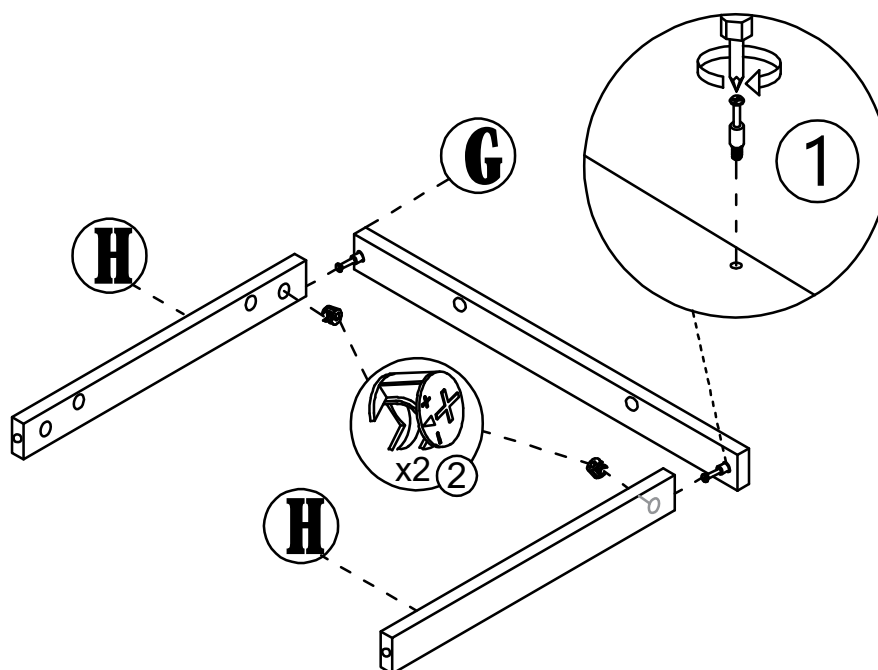


①  x2

②  x2

  Step 25

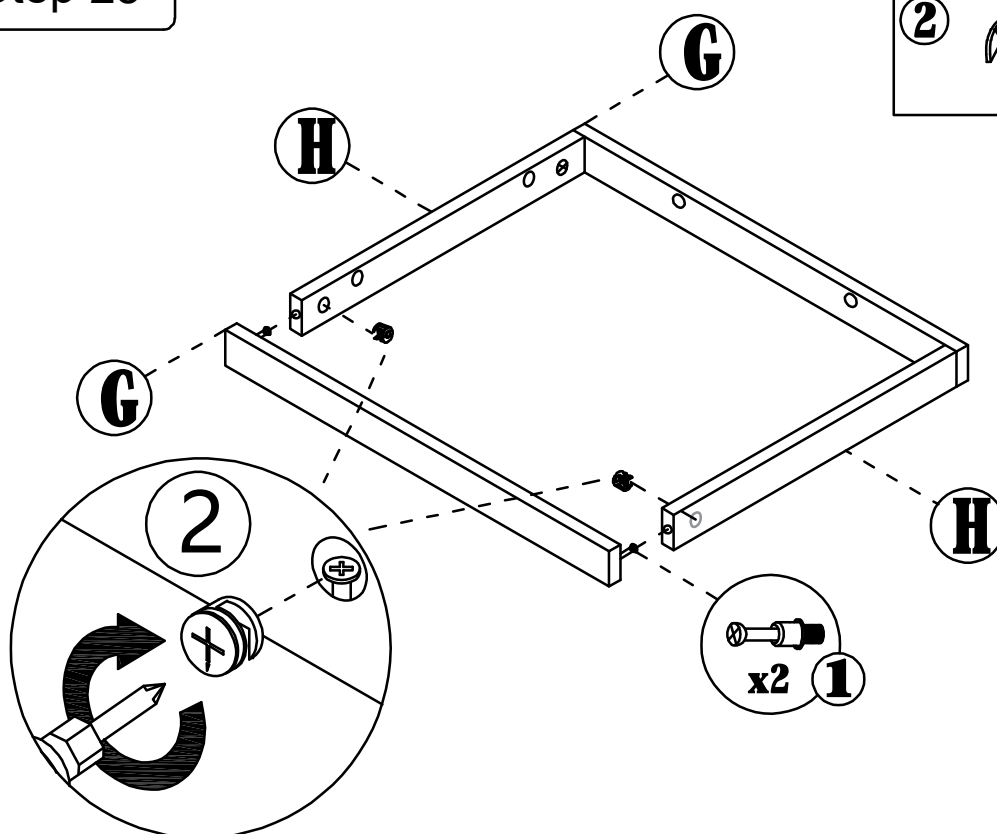

①  x2

②  x2

 
 
Step 26

The end with the button
should be facing forward

7



x1

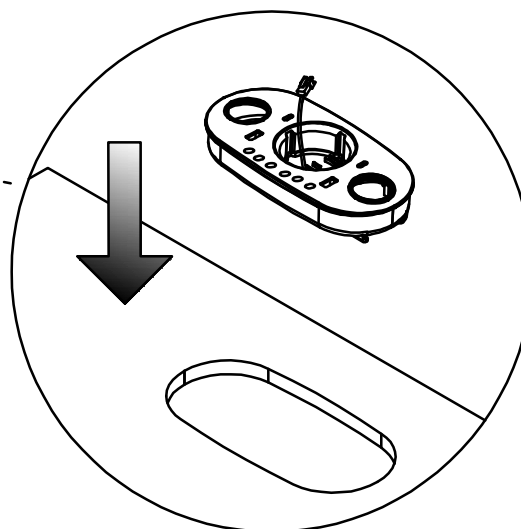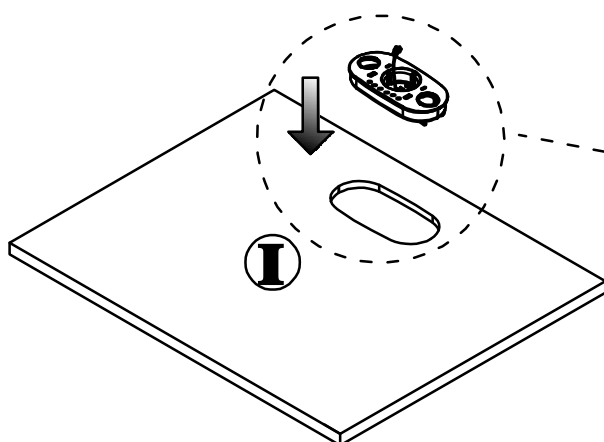


Step 27




7





 
x2

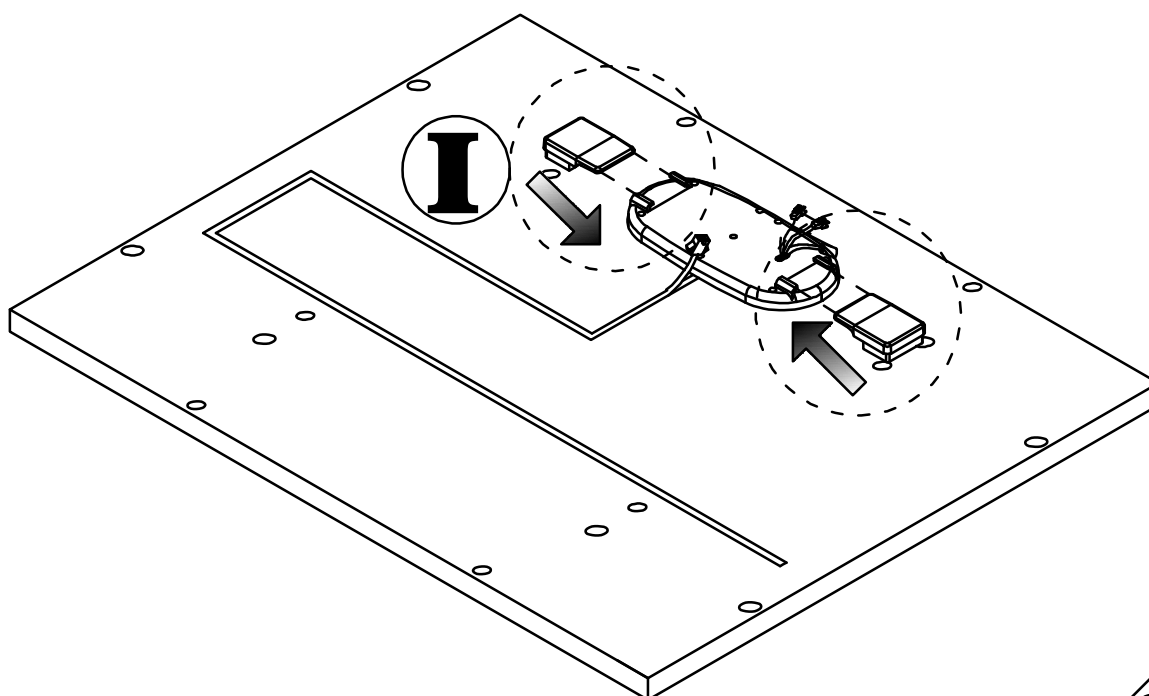

   Step 28

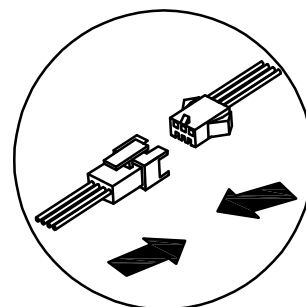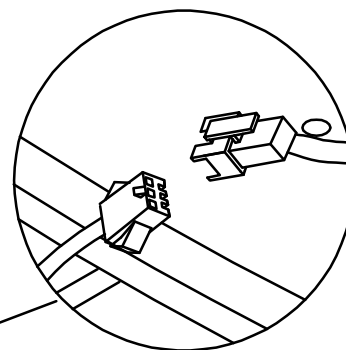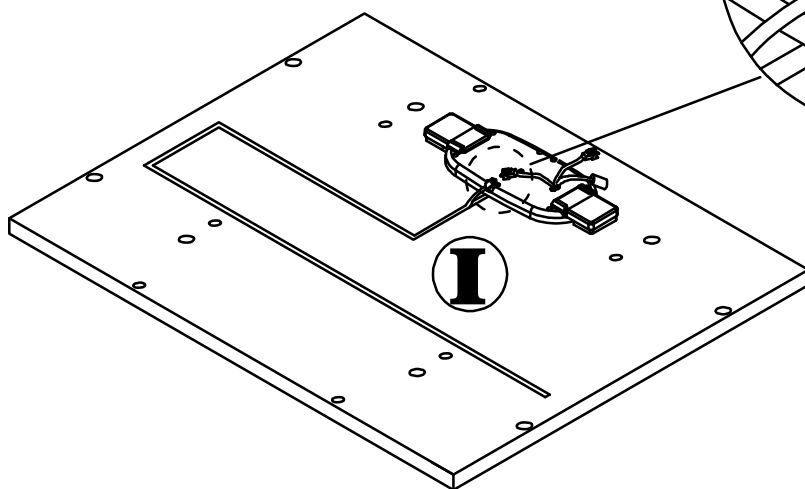

   Step 29

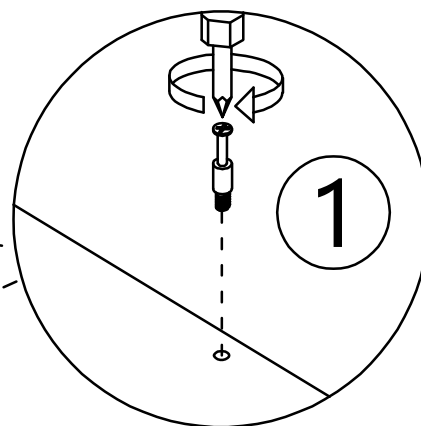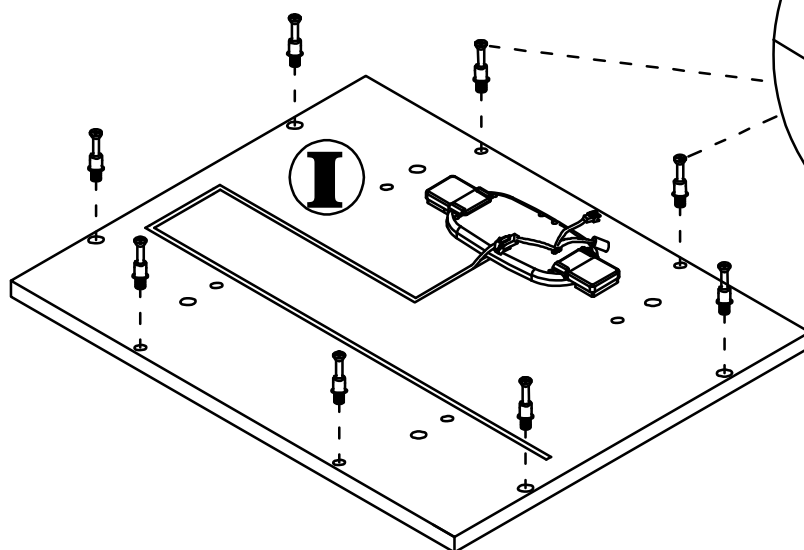


Step 30


2



 
x8

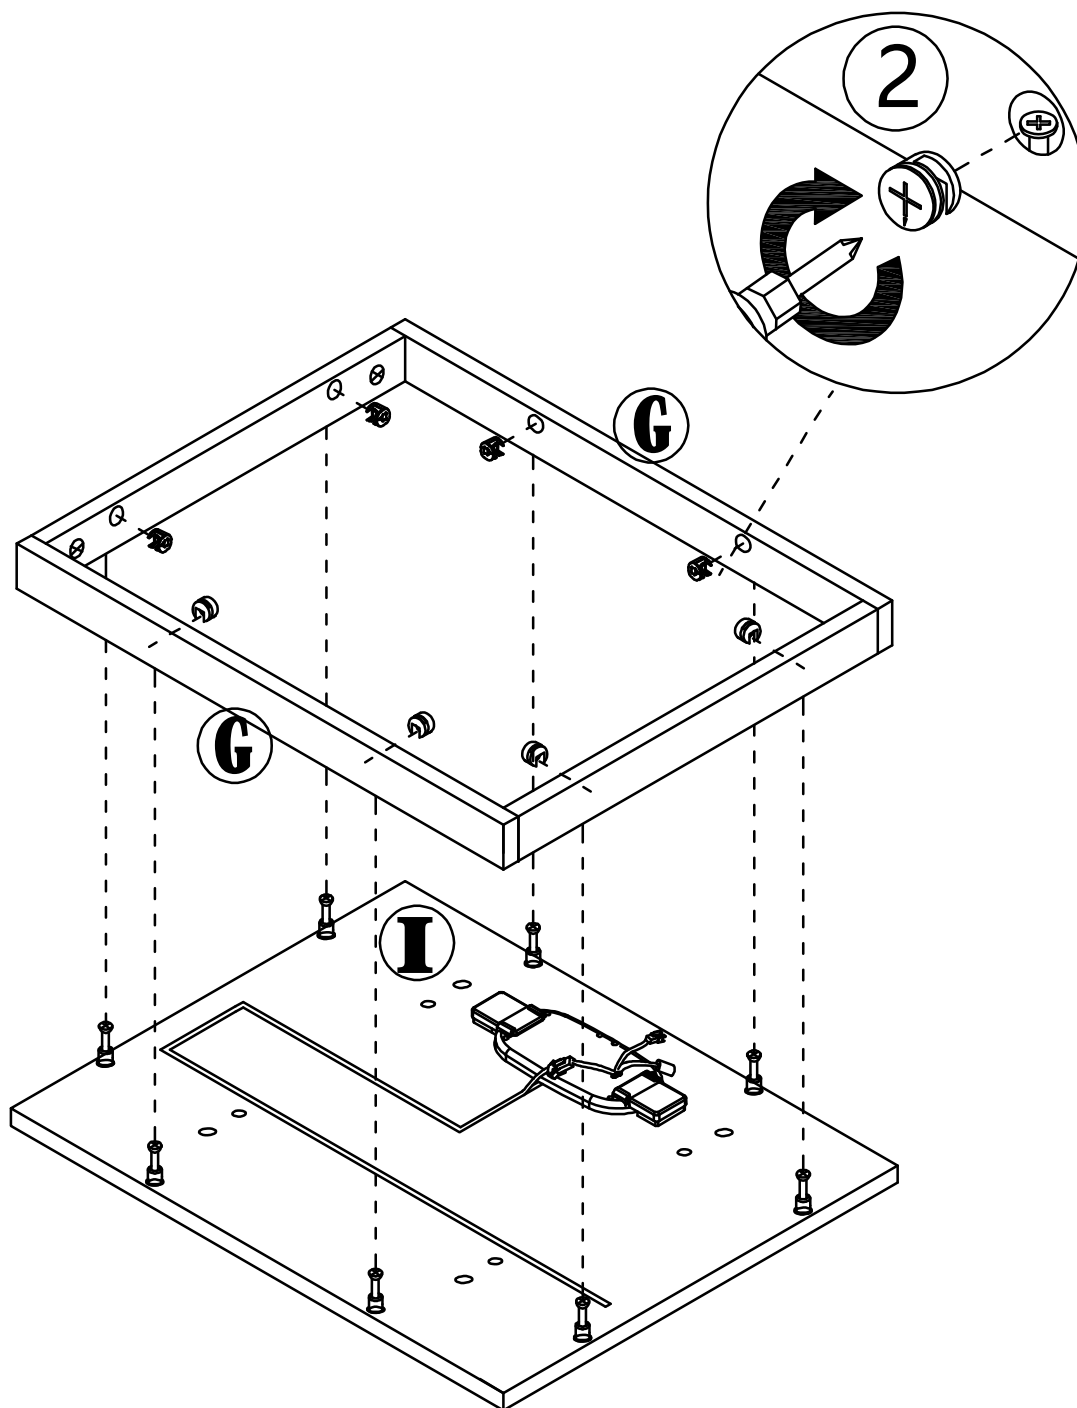

 Step 31

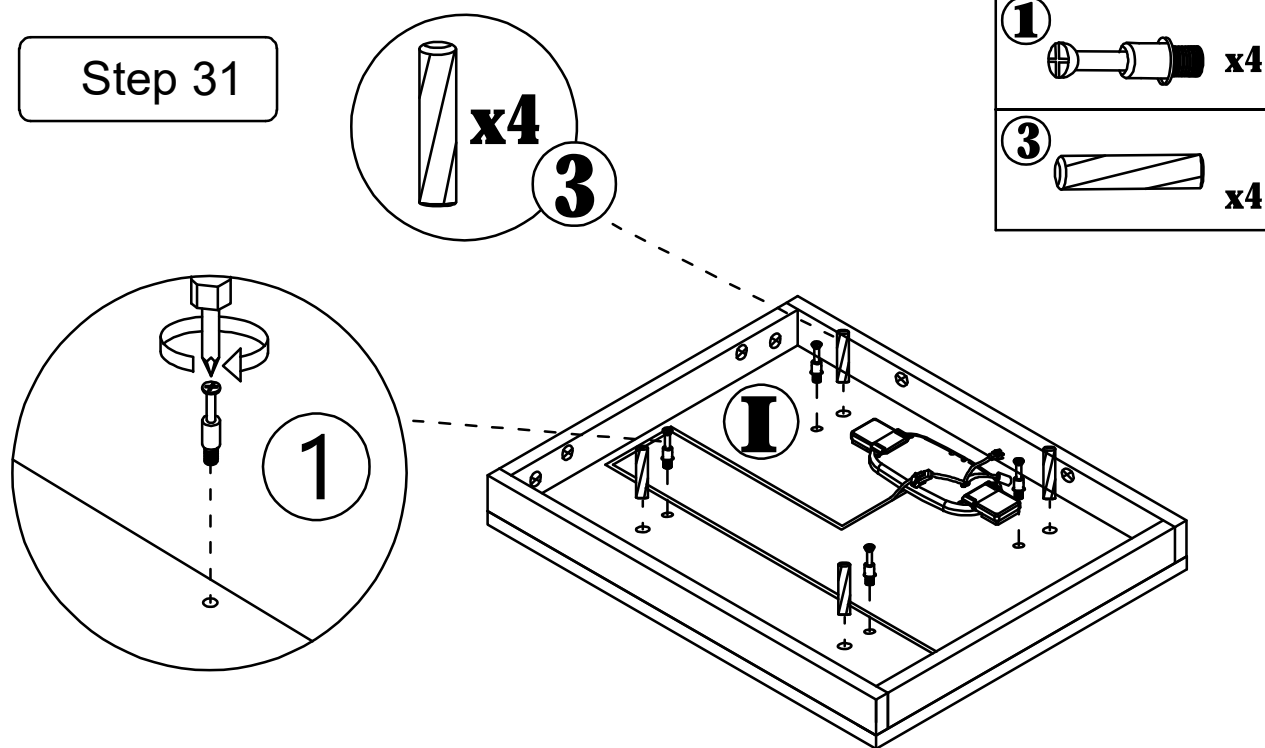

 Step 32

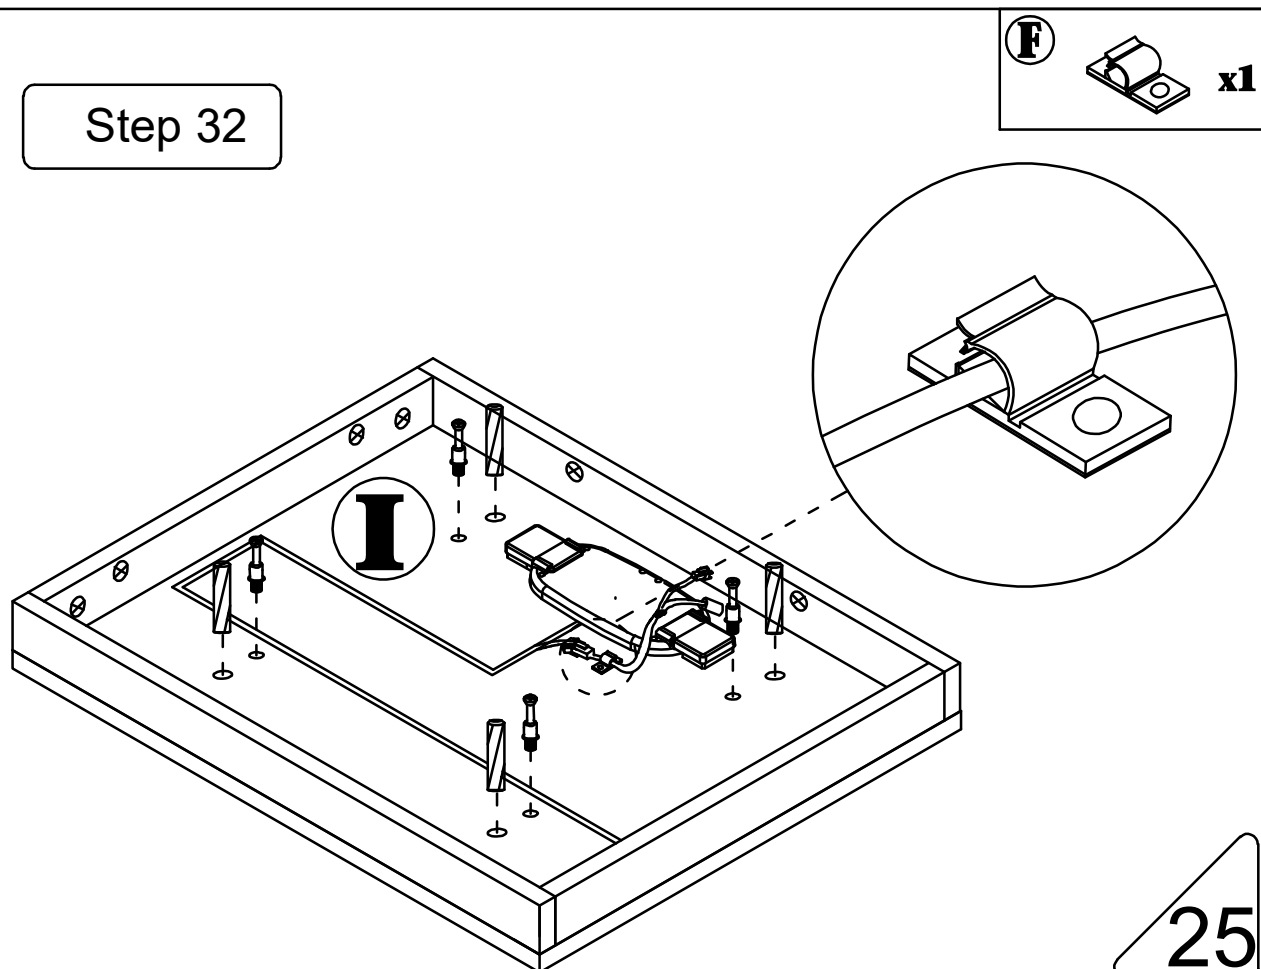


Step 33

2



 x4


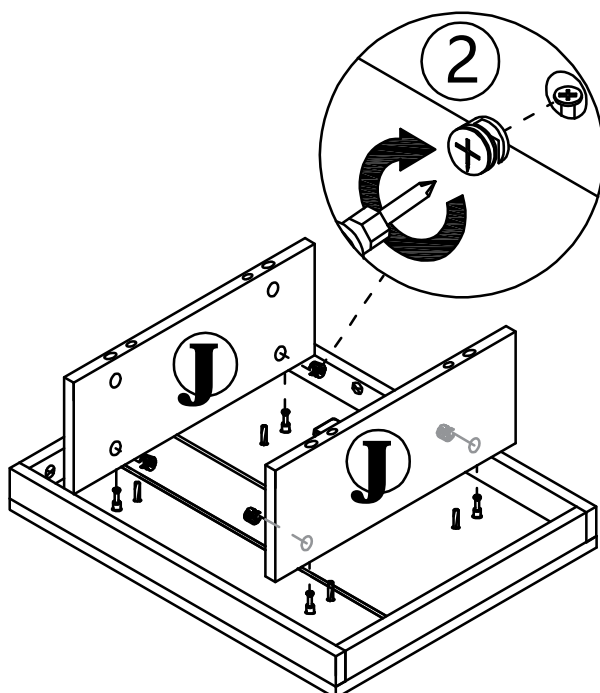


Step 34


2



  x4

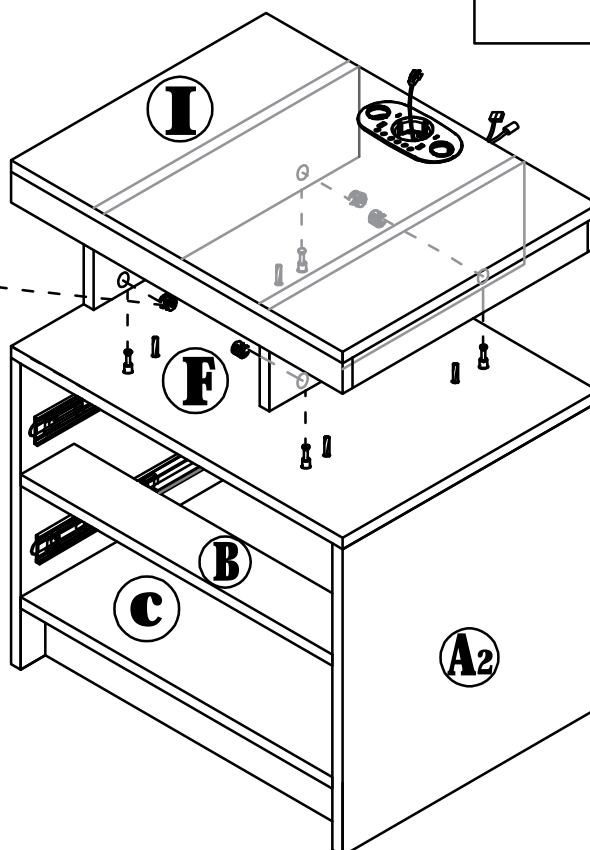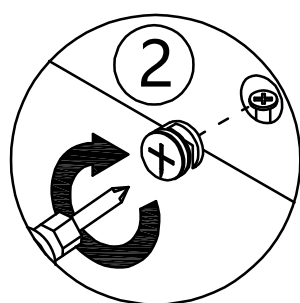


 Step 35

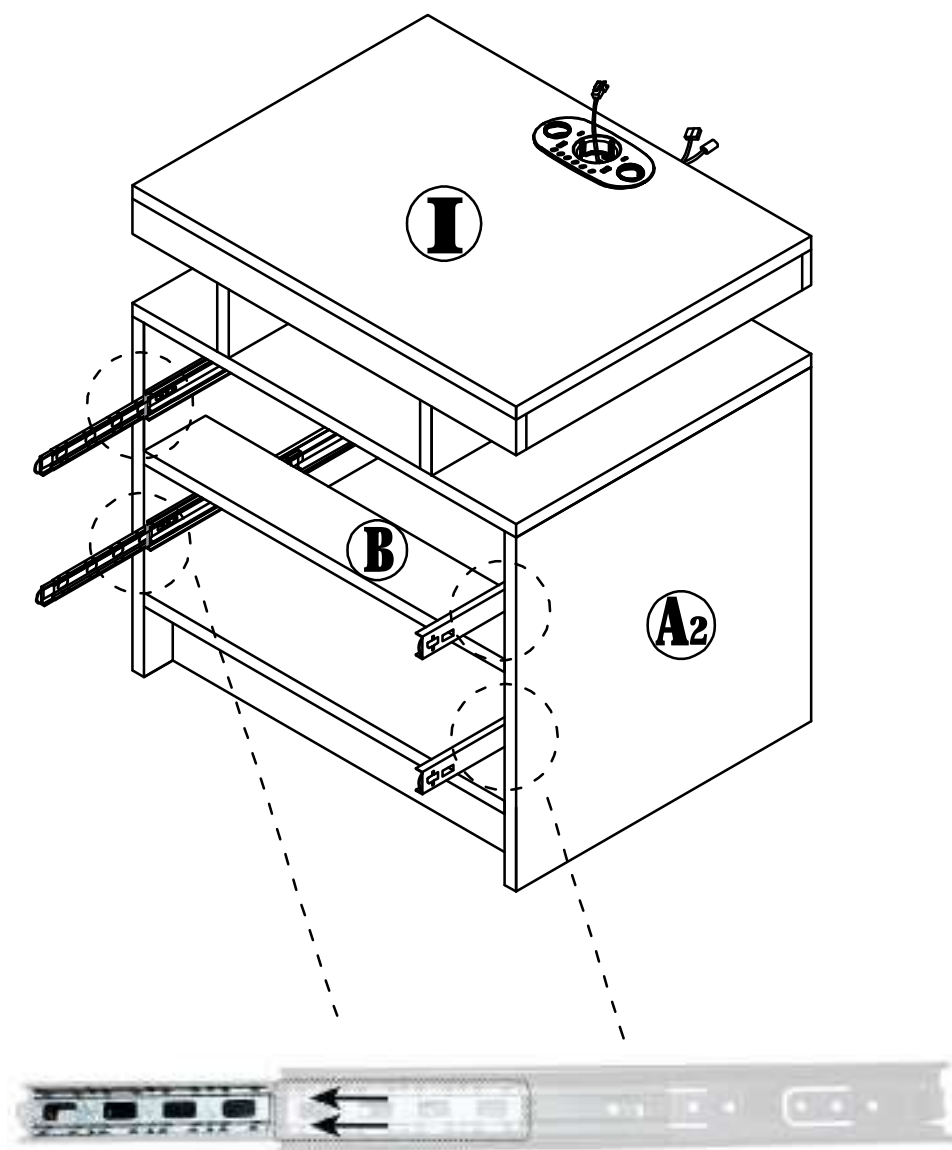





As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

 Step 36

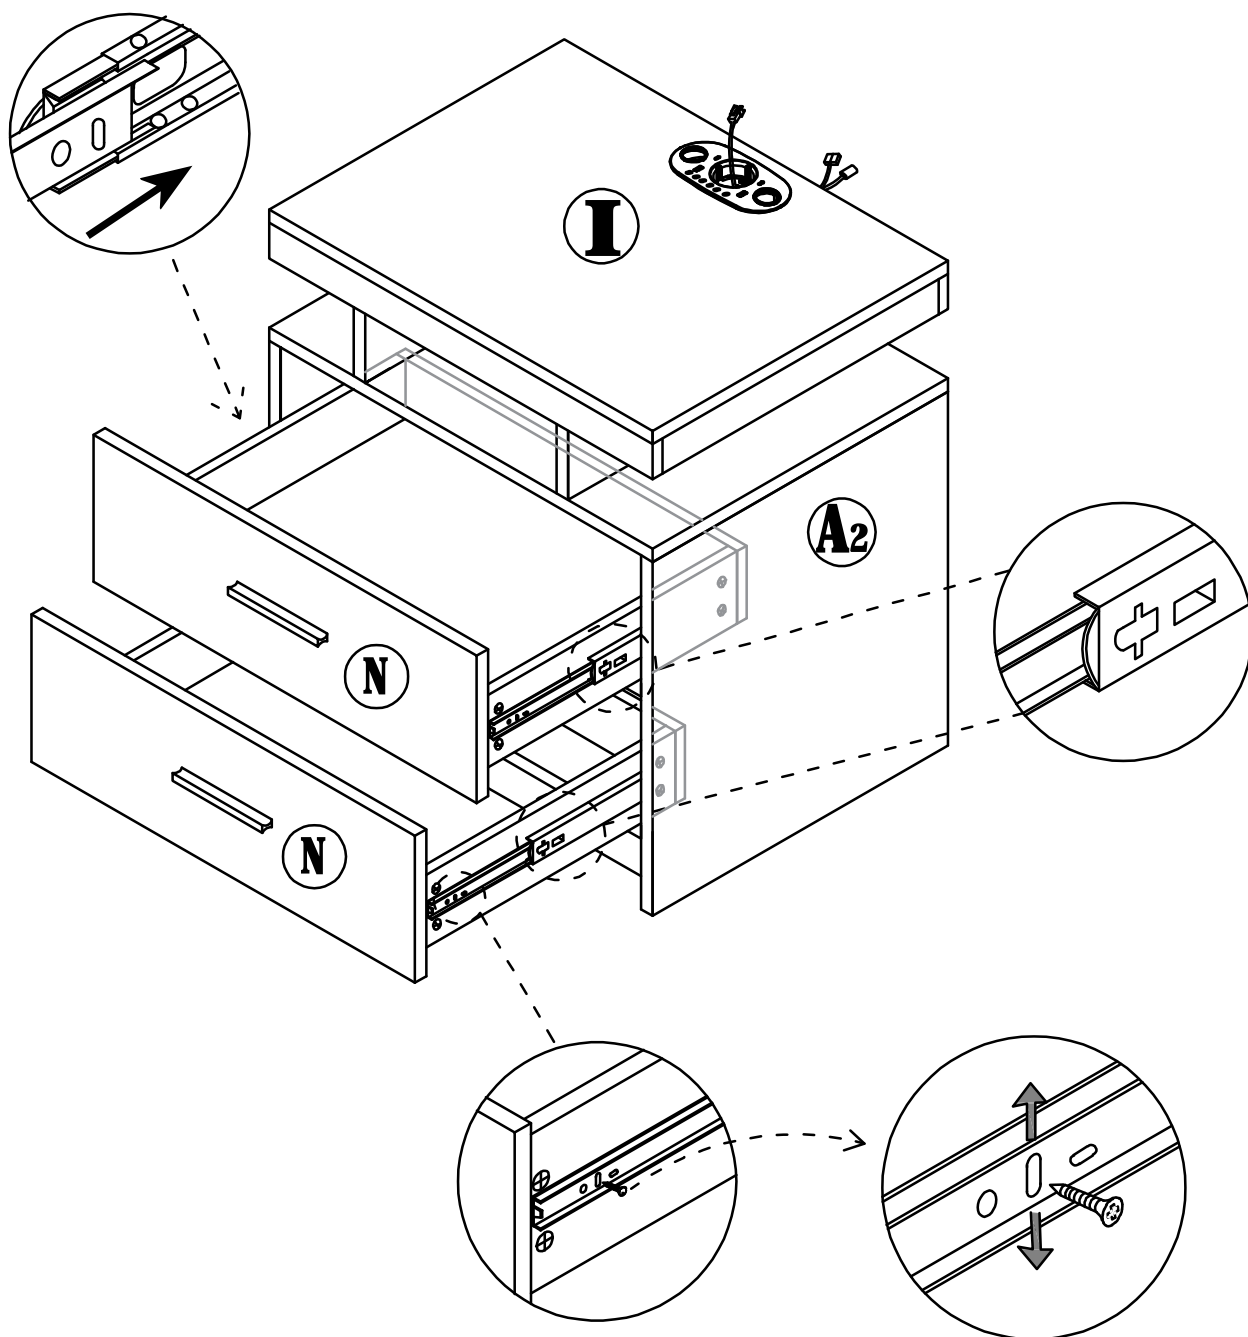

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

    Step 37

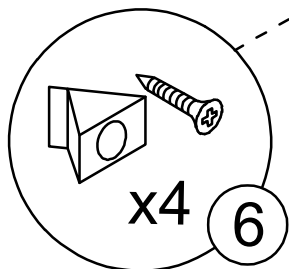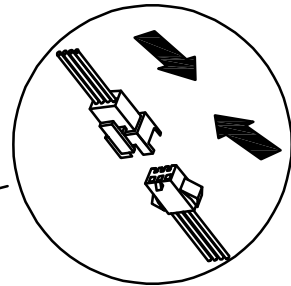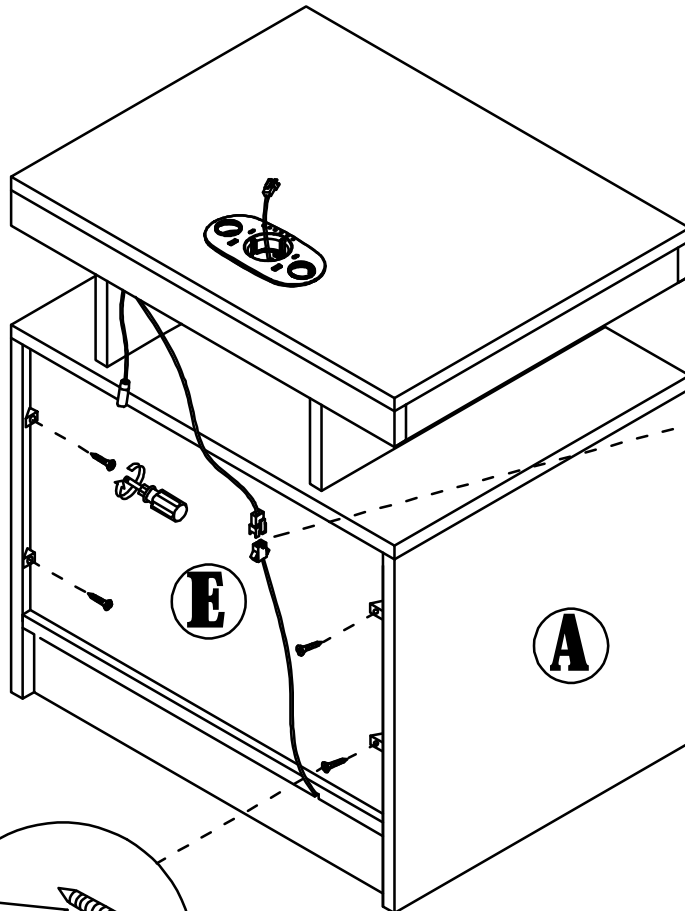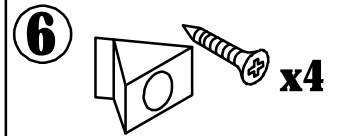


Step 38


7




 
x1

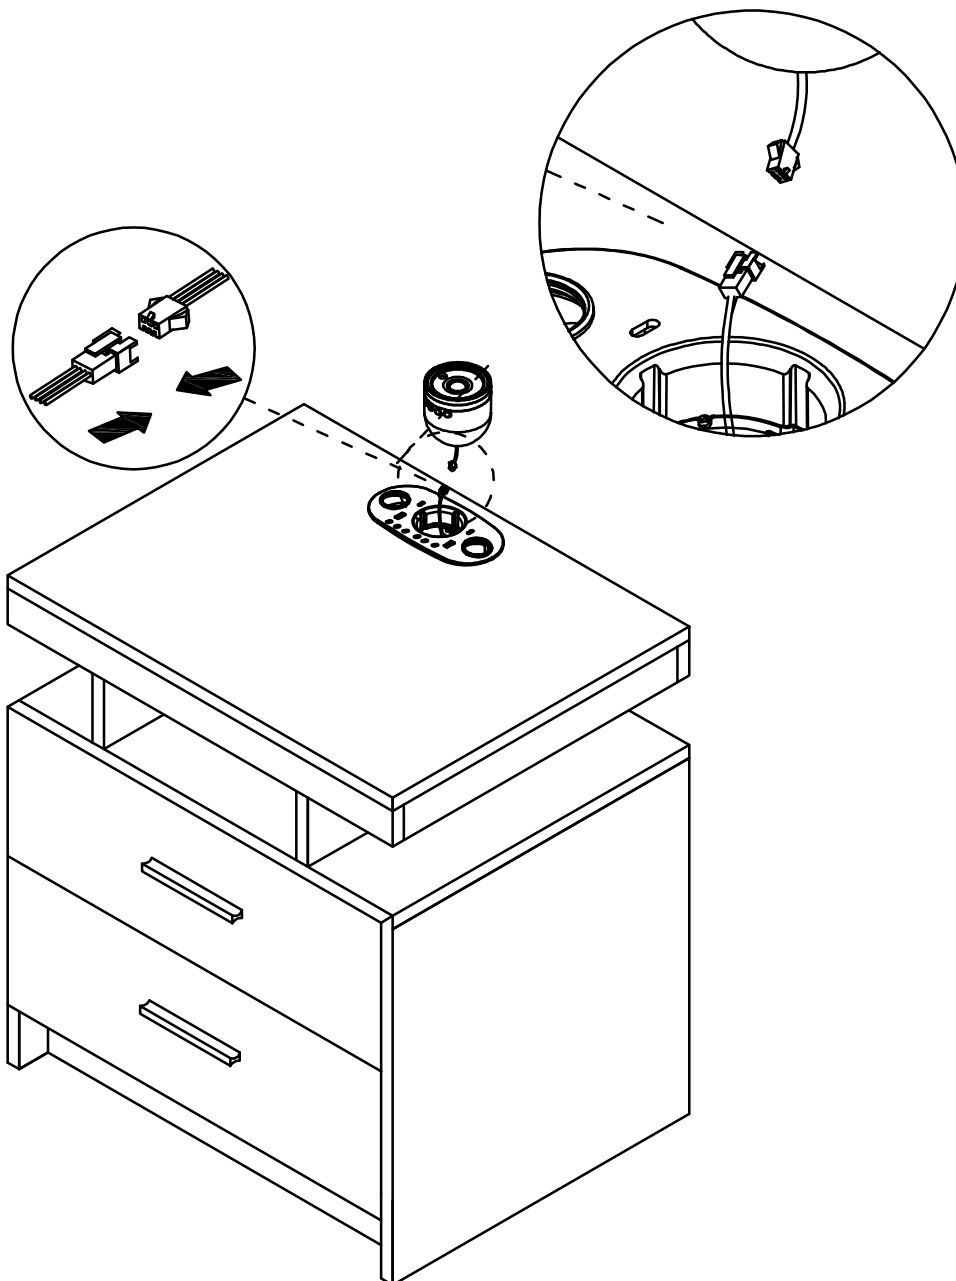

 Step 39

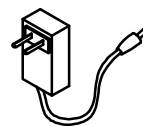

x1

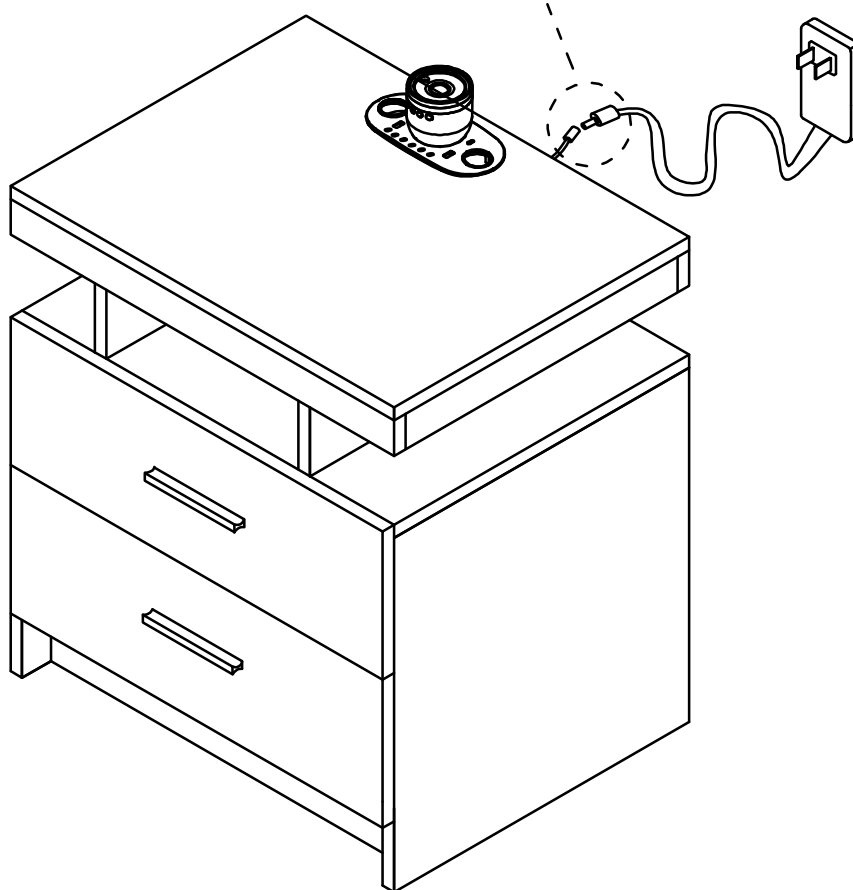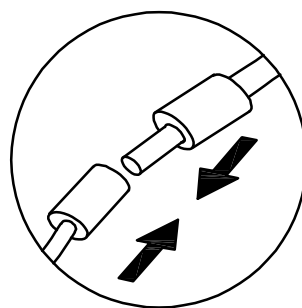  



User's Guide

Thank you for purchasing this product.

To use this product, please connect it to a power source.

Please use if the product works normally after connecting to power.

If bubbles appear on the panel, remove the protective film.

Introduction

The box is an intelligent controller. It has 1 USB port and 1 type-C port and 1 only music, It has 11 buttons for turning the lights on/off and adjusting the brightness, turning the motion sensor on/off, controlling the music.

Operation



This button is for the aurora projection on/off.

Single Click: Turn the aurora projection on/off.



This button turns the star point projection on/off.

Single Click: Star Points on/off.



This button is used for switching between different nebula lighting effects.

Single Click: Switch to different nebula colors.

Long press: Close Nebula.



This button is used to control the nebula speed.

Single Click: Adjusting the Nebula Speed (Slow - Fast - Stop).



This touch button is the on/off switch for the product's light.

Single Click: Turn the light on/off.

Double-click: Change color.

Long press: Adjust brightness.



This touch button is used to turn on/off the induction function.

It can auto-turn on the light when people are close to the controller in 1 meters.

It can auto power off the light when the body is far away from the controller after 30 seconds.

Single Click: Human induction turns on (indicator light on).

Click again: Human induction turns off (indicator light off).



This touch button is the Dynamic Phantom Color Mode.

Single Click: Switch dynamic lighting mode.

This touch button is the switch for audio device.

After long-pressing to power on, (a prompt tone indicates successful power-on) .



your phone will detect a Bluetooth device named "QU3000" ,Simply tap to connect to this device.
Once connected, you can play music from your phone through the device.

Long-press the button to turn off the audio device when not in use.

(a prompt tone will indicate successful shutdown).

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion.
It is recommended to set the volume to around 50% for optimal performance.

Long press: Volume up



Long press: Volume down

Single Click: Previous song



Single Click: Next song



This touch button is used to switch between Bluetooth mode and USB mode.

Single Click: Switch to USB mode.

Click again: Switch to Bluetooth mode.



Only music

This port is only for playing songs from a USB drive and cannot be used for charging.



Close

 


Open

Give away a USB flash drive



Do not shake to prevent wire breakage.

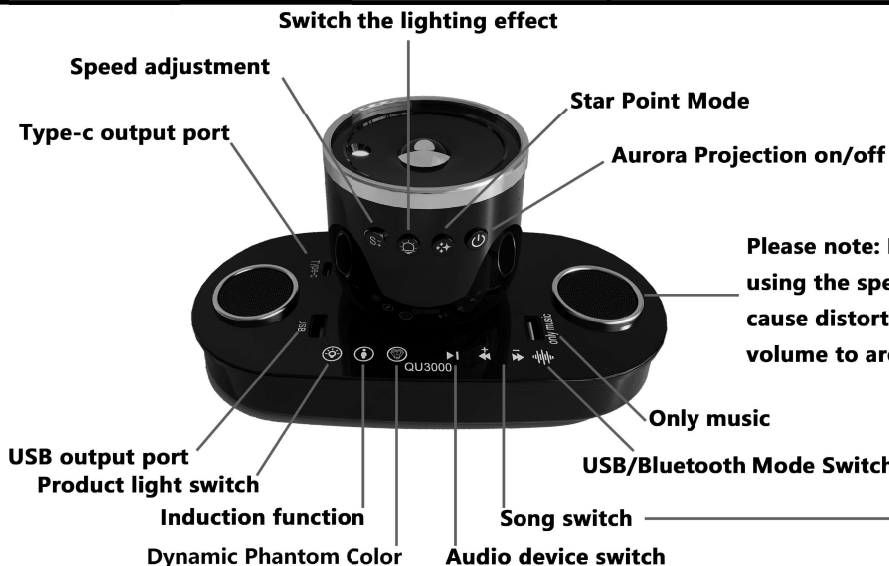

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion. It is recommended to set the volume to around 50% for optimal performance.



ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If you have any questions when installing, please feel free to contact us. Thank you.

Touch button description

 


1. ON/OFF

2.Static Light Mode

3.Dynamic Mode

(Long press to adjust brightness) (Long press to adjust speed)

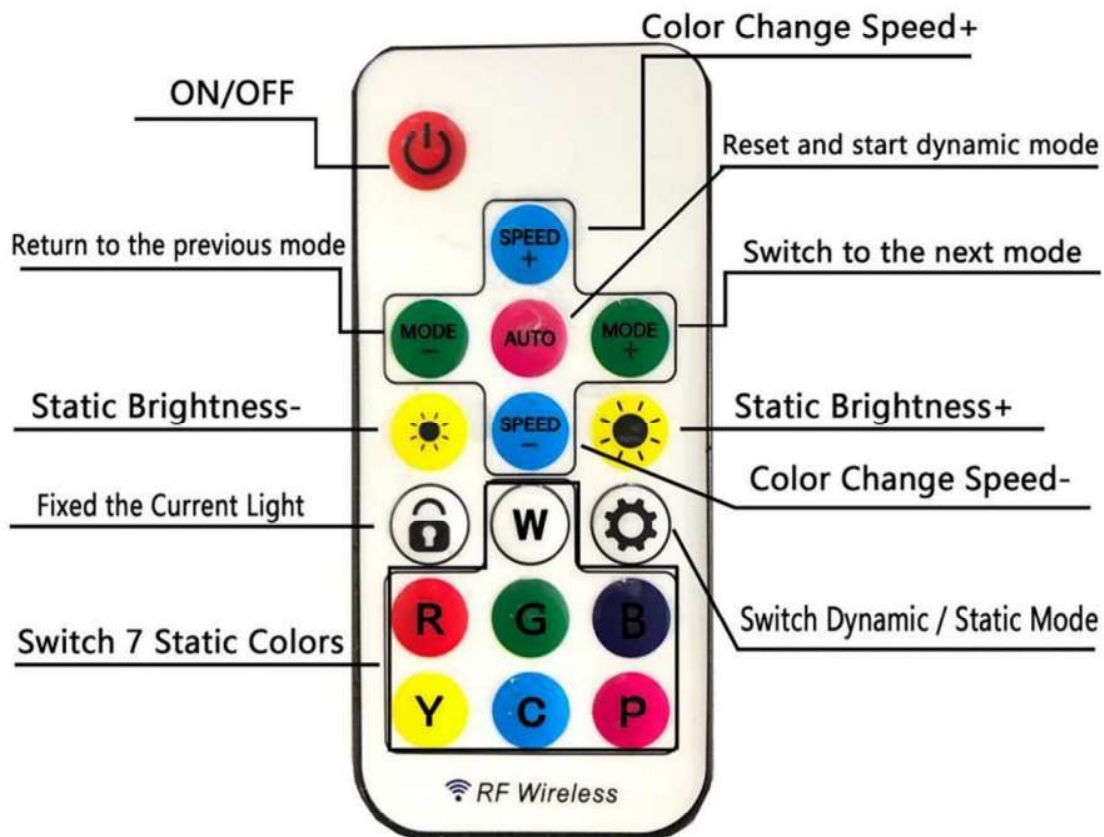


LED Lights Controller-use instructions

Remote Battery: CR2025 3V

How to use the controller?

1. After inserting the DC power adapter, you can use the remote control to control the lamp. Press the "on/Off" button to turn on the light and enter the static light mode. Long press the "on/Off" button to turn off the light.
2. There are 7 RGB Dynamic Modes. You can press the "MODE+/-" key to choose dynamic colors that you preferred and press the "Speed+/-" key to adjust color change speed.
3. There are 7 static colors: White / Red / Green/ Blue / yellow / ice blue/ pink light. You can press the "Brightness +/-" key to adjust the brightness.
4. You can press the "lock" key to fix the color you like. When you press the "Switch Dynamic /Static Mode" key, the light will change between dynamic mode and static mode.

 ATTENTION PLEASE

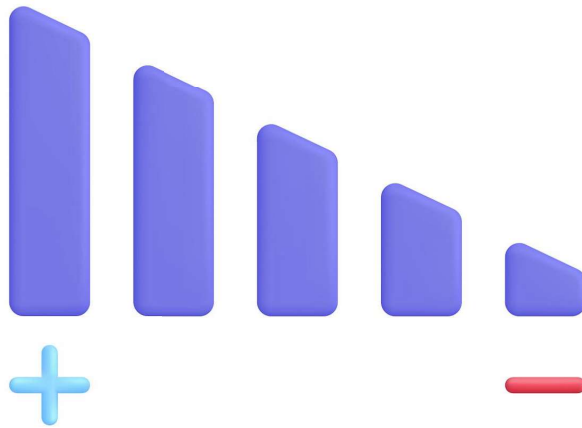

Long press: Volume up   Long press: Volume down
Single Click: Previous song   Single Click: Next song

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion. It is recommended to set the volume to around 50% for optimal performance.