

★ The company reserves the final right to explain the warranty description and scope.

Precautions for safe use

- For safety in use, please read the "User Manual" carefully before use

Description of product advertisements and instructions


- Please understand that some changes to the number of products advertised and included in the manual may occur without prior notice.
- Due to printing, the colors of the products in advertisements and brochures may differ somewhat from the actual products.
- The products listed in advertisements and instructions may be out of stock.
- Please select products with the assistance of the general agent store

Precautions when purchasing goods

- Please confirm the manufacturing number when purchasing.
- When purchasing, please fill in the "Product Warranty Form" and keep it properly.

AUTOMATIC MAHJONG TABLE

an instruction manual

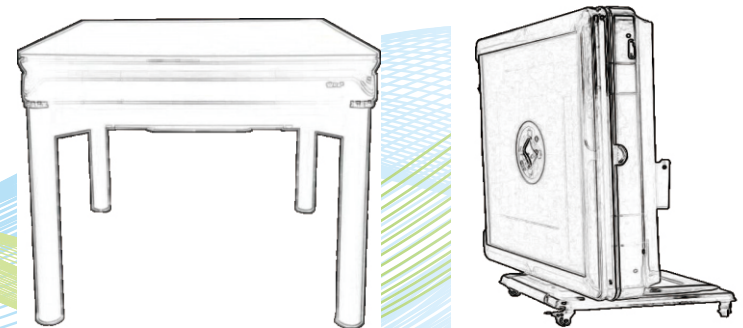

Before using, please read the instructions carefully.
The rated power supply is 100V-120V/60Hz, and use
beyond the range is strictly prohibited!
Use beyond the rated power supply range may cause
equipment damage or safety accidents!

Installation method



<folding model>

1. The column is connected to the bottom leg, and the middle is locked with four 8 * 60 screws. Four universal wheels are screwed into the four corners. Turn the column and chassis upside down and install the column lock on both sides of the column using 8 4 * 10 screws.



2. Please turn the main box upside down, disassemble it from the bottom, and remove the bottom foam: remove two screws (four in total) on the left and right sides of the electrical box (pay attention to the direction, and ensure that the feet do not block the power switch): tighten the left and right folding brackets with 5 * 30 screws (four in total), turn the column and feet upside down on the main machine, tighten the shaft fixing plate with four 5 * 8 screws, and install the anti-collision washer with 5 * 8 screws (two in total). Lock the column lock.



3. Unscrew eight 4 * 16 screws from the small pillar of the host for standby. Take out the frame and fix the USB connector to the dedicated position of the four frames with 3 * 10 screws, and then fix it to the host with the 4 * 16 screws that have just been unscrewed. Cut off two rolling strips, insert the four strips tightly together, and press them tightly by hand in the gap between the frame and the host.



Game Scheme Digital Gear Table

Gear	east	south	West	north	total	Gear	east	south	West	north	total
00						20	13	13	13	13	104
01	9	0	0	0	18	21	17	17	17	0	102
02	20	20	20	20	160	22	13	13	13	12	102
03	19	18	19	19	152	23	13	12	13	12	100
04	19	18	19	18	148	24	16	16	16	0	96
05	18	18	18	18	144	25	12	12	12	12	96
06	18	18	18	17	142	26	12	11	12	11	92
07	18	17	18	17	140	27	11	11	11	11	68
08	18	17	17	17	138	28	14	14	14	0	84
09	17	17	17	17	136	29	12	10	10	10	84
10	17	16	17	16	132	30	11	10	11	10	84
11	16	16	16	16	128	31	10	10	10	10	80
12	16	16	16	15	126	32	12	12	12	0	72
13	16	15	16	15	124	33	9	9	9	9	72
14	15	15	15	15	120	34	9	9	9	0	54
15	15	14	15	14	116	35	10	0	10	0	40
16	14	14	14	14	112	36	18	0	0	0	36
17	14	14	14	13	110	37	9	0	9	0	36
18	18	18	18	0	108	38	16	0	0	0	32
19	14	13	14	13	108	39	17	17	17	17.5	137

usage method



(1) (2) Lift key (3) (4) (5) (6) Dice key (7) Mechanical dice Electronic dices witch key (8) Shuffle indicator light (9) Reset light (10) Reset light (11) Lianzhuang/Play method/Fault/Test display light (12) Card count/second count display light (13) Mechanical dice (14) Electronic dice

1. Ensure that the machine power switch is turned off and plug the power plug into a well grounded socket.

2. This machine has a power-off memory function. Before the new machine is transported, the mahjong tiles plate has been lowered to a low position, and there is no mahjong tiles plate in the machine. Turn on the power switch, the machine continues to operate, and the mahjong tiles strip automatically rises to a high position. At this time, the machine is in a lack of tiles state.

3. Press the two lifting and lowering keys at the same time, and the center operation panel will rise, pouring the first mahjong tile into the shuffle circle.

A. The number of mahjong tiles poured should be consistent with the number shown in the current gear. It is prohibited to have more or fewer tiles.

B. Except for the special mahjong tiles provided with the machine, no other mahjong tiles shall be used, and no other debris shall be placed in the shuffle circle.

4. Press any of the lift keys again, the operating panel will descend, and the machine will begin to shuffle.

5. The indicator light to be reset turns red, indicating that the machine has completed tile management. At this time, press any of the lift keys, the operating panel rises, and the second mahjong card of the same number is put into play.

6. Press any of the lift keys again, and the operating panel will descend. The mahjong tiles put in for the first time will be raised to the desktop, and the mahjong tiles put in for the second time will be shuffled in the machine.

7. "At this point, you can start the game. Press the dice button, and the dice will jump randomly. Release the dice button, and the dice will naturally stop."

8. Follow steps 5-7 to cycle through the game tile.

9. After the game is over, store 2 sets of mahjong tiles into the machine, turn off the power, unplug the power plug, and cover with a cloth

Function operation

1. Long press the electronic/mechanical dice key to switch between electronic/mechanical dice

2. Long press and hold the combination of (3)+(5) or (4)+(6) dice keys to force the machine to reset.

3. Switch the play gear:

A. Method 1: A few seconds before starting the game, the play mode light will twinkle during operating the panel. Select the play mode before the light stops.

B. Method 2: In the game, long press and hold the (3)+(4) or (4)+(5) or (5)+(6) or (6)+(3) combined dice key to enter the play switching state. Use the up and down key to switch the play mode. and confirm with any dice key.

C. Note: After the switching of playing methods, the playing method and number of cards in this (unfinished) or last (finished) card management have not been changed. The playing method will not be changed until the next card management is completed again. You can use the method of raising mahjong after a forced reset to give up the previous card management in advance.

D. For mode playing, please refer to Page 2.

4. Automatic tile concealment: After the first deck of tiles has been processed, press the lift button to raise the operation panel, and then put the second deck of tiles into the machine. Using the forced reset function, the operation panel is lowered, and both sets of mahjong tiles are hidden in the machine.

5. Test status: When playing with mode 0, the machine is in a test state, which can test the functions of motors, sensors, and mechanisms. The test display lamp displays the test mode, the lift key switches the test mode, and the dice key performs the test function.

Precautions for use

1. Do not put your hands inside the large plate to avoid scratching your fingers.

2. When the mahjong machine is working, do not lift the lift the desktop to avoid unnecessary injury.

3. When powered on, do not reach into any part of the machine to avoid injury to the body due to electric shock or sudden movement of the mechanism.

4. Do not let children play hard mahjong cards to avoid injury or ingestion.

5. This mahjong machine is only for healthy game entertainment and should not be used for gambling.

Solemnly stated: For game entertainment only, never for gambling.

Warranty Description

Our company solemnly promises that with the warranty card and invoice, you can receive high-quality after-sales service.

1. From the date of purchase, the complete machine is guaranteed free of charge for one year.
2. The following situations are not covered by the free warranty service:

To extend the service life of the machine, please perform regular maintenance work.

1. Do not place the mahjong machine in a hot sun or a place susceptible to wind, frost, rain, snow, or dust, to avoid affecting performance and shortening life.

2. When placing, the desktop should be parallel to the ground and should not be excessively tilted.

3. Keep the desktop clean and clean.

4. Do not scratch the tabletop flannelette.

5. Prevent liquid from flowing into the mahjong machine to avoid damaging the machine.

6. Prevent violent collisions and do not strike the machine with force to avoid damaging the machine.

7. Clean mahjong tiles normally to keep them dry, smooth, and clean.

8. Do not put debris into the large plate to avoid falling under the plate and damaging the rotating structure.

9. Regularly invite professional maintenance personnel to inspect the internal wiring and use tools to clean the dust accumulated on the surface area of the counting sensor. (Users should not handle it on their own to avoid injury.)

Routine maintenance

A. The user is damaged due to improper transportation, loading and unloading, use, and storage.

B. Damage caused by user disassembly or disassembly not at the repair point designated by the company.

C. Altering invoices or without purchase invoices and warranty cards.

D. Damage caused by external reasons such as abnormal voltage, water (fire), etc.

E. Damage caused by force majeure or man-made factors.

F. Vulnerable parts are not covered by the warranty, such as mahjong tiles, outer frames, tabletop cloth, dice glass, etc.

3. If the warranty period expires or is not covered by the free warranty, our company will still wholeheartedly provide you with services. The warranty period starts from the sales date. Please keep the warranty card and purchase invoice properly.

Product Warranty Card

Product Name	Automatic mahjong machine	Product model	
Product Number		Purchase Date	
Customer Name		Customer Contact Information	