





Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS


Part List

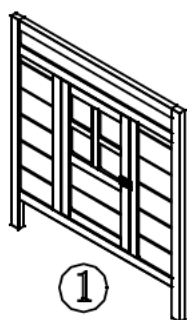


①

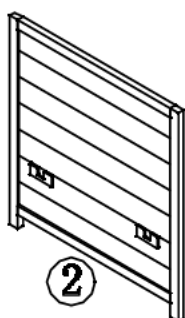


②

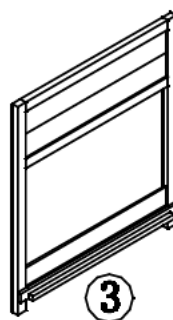


③

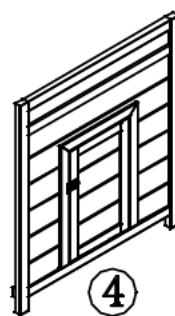


④

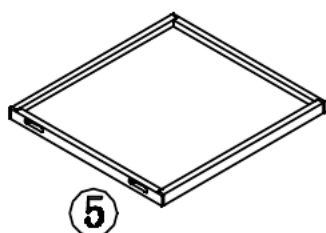


⑤

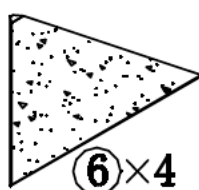


⑥×4

 


⑦×4

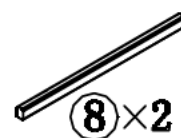


⑧×2

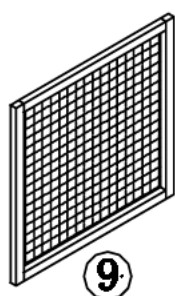


⑨

 


⑩

 


⑪

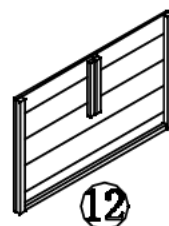

⑫

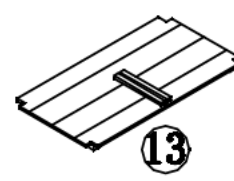


⑬

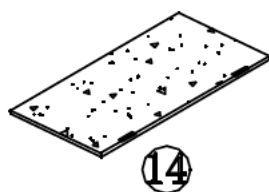


⑭




⑮

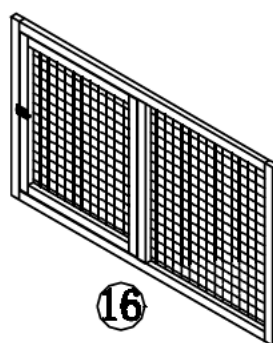

⑯

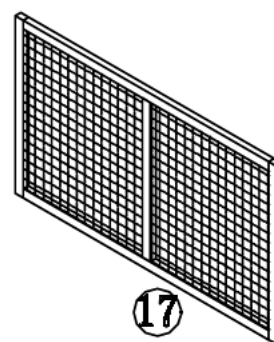

⑰

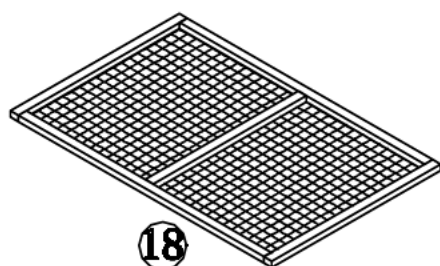

⑱



⑲



⑳


	A	M6*45	4PCS
	B	M3.5*50	6PCS
	C	M3.5*45	1PC
	D	M3.5*40	24PCS
	E	M3.5*35	4PCS
	F	M3.5*25	24PCS
	G	M3.0*16	4PCS

Assembly Instructions


F M3.5*25 24PCS

C M3.5*45 1PC

E M3.5*35 4PCS

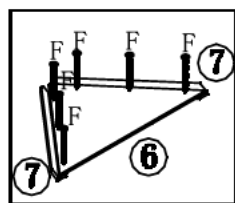


×2

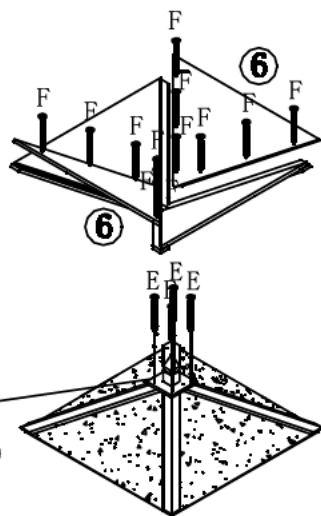


STEP 1

D M3.5*40 8PCS

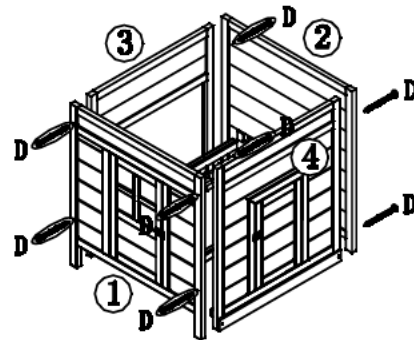


STEP 2

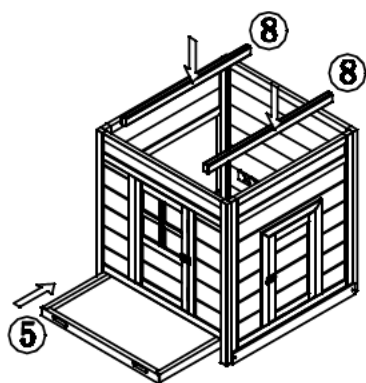

STEP 3


A M6*45 4PCS

D M3.5*40 4PCS

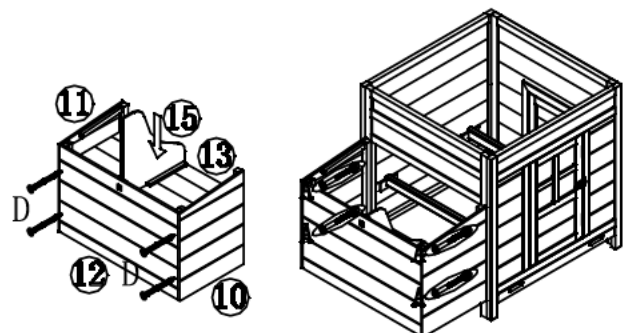


STEP 4

G M3.0*16 4PCS

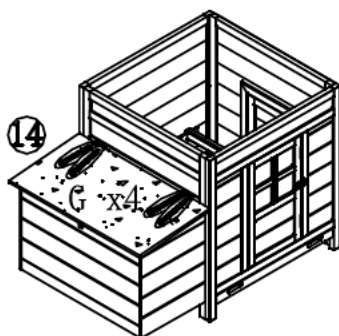

STEP 5

D M3.5*40 4PCS

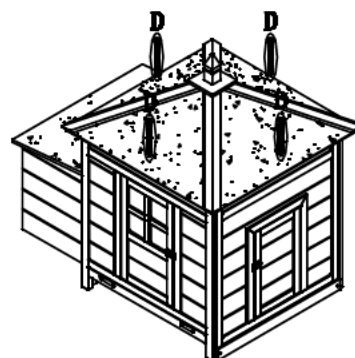


STEP 6

Assembly Instructions


B M3. 5*50 6PCS

D M3. 5*40 4PCS

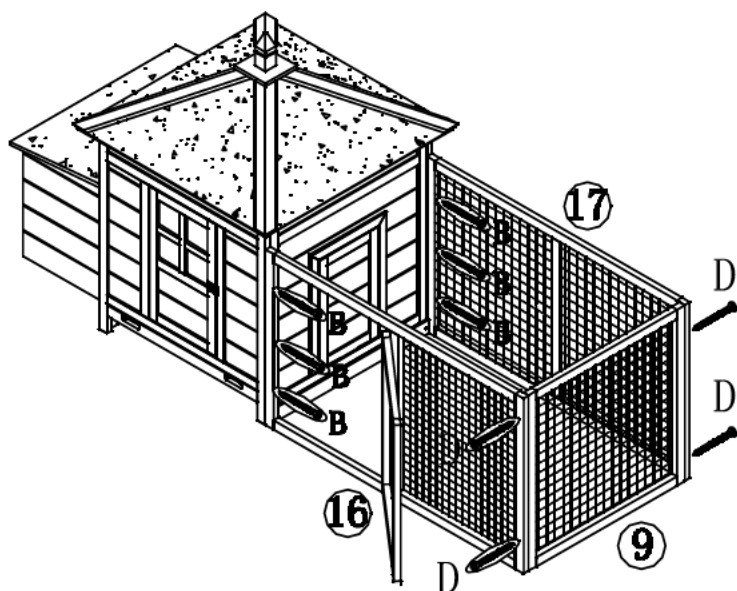

STEP 7

D M3. 5*40 4PCS

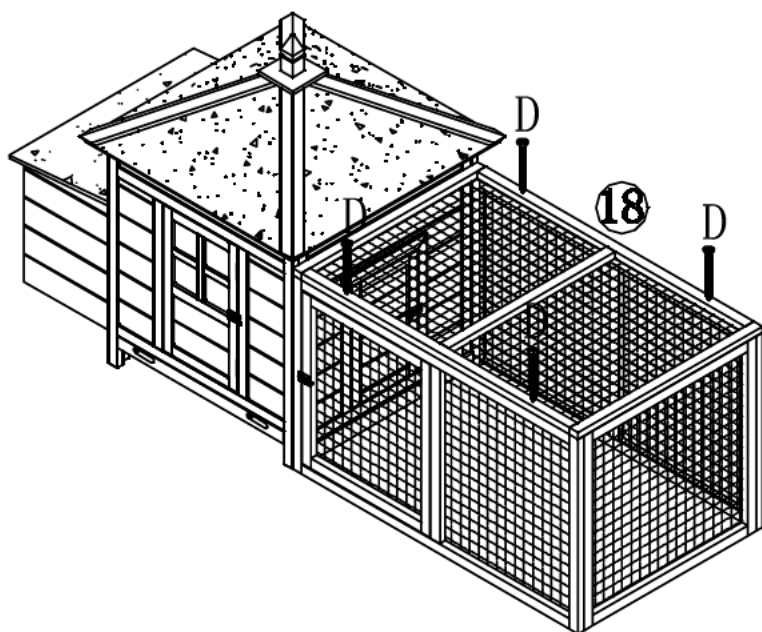

STEP 8