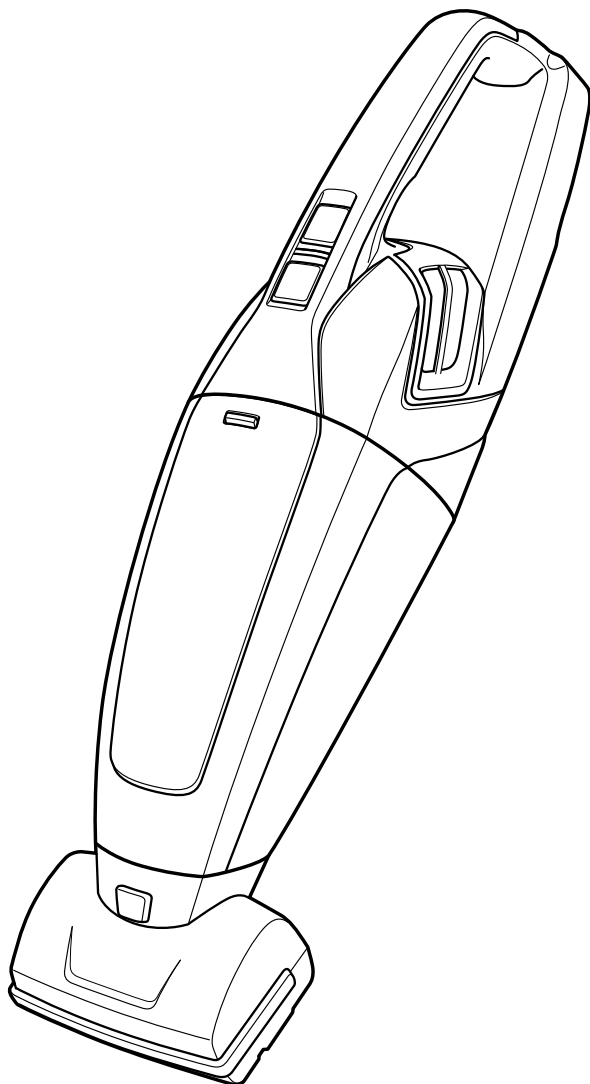




PET HAIR ERASER® LITHIUM ION
BATTERY REMOVAL INSTRUCTIONS
2390 SERIES

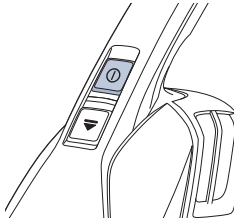
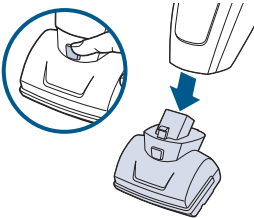
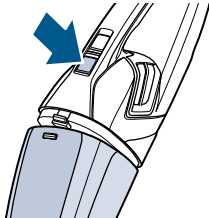
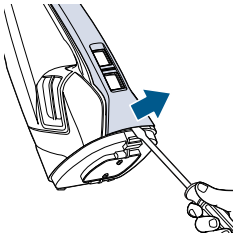
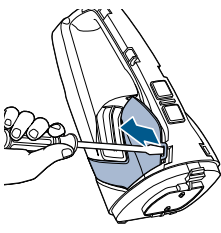
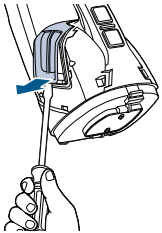
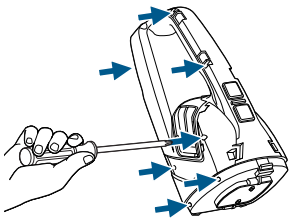
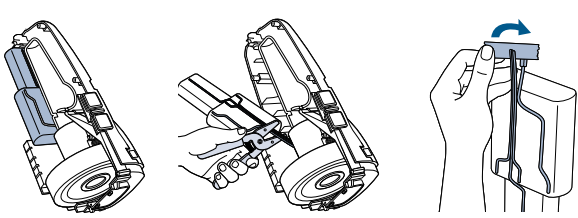


Disposing of the Battery

Go to support.BISSELL.com for resources on battery disposal.

Before disposing the battery, make sure:

- The machine is OFF and disconnected from the charger.
- The dirt tank and motorized brush are removed from the machine.
- A Phillips-head screwdriver, flathead screwdriver, electrical tape, and rubber handled wire cutters are available for disassembly.

		
<p>1. Power OFF and unplug from charger.</p>	<p>2. Detach motorized brush by pressing button on top of brush and pulling brush out.</p>	<p>3. Remove dirt tank by holding vacuum vertically and pressing dirt tank release button.</p>
		
<p>4. Use a flathead screwdriver to pry off top cover of handle.</p>	<p>5. Use a flathead screwdriver to pry off left and right panels.</p>	<p>6. Use a flathead screwdriver to remove plastic vent cover.</p>
		
<p>7. Use a Phillips-head screwdriver to remove (7) screws.</p>	<p>8. Disconnect and remove entire battery assembly by cutting wires from PCB and wrapping wire ends with insulation tape. Discard remainder of product.</p>	

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.

⚠ WARNING This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org.



©2022 BISSELL Inc. All rights reserved.
Part Number 1634055 09/22