

BUYING TIPS

By SinCiDo Customer Team



If you have any questions below, please feel free to contact us. We will respond within 24 hours.



Attention
our product comes with TWO PACKAGES with TWO TRACKINGS
may NOT be delivered at the same time.



ANY DAMAGE



READ INSTRUCTIONS
CAREFULLY



MISS SOME PARTS

 


OTHER QUESTIONS

GENERAL INFORMATION, TIPS AND TRICKS

1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening bolts.
7. Make sure all screws and bolts are tightly fastened before the unit is used.

MAXIMUM RECOMMENDED WEIGHT LOADS

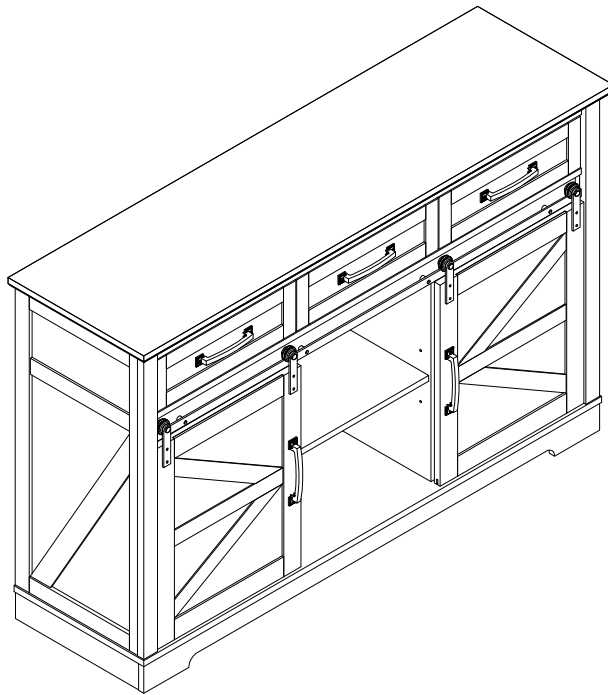


THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN THE CENTER OF THE UNIT; THE BASE OF THE TELEVISION MUST BE ABLE TO REST ON THE SUPPORTING SURFACE OF THE UNIT WITHOUT OVER-HANGING THE EDGES. IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS INCLUDING OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY.

IMPORTANT


Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.

 Insert Dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

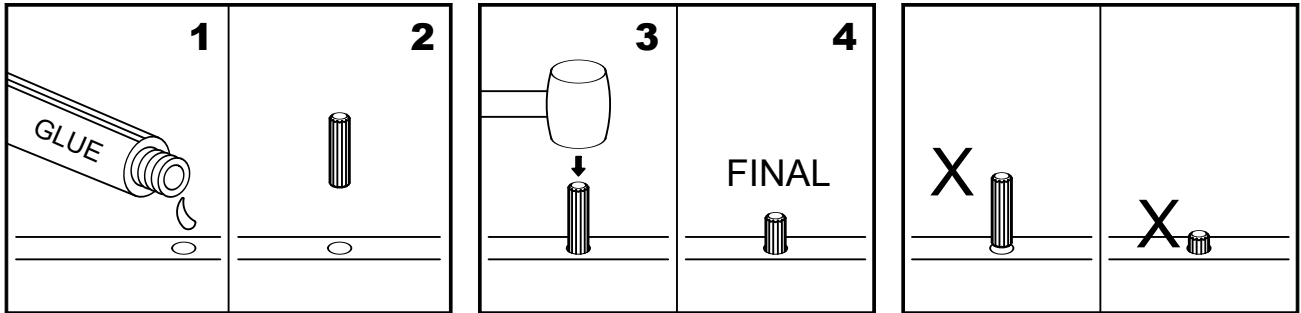


CAM LOCK SYSTEM OPERATION

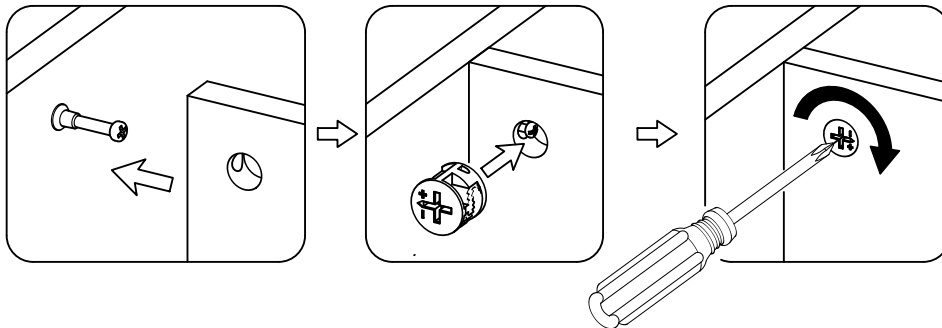 

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.

 BOARD IDENTIFICATION

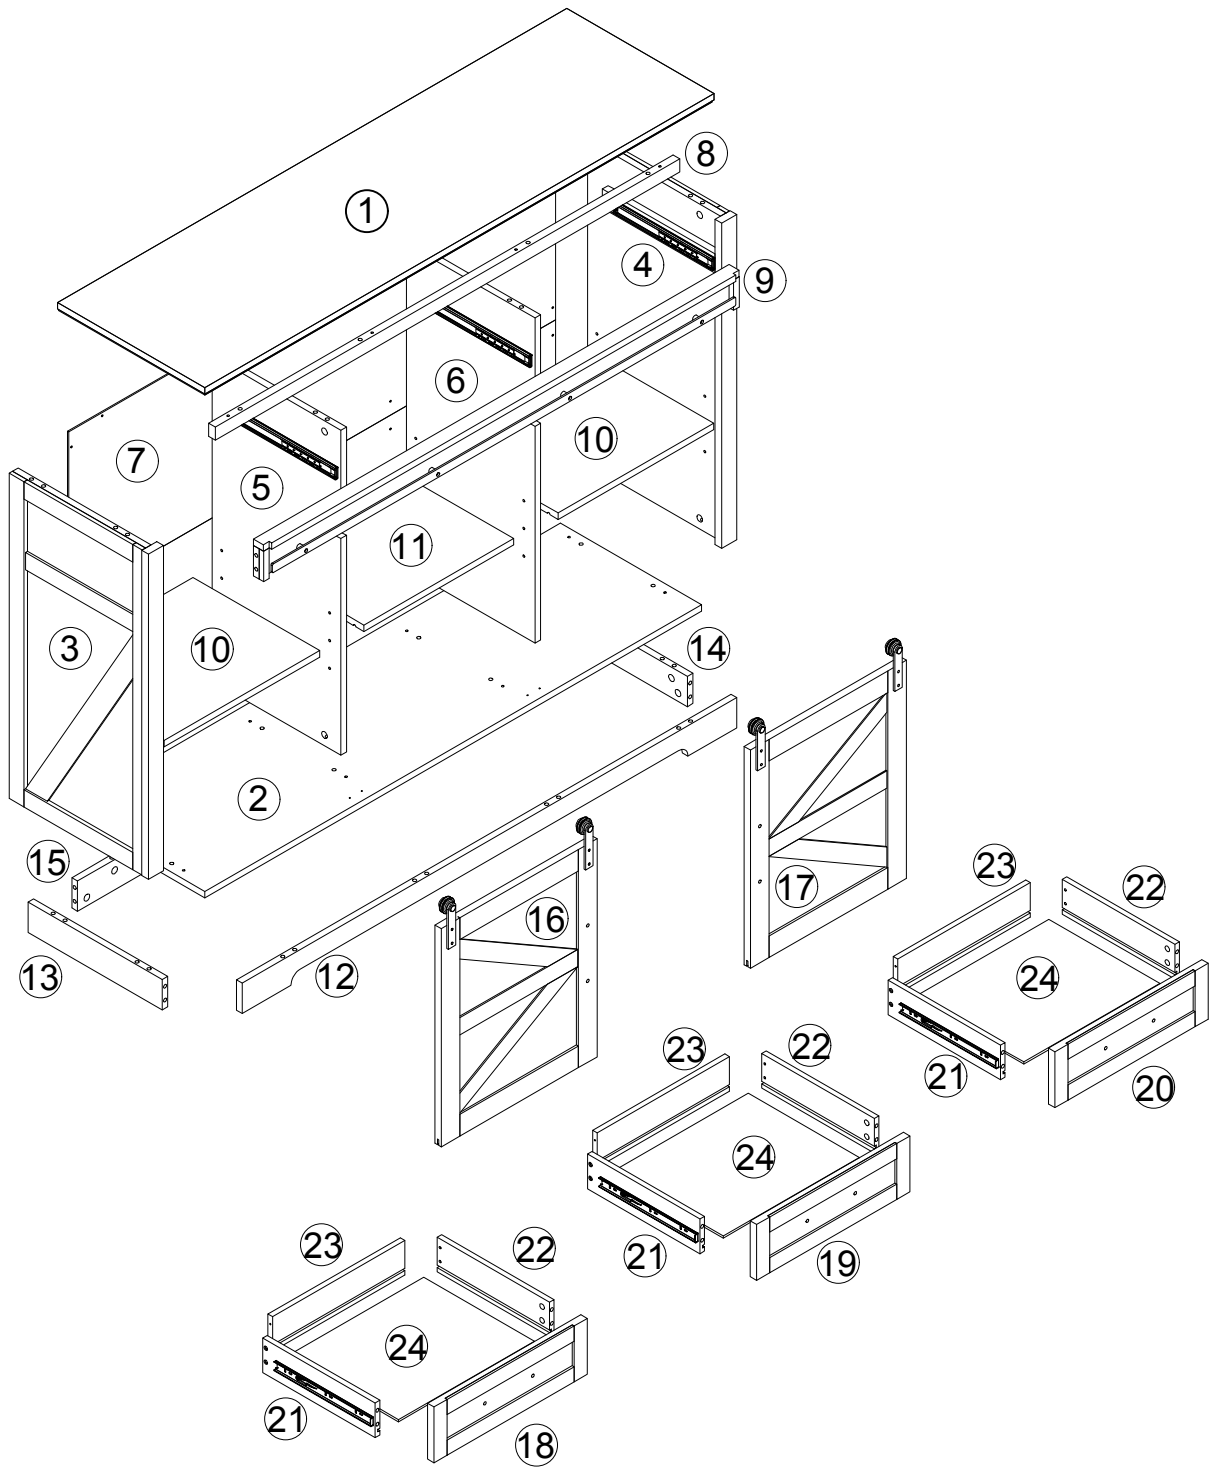

HARDWARE IDENTIFICATION

A		GLUE	1 PC
B		WOODEN DOWEL Ø8 x 30mm	38 PCS
C		CAM LOCK Ø15 x 12mm	34 PCS
D		CAM BOLT Ø7 x 34mm	34 PCS
E		SMALL CAM LOCK Ø14 x 11mm	12 PCS
F		SMALL CAM BOLT Ø6 x 29mm	12 PCS
G		WASHER HEAD SCREW 3.5x16x8mm	36 PCS
H		SHELF SUPPORT	12 PCS
I		FLAT HEAD SCREW 4x40x8mm	4 PCS
J		FLAT HEAD SCREW 4x30x8mm	12 PCS
K		HANDLE	5 PCS

HARDWARE IDENTIFICATION

L



MACHINE SCREW 4x20x8mm

4 PCS

M



MACHINE SCREW 4x12x8mm

6 PCS

N



L-SHAPED METAL BRACKET

2 PCS

O



DOOR SLIDING GUIDER

2 PCS





 
P



FLAT HEAD SCREW 3.5x12x8mm

8 PCS

WALL MOUNTING KIT

	Meta	4
	Steel cable	2
	Short screw Ø4*20mm	2
	Long screw Ø4*38mm	2
	Drywall anchor	2

1

 
 
 
 
 
D

2 x



B


10 x

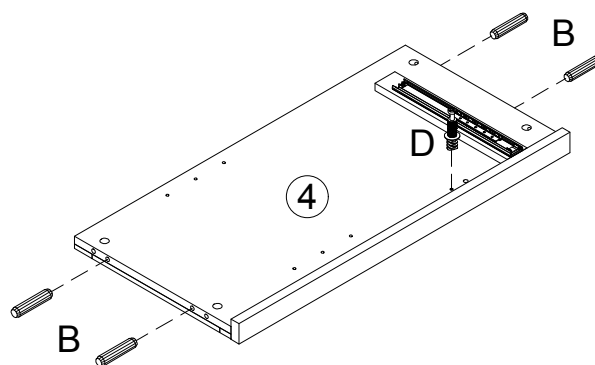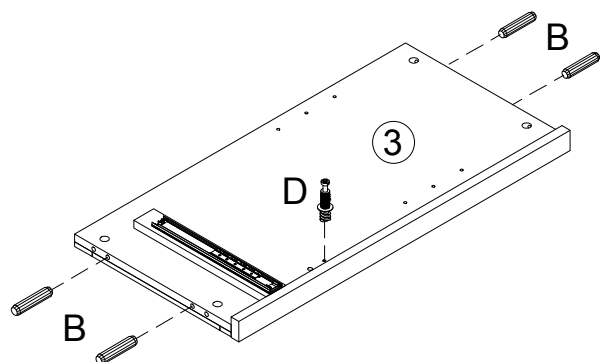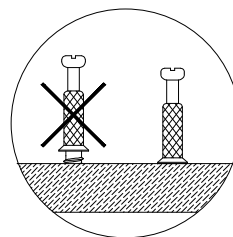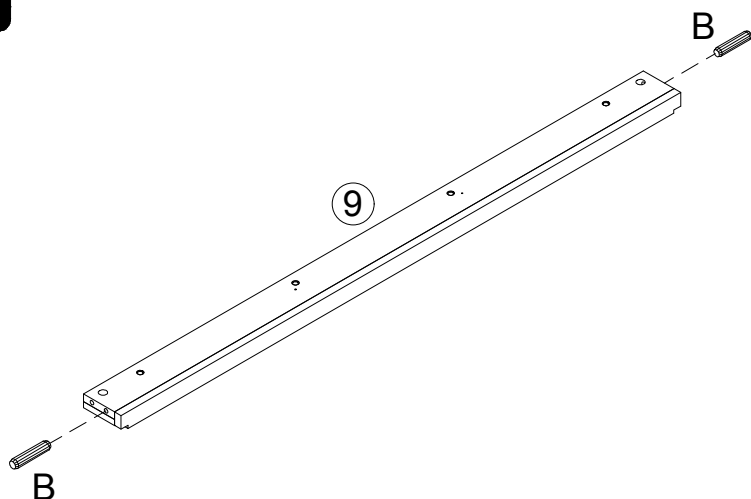

2

C



 
2 x

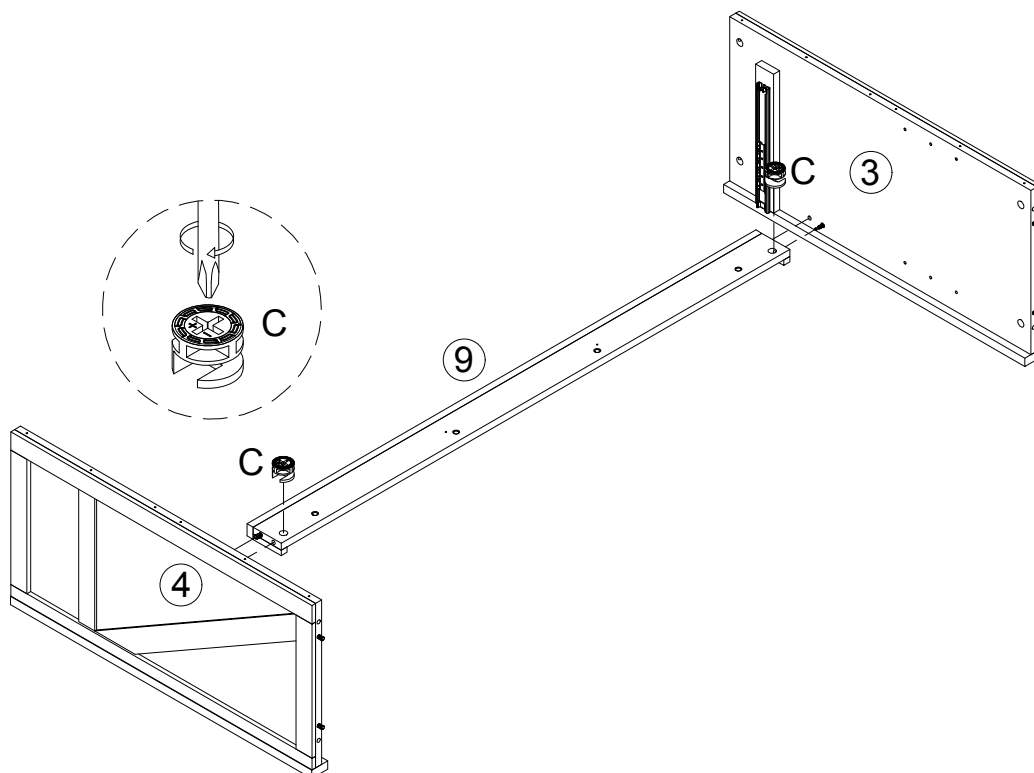

3

B

   8 x

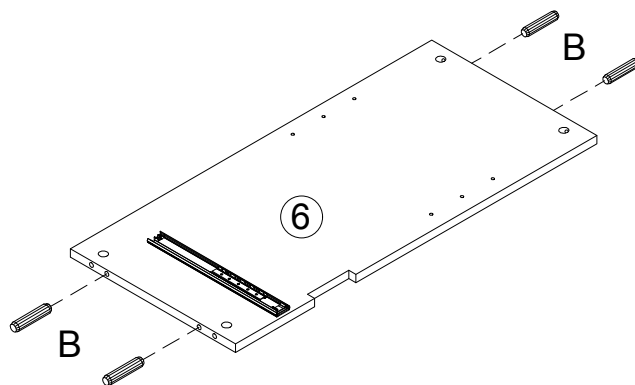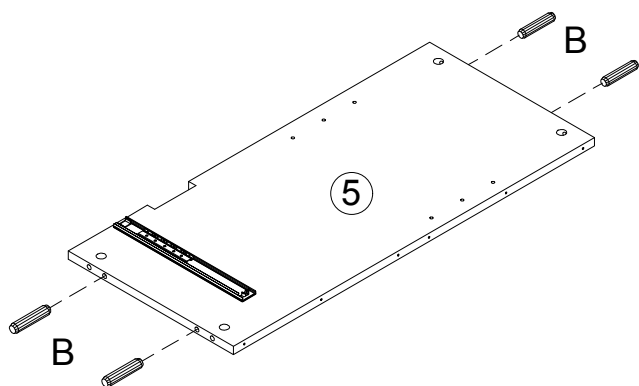

4

 
N

2 x



P

4 x

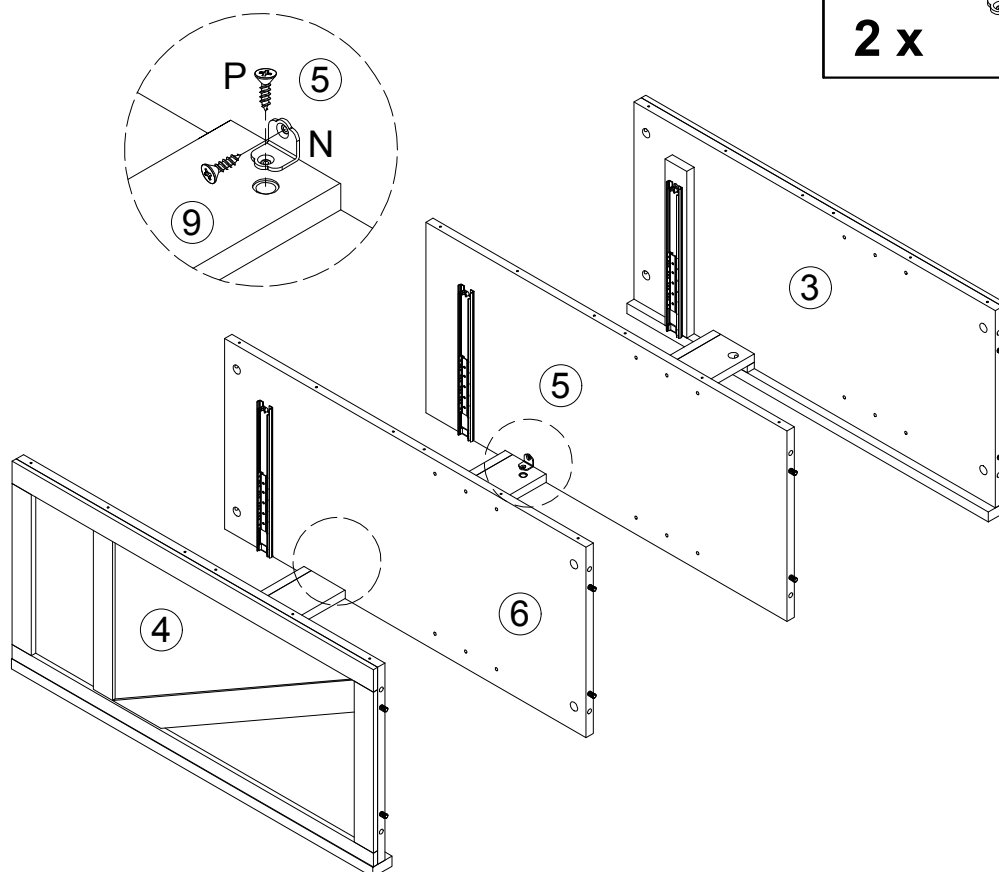

5

P

4 x



 
 
O

2 x




D

20 x

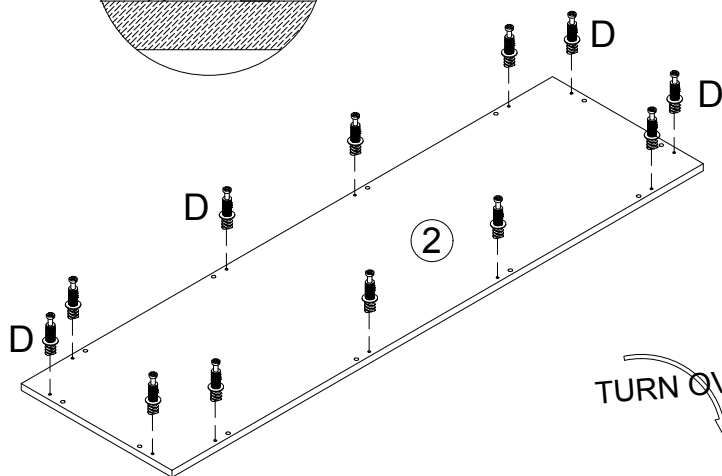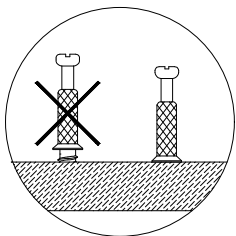


TURN OVER

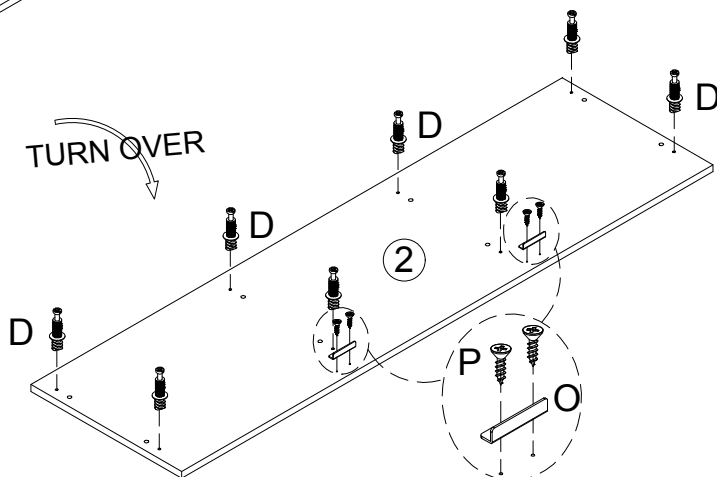 

6

C

 8 x

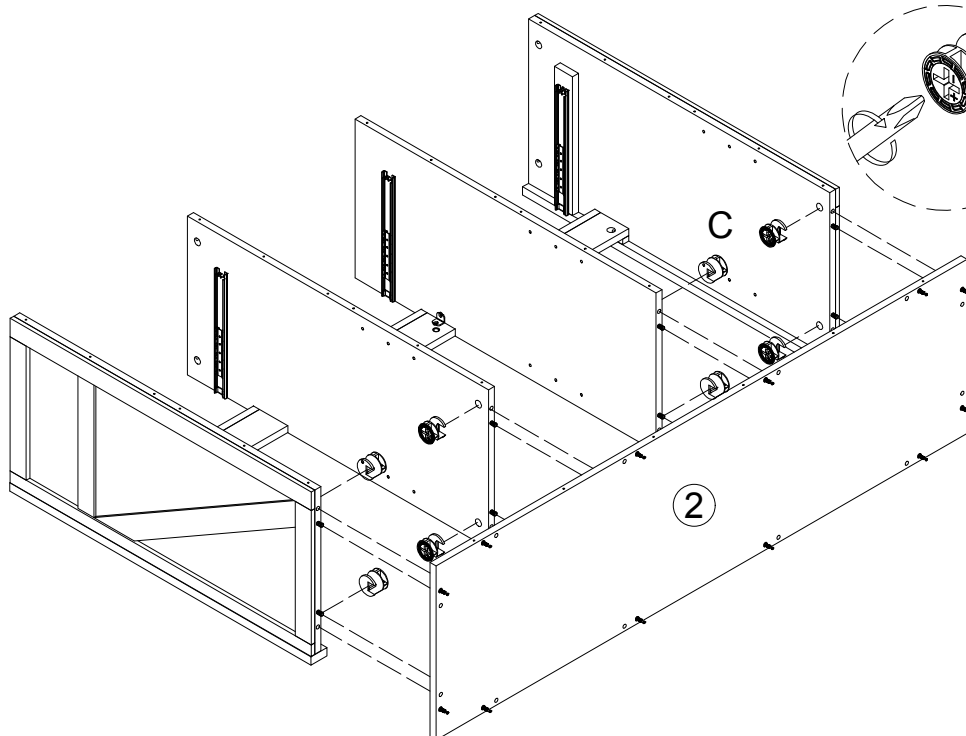

7

 
 
 
 
 
 
D

4 x



B


16 x

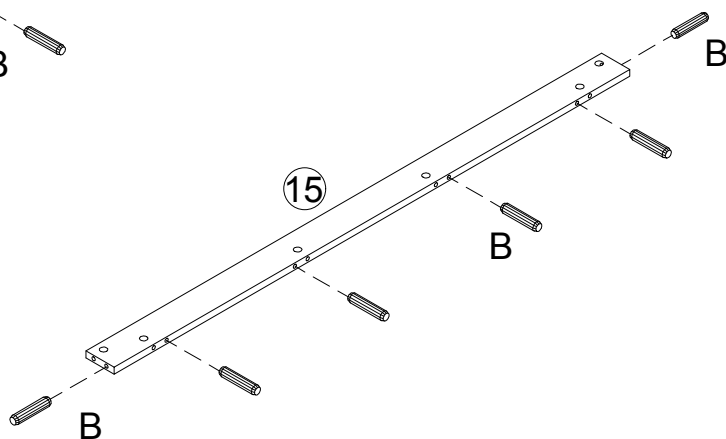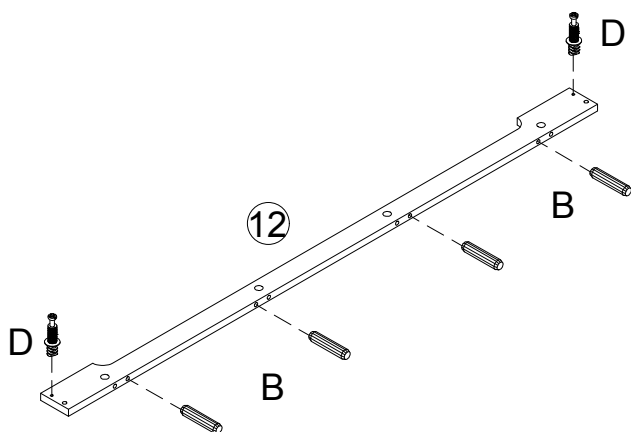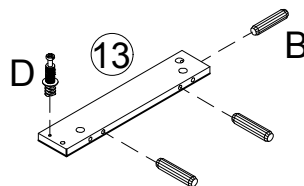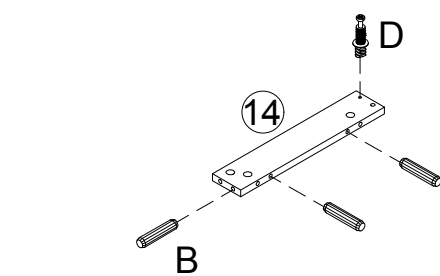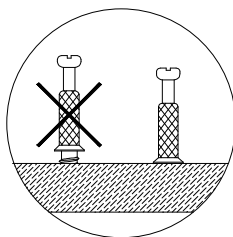

8

C

 
2 x

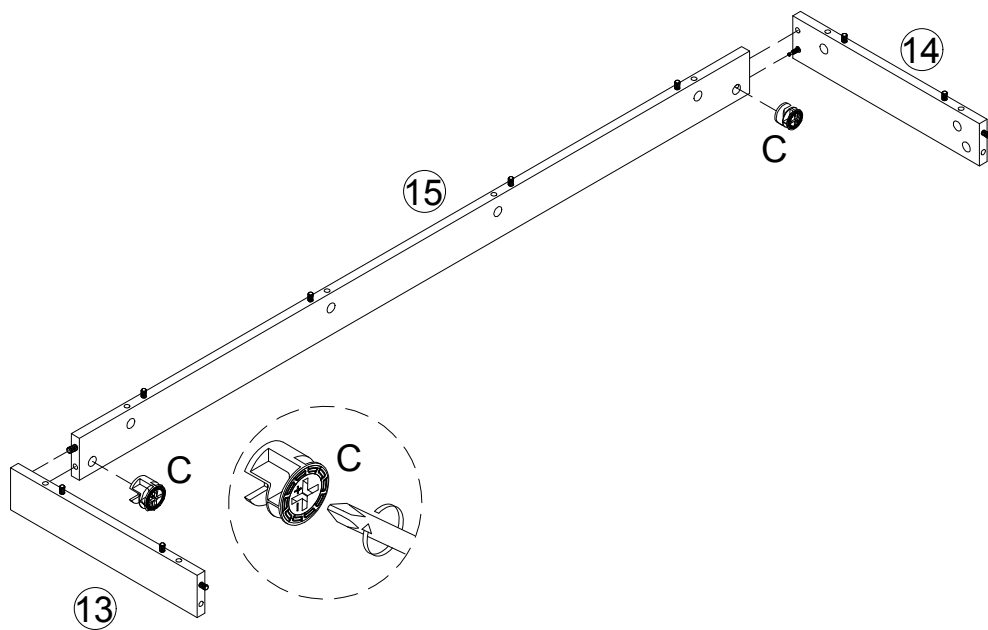

9

C


 
2 x

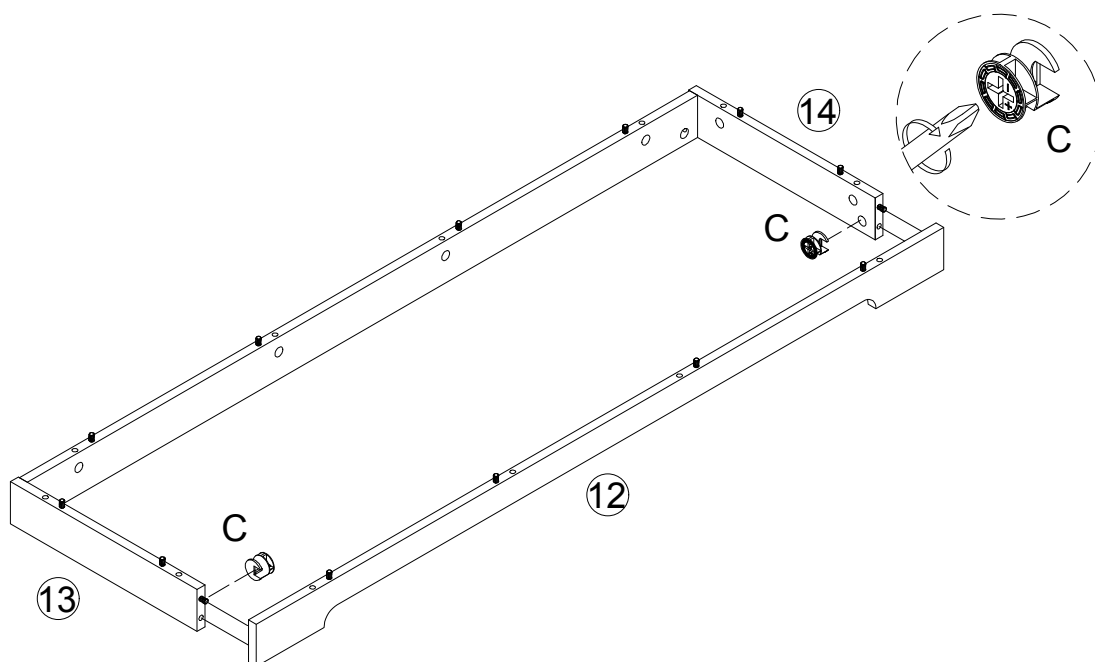


10

C

  12 x

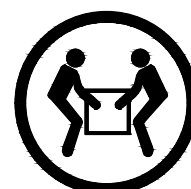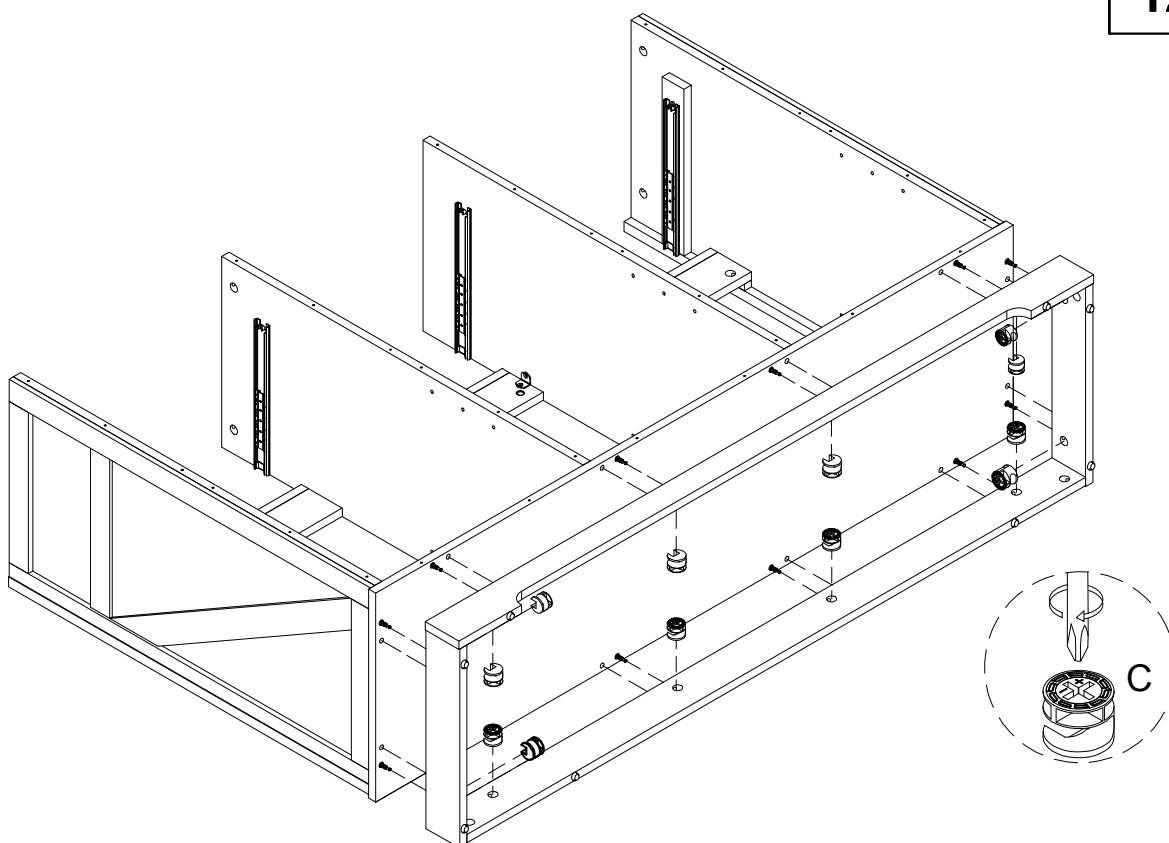

11

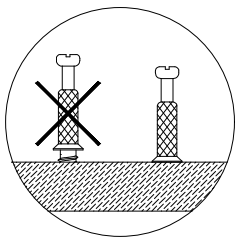 



D

8 x



B

  
4 x

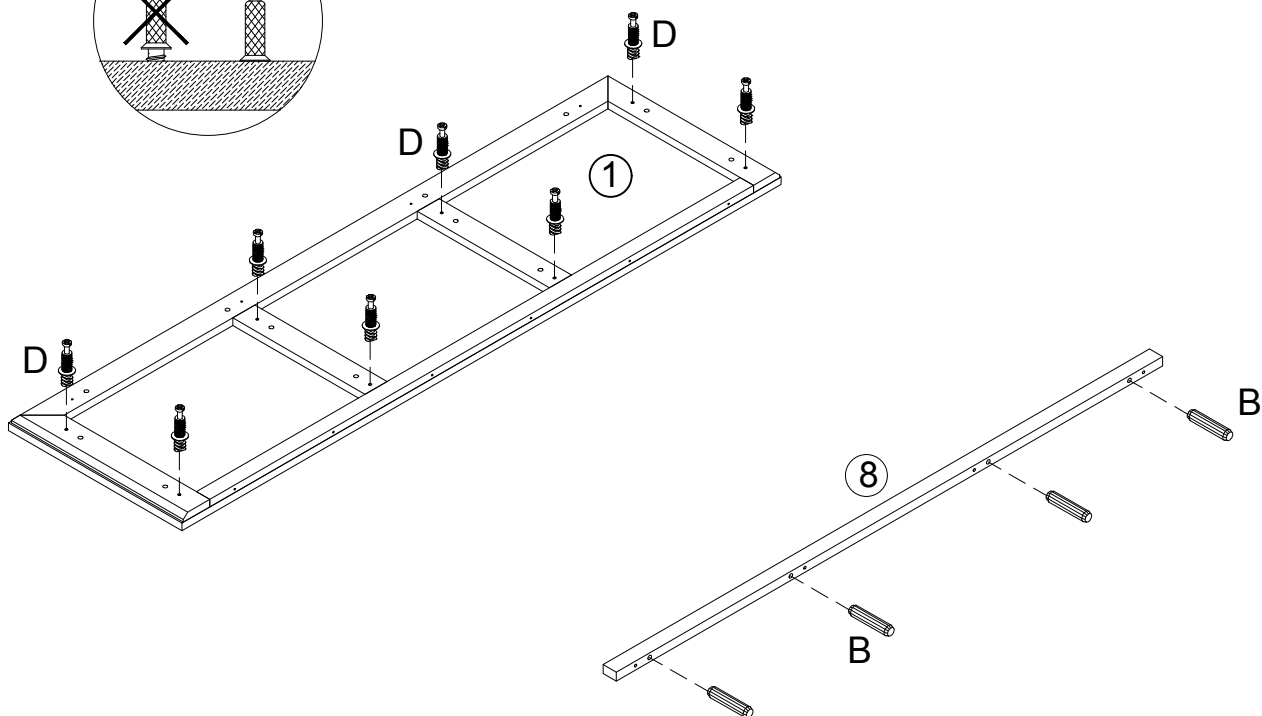

12

I


 
4 x

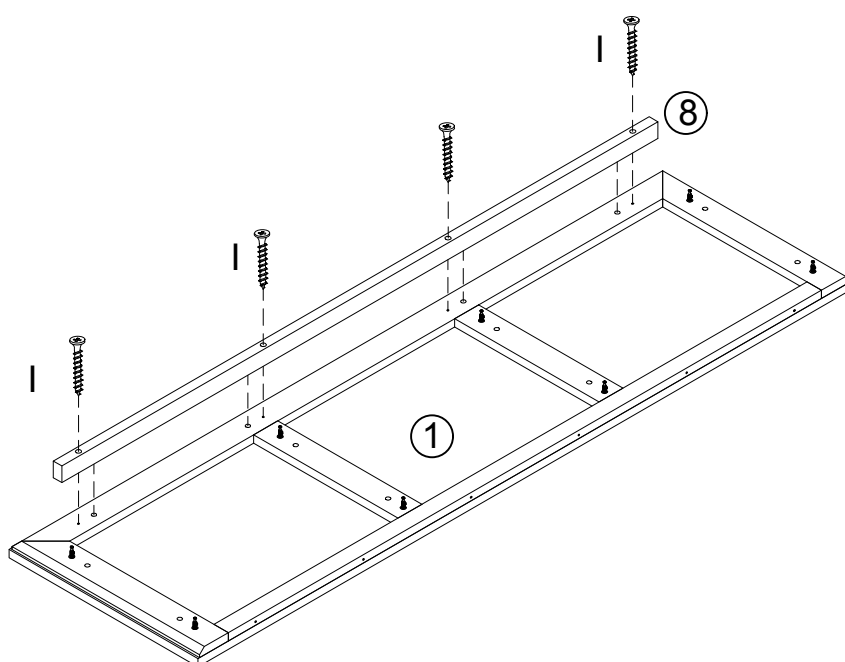

13

C

 
 
8 x

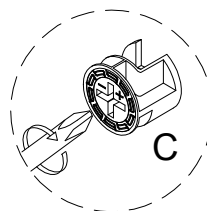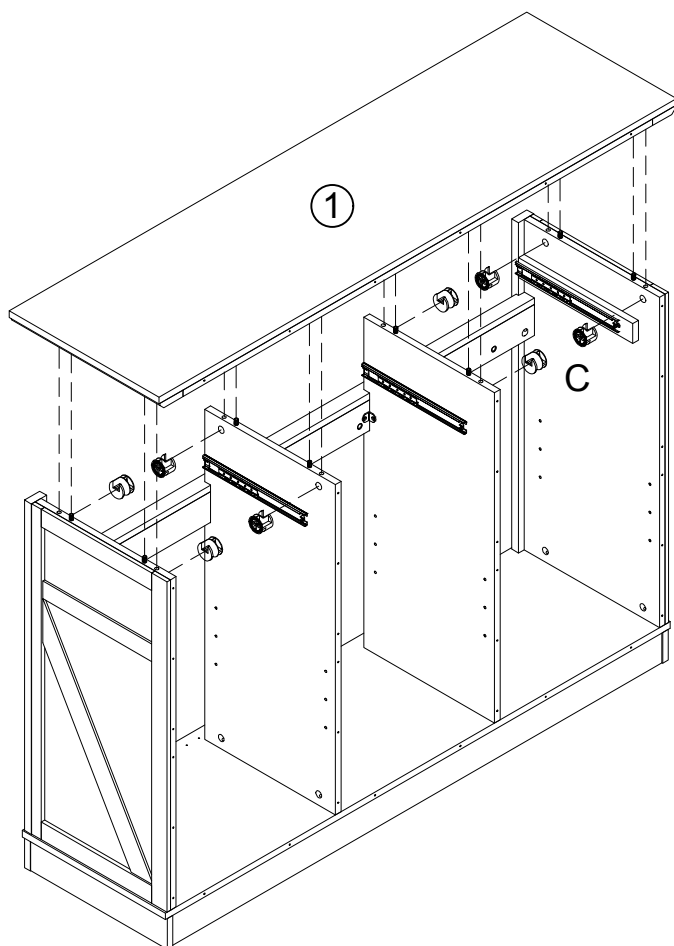

14

G



 
 
36 x

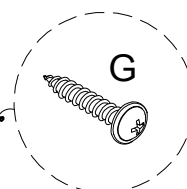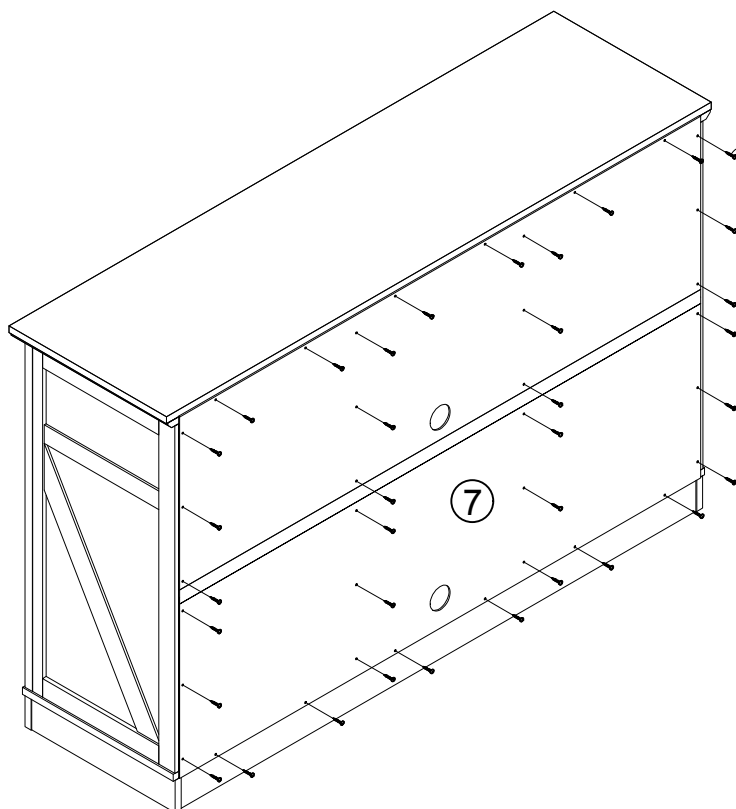

15

F

    
12 x

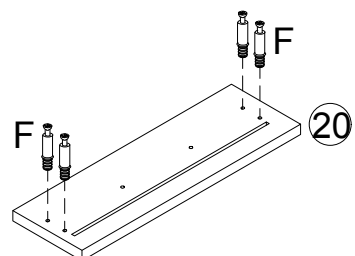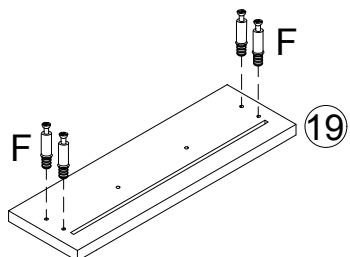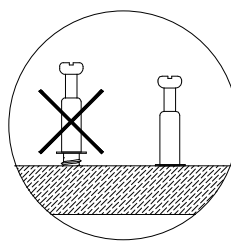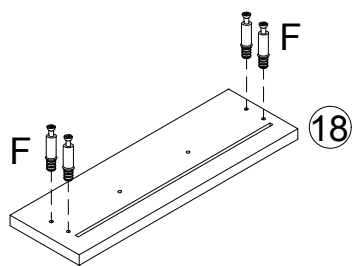


16

J

 12 x

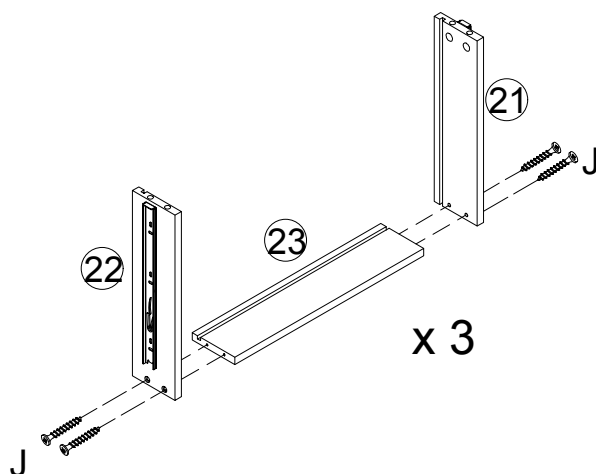

17

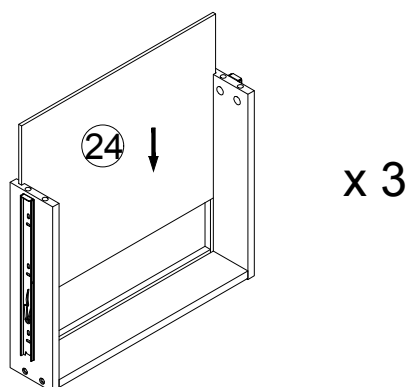 


M

6 x







K

 
3 x








E

   
 
 
12 x

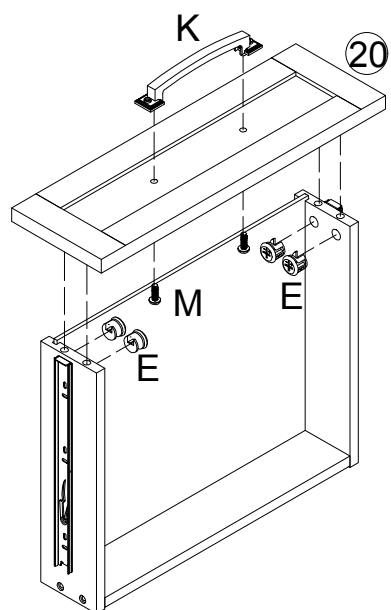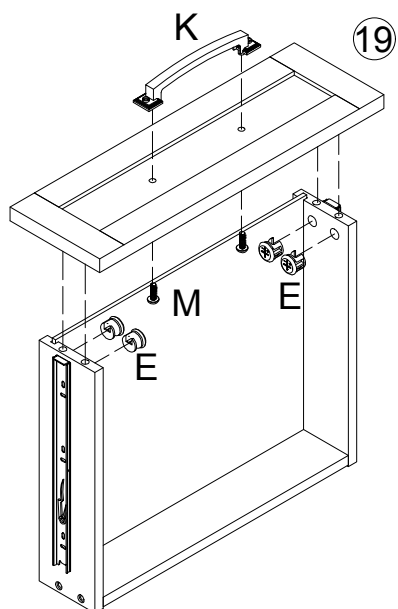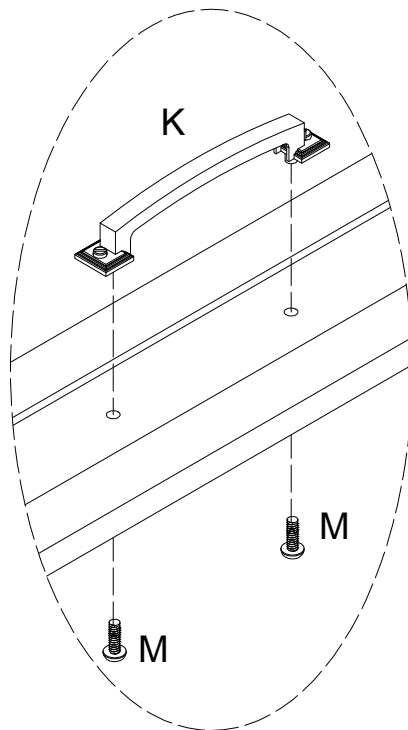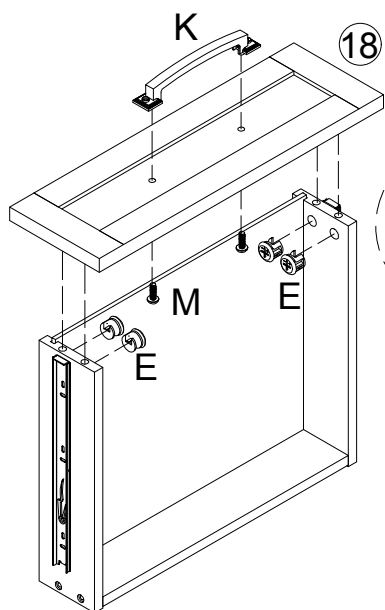




Assembled the drawers as per diagram

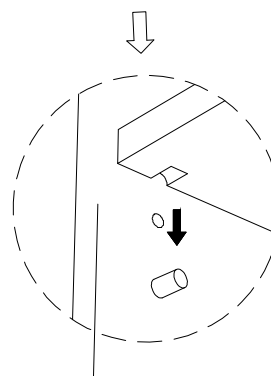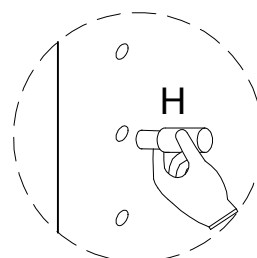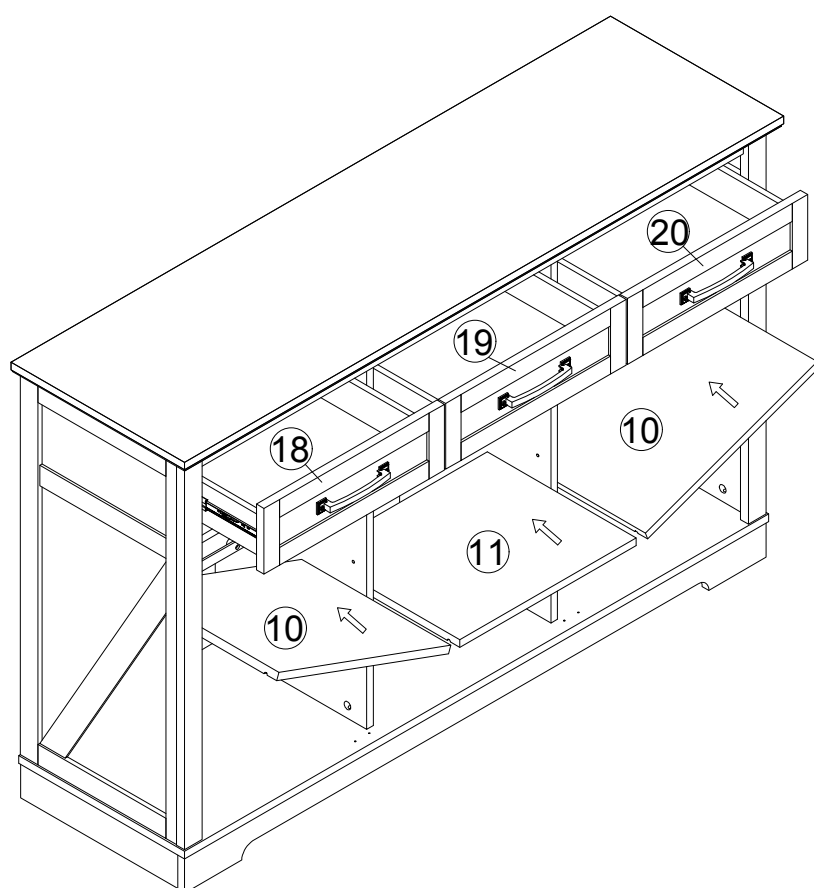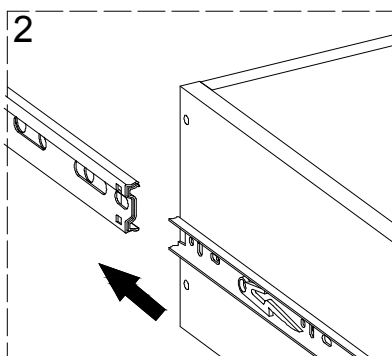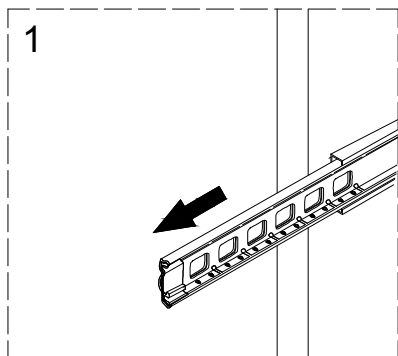     


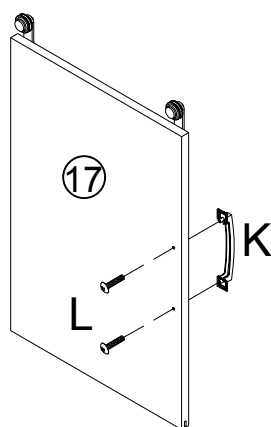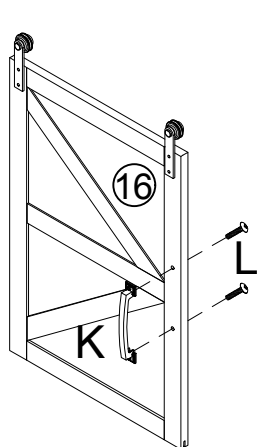  
 


 How to install sliding door? Please refer to the below illustrations.

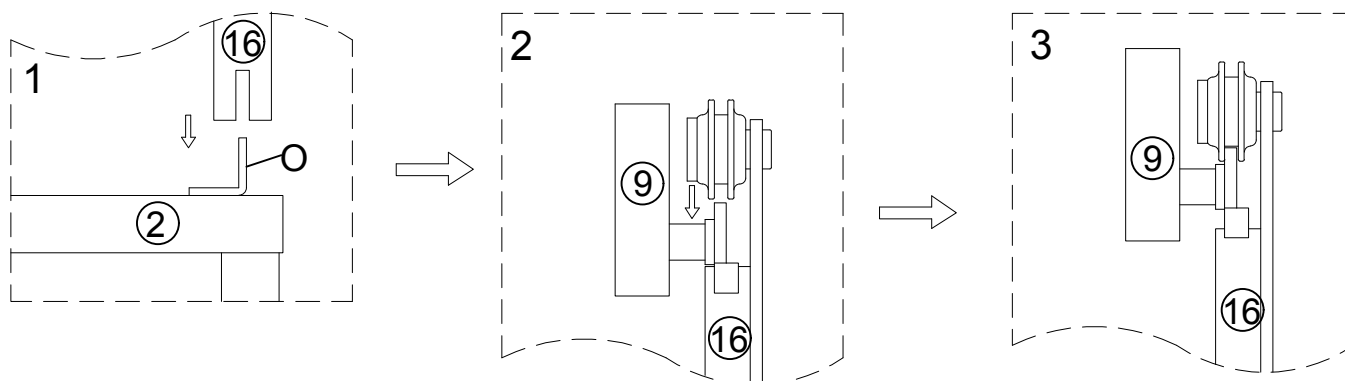

Part 2--Bottom frame Part 9--Door track Part 16、17--Sliding door Part O--Angle bracket

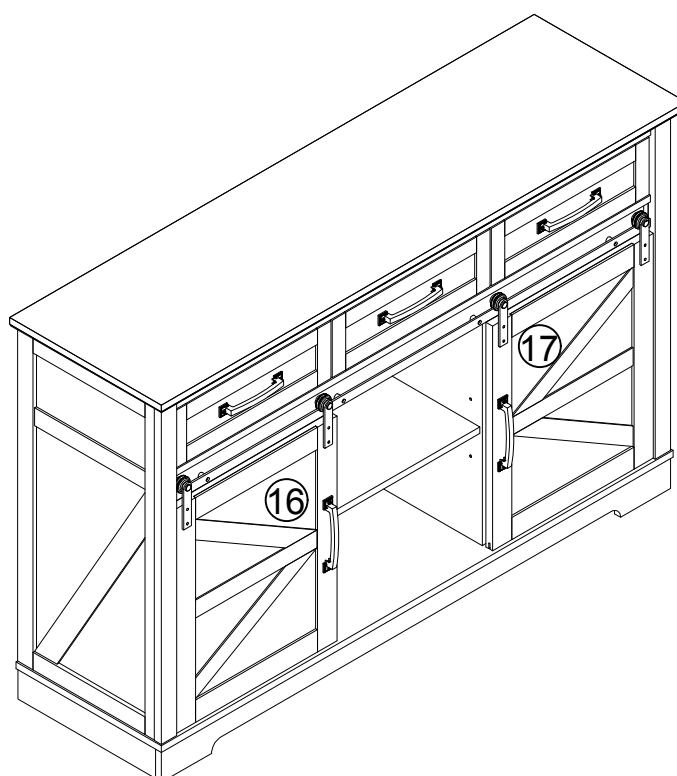 

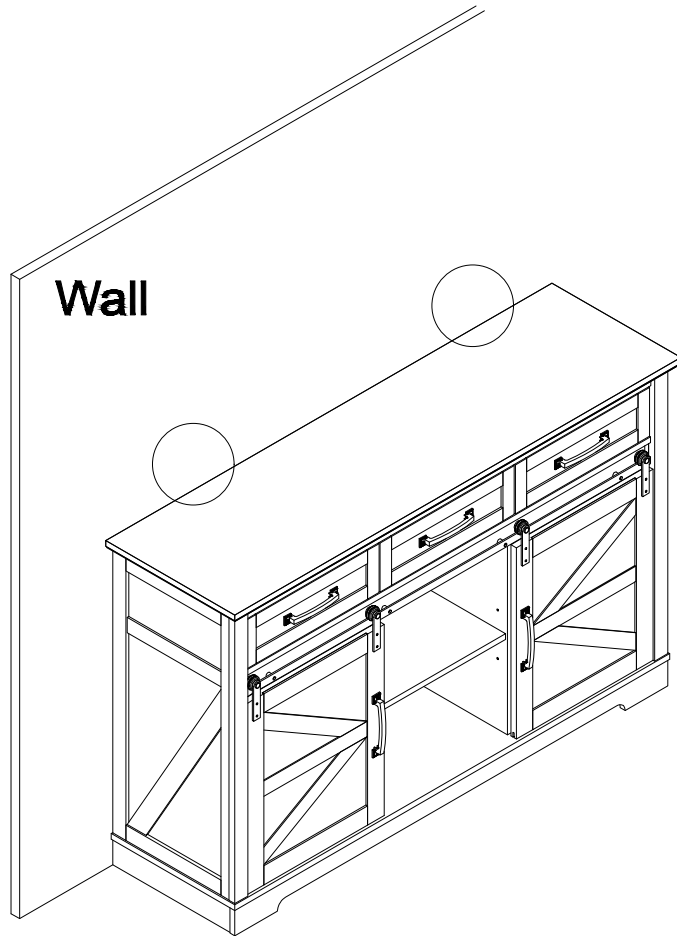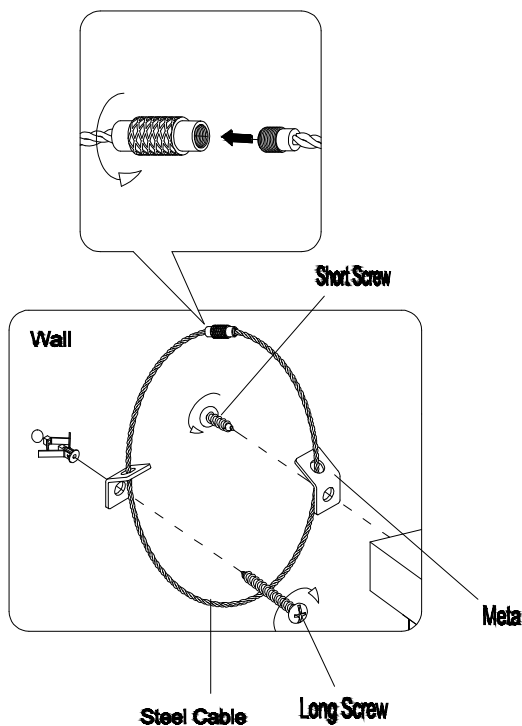  

NOTE : The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

Caring for Wood Furniture

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

Cleaning the Fireplace Trim

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.