

USER'S MANUAL

Children's Sofa

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

Please read all instructions carefully and keep it for future reference.

General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.




 


WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.


Warning for Assembly

- ⚠ Assembled only by adults
- ⚠ Remove all Packaging, separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

PARTS LIST

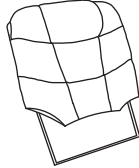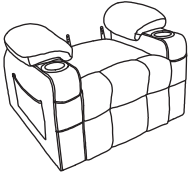NO.	SKETCH	QTY
A	 Backrest	1PC
B	 Seat	1PC
C	 Washer	4PCS
D	 Plastic Leg	4PCS


STEP 1

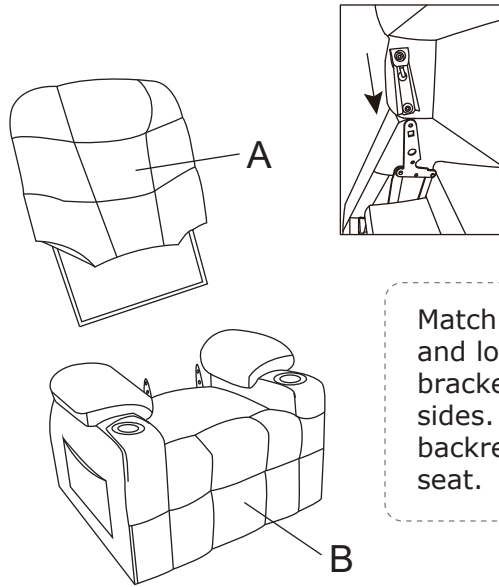


Match the hook and loop brackets on both sides. Assemble backrest to the seat.

STEP 2

Assemble 4 plastic legs.

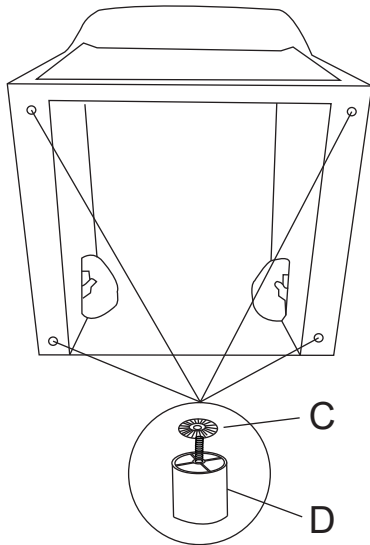

STEP 3

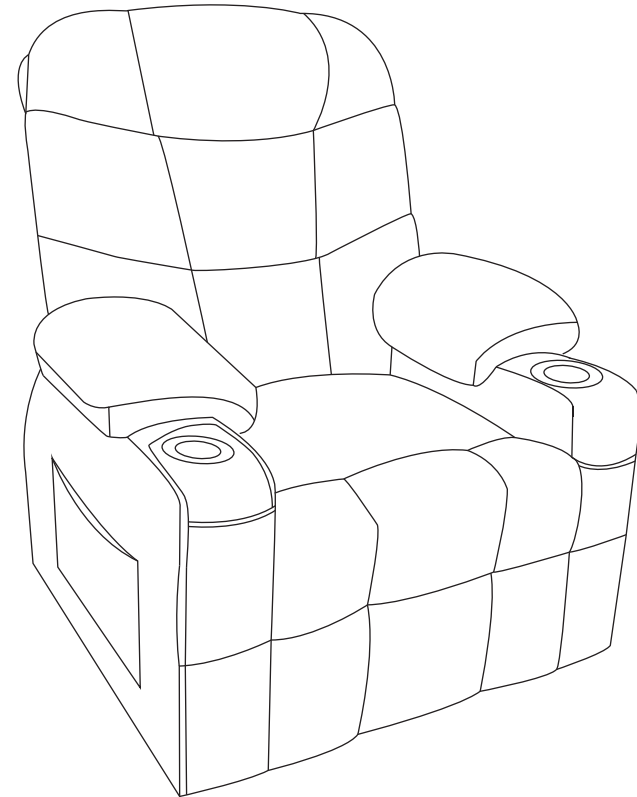

Finish assembly.